

TRAINING EXERCISE

ACCESSING THE COUNTER FOR TOTAL OUTPUT VOLUME


STEP 1

To access the Counter for Total Output Volume, Select User tools/Counter.




STEP 2

Select Counter.

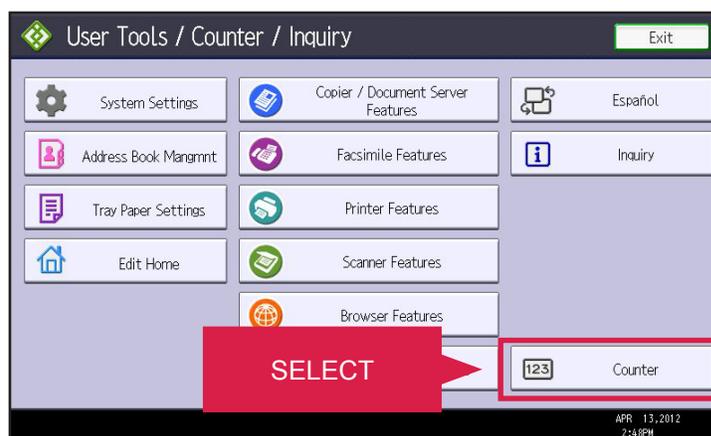

STEP 3


Select Print Counter List.

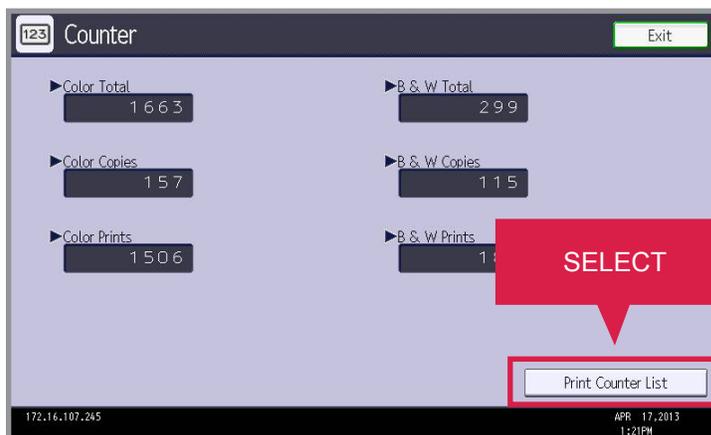

ACCESSING THE COUNTER FOR TOTAL OUTPUT VOLUME

STEP 4

Select the Start key on the Control Panel.

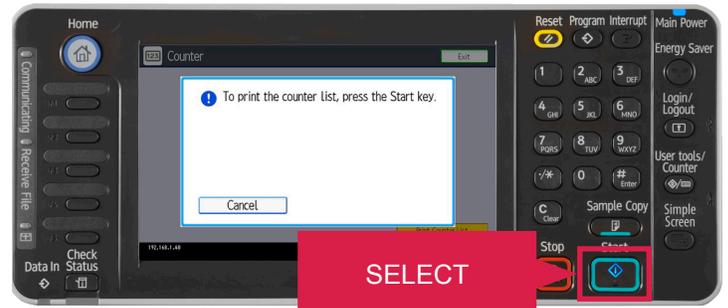

STEP 5

Note: the serial number for your machine is printed across the top of the page.

JOB TASK COMPLETE.



Please send FAX from this edge.

Page Counter

Serial No.: W502L800087
Data of Today: Mar. 04,2013 09:37 AM

Copier:Color	148
Copier:B & W	102
Printer:Color	1151
Printer:B & W	135
Color Total	1299
B & W Total	238