

TRAINING EXERCISE CONFIGURING COVER SHEET TRAY & SLIP SHEET TRAY

STEP 1:

To configure Cover Sheet & Slip Sheet Settings, Select User tools/Counter.



STEP 2: Select Tray Paper Settings.



STEP 3:

Select Next two times to get to Tray Paper Settings screen 3/3.

For demonstration purposes, you only need to click this on-screen demo once.





STEP 4:

Select Cover Sheet Tray.

Note: Here you can make your paper tray selections for cover sheet and slip sheet.



RICOH

imagine. change.

STEP 5:

Select Tray 1, Select Full Time and then Press OK.

Note: You have a choice of applying duplex to tray one for cover sheets or having cover sheet displayed full time.

System Setti	ngs		Exit
Cover Sheet Tray		Cancel	ОК
Select item, then press [Ok].		
►Tray to Program		► Apply Duplex	
Bypass Tray	Tray 1	Yes	SELECT
Tray 2	Tray 3		
Tray 4			
		►Display Time	
		At Mode Selected	Full Time
192.168.1.40			MAR 7,2012 9:58AM

STEP 6: Select Slip Sheet Tray.





STEP 7:

Select Tray 3 and then Select OK.



STEP 8:

Select Exit three times.

For demonstration purposes, you only need to click this on-screen demo once.



STEP 9:

To ensure you have configured the correct paper tray, look for the Key icon indicator on the main screen.

JOB TASK COMPLETE.



