



## Read This First

Manuals Provided with This Machine 1

Safety Information 2

Information for This Machine 3

Appendix 4

For information not in this manual, refer to the HTML/PDF files on the supplied CD-ROM.



# TABLE OF CONTENTS

---

Introduction.....	3
How to Read the Manuals.....	4
Symbols Used in the Manuals.....	4
Disclaimer.....	4
Notes.....	4
Machine Types.....	5

## 1. Manuals Provided with This Machine

---

Manuals for This Machine.....	7
Manuals List.....	10
On-screen Operating Instructions.....	11
Formats of the Operating Instructions.....	11
Reading the HTML Manuals on the CD-ROM.....	11
Installing and Opening the HTML Manuals.....	12
Reading the PDF Manuals on the CD-ROM.....	12

## 2. Safety Information

---

Safety During Operation.....	15
Safety Precautions to Be Followed.....	16
Environments where the machine can be used.....	16
Handling power cords and power cord plugs.....	17
Handling the main machine.....	19
Handling the machine's interior.....	20
Handling the machine's supplies.....	22
Safety Labels of This Machine.....	24
Positions of WARNING and CAUTION labels.....	24
Power Switch Symbols.....	31

## 3. Information for This Machine

---

Duplication and Printing Prohibited.....	33
Laser Safety.....	34
Notes to USA Users of FCC Requirements.....	35
Part 15 of the FCC Rules.....	35
Part 68 of the FCC Rules regarding Facsimile Unit.....	36
Important Safety Instructions for Facsimile Unit.....	38
IMPORTANTES MESURES DE SÉCURITÉ de l'unité Fax.....	38

---

Notes to Canadian Users of Facsimile Unit.....	39
Remarques à l'attention des utilisateurs canadiens de l'unité Fax.....	39
Energy Saving Functions.....	41
Notes to users in the state of California (Notes to Users in USA).....	43
Notes on lamp(s) inside this machine (Notes to users in USA).....	44
<b>4. Appendix</b>	
Trademarks.....	45

---

## Introduction

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in this manual before using the machine.

---

# How to Read the Manuals

---

## Symbols Used in the Manuals

---

This manual uses the following symbols:

 **Important**

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

 **Note**

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

 **Reference**


This symbol is located at the end of sections. It indicates where you can find further relevant information.

[ ]


Indicates the names of keys on the machine's display or control panels.



Indicates instructions stored in a file on a provided CD-ROM.

 **Region A** (mainly Europe and Asia), (mainly Europe), or (mainly Asia)

 **Region B** (mainly North America)

Differences in the functions of Region A and Region B models are indicated by two symbols. Read the information indicated by the symbol that corresponds to the region of the model you are using. For details about which symbol corresponds to the model you are using, see "Model-Specific Information", Getting Started .

---

## Disclaimer

---

Contents of this manual are subject to change without prior notice.

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

---

## Notes

---

The manufacturer shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the manufacturer with your office products.

---

For good output quality, the manufacturer recommends that you use genuine toner from the manufacturer.

Some illustrations in this manual might be slightly different from the machine.

---

## **Machine Types**

---

Check the type of your machine before reading the manuals.

- Type 1: MP 6002/Aficio MP 6002/MP 6002SP/Aficio MP 6002SP
- Type 2: MP 7502/Aficio MP 7502/MP 7502SP/Aficio MP 7502SP
- Type 3: MP 9002/Aficio MP 9002/MP 9002SP/Aficio MP 9002SP

Certain types might not be available in some countries. For details, please contact your local dealer.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.



# 1. Manuals Provided with This Machine

This chapter explains manuals for this machine.

## Manuals for This Machine

Read this manual carefully before you use this machine.

Refer to the manuals that are relevant to what you want to do with the machine.

### ★ Important

- **Media differ according to manual.**
- **Adobe® Acrobat® Reader®/Adobe Reader must be installed in order to view the manuals as PDF files.**
- **A Web browser must be installed in order to view the html manuals.**

### User Guide

Regarding the basic usage of this machine, frequently used functions, troubleshooting when an error message appears, etc., summaries are provided below for each user manual.

### Read This First

Before using the machine, be sure to read the section of this manual entitled Safety Information. It also describes how to install the included CD-ROM, each regulation, and environmental conformance.

### Easy Search

You can search for a description by what you want to do. Also, this machine's distinctive functions are explained.

### Getting Started

Describes preparations for using the machine, operating instructions, and character input methods.

### Paper Specifications and Adding Paper

Describes how to load originals and sheets and about their specifications.

### Convenient Functions

Describes how to register frequently used settings, customize the Home Screen, and display a Web page on the control panel. It also describes how to manage a job.

### Maintenance and Specifications

Describes how to replace supplies and how to install and clean this machine. It also describes the specifications of the main unit and options.

### Troubleshooting

Provides a guide for resolving common usage-related problems.



### **Copy/ Document Server**

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to specify the settings for originals.

### **Fax**

Explains Facsimile functions and operations.

### **Print**

Describes how to print using the printer driver. It also describes the functions available for printing.

### **Scan**

Describes how to scan paper data using this machine and how to send the scanned data to a computer and store the data.

### **Connecting the Machine/ System Settings**

Explains how to connect the machine to a network, and configure and operate the machine in a network environment. Also explains how to change User Tools settings and how to register information in the Address Book.

### **PostScript 3**

Explains how to set up and use PostScript® 3™.

### **VM Card Extended Feature Settings**

Describes how to configure the extended features using the control panel or Web Image Monitor.

### **Security Guide**

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Before Using This Machine", Security Guide.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

### **Driver Installation Guide**

Describes how to install and configure each driver. This manual is included in the drivers CD.

### **UNIX Supplement**

For "UNIX Supplement", please visit our Web site or consult an authorized dealer. This manual includes descriptions of functions and settings that might not be available on this machine.

### **Note**

- Manuals provided are specific to machine types.

- Driver Installation Guide and HTML manuals are available in English, German, French, Italian, Spanish, Dutch, and Russian.
- The following software products are referred to using general names:

Product name	General name
ScanRouter EX Professional <sup>*1</sup> and ScanRouterEX Enterprise <sup>*1</sup>	the ScanRouter delivery software

\*1 The ScanRouter EX Professional and ScanRouterEX Enterprise are no longer available for sale.

# Manuals List

1

Manual Name	Printed Manuals Provided	HTML Manuals Provided	PDF Manuals Provided
User Guide	Yes	No	Yes
Read This First	Yes	No	No
Easy Search	No	Yes	No
Getting Started	No	Yes	No
Paper Specifications and Adding Paper	No	Yes	No
Convenient Functions	No	Yes	No
Maintenance and Specifications	No	Yes	No
Troubleshooting	No	Yes	No
Copy/ Document Server	No	Yes	No
Fax	No	Yes	No
Print	No	Yes	No
Scan	No	Yes	No
Connecting the Machine/ System Settings	No	Yes	No
Security Guide	No	No	Yes
PostScript 3	No	Yes	No
VM Card Extended Feature Settings	No	Yes	No
Driver Installation Guide	No	No	Yes
UNIX Supplement	No	No	Yes <sup>*1</sup>

\*1 For "UNIX Supplement", please visit our Web site or consult an authorized dealer.

## ↓ Note

- Driver Installation Guide and HTML manuals are available in English, German, French, Italian, Spanish, Dutch, and Russian.

# On-screen Operating Instructions

This chapter describes the on-screen operating instructions of this machine. The on-screen operating instructions are included in the supplied manual CD-ROM.

## Formats of the Operating Instructions

The operating instructions of this machine are provided in the following formats:

- Printed manuals
- HTML manuals
- PDF manuals

For details about the contents of each manual, see p.7 "Manuals for This Machine". The various manuals are available in different formats. For details about availability, see p.10 "Manuals List".

## Reading the HTML Manuals on the CD-ROM

This section describes how to read the HTML manuals on the supplied manual CD-ROM.

1. Insert the CD-ROM in the CD-ROM drive of your computer.
2. Select a language, and then click [OK].
3. Click [Read HTML manuals].

The browser opens.

4. Click the title of manual you want to read.

### Note

- Recommended browsers:
  - Internet Explorer 6 or later
  - Firefox 3.5 or later
  - Safari 4.0 or later
- If you want to read the HTML manuals on a Macintosh, insert the CD-ROM in the CD-ROM drive, and then open "Manuals.htm".
- If JavaScript is disabled or unavailable in your browser, you will not be able to search or use certain buttons in the HTML documentation.
- HTML manuals are available in English, German, French, Italian, Spanish, Dutch, and Russian.

---

## Installing and Opening the HTML Manuals

---

This section describes how to install and open the HTML manuals on your computer.

For your convenience, we recommend you install these manuals on your computer.

1. Insert the CD-ROM in the CD-ROM drive of your computer.
2. Select a language, and then click [OK].
3. Click [Install manuals].
4. Install the HTML manuals by following the on-screen instructions.
5. When the installation is complete, click [Finish].
6. Click [Exit].
7. Open the HTML manuals that you installed.

To open the manuals from an icon, double-click the icon on the desktop. To open the manuals from the [Start] menu, point to [All Programs], and then click [Product Name].

8. Click the title of the manual you want to read.

### Note

- You need administrator permissions to install the manuals. Log in as an Administrators group member.
- The system requirements for installing the manuals are as follows:
  - Operating system: Windows XP/Vista/7, Windows Server 2003/2003 R2/2008/2008 R2
  - Minimum display resolution: 800 × 600 pixels
- If you cannot install a manual, copy the "MANUAL\_HTML" folder to your computer's hard drive, and then run "setup.exe".
- To delete an installed manual, on the [Start] menu, point to [All Programs], click [Product Name], and then uninstall the data.
- Depending on the settings made during installation, menu folder names may differ.
- HTML manuals are available in English, German, French, Italian, Spanish, Dutch, and Russian.

---

## Reading the PDF Manuals on the CD-ROM

---

This section describes how to read the PDF manuals on the supplied manual CD-ROM.

### File path

The manuals are included in the following folder on the CD-ROM:

MANUAL\_PDF\*(Language)*

1. Insert the CD-ROM in the CD-ROM drive of your computer.
2. Select a language, and then click [OK].
3. Click [Read PDF manuals].

**Note**

- To view the PDF manuals, you need to have Adobe Acrobat Reader/Adobe Reader installed on your computer.
- If you want to read the PDF manuals on a Macintosh, insert the CD-ROM in the CD-ROM drive, and then open "Manuals.htm".
- Driver Installation Guide is available in English, German, French, Italian, Spanish, Dutch, and Russian.



## 2. Safety Information

---

This chapter describes the safety precautions.

### Safety During Operation

In this manual, the following important symbols are used:

 **WARNING**

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

 **CAUTION**

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.



# Safety Precautions to Be Followed

This section explains safety precautions that should always be followed when using this machine.

## Environments where the machine can be used

This section explains safety precautions about environments where the machine can be used.

### **WARNING**

- Do not use flammable sprays or solvents in the vicinity of this machine. Doing so could result in fire or electric shock.

### **WARNING**

- Do not place vases, plant pots, cups, toiletries, medicines, small metal objects, or containers holding water or any other liquids, on or close to this machine. Fire or electric shock could result from spillage or if such objects or substances fall inside this machine.

### **CAUTION**

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.

### **CAUTION**

- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

### **CAUTION**

- Do not place heavy objects on the machine. Doing so can cause the machine to topple over, possibly resulting in injury.

### **CAUTION**

- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.

### **CAUTION**

- Keep the machine away from salt-bearing air and corrosive gases. Also, do not install the machine in places where chemical reactions are likely (laboratories, etc.), as doing so will cause the machine to malfunction.

**⚠ CAUTION**

- Do not obstruct the machine's vents. Doing so risks fire caused by overheated internal components.

**⚠ CAUTION**

- Machine sound levels exceeding LWAd > 63 dB (A) are not suitable for desk work environments, so place the machine in another room.

---

**Handling power cords and power cord plugs**

---

This section explains safety precautions about handling power cords and power cord plugs.

**⚠ WARNING**

- Do not use any power sources other than those that match the specifications shown. Doing so could result in fire or electric shock.

**⚠ WARNING**

- Do not use any frequencies other than those that match the specifications shown. Doing so could result in fire or electric shock.

**⚠ WARNING**

- Do not use multi-socket adaptors. Doing so could result in fire or electric shock.

**⚠ WARNING**

- Do not use extension cords. Doing so could result in fire or electric shock.

**⚠ WARNING**

- Do not use power cords that are damaged, broken, or modified. Also, do not use power cords that have been trapped under heavy objects, pulled hard, or bent severely. Doing so could result in fire or electric shock.

**⚠ WARNING**

- Touching the prongs of the power cable's plug with anything metallic constitutes a fire and electric shock hazard.

**⚠ WARNING**

- The supplied power cord is for use with this machine only. Do not use it with other appliances. Doing so could result in fire or electric shock.

**⚠ WARNING**

- It is dangerous to handle the power cord plug with wet hands. Doing so could result in electric shock.

**⚠ WARNING**

- If the power cord is damaged and its inner wires are exposed or broken, contact your service representative for a replacement. Use of damaged power cords could result in fire or electric shock.

**⚠ WARNING**

- Be sure to disconnect the plug from the wall outlet at least once a year.
  - There are burn marks on the plug.
  - The prongs on the plug are deformed.
- If any of the above conditions exist, do not use the plug and consult your dealer or service representative. Use of the plug could result in fire or electric shock.

**⚠ WARNING**

- Be sure to disconnect the power cord from the wall outlet at least once a year.
  - The power cord's inner wires are exposed, broken, etc.
  - The power cord's coating has a crack or dent.
  - When bending the power cord, the power turns off and on.
  - Part of the power cord becomes hot.
  - The power cord is damaged.
- If any of the above conditions exist, do not use the power cord and consult your dealer or service representative. Use of the power cord could result in fire or electric shock.

**⚠ CAUTION**

- Be sure to push the plug of the power cord fully into the wall outlet. Partially inserted plugs create an unstable connection that can result in unsafe buildup of heat.

**⚠ CAUTION**

- If this machine is not going to be used for several days or longer at a time, disconnect its power cord from the wall outlet.

**⚠ CAUTION**

- When disconnecting the power cord from the wall outlet, always pull the plug, not the cord. Pulling the cord can damage the power cord. Use of damaged power cords could result in fire or electric shock.

**⚠ CAUTION**

- Be sure to disconnect the plug from the wall outlet and clean the prongs and the area around the prongs at least once a year. Allowing dust to build up on the plug constitutes a fire hazard.

**⚠ CAUTION**

- When performing maintenance on the machine, always disconnect the power cord from the wall outlet.

---

**Handling the main machine**

---

This section explains safety precautions about handling the main machine.

**⚠ WARNING**

- Be sure to locate the machine as close as possible to a wall outlet. This will allow easy disconnection of the power cord in the event of an emergency.

**⚠ WARNING**

- If the machine emits smoke or odours, or if it behaves unusually, you must turn off its power immediately. After turning off the power, be sure to disconnect the power cord plug from the wall outlet. Then contact your service representative and report the problem. Do not use the machine. Doing so could result in fire or electric shock.

**⚠ WARNING**

- If metal objects, or water or other fluids fall inside this machine, you must turn off its power immediately. After turning off the power, be sure to disconnect the power cord plug from the wall outlet. Then contact your service representative and report the problem. Do not use the machine. Doing so could result in fire or electric shock.

**⚠ WARNING**

- Do not touch this machine if a lightning strike occurs in the immediate vicinity. Doing so could result in electric shock.

**⚠ WARNING**

- The following explains the warning messages on the plastic bag used in this product's packaging.
  - Keep the polythene materials (bags, etc.) supplied with this machine away from babies and small children at all times. Suffocation can result if polythene materials are brought into contact with the mouth or nose.

**⚠ CAUTION**

- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, take care that the power cord is not damaged under the machine. Failing to take these precautions could result in fire or electric shock.

**⚠ CAUTION**

- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.

**⚠ CAUTION**

- Contact your service representative if you need to lift the machine (such as when relocating it to another floor). Do not attempt to lift the machine without the assistance of your service representative. The machine will be damaged if it topples or is dropped, resulting in malfunction and risk of injury to users.
- Service engineers use a specially designed cart to move the machine from one floor to another. The handles on the machine will be used solely by service engineers when they move the machine from one place to another on the same floor. Do not touch the handles.

**⚠ CAUTION**

- Do not look into the lamp. It can damage your eyes.

---

## Handling the machine's interior

---

This section explains safety precautions about handling the machine's interior.

**⚠ WARNING**

- Do not remove any covers or screws other than those explicitly mentioned in this manual. Inside this machine are high voltage components that are an electric shock hazard and laser components that could cause blindness. Contact your sales or service representative if any of the machine's internal components require maintenance, adjustment, or repair.
- Do not attempt to disassemble or modify this machine. Doing so risks burns and electric shock. Note again that exposure to the laser components inside this machine risks blindness.

**⚠ CAUTION**

- Some of this machine's internal components get very hot. For this reason, take care when removing misfed paper. Not doing so could result in burns.

**⚠ CAUTION**

- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.

**⚠ CAUTION**

- When removing jammed paper, make sure not to trap or injure your fingers.

**⚠ CAUTION**

- When loading paper, take care not to trap or injure your fingers.

**⚠ CAUTION**

- Keep your hands clear of the booklet finisher tray when removing misfed paper, pulling out or pushing in the finisher's staple unit. You can trap and injure your fingers if you do not.

**⚠ CAUTION**

- During operation, rollers for transporting the paper and originals revolve. A safety device has been installed so that the machine can be operated safely. But take care not to touch the machine during operation. Otherwise, an injury might occur.

**⚠ CAUTION**

- If the machine's interior is not cleaned regularly, dust will accumulate. Fire and breakdown can result from heavy accumulation of dust inside this machine. Contact your sales or service representative for details about and charges for cleaning the machine's interior.

## Handling the machine's supplies

This section explains safety precautions about handling the machine's supplies.

### **WARNING**

- Do not incinerate toner (new or used) or toner containers. Doing so risks burns. Toner will ignite on contact with naked flame.

### **WARNING**

- Do not store toner (new or used) or toner containers anywhere near naked flames. Doing so risks fire and burns. Toner will ignite on contact with naked flame.

### **WARNING**

- Do not use the cleaner to suck spilled toner (including used toner). Sucked toner may cause firing or explosion due to electrical contact flickering inside the cleaner. However, it is possible to use the cleaner designed for dust explosion-proof purpose. If toner is spilled over the floor, sweep up spilled toner slowly and clean remainder with wet cloth.

### **CAUTION**

- Do not crush or squeeze toner containers. Doing so can cause toner spillage, possibly resulting in dirtying of skin, clothing, and floor, and accidental ingestion.

### **CAUTION**

- Store toner (new or used), toner containers, and components that have been in contact with toner out of reach of children.

### **CAUTION**

- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.

### **CAUTION**

- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

### **CAUTION**

- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.

**⚠ CAUTION**

- When removing jammed paper or replacing toner, avoid getting toner (new or used) on your clothing. If toner comes into contact with your clothing, wash the stained area with cold water. Hot water will set the toner into the fabric and make removing the stain impossible.

**⚠ CAUTION**

- When removing jammed paper or replacing toner, avoid getting toner (new or used) on your skin. If toner comes into contact with your skin, wash the affected area thoroughly with soap and water.

**⚠ CAUTION**

- Do not attempt to print on stapled sheets, aluminum foil, carbon paper, or any kind of conductive paper. Doing so risks fire.

**⚠ CAUTION**

- Keep SD cards or USB flash memory devices out of reach of children. If a child accidentally swallows an SD card or USB flash memory device, consult a doctor immediately.




# Safety Labels of This Machine

This section explains the machine's safety information labels.

## Positions of WARNING and CAUTION labels


2

This machine has labels for ⚠WARNING and ⚠CAUTION at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

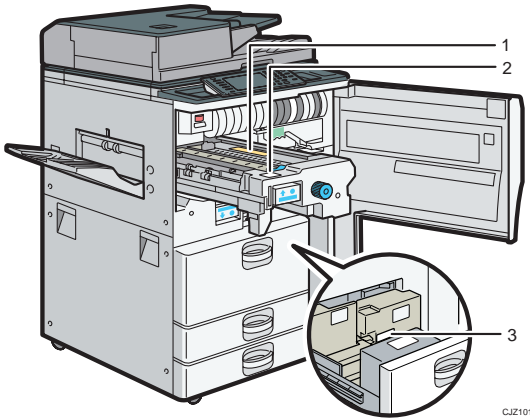

CJZ101


1

	 
<b>CAUTION</b>	Hot surface avoid contact
<b>ATTENTION</b>	Surface chaude Évitez tout contact
<b>ACHTUNG</b>	Heiße Oberfläche Kontakt vermeiden
<b>ATTENZIONE</b>	Superficie calda Evitare il contatto
<b>PRECAUCIÓN</b>	No tocar. Zona muy caliente.
<b>VOORZICHTIG</b>	Heet oppervlak vermijd contact
<b>FÖRSIKTIGT</b>	Het yta. Rör ej.
<b>FORSIGTIG</b>	Varm overflade, undgå berøring
<b>FORSIKTIG</b>	Varm overflade, unngå kontakt
<b>OSTRZEŻENIE</b>	Gorąca powierzchnia nie dotykać
<b>CUIDADO</b>	Superficie quente Evitar contacto
<b>POZOR</b>	Horký povrch nedotýkat se
<b>FIGYELEM</b>	Ne érintse meg a forró felületeket!
<b>TÄRKEÄÄ</b>	Kuuma pinta älä koske.
<b>ОСТОРОЖНО</b>	Горячая поверхность Избегайте контакта
<b>注意</b>	表面高温、请勿接触。
<b>注意</b>	表面高温請勿碰觸
<b>고온주의</b>	표면이 뜨거우므로 만지지 않도록 주의해주시요.
<b>注意</b>	表面が熱くなっていますので触らないでください。

CJZ111

The inside of the machine could be very hot. Do not touch the parts which a label is put on. Otherwise, an injury might occur.

2

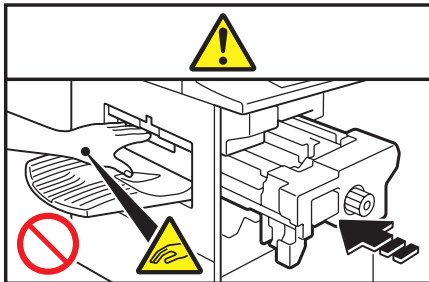

CJZ112


Keep your hands clear of the finisher tray when removing paper jam. You might trap your fingers if you do not.

3



CJZ113

Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

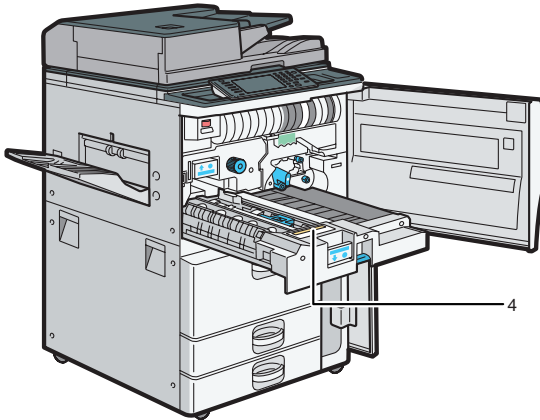


CJZ102

4

 <b>CAUTION ATTENTION ACHTUNG ATTENZIONE</b> <b>PRECAUCIÓN 注意高温 高温注意 고온주의 高温注意</b>	
  	<ul style="list-style-type: none"> <li>•High temperature - Do not touch this unit when removing misfed paper.</li> <li>•Température élevée - Ne touchez pas cette unité lorsque vous retirez du papier coincé.</li> <li>•Hohe Temperaturen - Diese Einheit nicht berühren beim Beseitigen von Papierstaus</li> <li>•Temperatura elevata - Non toccare questa unità durante la rimozione di carta inceppata.</li> <li>•Muy caliente. No toque esta unidad al retirar el papel atascado.</li> <li>•高温-取出卡紙時請勿觸摸此部件。</li> <li>•高温注意, 取夾紙時請勿碰觸這單元。</li> <li>•고온-용지를 제거할 때 닿지 않도록 조심하십시오.</li> <li>•内部は高温になっています。用紙を取り除く時は注意してください。</li> </ul>

CJZ114

Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

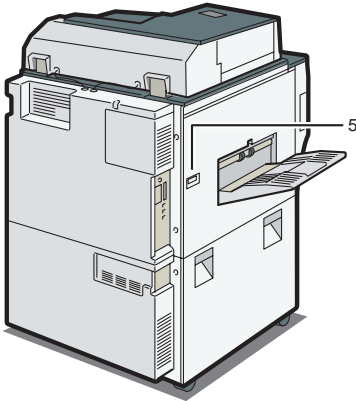

CJZ103


5



CJZ115

Keep your hands clear of the finisher tray when removing paper jam. You might trap your fingers if you do not.

**Finisher SR4060 or Booklet Finisher SR4070**

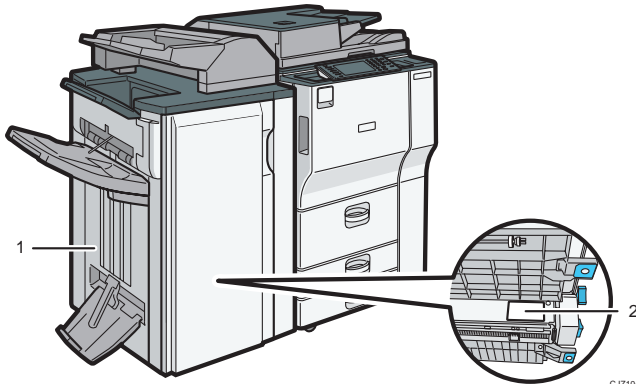

CJZ104


1



C.JZ008

Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not. Take care not to touch the booklet finisher tray during operation. Otherwise, an injury might occur.

2

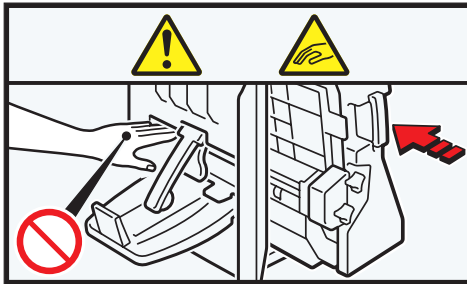


C.JZ009

Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not.


### Multi-Folding Unit

2

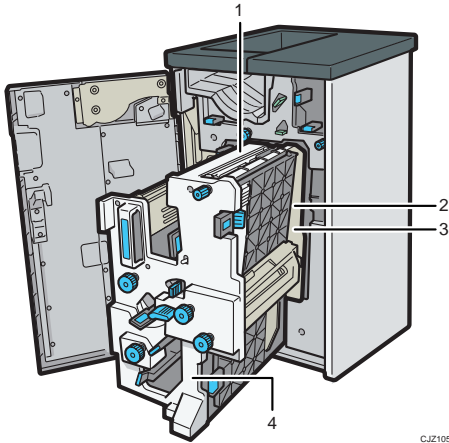

CJZ105


1

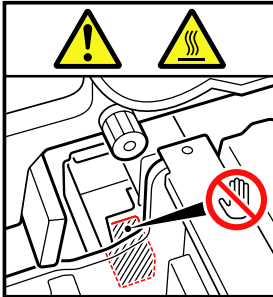

BQW0555

Do not touch the parts a label indicates. The inside of the Multi-Folding Unit could be very hot. Caution should be taken when removing misfed paper.


2

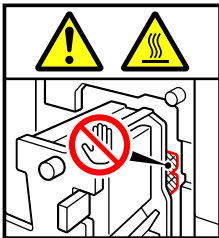

BQW0555

Do not touch the parts a label indicates. The inside of the Multi-Folding Unit could be very hot. Caution should be taken when removing misfed paper.

3

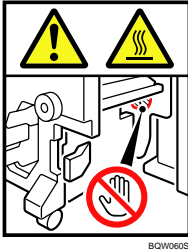

Do not touch the parts a label indicates. The inside of the Multi-Folding Unit could be very hot. Caution should be taken when removing misfed paper.

4



Do not touch the parts a label indicates. The inside of the Multi-Folding Unit could be very hot. Caution should be taken when removing misfed paper.

## Power Switch Symbols

The meanings of the symbols for the switches on this machine are as follows:

- I : POWER ON
- U : STANDBY





# 3. Information for This Machine

This chapter describes laws and regulations related to this machine.

## Duplication and Printing Prohibited

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

# Laser Safety

## CDRH Regulations

This equipment complies with requirements of 21 CFR subchapter J for class I laser products. This equipment contains four AlGaInP laser diodes, 15 milliwatts, 657–663 nanometer wavelength for each emitter. The beam divergence angle is 16 degrees (minimum) and 23 degrees (maximum) in the vertical direction, and 7.0 degrees (minimum) and 11.0 degrees (maximum) in the horizontal direction, and laser beams are generated in Continuous Wave (CW) mode.

3

### Caution:

Use of controls or adjustments or performance of procedures other than those specified in the manuals might result in hazardous radiation exposure.

# Notes to USA Users of FCC Requirements

## Part 15 of the FCC Rules

### Declaration of Conformity

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party: Ricoh Americas Corporation

Address: 5 Dedrick Place, West Caldwell, NJ 07006

Telephone number: 973-882-2000

Product Name: Multi Function Peripheral

Model Number:

- MP 6002/Aficio MP 6002/MP 6002SP/Aficio MP 6002SP
- MP 7502/Aficio MP 7502/MP 7502SP/Aficio MP 7502SP
- MP 9002/Aficio MP 9002/MP 9002SP/Aficio MP 9002SP

### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

**Caution:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

**Part 68 of the FCC Rules regarding Facsimile Unit**

---

1. This equipment complies with Part 68 of the FCC rules and requirements adopted by the ACTA. On the cover of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXXX. If requested, this number must be provided to the telephone company.
2. This equipment uses the RJ11C USOC jack.
3. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for detail.
4. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).
5. If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
6. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
7. If trouble is experienced with this equipment, for repair or warranty information, please contact Ricoh Americas Corporation Customer Support Department at 1-800-FASTFIX. If this device is causing problems with your telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
8. In the event of operation problems (document jam, copy jam, communication error indication), see the manual provided with this machine for instruction on resolving the problem.
9. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

10. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

**WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:**

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including FAX machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long-distance transmission charges.)

In order to program this information into your FAX machine, you should complete the following steps: Follow the FAX HEADER programming procedure in the Programming chapter of the operating instructions to enter the business identification and telephone number of the terminal or business. This information is transmitted with your document by the FAX HEADER feature. In addition to the information, be sure to program the date and time into your machine.

## Important Safety Instructions for Facsimile Unit

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone in the vicinity of a gas leak to report the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

Save these instructions.

---

### IMPORTANTES MESURES DE SÉCURITÉ de l'unité Fax

---

Certaines mesures de sécurité doivent être prises pendant l'utilisation de matériel téléphonique afin de réduire les risques d'incendie, de choc électrique et de blessures. En voici quelques-unes:

- Ne pas utiliser l'appareil près de l'eau, p.ex., près d'une baignoire, d'un lavabo, d'un évier de cuisine, d'un bac à laver, dans un sous-sol humide ou près d'une piscine.
- Éviter d'utiliser le téléphone (sauf s'il s'agit d'un appareil sans fil) pendant un orage électrique. Ceci peut présenter un risque de choc électrique causé par la foudre.
- Ne pas utiliser l'appareil téléphonique pour signaler une fuite de gaz s'il est situé près de la fuite.
- Utiliser seulement le cordon d'alimentation et le type de piles indiqués dans ce manuel. Ne pas jeter les piles dans le feu: elles peuvent exploser. Se conformer aux règlements pertinents quant à l'élimination des piles.

Conserver ces instructions.

## Notes to Canadian Users of Facsimile Unit

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

---

### Remarques à l'attention des utilisateurs canadiens de l'unité Fax

---

Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

L'indice d'équivalence de la sonnerie (IES) sert à indiquer le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.



# Energy Saving Functions

To reduce its power consumption, this machine has the following functions:

## Low Power mode

- If this machine remains idle for a specified period, it automatically reduces its electrical consumption.
- The default period the machine waits before entering Low Power mode is 1 minute. This default time can be changed.

## Sleep mode


- If this machine is already in Low Power mode and remains idle for a specified period or when the [Energy Saver] key is pressed, it enters Sleep mode to further reduce its electrical consumption.
- The default delay time the machine waits before entering Sleep mode for types 1 and 2 is 1 minute, and for type 3 is 15 minutes. This default time can be changed.
- The machine can print jobs from computers and receive faxes while in Sleep mode.

## Specification

	Type 1	Type 2	Type 3
Reduced electrical consumption in Low Power mode *1	173 W	173 W	196 W
Time of switch into Low Power mode	1 minute	1 minute	1 minute
Time of switch out from Low Power mode *1	10 seconds	10 seconds	30 seconds
Reduced electrical consumption in Sleep mode *1	3.8 W	3.8 W	6.6 W
Time of switch into Sleep mode	1 minute	1 minute	15 minutes
Time of switch out from Sleep mode *1	30 seconds	30 seconds	5 minutes

\*1 The time it takes to switch out from energy saving functions and electrical consumption may differ depending on the conditions and environment of the machine.

 **Note**

- Specifications can vary depending on which options are installed on the machine.
- For details about how to change the default interval, see "Timer Settings", Connecting the Machine/ System Settings .
- Depending on which embedded software application is installed on it, the machine might take longer than indicated to enter Sleep mode.

## Notes to users in the state of California (Notes to Users in USA)

Perchlorate Material - special handling may apply, See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)

## **Notes on lamp(s) inside this machine (Notes to users in USA)**

LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.

# 4. Appendix

This chapter describes trademarks.

## Trademarks

Adobe, Acrobat, PostScript, PostScript 3, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Firefox is a registered trademark of the Mozilla Foundation.

Macintosh and Safari are trademarks of Apple Inc., registered in the United States and other countries.

Microsoft, Windows, Windows Server, Windows Vista, and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

UNIX is a registered trademark of The Open Group.

The SD is a trademark of SD-3C, LLC.

The proper name of Internet Explorer 6 is Microsoft® Internet Explorer® 6.

The proper names of the Windows operating systems are as follows:

- The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

- The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

Microsoft® Windows Vista® Enterprise

- The product names of Windows 7 are as follows:

Microsoft® Windows® 7 Home Premium

Microsoft® Windows® 7 Professional

Microsoft® Windows® 7 Ultimate

Microsoft® Windows® 7 Enterprise

- The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

- The product names of Windows Server 2003 R2 are as follows:  
Microsoft® Windows Server® 2003 R2 Standard Edition  
Microsoft® Windows Server® 2003 R2 Enterprise Edition
- The product names of Windows Server 2008 are as follows:  
Microsoft® Windows Server® 2008 Standard  
Microsoft® Windows Server® 2008 Enterprise
- The product names of Windows Server 2008 R2 are as follows:  
Microsoft® Windows Server® 2008 R2 Standard  
Microsoft® Windows Server® 2008 R2 Enterprise

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

---

MEMO

---

MEMO





# User Guide

What You Can Do with This Machine	1
Getting Started	2
Copy	3
Fax	4
Print	5
Scan	6
Document Server	7
Web Image Monitor	8
Adding Paper and Toner	9
Troubleshooting	10
Appendix	11



For information not in this manual, refer to the HTML/PDF files on the supplied CD-ROM.



Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "Read This First" before using the machine.



# TABLE OF CONTENTS

---

How to Read the Manuals.....	5
Symbols Used in the Manuals.....	5
Model-Specific Information.....	6
Names of Major Features.....	7

## 1. What You Can Do with This Machine

---

I Want to Save Paper.....	9
I Want to Convert Documents to Electronic Formats Easily.....	10
I Want to Register Destinations.....	11
I Want to Operate the Machine More Effectively.....	12
You Can Customize the [Home] Screen as You Like.....	13
You Can Make Copies Using Various Functions.....	14
You Can Print Data Using Various Functions.....	15
You Can Utilize Stored Documents.....	16
You Can Connect Two Machines for Copying.....	17
You Can Send and Receive Faxes without Paper.....	18
You Can Send and Receive Faxes Using the Internet.....	20
You Can Send and Receive Faxes by Using the Machine without Fax Unit Installed.....	22
You Can Use the Facsimile and the Scanner in a Network Environment.....	23
You Can Prevent Information Leakage (Security Functions).....	24
You Can Monitor and Set the Machine Using a Computer.....	25
You Can Prevent an Unauthorized Copy.....	26

## 2. Getting Started

---

Guide to Names and Functions of Components.....	27
Guide to Components.....	27
Guide to Functions of the Machine's Options.....	30
Guide to Functions of the Machine's External Options.....	30
Guide to the Names and Functions of the Machine's Control Panel.....	32
How to Use the [Home] Screen.....	35
Adding Icons to the [Home] Screen.....	36
Registering Functions in a Program.....	40
Example of Programs.....	42
Turning On/Off the Power.....	45
Turning On the Main Power.....	45

---

Turning Off the Main Power.....	45
When the Authentication Screen is Displayed.....	47
User Code Authentication Using the Control Panel.....	47
Logging In Using the Control Panel.....	47
Logging Out Using the Control Panel.....	48
Placing Originals.....	49
Placing Originals on the Exposure Glass.....	49
Placing Originals in the Auto Document Feeder.....	49

### 3. Copy

---

Basic Procedure.....	51
Auto Reduce / Enlarge.....	52
Duplex Copying.....	54
Combined Copying.....	56
One-Sided Combine.....	57
Two-Sided Combine.....	58
Copying onto Custom Size Paper from the Bypass Tray.....	61
Finishing.....	62
Staple.....	62
Punch.....	64
Fold.....	66
Storing Data in the Document Server.....	74

### 4. Fax

---

Basic Procedure for Transmissions (Memory Transmission).....	75
Registering a Fax Destination.....	77
Deleting a Fax Destination.....	78
Transmitting while Checking Connection to Destination (Immediate Transmission).....	80
Canceling a Transmission.....	82
Canceling a Transmission Before the Original Is Scanned.....	82
Canceling a Transmission While the Original Is Being Scanned.....	82
Canceling a Transmission After the Original Is Scanned.....	83
Sending at a Specific Time (Send Later).....	84
Storing a Document.....	85
Sending Stored Documents.....	86

---

Printing the Journal Manually.....	88
------------------------------------	----

## **5. Print**

---

Quick Install.....	89
Displaying the Printer Driver Properties.....	90
Standard Printing.....	91
When Using the PCL 6 Printer Driver.....	91
Locked Print.....	92
Sending a Locked Print File.....	92
Printing a Locked Print File Using the Control Panel.....	92
Hold Print.....	94
Sending a Hold Print File.....	94
Printing a Hold Print File Using the Control Panel.....	94
Stored Print.....	96
Sending a Stored Print File.....	96
Printing a Stored Print File Using the Control Panel.....	97

## **6. Scan**

---

Basic Procedure When Using Scan to Folder.....	99
Creating a Shared Folder on a Computer Running Windows/Confirming a Computer's Information.....	100
Registering an SMB Folder.....	102
Deleting an SMB Registered Folder.....	105
Entering the Path to the Destination Manually.....	106
Basic Procedure for Sending Scan Files by E-mail.....	107
Registering an E-mail Destination.....	108
Deleting an E-mail Destination.....	109
Entering an E-mail Address Manually.....	110
Basic Procedure for Storing Scan Files.....	111
Checking a Stored File Selected from the List.....	112
Specifying the File Type.....	113
Specifying Scan Settings.....	114

## **7. Document Server**

---

Storing Data.....	115
Printing Stored Documents.....	117

---

## 8. Web Image Monitor

---

Displaying Top Page.....	119
Viewing Received Fax Documents Using Web Image Monitor.....	121

## 9. Adding Paper and Toner

---

Loading Paper into Tray 1.....	123
Loading Paper into the A3/11 × 17 Tray Unit.....	125
Loading Paper into Trays 2 and 3.....	126
Loading Tab Stock into Trays 2 and 3.....	127
Loading Paper into the Bypass Tray.....	128
Settings to Use the Bypass Tray under the Printer Function.....	130
Loading Paper into the Large Capacity Tray.....	133
Recommended Paper Sizes and Types.....	135
Thick Paper.....	146
Adding Toner.....	147
Sending Faxes or Scanned Documents When Toner Has Run Out.....	148
Disposing of Used Toner.....	149

## 10. Troubleshooting

---

Indicators.....	151
When an Indicator for the [Check Status] Key Is Lit.....	153
Panel Tone.....	155
When You Have Problems Operating the Machine.....	156
When Messages Are Displayed on the Control Panel.....	163
Messages Displayed When Using the Copy/Document Server Function.....	163
Messages Displayed When Using the Facsimile Function.....	168
Messages Displayed When Using the Printer Function.....	184
Messages Displayed When Using the Scanner Function.....	199
When Messages Are Displayed on Your Computer Screen.....	214
Messages Displayed When Using the Scanner Function.....	214

## 11. Appendix

---

Trademarks.....	221
<b>INDEX</b> .....	223

---

# How to Read the Manuals

---

## Symbols Used in the Manuals

---

This manual uses the following symbols:

 **Important**

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

 **Note**

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

 **Reference**


This symbol is located at the end of sections. It indicates where you can find further relevant information.

[ ]

Indicates the names of keys on the machine's display or control panels.



Indicates instructions stored in a file on a provided CD-ROM.

 **Region A** (mainly Europe and Asia), (mainly Europe), or (mainly Asia)

 **Region B** (mainly North America)


Differences in the functions of Region A and Region B models are indicated by two symbols. Read the information indicated by the symbol that corresponds to the region of the model you are using. For details about which symbol corresponds to the model you are using, see p.6 "Model-Specific Information".

---

# Model-Specific Information

This section explains how you can identify the region your machine belongs to.

There is a label on the rear of the machine, located in the position shown below. The label contains details that identify the region your machine belongs to. Read the label.

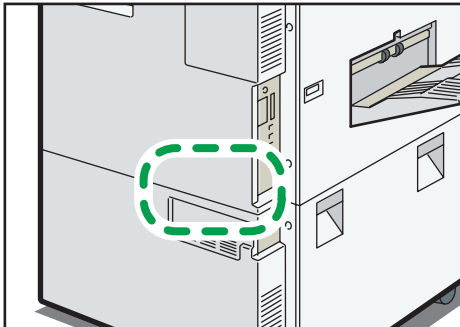

CJS101

The following information is region-specific. Read the information under the symbol that corresponds to the region of your machine.

## Region **A** (mainly Europe and Asia)

If the label contains the following, your machine is a region A model:



- CODE XXXX -27, -29, -67,
- 220–240 V

## Region **B** (mainly North America)

If the label contains the following, your machine is a region B model:

- CODE XXXX -17, -57
- 120 V, 208-240V

### **Note**

- Dimensions in this manual are given in two units of measure: metric and inch. If your machine is a Region A model, refer to the metric units. If your machine is a Region B model, refer to the inch units.
- If your machine is a region A model and "CODE XXXX -27, -67" is printed on the label, see " Region **A** (mainly Europe)" also.
- If your machine is a region A model and "CODE XXXX -29" is printed on the label, see " Region **A** (mainly Asia)" also.



---

# Names of Major Features

In this manual, major features of the machine are referred to as follows:

- Auto Document Feeder → ADF
- Large capacity tray → LCT




# 1. What You Can Do with This Machine

You can search for a description by what you want to do.

1

## I Want to Save Paper

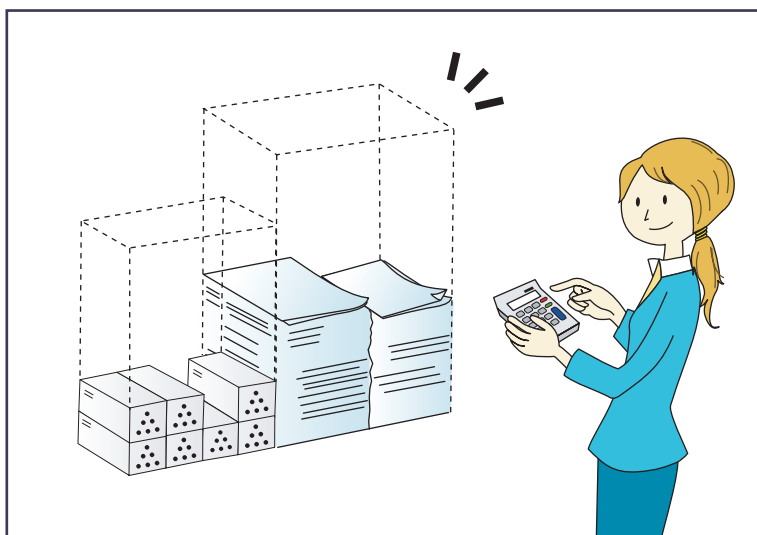


BRL059S

### Printing multi-page documents on both sides of sheets (Duplex Copy)

⇒ See "Duplex Copying", Copy/ Document Server .

### Printing multi-page documents and received faxes on a single sheet (Combine (Copier/Fax))

⇒ See "Combined Copying", Copy/ Document Server .

⇒ See "Combine Two Originals", Fax .

### Printing received faxes on both sides of sheets (2 Sided Print)

⇒ See "Two-Sided Printing", Fax .

### Converting received faxes to electronic formats (Paperless Fax)

⇒ See "Confirming/Printing/Deleting Received and Stored Documents", Fax .


### Sending files from the computer without printing them (LAN-Fax)

⇒ See "Sending Fax Documents from Computers", Fax .

### Checking how much paper is saved ([Information] screen)

⇒ See "How to Use the [Information] Screen", Getting Started .

# I Want to Convert Documents to Electronic Formats Easily

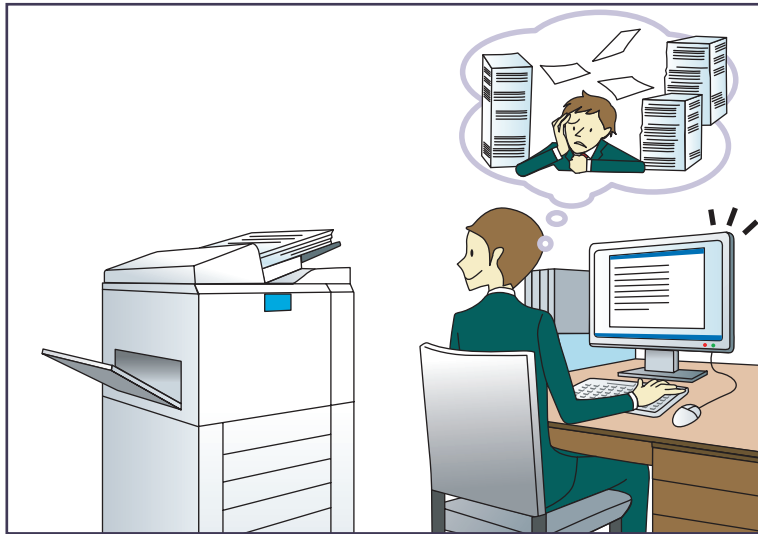

BQX138S

## **Sending scan files**

⇒ See "Basic Procedure for Sending Scan Files by E-mail", Scan .

## **Sending the URL of the folder in which scan files are stored**

⇒ See "Sending the URL by E-mail", Scan .

## **Storing scan files in a shared folder**

⇒ See "Basic Procedure When Using Scan to Folder", Scan .

## **Storing scan files on media**

⇒ See "Basic Procedure for Saving Scan Files on a Removable Memory Device", Scan .


## **Converting transmitted faxes to electronic formats and sending them to a computer**

⇒ See "Overview of Folder Transmission Function", Fax .

## **Managing and using documents converted to electronic formats (Document Server)**


⇒ See "Relationship between Document Server and Other Functions", Copy/ Document Server .

# I Want to Register Destinations

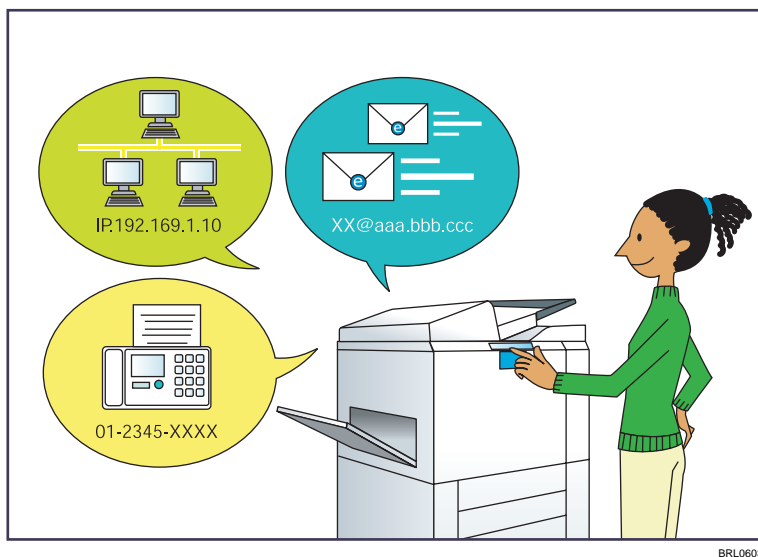

## Using the control panel to register destinations in the Address Book

⇒ See "Registering Entered Destinations to the Address Book", Fax .

⇒ See "Registering a destination in the address book manually", Scan .

## Using Web Image Monitor to register destinations from a computer

⇒ See "Registering Internet Fax Destination Information Using Web Image Monitor", Fax .

## Downloading destinations registered in the machine to the LAN-Fax driver destination list

⇒ See "Using the machine's Address Book as the LAN-Fax destination list", Fax .

# I Want to Operate the Machine More Effectively




BQX139S

## Registering and using frequently-used settings (Program)

⇒ See "Registering Functions in a Program", Convenient Functions .

## Registering frequently-used settings as initial settings (Program as Defaults (Copier/Document Server/Fax/Scanner))

⇒ See "Changing the Default Functions of the Initial Screen", Convenient Functions .

## Registering frequently-used printing settings to the printer driver

⇒ See "Using One Click Presets", Print .


## Changing the initial settings of the printer driver to frequently-used printing settings

⇒ See "Displaying the Printing Preferences Dialog Box", Print .

## Adding shortcuts to frequently used programs or Web pages


⇒ See "Adding Icons to the [Home] Screen", Convenient Functions .

## Changing the order of the function and shortcut icons

⇒ See "Changing the Order of Icons on the [Home] Screen", Convenient Functions .

# You Can Customize the [Home] Screen as You Like

The icons of each function are displayed on the [Home] screen.

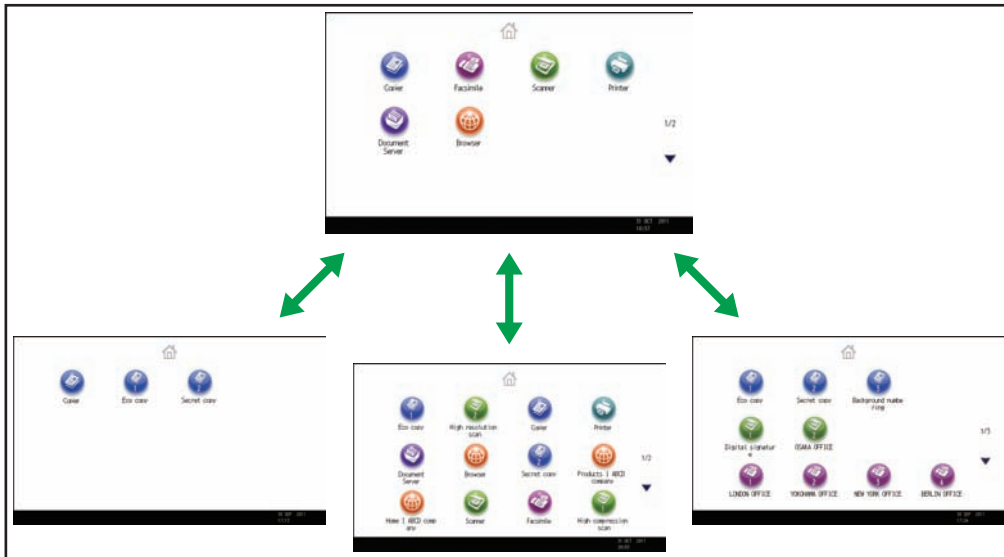

CJQ611


- You can add shortcuts to often used programs or Web pages to the [Home] screen. The programs or Web pages can be recalled easily by pressing the shortcut icons.
- You can display only the icons of functions and shortcuts that you use.
- You can change the order of the function and shortcut icons.

## Reference

- For details about the features on the [Home] screen, see "How to Use the [Home] Screen", Getting Started.

# You Can Make Copies Using Various Functions

1

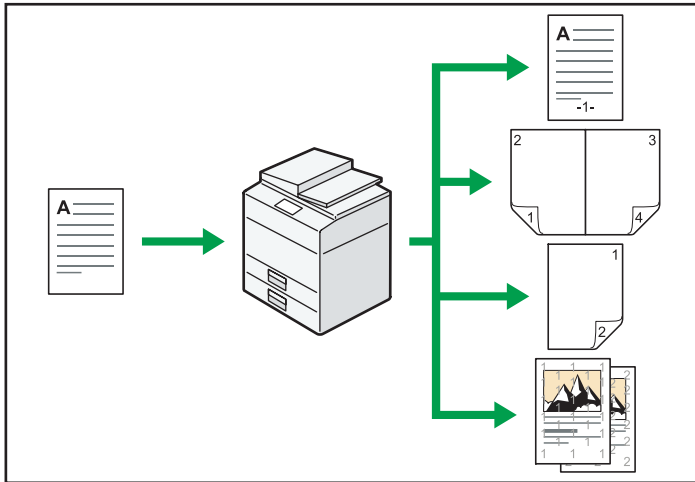

CJ0601


- You can print stamps on copies. Stamps can include background numbers, scanned images, dates, and page numbers.
- You can reduce or enlarge the copy image. With the Auto Reduce / Enlarge function, the machine automatically detects the original size, and then selects an appropriate reproduction ratio based on the paper size you select. If the orientation in which your original is placed is different from that of the paper you are copying onto, the machine rotates the original image by 90 degrees and fits it on the copy paper.
- Copier functions such as Duplex, Combine, Booklet, and Magazine allow you to save on paper by copying multiple pages onto single sheets.
- You can copy onto various types of paper, such as OHP transparencies and thick paper.
- The finisher allows you to sort, staple, and punch holes in your copies.

## Reference

- See Copy/ Document Server .



# You Can Print Data Using Various Functions

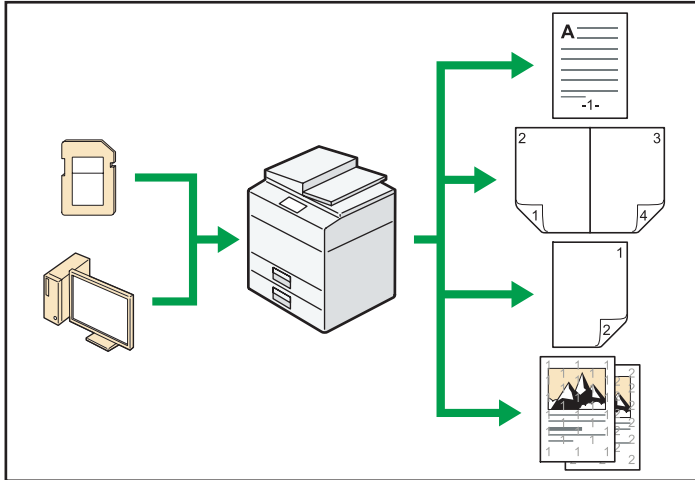

CJ0614

- This machine supports network and local connections.
- You can send PDF files directly to the machine for printing, without having to open a PDF application.
- You can print or delete print jobs stored on the machine's hard disk, which have been previously sent from computers using the printer driver. The following types of print jobs can be selected: Sample Print, Locked Print, Hold Print, and Stored Print.
- The finisher allows you to collate, staple, and punch holes in your prints.
- You can print files stored on a removable memory device and specify print conditions such as print quality and print size.


## Reference

- See Print .

## You Can Utilize Stored Documents

1



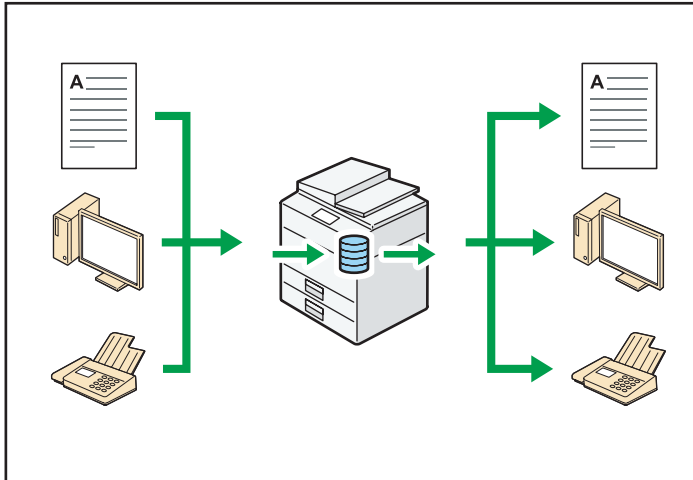

You can store files scanned in copier, facsimile, printer, or scanner mode on the machine's hard disk. With Web Image Monitor, you can use your computer to search for, view, print, delete, and send stored files via the network. You can also change print settings and print multiple documents (Document Server).



CJQ603


- You can retrieve stored documents scanned in scanner mode to your computer.
- Using the file format converter, you can download documents stored in copier, Document Server, or printer mode to your computer.

### Reference

- For details about the Document Server in copier mode and how to use the Document Server, see "Storing Data in the Document Server" and "Document Server", Copy/ Document Server .
- For details about the Document Server in printer mode, see "Saving and Printing Using the Document Server", Print .
- For details about the Document Server in fax mode, see "Storing a Document", Fax .
- For details about the Document Server in scanner mode, see "Storing and Saving the Scanned Documents", Scan .

# You Can Connect Two Machines for Copying

You can connect two machines together with copy connector. When you set up a copy job on one machine (the main machine), data is transferred to the other (the sub-machine) so that copies can be made on both machines simultaneously (Connect Copy).

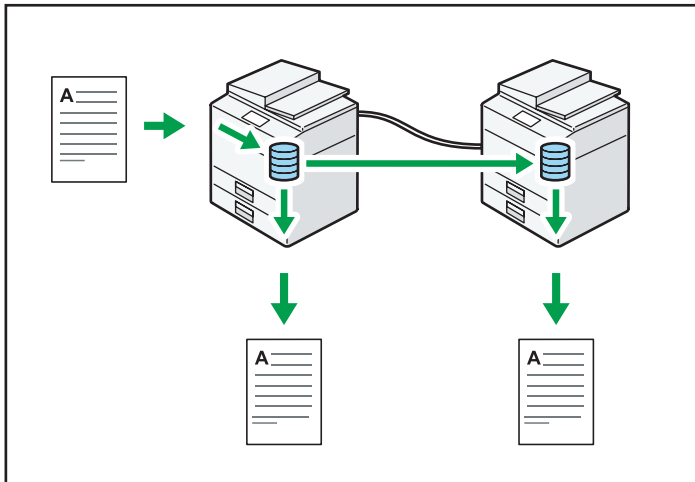

CJQ101

- You can complete large volume copy runs in shorter time.
- Even if one machine runs out of paper, or stops because of a paper jam, the other machine can still continue to finish the job.

## Reference


- See "Connect Copying", Copy/ Document Server .

# You Can Send and Receive Faxes without Paper

1

## Reception

You can store and save received fax documents as electronic formats in the machine's hard disk without printing them.

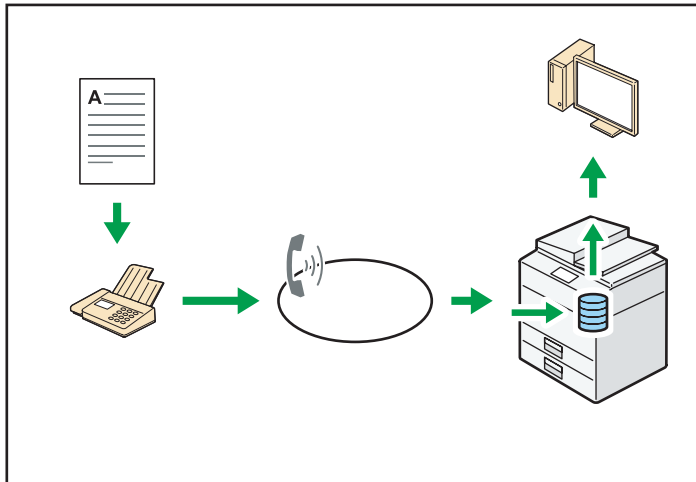

CJQ604


You can use Web Image Monitor to check, print, delete, retrieve, or download documents using your computer (Storing received documents).

## Reference

- See "Confirming/Printing/Deleting Received and Stored Documents", Fax .

## Transmission

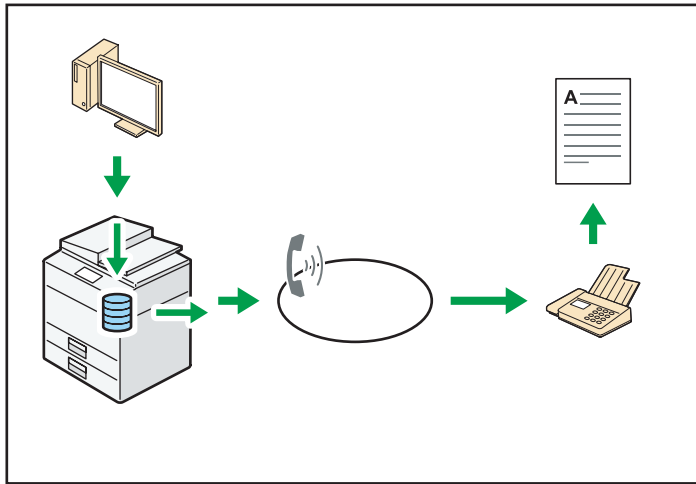

You can send a fax from your computer over the network (Ethernet or wireless LAN) to this machine, which then forwards the fax via its telephone connection (LAN-Fax).



CJQ605


- To send a fax, print from the Windows application you are working with, select LAN-Fax as the printer, and then specify the destination.
- You can also check the sent image data.

#### Reference

- For details about the machine's settings, see "Network Settings Requirements", Connecting the Machine/ System Settings .
- For details about how to use the function, see "Fax via Computer", Fax .

# You Can Send and Receive Faxes Using the Internet

1

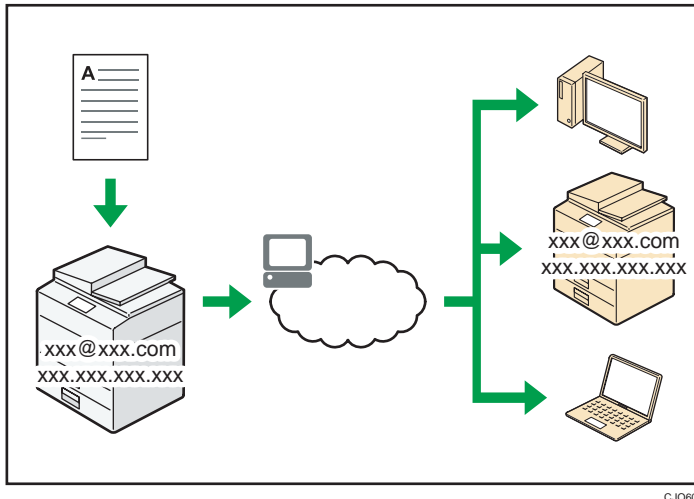

## E-mail Transmission and Reception

This machine converts scanned document images to e-mail format, and transmits and receives this data over the Internet.


- To send a document, specify an e-mail address instead of dialing the destination telephone number (Internet Fax and e-mail transmission).
- This machine can receive e-mail messages via Internet Fax or from computers (Internet Fax Reception and Mail to Print).
- Internet Fax compatible machines and computers that have e-mail addresses can receive e-mail messages via Internet Fax.


## IP-Fax

The IP-Fax function sends or receives documents between two facsimiles directly via a TCP/IP network.

- To send a document, specify an IP address or host name instead of a fax number (IP-Fax Transmission).
- This machine can receive documents sent via Internet Fax (IP-Fax Reception).
- Using a VoIP gateway, this machine can send to G3 facsimiles connected to the public switched telephone network (PSTN).

### Reference


- For details about settings, see "Network Settings Requirements", Connecting the Machine/ System Settings .

- For details about how to transmit and receive documents over the Internet, see "Transmission" and "Reception", Fax .

# You Can Send and Receive Faxes by Using the Machine without Fax Unit Installed

1

You can send and receive faxes through a different machine's fax functions via a network (Remote Fax).

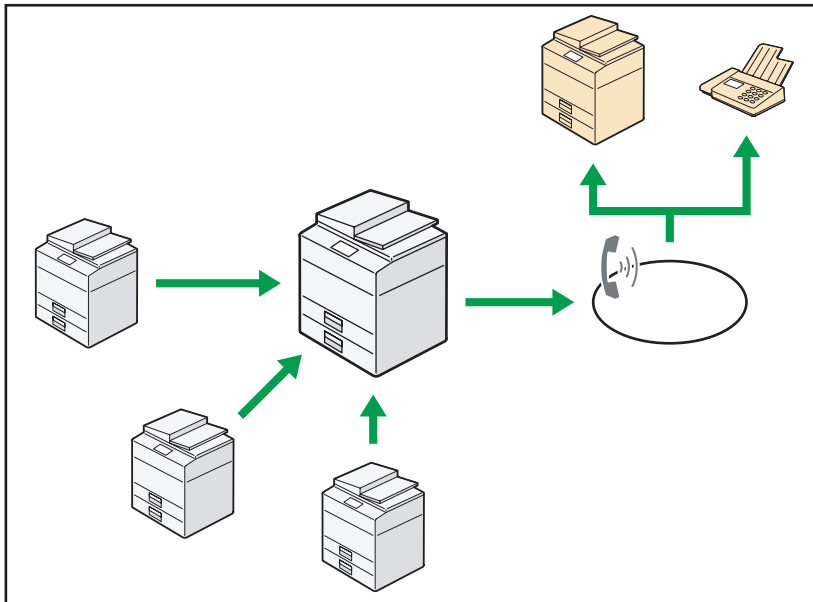

CJ0612


- To use the remote fax function, install the fax connection unit on the client-side machine and remote machine.
- The procedure for sending faxes is as same as that of for the machine with the fax unit. When a job has finished, confirm results displayed on sending history or printed on reports.
- You can forward the received documents from the remote machine with facsimile function to the client-side machine.

## Reference

- For details, see "Sending/Receiving Documents Using a Remote Machine (Remote Fax)", Fax .



# You Can Use the Facsimile and the Scanner in a Network Environment

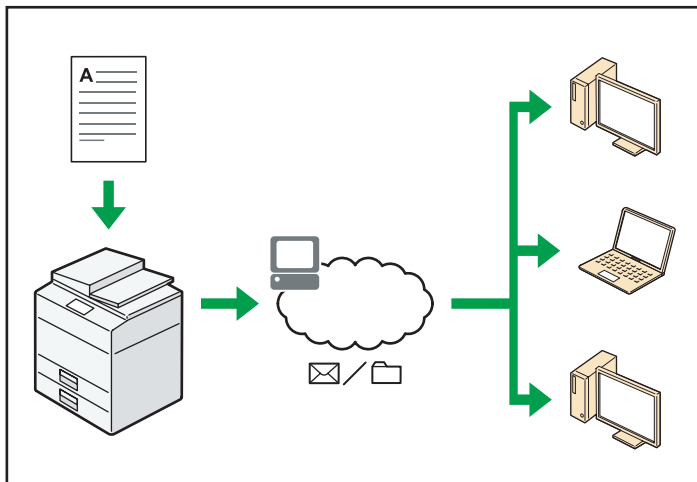

CJ0607


- You can send scan files to a specified destination using e-mail (Sending scan files by e-mail).
- You can send scan files directly to folders (Sending scan files by Scan to Folder).
- You can use this machine as a delivery scanner for the ScanRouter delivery software <sup>\* 1</sup> (Network delivery scanner). You can save scan files in the delivery server or send them to a folder in a computer on the same network.
- You can use Web Services on Devices (WSD) to send scan files to a client computer.

\* 1 The ScanRouter delivery software is no longer available for sale.

## Reference

- See Fax , Scan , or Connecting the Machine/ System Settings .


# You Can Prevent Information Leakage (Security Functions)

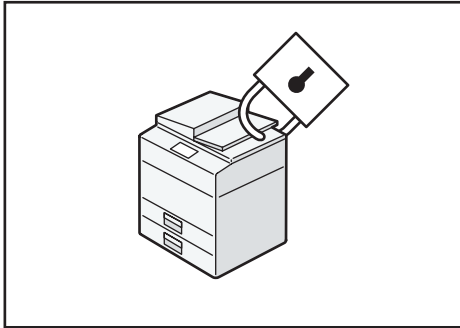

CJG608


- You can protect documents from unauthorized access and stop them from being copied without permission.
- You can control the use of the machine, as well as prevent machine settings from being changed without authorization.
- By setting passwords, you can prevent unauthorized access via the network.
- You can erase or encrypt the data on the hard disk to prevent the information from leaking out.
- You can limit the volume of the usage of the machine for each user.

## Reference

- See Security Guide .

# You Can Monitor and Set the Machine Using a Computer


Using Web Image Monitor, you can check the machine's status and change the settings.

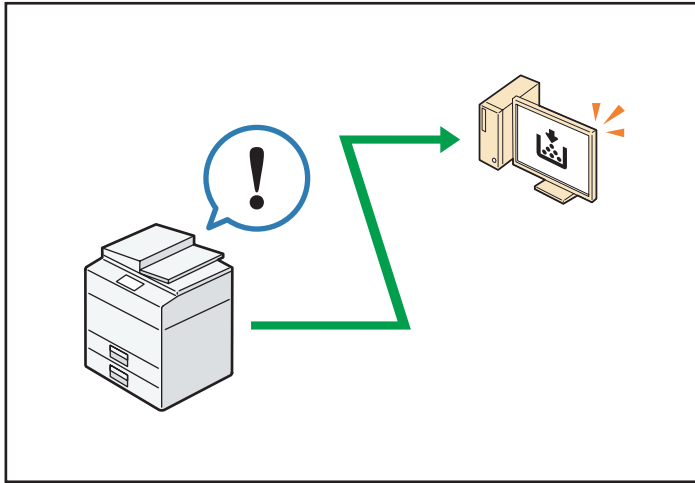

CJ0609

You can check which tray is running out of paper, register information in the Address Book, specify the network settings, configure and change the system settings, manage jobs, print the job history, and configure the authentication settings.


## Reference

- See [Connecting the Machine/ System Settings](#)  or [Web Image Monitor Help](#).

# You Can Prevent an Unauthorized Copy

You can print embedded pattern on paper to prevent them from being copied.

1

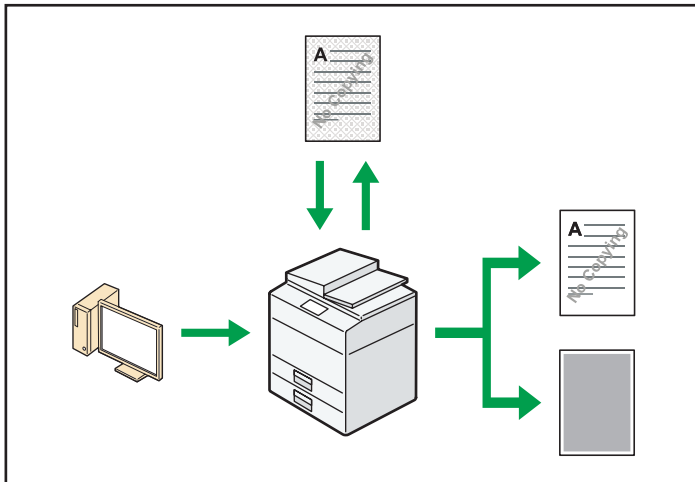


CJ0613

- Using the printer driver, you can embed a pattern in the printed document. If the document is copied on a machine with the Copy Data Security unit, protected pages are grayed out in the copy, preventing confidential information from being copied. Protected fax messages are grayed out before being transmitted or stored. If a document protected by unauthorized copy guard is copied on a machine that is equipped with the Copy Data Security unit, the machine beeps to notify users that unauthorized copying is being attempted.

If the document is copied on a machine without the Copy Data Security Unit, the hidden text becomes conspicuous in the copy, showing that the copy is unauthorized.

- Using the printer driver, you can embed text in the printed document for unauthorized copy prevention. If the document is copied, scanned, or stored in a Document Server by a copier or multifunction printer, the embedded text appears conspicuous in the copy, discouraging such unauthorized copying.

## Reference

- For details, see the printer driver Help, Print , and Security Guide .

# 2. Getting Started

This chapter describes how to start using this machine.


## Guide to Names and Functions of Components

### Guide to Components

**★ Important**

- Do not obstruct the ventilation holes by placing objects near them or leaning things against them. If the machine overheats, a fault might occur.

#### Front and left view

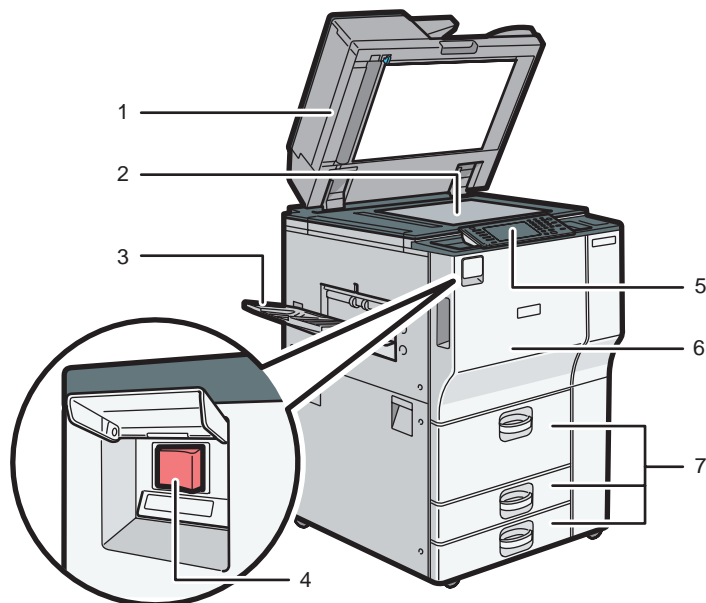

CJS102

#### 1. ADF

Lower the ADF over originals placed on the exposure glass.

If you load a stack of originals in the ADF, the ADF will automatically feed the originals one by one.

#### 2. Exposure glass

Place originals face down here.

#### 3. Copy tray

Copied/printed paper and fax messages are delivered here.

#### 4. Main power switch

To operate the machine, the main power switch must be on. If it is off, open the cover and turn the switch on.

**5. Control panel**

See p.32 "Guide to the Names and Functions of the Machine's Control Panel".

**6. Front cover**


Open to access the inside of the machine.

**7. Paper trays (trays 1–3)**

Load paper here.

Tray 1 is a tandem tray where paper on the left side automatically moves to the right when paper there has run out.

**Front and right view**

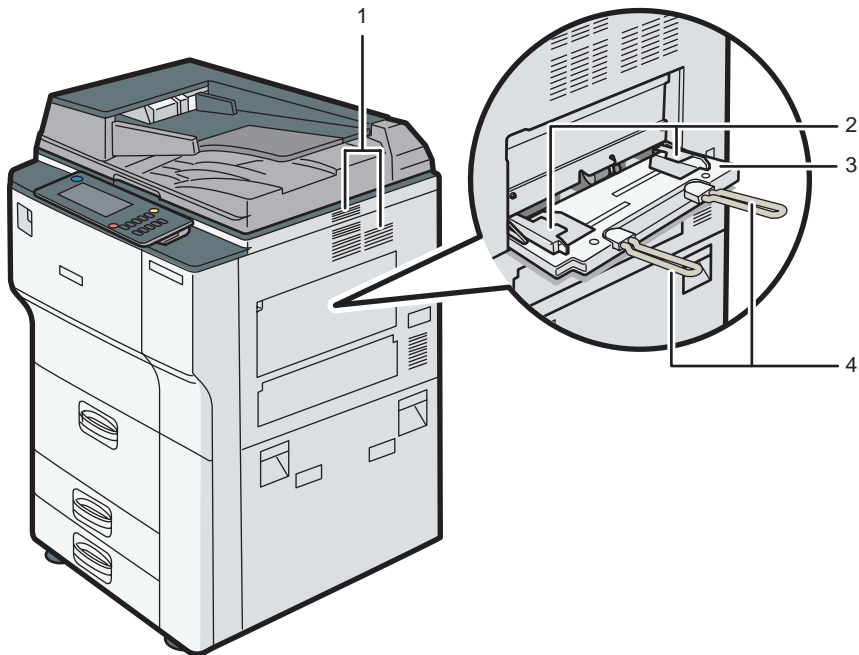

CJS103

**1. Ventilation holes**

Prevent overheating.

**2. Paper guides**

When loading paper in the bypass tray, align the paper guides flush against the paper.


**3. Bypass tray**

Use to copy or print on OHP transparencies and label paper (adhesive labels).

**4. Extender**

Pull this extender out when loading A4, 8 1/2 x 11 or larger size paper in the bypass tray.

Rear and left view

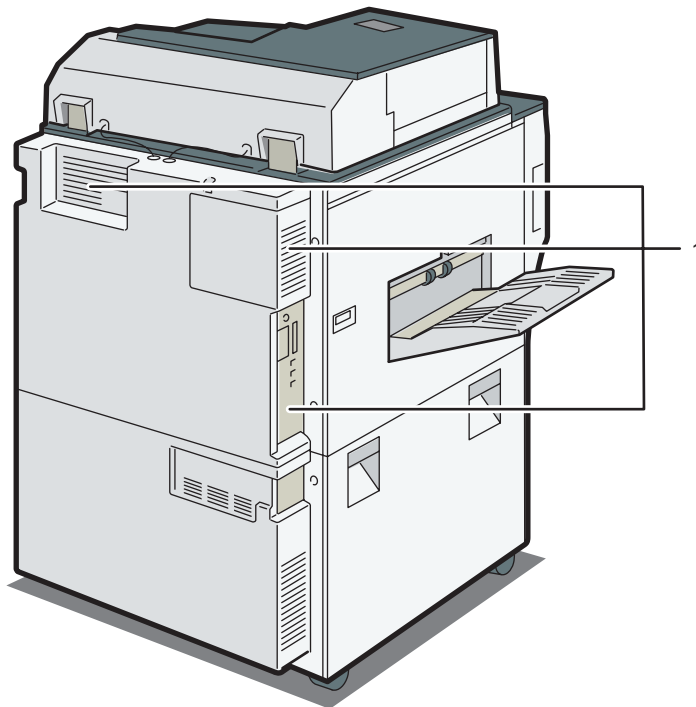

1. Ventilation holes


Prevent overheating.

CJS104

# Guide to Functions of the Machine's Options

## Guide to Functions of the Machine's External Options

2

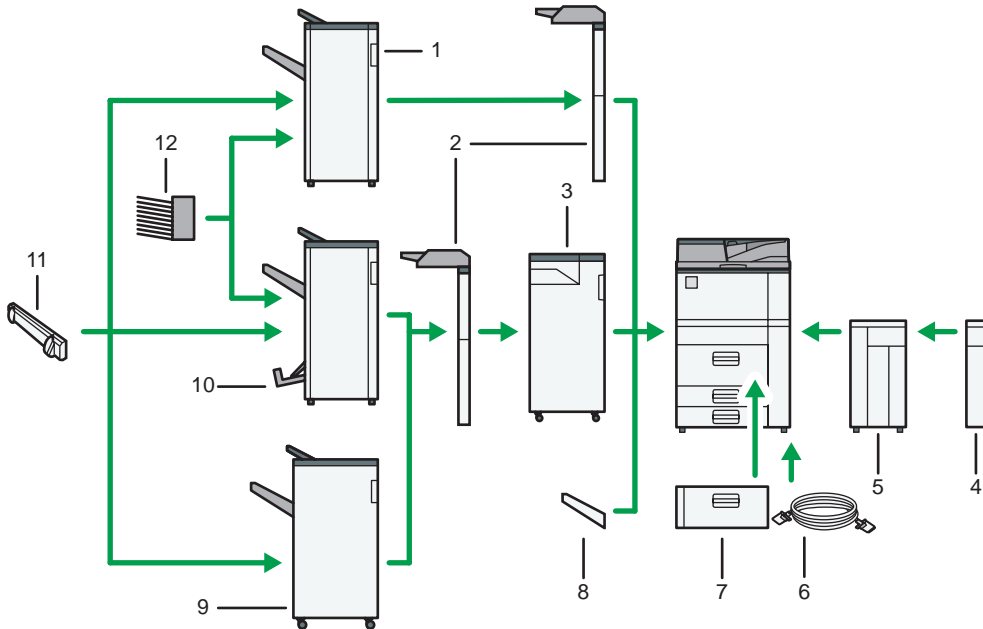

CJS105

### 1. Finisher SR4060

Sorts, stacks, and staples multiple sheets of paper. Consists of the following paper trays:

- Finisher upper tray
- Finisher shift tray

### 2. Interposer

Inserts cover or slip sheets into copied or printed paper.

### 3. Multi-Folding unit

The Multi-Folding unit can apply the following folds: Half Fold, Letter Fold-out, Letter Fold-in, Double Parallel Fold, Gate Fold, and Z-fold.

To use the Multi-Folding Unit, the Finisher SR4070 or the Finisher SR4080 is required.

### 4. Extension unit

Attached to the LCT and holds 2,500 sheets of B4 JIS $\square$ , A4 $\square$ , 8 $\frac{1}{2}$  × 14 $\square$ , or 8 $\frac{1}{2}$  × 11 $\square$  paper.

### 5. Large capacity tray (LCT)

Holds up to 4,000 sheets of paper.

### 6. Copy connector

Allows you to use the connect copy function.



### 7. A3/11 × 17 tray unit

You can load paper sizes up to A3 or 11 × 17 in Tray 1 using this unit. If you install the A3/11 × 17 tray unit on your machine, you cannot use it as a tandem tray.

### 8. Copy tray

If you select this as the output tray, copied/printed paper and fax messages are delivered here face down.

### 9. Finisher SR4080

Sorts, stacks, and staples multiple sheets of paper. Consists of the following paper trays:

- Finisher upper tray
- Finisher shift tray

### 10. Booklet Finisher SR4070

Sorts, stacks, staples, and punches multiple sheets of paper. The saddle stitch function can staple multiple sheets of paper in the center and fold them into booklets. Consists of the following paper trays:

- Finisher upper tray
- Finisher shift tray
- Finisher booklet tray

### 11. Output jogger

Jogs the sheets delivered to the finisher shift tray.

### 12. Mailbox


Sorts printed paper. Consists of Mailbox output trays 1 - 9.

#### ↓ Note

- You cannot install multiple finishers simultaneously.

# Guide to the Names and Functions of the Machine's Control Panel

This illustration shows the control panel of the machine with options fully installed.

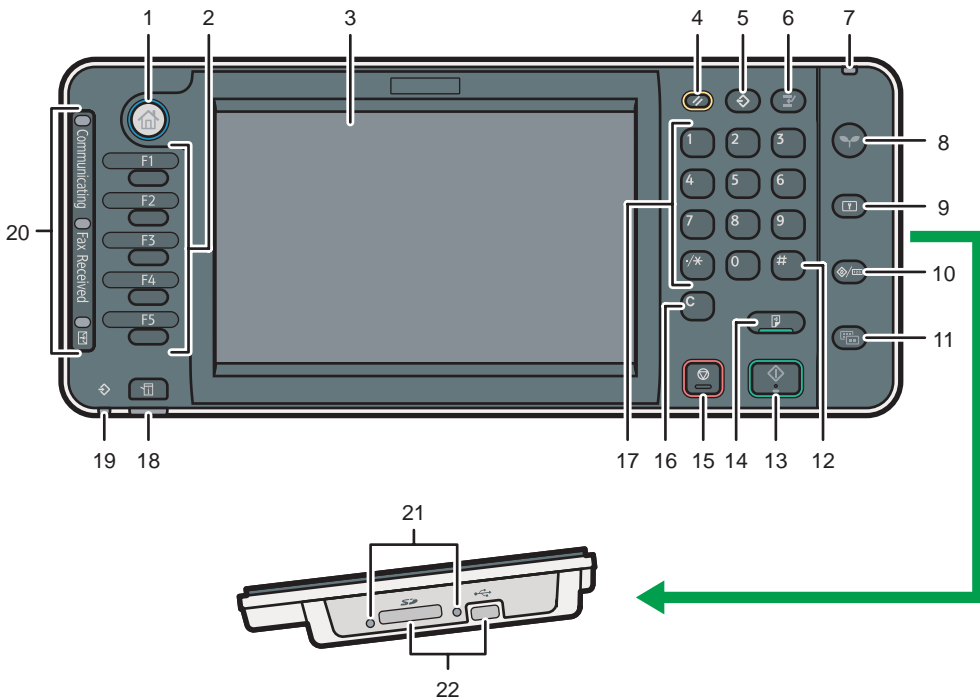


CJS106


## 1. [Home] key

Press to display the [Home] screen. For details, see p.35 "How to Use the [Home] Screen".

## 2. Function keys

No functions are registered to the function keys as a factory default. You can register often used functions, programs, and Web pages. For details, see "Configuring function keys", Getting Started .


## 3. Display panel

Displays keys for each function, operation status, or messages. See "How to Use the Screens on the Control Panel", Getting Started .

## 4. [Reset] key


Press to clear the current settings.

## 5. [Program] key (copier, Document Server, facsimile, and scanner mode)

- Press to register frequently used settings, or to recall registered settings.  
See "Registering Frequently Used Functions", Convenient Functions .
- Press to program defaults for the initial display when modes are cleared or reset, or immediately after the main power switch is turned on.

See "Changing the Default Functions of the Initial Screen", Convenient Functions .


#### 6. [Interrupt] key

Press to make interrupt copies. See "Interrupt Copy", Copy/ Document Server .

#### 7. Main power indicator

The main power indicator goes on when you turn on the main power switch.

#### 8. [Energy Saver] key

Press to switch to and from Low Power mode or Sleep mode. See "Saving Energy", Getting Started .


When the machine is in Low Power mode, the [Energy Saver] key is lit. In Sleep mode, the [Energy Saver] key flashes slowly.

#### 9. [Login/Logout] key


Press to log in or log out.


#### 10. [User Tools/Counter] key

- User Tools

Press to change the default settings to meet your requirements. See "Accessing User Tools", Connecting the Machine/ System Settings .

- Counter

Press to check or print the counter value. See "Counter", Maintenance and Specifications .

You can find out where to order expendable supplies and where to call when a malfunction occurs. You can also print these details. See "Checking Enquiry Using the User Tools", Maintenance and Specifications .

#### 11. [Simple Screen] key

Press to switch to the simple screen. See "Switching Screen Patterns", Getting Started .

#### 12. [#] key (Enter key)

Press to confirm values entered or items specified.

#### 13. [Start] key

Press to start copying, printing, scanning, or sending.

#### 14. [Sample Copy] key

Press to make a single set of copies or prints to check print quality before making multiple sets. See "Sample Copy", Copy/ Document Server .

#### 15. [Stop] key

Press to stop a job in progress, such as copying, scanning, faxing, or printing.

#### 16. [Clear] key

Press to delete a number entered.



#### 17. Number keys

Use to enter the numbers for copies, fax numbers and data for the selected function.



#### 18. [Check Status] key

Press to check the machine's system status, operational status of each function, and current jobs. You can also display the job history and the machine's maintenance information.

**19. Data In indicator (facsimile and printer mode)**

Flashes when the machine is receiving print jobs or LAN-Fax documents from a computer. See Fax  and Print .

**20. Communicating indicator, Fax Received indicator, Confidential File indicator**

- **Communicating indicator**  
Lights continuously during data transmission and reception.
- **Fax Received indicator**  
Lights continuously while data other than personal box or Memory Lock file is being received and stored in the fax memory.  
See "Substitute Reception", Fax .
- **Confidential File indicator**  
Lights continuously while personal box data is being received.  
Blinks while Memory Lock file is being received.  
See "Personal Boxes" and "Printing a File Received with Memory Lock", Fax .

**21. Media access lamp**

Lights up when a removable memory device is inserted in the media slot or accessed.

**22. Media slots**


Use to insert an SD card or a USB memory.

# How to Use the [Home] Screen

The icons of each function are displayed on the [Home] screen.

You can add shortcuts to frequently used programs or Web pages to the [Home] screen. The icons of added shortcuts appear on the [Home] screen. The programs or Web pages can be recalled easily by pressing the shortcut icons.

To display the [Home] screen, press the [Home] key.

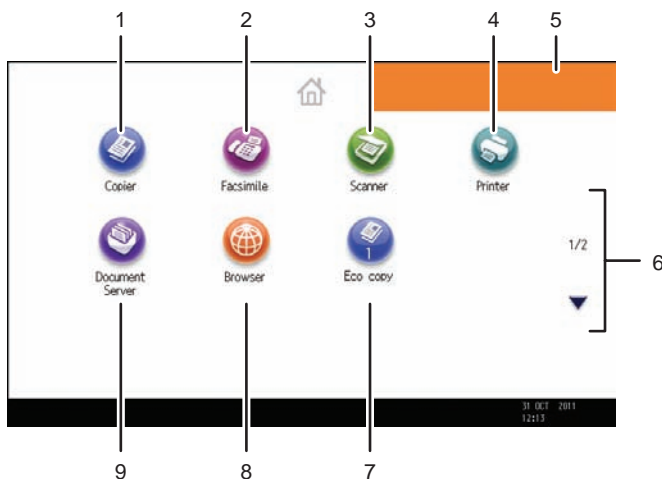

CJS052

## 1. [Copier]

Press to make copies.

For details about how to use the copy function, see Copy/ Document Server.

## 2. [Facsimile]

Press to send or receive faxes.

For details about how to use the fax function, see Fax.

## 3. [Scanner]

Press to scan originals and save images as files.

For details about how to use the scanner function, see Scan.

## 4. [Printer]

Press to make settings for using the machine as a printer.

For details about how to make settings for the printer function, see Print.

## 5. Home screen image

You can display an image on the [Home] screen, such as a corporate logo. To change the image, see "Displaying the Image on the [Home] Screen", Convenient Functions.

## 6. ▲/▼


Press to switch pages when the icons are not displayed on one page.

### 7. Shortcut icon

You can add shortcuts to programs or Web pages to the [Home] screen. For details about how to register shortcuts, see p.36 "Adding Icons to the [Home] Screen". The program number appears on the bottom of the shortcut icon.

### 8. [Browser]

Press to display Web pages.

For details about how to use the browser function, see Convenient Functions .

### 9. [Document Server]

Press to store or print documents on the machine's hard disk.






For details about how to use the Document Server function, see Copy/ Document Server .

## Adding Icons to the [Home] Screen

You can add shortcuts to programs stored in copier, facsimile, or scanner mode, or Web pages registered in Favorites using the browser function.

You can also review icons of functions and embedded software applications that you deleted from the [Home] screen.

### Note

- Shortcuts to programs stored in Document Server mode cannot be registered to the [Home] screen.
- Shortcut names of up to 32 characters can be displayed in a standard screen. If the name of the shortcut is longer than 32 characters, the 32nd character is replaced with "...". Only 30 characters can be displayed in a simple screen. If the name of the shortcut is longer than 30 characters, the 30th character is replaced with "...".
- For details about how to make a program, see p.40 "Registering Functions in a Program".
- For details about the procedure for registering Web pages to Favorites, see "Specifying the Settings for Favorites", Convenient Functions .
- Shortcuts to Web pages that are registered to Favorites by User cannot be registered to the [Home] screen. To register the shortcuts, register Web pages to Common Favorites. For details about kinds of Favorites, see "Specifying the Settings for Favorites", Convenient Functions .
- For details about the procedure for registering a shortcut using the [Program] screen, see "Registering a Shortcut to a Program to the [Home] Screen", Convenient Functions .
- You can register up to 72 function and shortcut icons. Delete unused icons if the limit is reached. For details see "Deleting an Icon on the [Home] Screen", Convenient Functions .
- You can change the position of icons. For details, see "Changing the Order of Icons on the [Home] Screen", Convenient Functions .

## Adding icons to the [Home] screen using Web Image Monitor

### 1. Start Web Image Monitor.

For details, see "Using Web Image Monitor", Connecting the Machine/ System Settings ⑧.

### 2. Log in to Web Image Monitor as an administrator.

For details, see Security Guide ⑧.

### 3. Point to [Device Management], and then click [Device Home Management].

### 4. Click [Edit Icons].

### 5. Point to [+Icon can be added.] of the position that you want to add, and then click [+ Add].

### 6. Select the function or shortcut icon you want to add.


### 7. Click [OK] four times.

## Adding icons to the [Home] screen using the User Tools

In the following procedure, a shortcut to a copier program is registered to the [Home] screen.


### 1. Register a program.

### 2. Press the [User Tools/Counter] key.

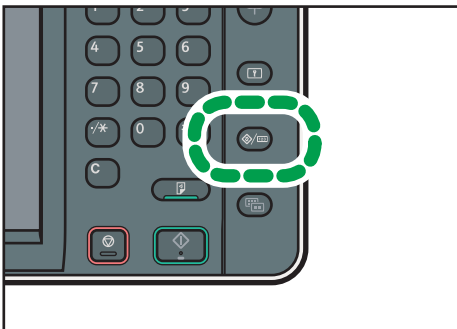


CJS039

### 3. Press [Edit Home].

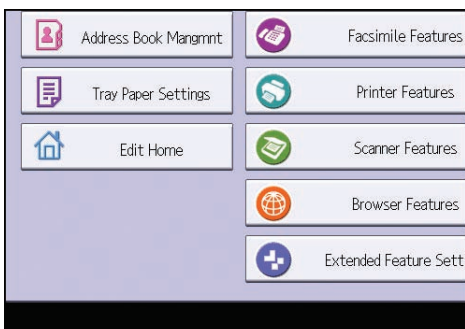


**4. Press [Add Icon].**

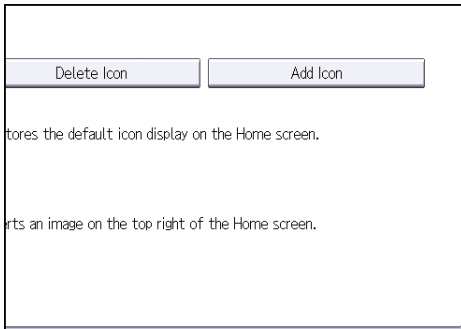


2

**5. Press the [Program] tab.**

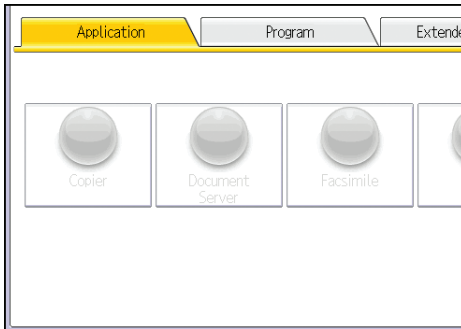


**6. Make sure that [Copier Program] is selected.**

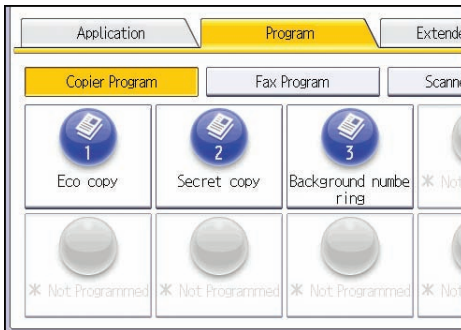


**7. Select the program you want to add.**



## 8. Specify the position where [Blank] is displayed.

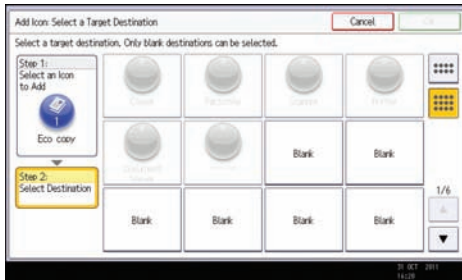


## 9. Press [OK].

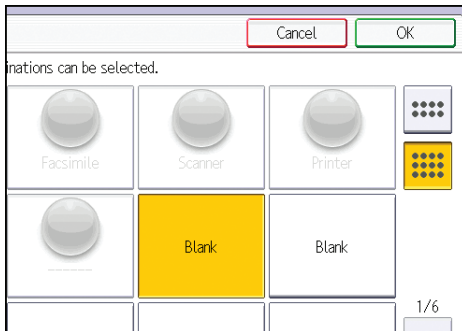

## 10. Press the [User Tools/Counter] key.

### ↓ Note

- Press  on the upper-right corner of the screen to check the position on the simple screen.

# Registering Functions in a Program

Depending on the functions, the number of programs that can be registered is different.

- Copier: 25 programs
- Document Server: 25 programs
- Facsimile: 100 programs
- Scanner: 25 programs

The following settings can be registered to programs:

### Copier:

Original type, density, Special Original, paper tray, Store File (except for User Name and Password), Create Margin, Finishing, Cover/Slip Sheet, Edit / Stamp, Dup./Combine/Series, Reduce / Enlarge, number of copies

### Document Server (on the initial document print screen):

Finishing, Cover/Slip Sheet (except for Main Sheet Tray in Designate / Chapter), Edit / Stamp, 2 Sided / Book, number of prints

### Facsimile:


Scan Settings, density, Original Feed Type, File Type, Store File (except for User Name and Password), Preview, transmission type, destinations (except for folder destinations), Select Line, Adv.Features, memory transmission/immediate transmission, TX Status Report, TX Mode (except for Subject)

### Scanner:

Scan Settings, density, Original Feed Type, Send File Type / Name (except for Security Settings), Select Stored File, Store File (except for User Name and Password), Preview, Text, Subject, Security, Recept. Notice


This section explains how to register functions in a program using copier function as an example.

1. Press the [Home] key on the top left of the control panel, and press the [Copier] icon on the [Home] screen.

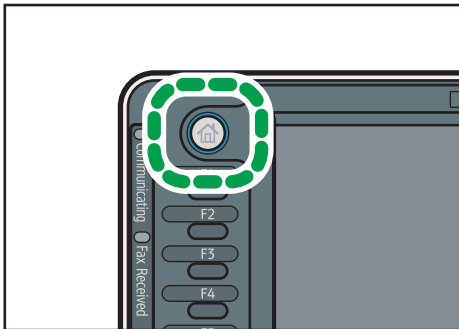


CJS113

2. Edit the copy settings so all functions you want to store in a program are selected.
3. Press the [Program] key.

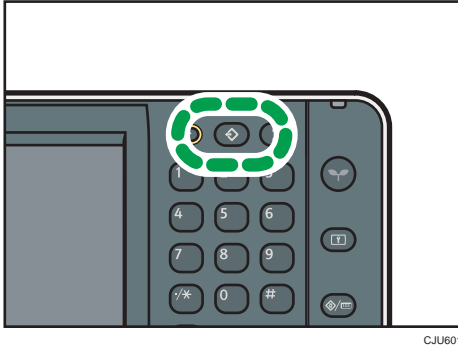


CJU601

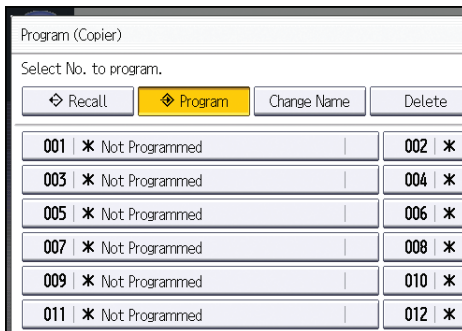


4. Press [Program].
5. Press the program number you want to register.



6. Enter the program name.
7. Press [OK].
8. Press [Exit].

#### ↓ Note

- The number of characters you can enter for a program name varies depending on the functions as follows:
  - Copier: 34 characters
  - Document Server: 34 characters
  - Facsimile: 20 characters
  - Scanner: 34 characters
- When a specified program is registered as the default, its values become the default settings, which are displayed without pressing the [Program] key, when modes are cleared or reset, and after the machine is turned on. See "Changing the Default Functions of the Initial Screen", Convenient Functions .

- When the paper tray you specified in a program is empty and if there is more than one paper tray with the same size paper in it, the paper tray prioritized under [Paper Tray Priority: Copier], [Paper Tray Priority: Facsimile], or [Paper Tray Priority: Printer] in the [Tray Paper Settings] tab will be selected first. For details, see "System Settings", Connecting the Machine/ System Settings .
- Programs are not deleted by turning the power off or by pressing the [Reset] key unless the program is deleted or overwritten.
- Program numbers with  next to them already have settings made for them.
- Programs can be registered to the [Home] screen, and can be recalled easily. For details, see "Registering a Shortcut to a Program to the [Home] Screen", Convenient Functions  and p.36 "Adding Icons to the [Home] Screen". Shortcuts to programs stored in Document Server mode cannot be registered to the [Home] screen.

## Example of Programs

### Copier mode

Program name	Program description	Effect
Eco copy	Specify [Combine 2 Sides] in [Dup./Combine/Series].	You can save paper and toner.
Dated confidential copy	In [Edit / Stamp], specify [CONFIDENTIAL] under [Preset Stamp], and [Date Stamp].	You can increase security awareness by printing "Secret" and the date on copies.
Conference material copy	Specify [Combine 2 Sides] in [Dup./Combine/Series] and [Staple] in [Finishing].	You can copy conference materials efficiently.
Magazine copy	Specify [Magazine] in [Dup./Combine/Series] and [Staple: Centre] in [Finishing].	You can save paper. Also, you can perform printing jobs such as producing leaflets in-house instead of having them printed by an outside printing company.
Size unity copy	Specify [Mixed Sizes] in [Special Original] and [Auto Reduce / Enlarge] in the initial display.	You can print various size copies onto one size of paper, so they are easier to manage.

Program name	Program description	Effect
Stamping corporate name copy	Specify [User Stamp] in [Edit / Stamp].	You can stamp the name of your company on copies of working or architectural drawings. Your company name needs to be pre-registered in the machine.
Z-folding copy	Specify [Z-fold] in [Finishing].	A3 size paper is folded to A4 size. You can print various size copies onto one size of paper, so they are easier to manage.
Thumbnail copy	Specify [Combine 1 Side] in [Dup./Combine/Series].	You can copy up to eight pages onto one side of a sheet, so that you can save paper.

### Scanner mode


Program name	Program description	Effect
Easy PDF scan	Select [Full Colour: Text / Photo] in [Scan Settings]. In [Send File Type / Name], select [PDF] under [File Type] and enter the business details such as "London branch: daily report" under [File Name].	You can scan documents efficiently.
High compression PDF scan	Select [Full Colour: Text / Photo] in [Scan Settings] and [High Compression PDF] in [Send File Type / Name].	You can compress the data size of scanned documents, so that you can send and store them.
Long-term storage scan	Select [PDF/A] in [Send File Type / Name].	You can easily digitize documents to "PDF/A" file format, which is suitable for long-term storage.
Size unity scan	Select [Mixed Original Sizes] in [Scan Settings], and specify a paper size in the initial display.	You can skip this procedure to unify the size when reprinting scanned data.
Digital signature scan	In [Send File Type / Name], specify [PDF], [High Compression PDF], or [PDF/A] in [File Type], and also specify [Digital Signature].	You can add a digital signature to an important document such as a contract, so that any data tampering can be detected.

Program name	Program description	Effect
Dividing file scan	Specify [Divide] in [Original Feed Type].	You can scan a multiple page original as one file by splitting it into groups of a specified number of pages.
High resolution scan	Specify settings to save scanned data in TIFF format. Also, specify a higher resolution in [Scan Settings].	Scanned documents maintain much of the detail of the originals, but the size of the data may be quite large.
Batch document scan	Select [Batch] in [Original Feed Type].	You can apply multiple scans to a large volume of originals and send the scanned originals as a single job.

### Facsimile mode

Program name	Program description	Effect
Transmission result notification fax	Select [Preview] in the initial display and specify [E-mail TX Results] in [TX Mode].	You can check whether the transmission settings are correct before and after transmission.
Specified time fax transmission	Specify [Send Later] in [TX Mode].	You can send a fax at a specified time.
Departmental fax transmission	Specify [Fax Header Print] in [TX Mode].	This setting can be used if the receiver specifies forwarding destinations by senders.

#### ↓ Note

- Depending on the options installed, some functions cannot be registered. For details, see "Functions Requiring Optional Configurations", Getting Started .
- The names of programs given above are just examples. You can assign any name to a program according to your objectives.
- Depending on your business details or the type of documents to be scanned, registering a program cannot be recommended.

# Turning On/Off the Power


The main power switch is on the left side of the machine. Turning off this switch makes the main power indicator on the right side of the control panel go off. When this is done, machine power is off. When the fax unit is installed, fax files in memory may be lost if you turn this switch off. Use this switch only when necessary.

## Turning On the Main Power

### ★ Important

- Do not turn off the main power switch immediately after turning it on. Doing so may result in damage to the hard disk or memory, leading to malfunctions.
1. Make sure the power cord is firmly plugged into the wall outlet.
  2. Open the main power switch cover, and turn on the main power switch.

The main power indicator goes on.

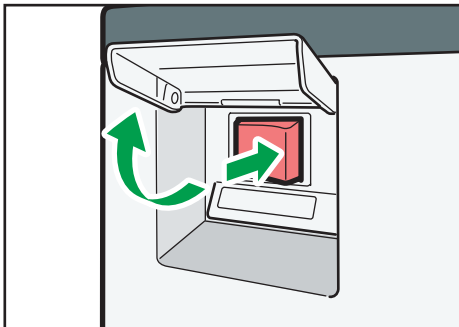

CJS141

## Turning Off the Main Power

### ⚠ CAUTION

- When disconnecting the power cord from the wall outlet, always pull the plug, not the cord. Pulling the cord can damage the power cord. Use of damaged power cords could result in fire or electric shock.

### ★ Important

- After turning the machine's power off, wait at least a few seconds before turning it back on. If the message "Turn main Power Switch off" appears, turn the machine's power off, wait 10 seconds or more, and then turn it back on again. Never turn the power back on immediately after turning it off.

- Before unplugging the power cord plug, turn off the main power switch and make sure the main power switch indicator turns off. Not doing so may result in damage to the hard disk or memory, leading to malfunctions.
  - Do not turn off the power while the machine is in operation.
1. Open the main power switch cover, and then turn off the main power switch.

2

The main power indicator goes out.




# When the Authentication Screen is Displayed

If Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is active, the authentication screen appears on the display. The machine only becomes operable after entering your own Login User Name and Login Password. If User Code Authentication is active, you cannot use the machine until you enter the User Code.

If you can use the machine, you can say that you are logged in. When you go out of the operable state, you can say that you are logged out. After logging in the machine, be sure to log out of it to prevent unauthorized usage.

## ★ Important


- Ask the user administrator for the Login User Name, Login Password, and User Code. For details about user authentication, see Security Guide .
- User Code to enter on User Code Authentication is the numerical value registered in the Address Book as "User Code".

## User Code Authentication Using the Control Panel

This section explains the procedure for logging in to the machine using the control panel while User Code Authentication is active.

If User Code Authentication is active, a screen prompting you to enter a User Code appears.

1. Enter a User Code (up to eight digits), and then press [OK].

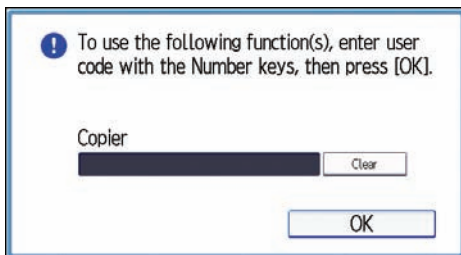

## Logging In Using the Control Panel

This section explains the procedure for logging in to the machine when Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set.

1. Press [Login].



2. Enter a Login User Name, and then press [OK].

3. Enter a Login Password, and then press [OK].

When the user is authenticated, the screen for the function you are using appears.

---

## Logging Out Using the Control Panel


---

This section explains the procedure for logging out the machine when Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set.

**★ Important**

- To prevent use of the machine by unauthorized persons, always log out when you have finished using the machine.

1. Press the [Login/Logout] key.

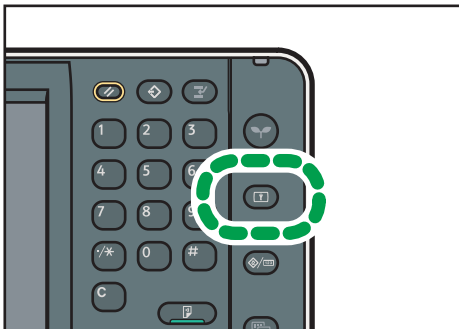

CJS040

2. Press [Yes].

# Placing Originals

## Placing Originals on the Exposure Glass

### ★ Important


- Do not lift the ADF forcefully. Otherwise, the cover of the ADF might open or be damaged.

#### 1. Lift the ADF.

Be sure to lift the ADF by more than 30 degrees. Otherwise, the size of the original might not be detected correctly.

#### 2. Place the original face down on the exposure glass. The original should be aligned to the rear left corner.

Start with the first page to be scanned.

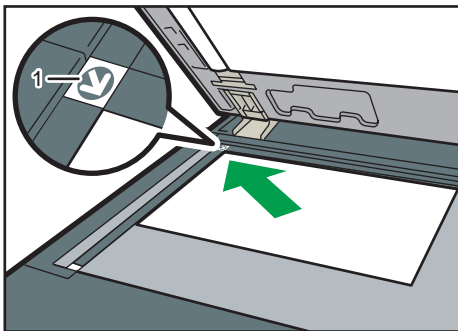


CJW111

#### 1. Positioning mark

#### 3. Lower the ADF.

## Placing Originals in the Auto Document Feeder

Be sure not to block the sensor or load the original untidily. Doing so may cause the machine to detect the size of the original incorrectly or display a paper misfeed message. Also, be sure not to place originals or other objects on the top cover. Doing so may cause a malfunction.

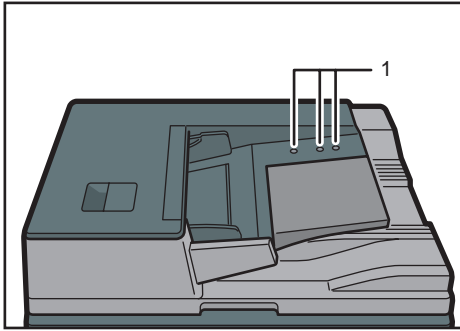


CJW113

**1. Sensors**

- 1. Adjust the original guide to the original size.**
- 2. Set the aligned originals squarely face up in the ADF.**

Do not stack originals beyond the limit mark.


The first page should be on the top.

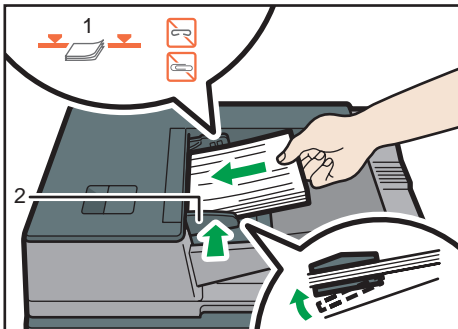

CJW114

- 1. Limit mark**
- 2. Original guide**

# 3. Copy

This chapter describes frequently used copier functions and operations. For the information not included in this chapter, see Copy/ Document Server  on the supplied CD-ROM.


## Basic Procedure

To make copies of originals, place them on the exposure glass or in the ADF.


When placing the original on the exposure glass, start with the first page to be copied. When placing the original in the ADF, place them so that the first page is on the top.

About placing the original on the exposure glass, see p.49 "Placing Originals on the Exposure Glass".

About placing the original in the ADF, see p.49 "Placing Originals in the Auto Document Feeder".

To copy onto paper other than plain paper, specify the paper type in User Tools according to the weight of the paper you are using. For details, see "System Settings", Connecting the Machine/ System Settings .

1. Press the [Home] key on the top left of the control panel, and press the [Copier] icon on the [Home] screen.

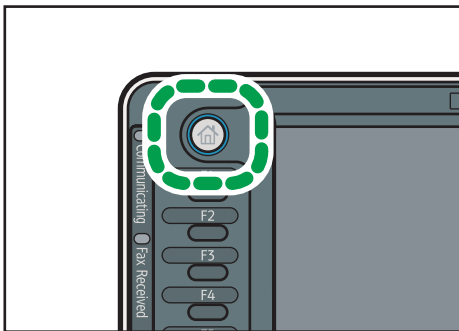

CJS113

2. Make sure no previous settings remain.

When there are previous settings remaining, press the [Reset] key.

3. Place the originals.

4. Make desired settings.

5. Enter the number of copies with the number keys.

The maximum copy quantity that can be entered is 999.


6. Press the [Start] key.

When placing the original on the exposure glass, press the [#] key after all originals are scanned. Some functions such as Batch mode may require that you press the [#] key when placing originals in the ADF. Follow the messages that appear on screen.

7. When the copy job is finished, press the [Reset] key to clear the settings.

## Auto Reduce / Enlarge

The machine automatically detects the original size and then selects an appropriate reproduction ratio based on the paper size you select.

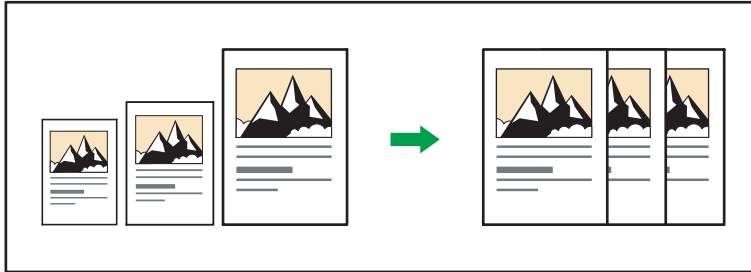

CKN008

### ★ Important

- If you select a reproduction ratio after pressing [Auto Reduce / Enlarge], [Auto Reduce / Enlarge] is canceled and the image cannot be rotated automatically.

This is useful to copy different size originals to the same size paper.

If the orientation in which your original is placed is different from that of the paper you are copying onto, the machine rotates the original image by 90 degrees and fits it on the copy paper (Rotate Copy). For example, to reduce A3 (11 × 17)☐ originals to fit onto A4 (8½ × 11)☐ paper, select a paper tray containing A4 (8½ × 11)☐ paper, and then press [Auto Reduce / Enlarge]. The image is automatically rotated. For details about Rotate Copy, see "Rotate Copy", Copy/ Document Server 🗎.

The original sizes and orientations you can use with this function are as follows:


#### 🌐 Region A (mainly Europe and Asia)

Original location	Original size and orientation
Exposure glass	A3☐, B4 JIS☐, A4☐☐, B5 JIS☐☐, A5☐, 8½ × 13☐
ADF	A3☐, B4 JIS☐, A4☐☐, B5 JIS☐☐, A5☐☐, B6 JIS☐☐, 11 × 17☐, 8½ × 11☐☐, 8½ × 13☐

#### 🌐 Region B (mainly North America)

Original location	Original size and orientation
Exposure glass	11 × 17☐, 8½ × 14☐, 8½ × 11☐☐, 5½ × 8½☐☐
ADF	11 × 17☐, 8½ × 14☐, 8½ × 11☐☐, 5½ × 8½☐☐☐, 10 × 14☐, 7¼ × 10½☐☐, A3☐, A4☐☐


### 1. Press [Auto Reduce / Enlarge].

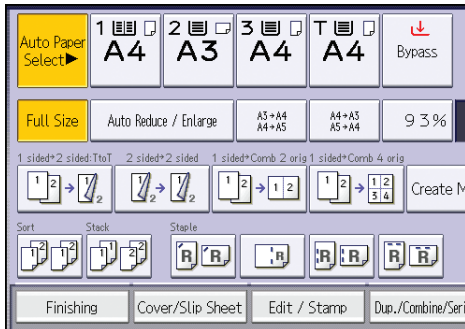

2. Select the paper size.
3. Place the originals, and then press the [Start] key.

# Duplex Copying

Copies two 1-sided pages or one 2-sided page onto a 2-sided page. During copying, the image is shifted to allow for the binding margin.

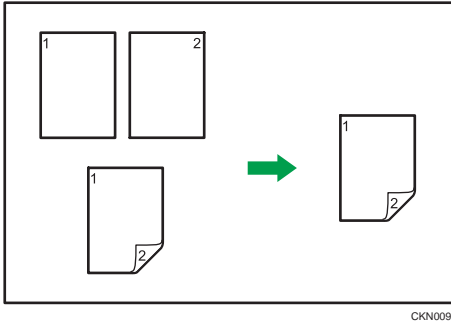

CKN009

There are two types of Duplex.

## 1 Sided → 2 Sided

Copies two 1-sided pages on one 2-sided page.

## 2 Sided → 2 Sided

Copies one 2-sided page on one 2-sided page.

The resulting copy image will differ according to the orientation in which you place your originals (☐ or ☐).

### Original orientation and completed copies


To copy on both sides of the paper, select the original and copy orientation according to how you want the printout to appear.

Original	Placing originals	Original Orientation	Orientation	Copy
			Top to Top	
			Top to Bottom	




Original	Placing originals	Original Orientation	Orientation	Copy
			Top to Top	
			Top to Bottom	

1. Press [Dup./Combine/Series].

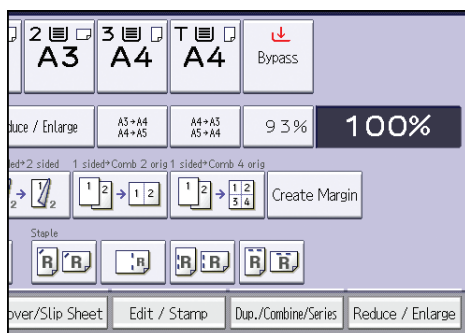

2. Make sure that [Duplex] is selected. If [Duplex] is not selected, press [Duplex].
3. Select [1 Sided → 2 Sided] or [2 Sided → 2 Sided] according to how you want the document to be output.

To change the original or copy orientation, press [Orientation].

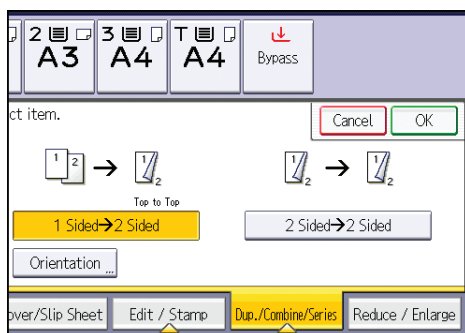

4. Press [OK].
5. Place the originals, and then press the [Start] key.

# Combined Copying

This mode can be used to select a reproduction ratio automatically and copy the originals onto a single sheet of copy paper.


The machine selects a reproduction ratio between 25 and 400%. If the orientation of the original is different from that of the copy paper, the machine will automatically rotate the image by 90 degrees to make copies properly.

3

## Orientation of the original and image position of Combine


The image position of Combine differs according to original orientation and the number of originals to be combined.

- Portrait (📄) originals

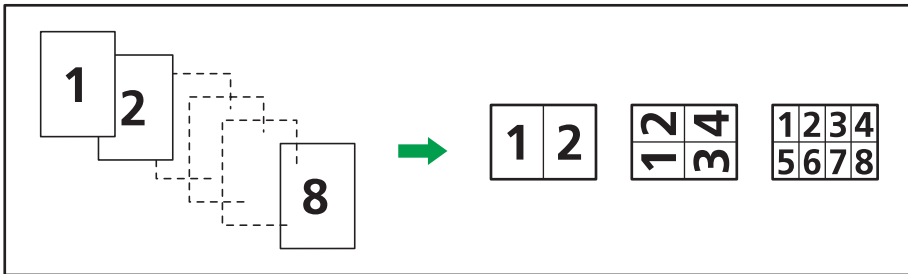

CKN015

- Landscape (📄) originals

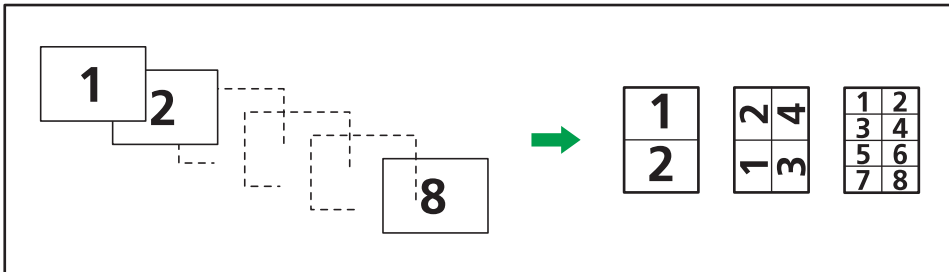


CKN016

## Placing originals (originals placed in the ADF)


The default value for the copy order in the Combine function is [From Left to Right]. To copy originals from right to left in the ADF, place them upside down.

- Originals read from left to right

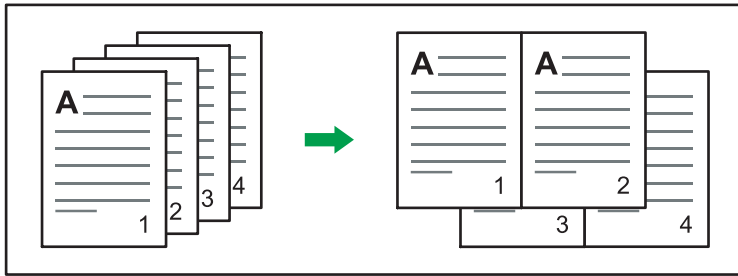

CKN010

- Originals read from right to left

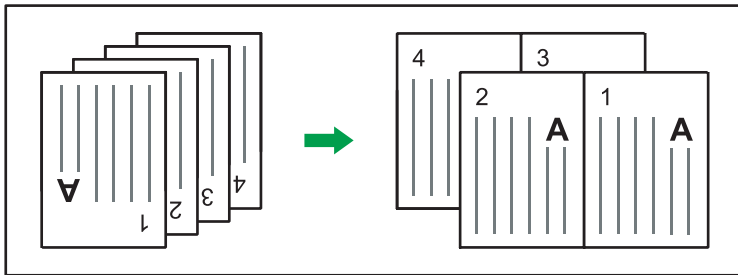

CKN017

## One-Sided Combine

Combine several pages onto one side of a sheet.



CKN014

There are six types of One-Sided Combine.

### 1 Sided 2 Originals → Combine 1 Side

Copies two 1-sided originals to one side of a sheet.

### 1 Sided 4 Originals → Combine 1 Side

Copies four 1-sided originals to one side of a sheet.

### 1 Sided 8 Originals → Combine 1 Side

Copies eight 1-sided originals to one side of a sheet.

### 2 Sided 2 Pages → Combine 1 Side

Copies one 2-sided original to one side of a sheet.


## 2 Sided 4 Pages → Combine 1 Side

Copies two 2-sided originals to one side of a sheet.

## 2 Sided 8 Pages → Combine 1 Side

Copies four 2-sided originals to one side of a sheet.


### 1. Press [Dup./Combine/Series].

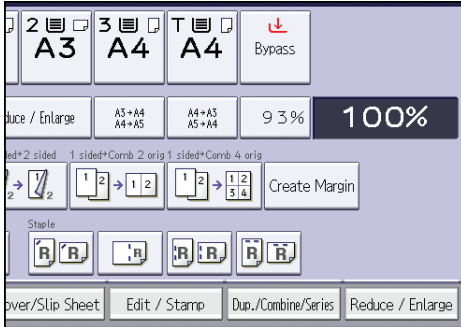

### 2. Press [Combine].

### 3. Select [1 Sided] or [2 Sided] for [Original:].

If you selected [2 Sided], you can change the orientation.

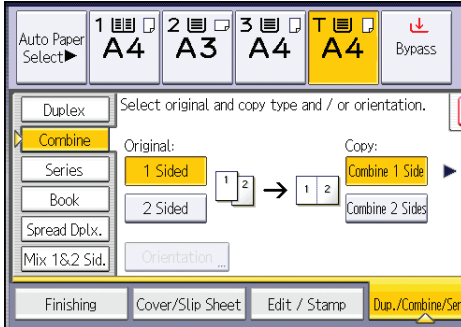

### 4. Press [Combine 1 Side].

### 5. Select the number of originals to combine.


### 6. Press [OK].

### 7. Select the paper size.

### 8. Place the originals, and then press the [Start] key.

## Two-Sided Combine

Combines various pages of originals onto two sides of one sheet.

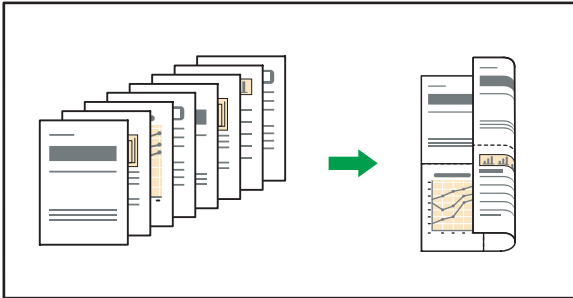

CKN074

There are six types of Two-Sided Combine.

**1 Sided 4 Originals → Combine 2 Sides**

Copies four 1-sided originals to one sheet with two pages per side.

**1 Sided 8 Originals → Combine 2 Sides**

Copies eight 1-sided originals to one sheet with four pages per side.

**1 Sided 16 Originals → Combine 2 Sides**

Copies 16 1-sided originals to one sheet with eight pages per side.

**2 Sided 4 Pages → Combine 2 Sides**

Copies two 2-sided originals to one sheet with two pages per side.


**2 Sided 8 Pages → Combine 2 Sides**

Copies four 2-sided originals to one sheet with four pages per side.

**2 Sided 16 Pages → Combine 2 Sides**


Copies eight 2-sided originals to one sheet with eight pages per side.

**1. Press [Dup./Combine/Series].**

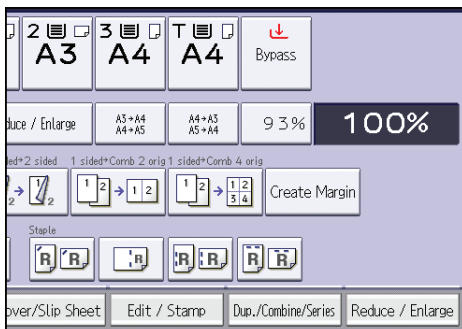

**2. Press [Combine].**

**3. Select [1 Sided] or [2 Sided] for [Original:].**

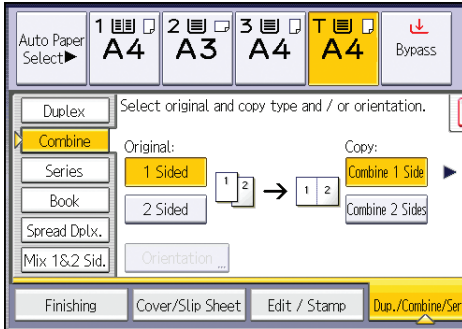

3

4. Press [Combine 2 Sides].
5. Press [Orientation].
6. Select [Top to Top] or [Top to Bottom] for [Original:] and/or [Copy:], and then press [OK].
7. Select the number of originals to combine.
8. Press [OK].
9. Select the paper size.
10. Place the originals, and then press the [Start] key.

# Copying onto Custom Size Paper from the Bypass Tray

Paper that has a horizontal length of 139.7–600.0 mm (5.50–23.62 inches) and a vertical length of 100.0–305.0 mm (3.94–12.00 inches) can be fed in from the bypass tray. Note however that the limitation on the horizontal and vertical length range will vary depending on which options are installed.

- When prints are delivered to the trays of Finisher SR4060 or Booklet Finisher SR4070:  
Horizontal length: 139.7–487.6 mm (5.50–19.19 inches), vertical length: 100.0–305.0 mm (3.94–12.00 inches)
- When prints are delivered to the upper tray of Finisher SR4080:  
Horizontal length: 139.7–458.0 mm (5.50–18.03 inches), vertical length: 100.0–305.0 mm (3.94–12.00 inches)
- When prints are delivered to the shift tray of Finisher SR4080:  
Horizontal length: 139.7–458.0 mm (5.50–18.03 inches), vertical length: 139.0–305.0 mm (5.48–12.00 inches)

## 1. Load the paper face up in the bypass tray.


[Bypass] is automatically selected.

## 2. Press the [#] key.

## 3. Press [Paper Size].

## 4. Press [Custom Size].

## 5. Enter the horizontal size with the number keys, and then press [#].

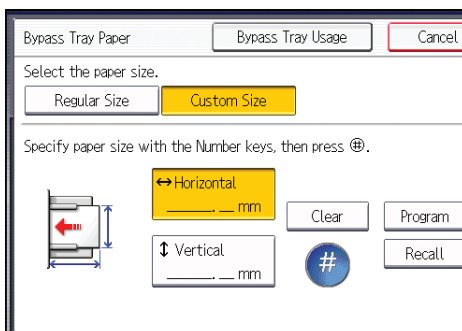

## 6. Enter the vertical size with the number keys, and then press [#].


## 7. Press [OK] twice.

## 8. Place the originals, and then press the [Start] key.

# Finishing

## Staple

Each copy set can be stapled together.

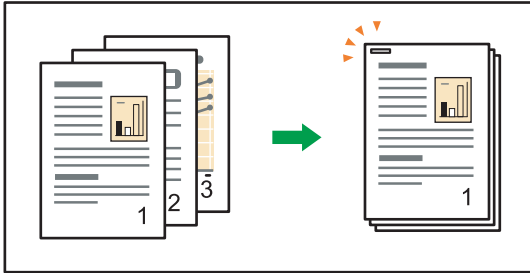

CKN021


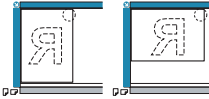
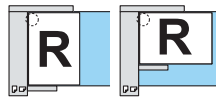









**★ Important**

- You cannot use the bypass tray with this function.


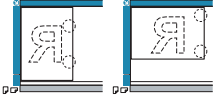



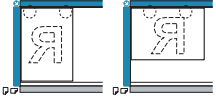
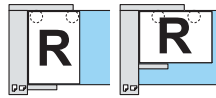


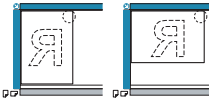
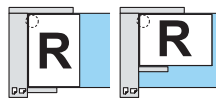

### Original orientation and staple position

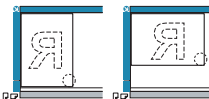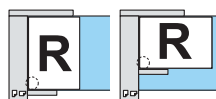Place all the originals in the ADF in the orientation in which they can be read normally. When placing the original on the exposure glass, keep the same orientation, but place the original facing downwards.

When the paper that is loaded is the same size and orientation as the original, the relationship between the orientation in which you place the original and the staple positions is as follows. You can confirm the staple positions that can be selected on the screen that appears when [Finishing] is pressed.

	Placing the original on the exposure glass	Placing the original in the ADF	Staple position *1
Top 1 			
Slant 			
Bottom 1 			

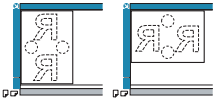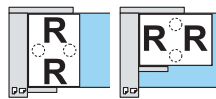


	Placing the original on the exposure glass	Placing the original in the ADF	Staple position <sup>*1</sup>
Left 2 			
Top 2 			
Center 			

\*1 The above tables show staple positioning. The orientation of the paper does not indicate orientation of delivery.

\*2 You cannot staple at this position when copying onto B4 JIS, 8 × 13 or larger.


\*3 If you want to staple at this position, select unreadable orientation in [Original Orientation], and then select Top 2.

**1. Press [Finishing].**

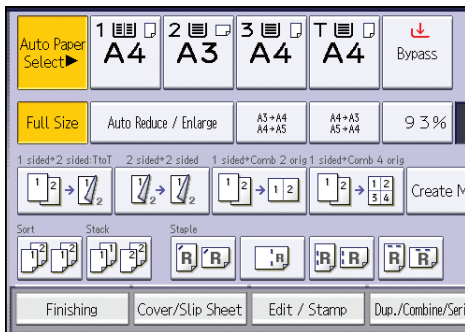

**2. Press [Finisher].**

### 3. Select one of the staple positions.

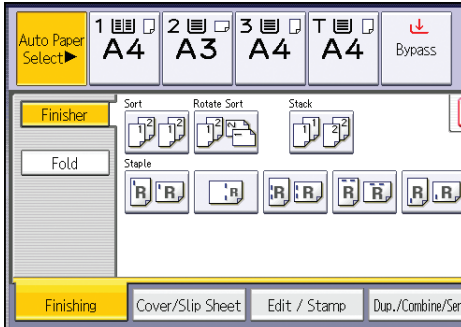


When you select a staple position, Sort is automatically selected.

4. Press [OK].
5. Enter the number of copy sets with the number keys.
6. Place the originals, and then press the [Start] key.


## Punch

You can make punch holes in copies.

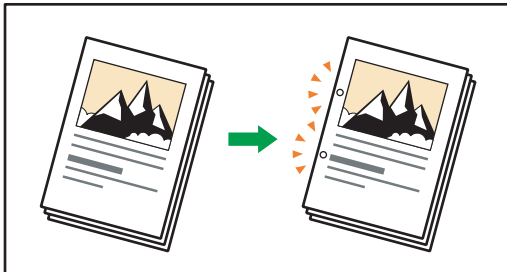

CKN022

The available number of punch holes is shown below:

 **Region A** (mainly Europe and Asia): 2 holes, 4 holes

 **Region B** (mainly North America): 2 holes, 3 holes


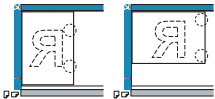
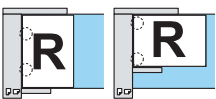




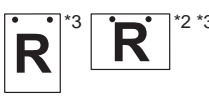

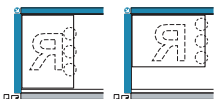



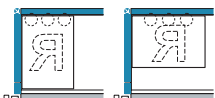

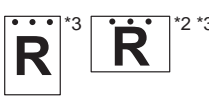





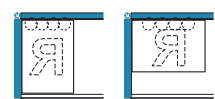

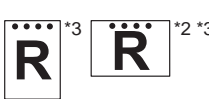
### **Important**

- You cannot use the bypass tray with this function.
- You cannot use Z-fold with this function.
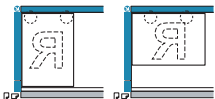
### Original orientation and punch hole position

Place all the originals in the ADF in the orientation in which they can be read normally. When placing the original on the exposure glass, keep the same orientation, but place the original facing downwards.

When the paper that is loaded is the same size and orientation as the original, the relationship between the orientation in which you place the original and the punch hole positions is as follows. You can confirm the punch hole positions that can be selected on the screen that appears when [Finishing] is pressed.


	Placing the original on the exposure glass	Placing the original in the ADF	Punch hole position <sup>*1</sup>
2 hole left 			
2 hole top 			
3 hole left 			
3 hole top 			
4 hole left 			
4 hole top 			

\*1 The above table shows punch hole positioning. Punched sheets might not be delivered in the orientation shown in this table.

\*2 You cannot punch holes in this position when copying onto B4 JIS, 8 × 13 or larger.


\*3 If you want to punch holes in this position, select unreadable orientation in [Original Orientation], and then select the punch hole position.

1. Press [Finishing].

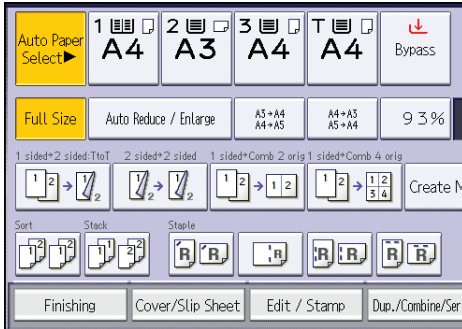

2. Press [Finisher].

3. Select one of the punch hole positions.

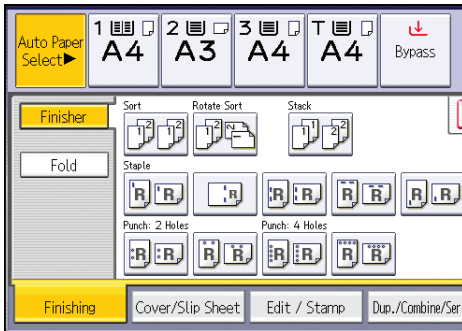

4. Press [OK].

5. Enter the number of copy sets with the number keys.

6. Place the originals, and then press the [Start] key.

---

## Fold

---

Copies can be folded in the following ways: Z-fold, Half Fold, Letter Fold-out, Letter Fold-in, Double Parallel Fold, and Gate Fold.


**★ Important**

- You cannot use the bypass tray with this function.


### Z-fold

---

Makes two parallel folds, one of which faces in and the other facing out.

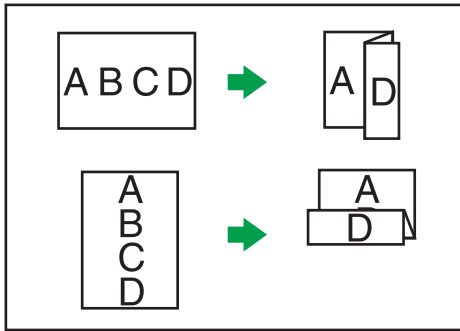

CNP005








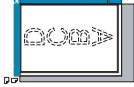
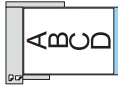
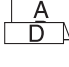
To use the Z-fold function, you must set the Z-fold support tray. For details about how to set the Z-fold support tray, see "When the Amount of Output Paper Is Less than the Stack Capacity", Troubleshooting .

**★ Important**

- You cannot use Punch with this function.


**Original orientation and Z-fold position**

Place all the originals in the ADF in the orientation in which they can be read normally. When placing the original on the exposure glass, keep the same orientation, but place the original facing downwards.

	Original orientation	Placing the original on the exposure glass	Placing the original in the ADF	Direction of fold*1
Right fold 				
Bottom fold 				


\*1 The above table shows Z-fold positions. The orientation of the paper does not indicate the orientation of delivery.

1. Press [Finishing].

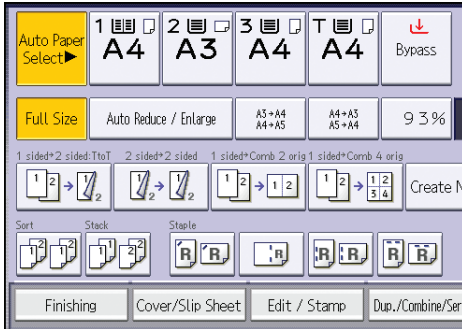

2. Press [Fold].


3. Select the folding direction, and then press [OK].

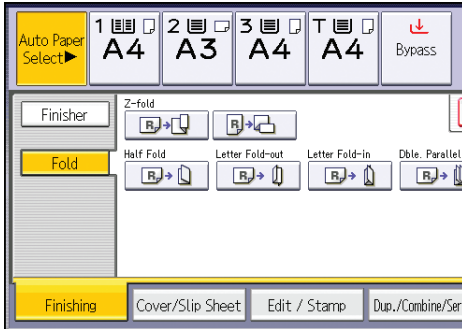

4. Place the originals, and then press the [Start] key.


### Half Fold

Applies a single, central fold to create two equal panels.

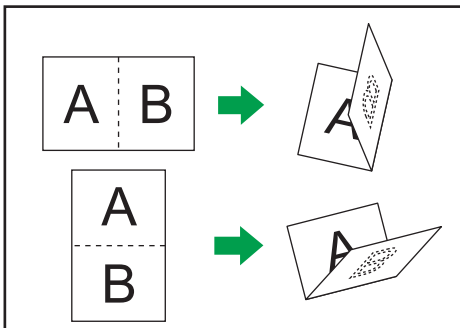

CNP014

### 1. Press [Finishing].

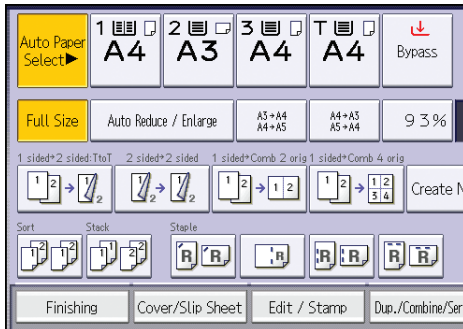


### 2. Press [Fold].

### 3. Press [Half Fold].

### 4. Press [Change].

### 5. Select [Fold Orientation], [Print Side], and [Multi-sheet Fold].

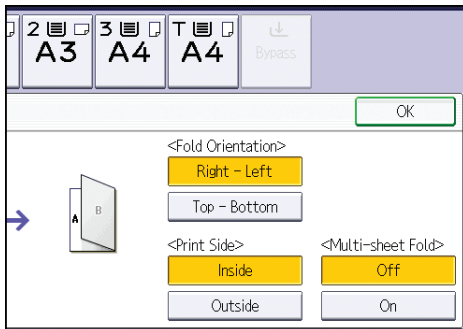


### 6. Press [OK] twice.


### 7. Place the originals, and then press the [Start] key.

## Letter Fold-out


Applies two folds to create three equal panels (the first panel folding inward, the last panel folding outward).

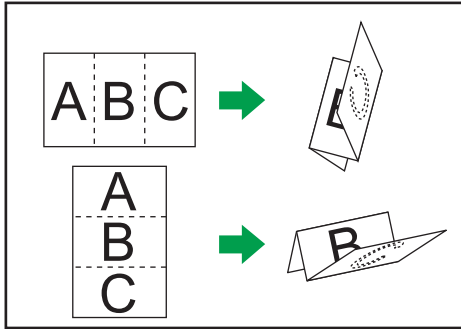

CNP015

To fold multiple sheets with the Letter Fold-out function, you must install the Z-fold support tray for the multi-folding unit. For details about how to install the Z-fold support tray, see "When the Amount of Output Paper Is Less than the Stack Capacity", Troubleshooting .

**1. Press [Finishing].**

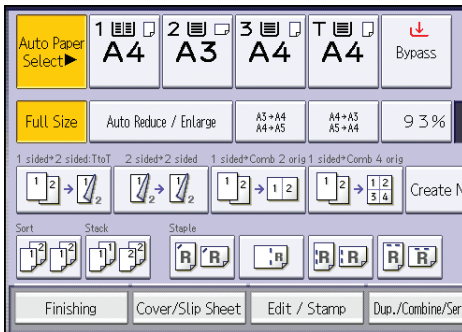


**2. Press [Fold].**

**3. Press [Letter Fold-out].**

**4. Press [Change].**

**5. Select [Fold Orientation], [Open Orientation], and [Multi-sheet Fold].**

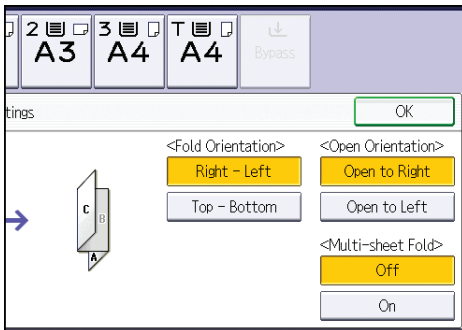


**6. Press [OK] twice.**

**7. Place the originals, and then press the [Start] key.**



## Letter Fold-in


Applies two folds to create three equal panels (outer panels folding inward).

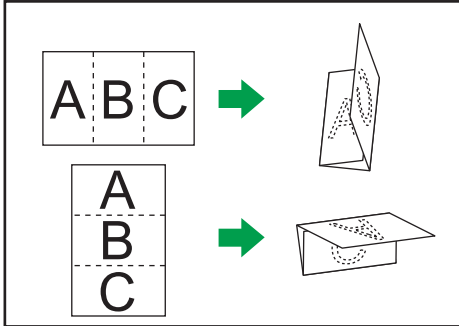

CNP016

3

### 1. Press [Finishing].

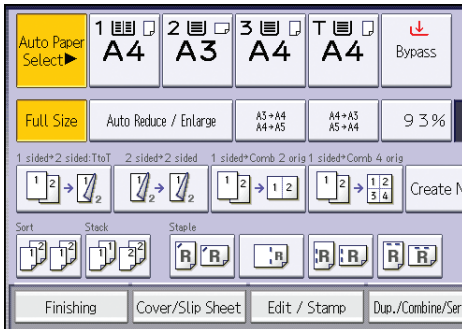


### 2. Press [Fold].

### 3. Press [Letter Fold-in].

### 4. Press [Change].

### 5. Select [Fold Orientation], [Open Orientation], [Print Side], and [Multi-sheet Fold].

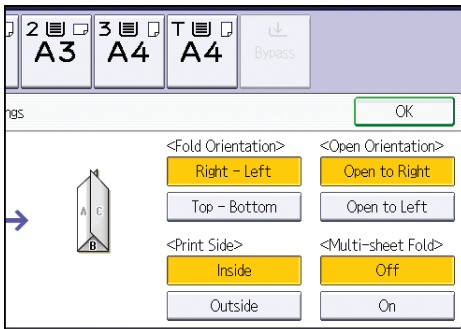


### 6. Press [OK] twice.

### 7. Place the originals, and then press the [Start] key.


## Double Parallel Fold

Applies two parallel folds to create four panels (center line main fold, double panel fold).

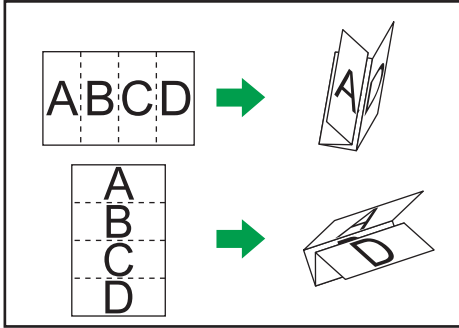

CNP019

### 1. Press [Finishing].

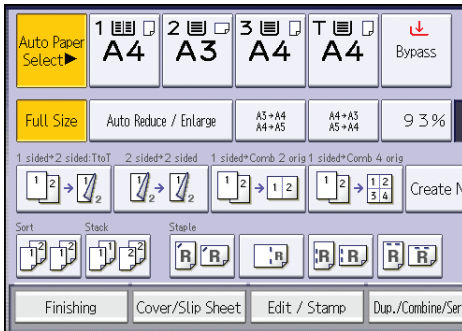


### 2. Press [Fold].

### 3. Press [Dble. Parallel Fold].

### 4. Press [Change].

### 5. Select [Fold Orientation], [Open Orientation], and [Print Side].

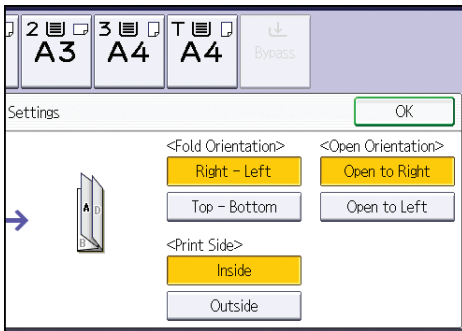


### 6. Press [OK] twice.

### 7. Place the originals, and then press the [Start] key.


## Gate Fold

Applies three folds to create four equal panels (center line main fold, outer panels folding inward without overlap).

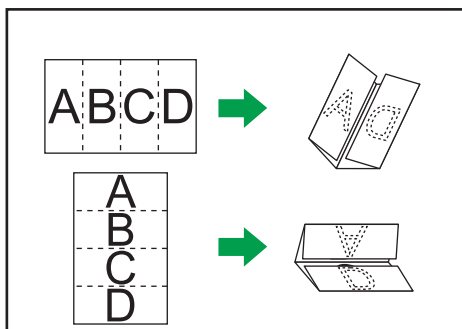

CNP020

### 1. Press [Finishing].

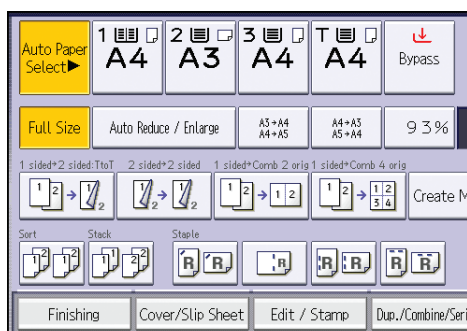


### 2. Press [Fold].

### 3. Press [Gate Fold].

### 4. Press [Change].

### 5. Select [Fold Orientation] and [Print Side].

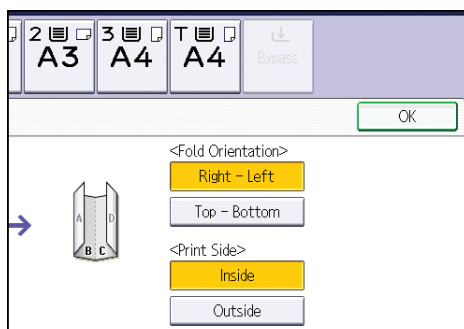

### 6. Press [OK] twice.


### 7. Place the originals, and then press the [Start] key.

## Storing Data in the Document Server

The Document Server enables you to store documents being read with the copy feature on the hard disk of this machine. Thus you can print them later applying necessary conditions.

You can check the stored documents from the Document Server screen. For details about the Document Server, see p.115 "Storing Data".


### 1. Press [Store File].

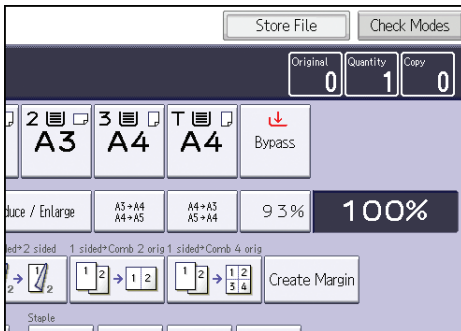

2. Enter a file name, user name, or password if necessary.
3. Press [OK].
4. Place the originals.
5. Make the scanning settings for the original.
6. Press the [Start] key.

Stores scanned originals in memory and makes one set of copies. If you want to store another document, do so after copying is complete.

## 4. Fax


This chapter describes frequently used facsimile functions and operations. For the information not included in this chapter, see Fax  on the supplied CD-ROM.


### Basic Procedure for Transmissions (Memory Transmission)

This section describes the basic procedure for transmitting documents using Memory Transmission.

You can specify the fax, IP-Fax, Internet Fax, e-mail, or folder destinations. Multiple types of destination can be specified simultaneously.

#### Important


- It is recommended that you call the receivers and confirm with them when sending important documents.
  - If there is a power failure (the main power switch is turned off) or the machine is unplugged for about one hour, all the documents stored in memory are deleted. As soon as the main power switch is turned on, the Power Failure Report is printed to help you check the list of deleted files. See "Turning Off the Main Power / In the Event of Power Failure", Troubleshooting .
1. Press the [Home] key on the top left of the control panel, and press the [Facsimile] icon on the [Home] screen.

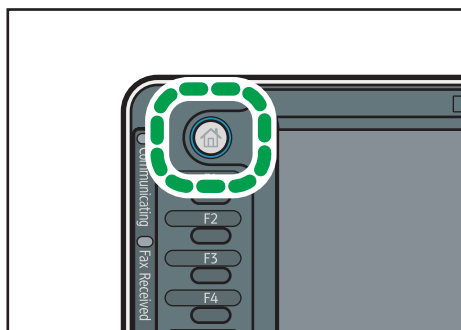

CJS113


2. Make sure "Ready" appears on the screen.

**3. Make sure [Immed. TX] is not highlighted.**

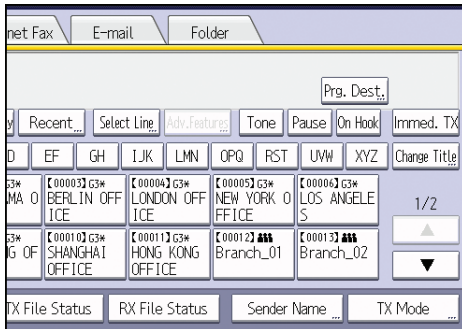

**4. Place the original into the ADF.**

**5. Make the scan settings such as scan size and resolution.**

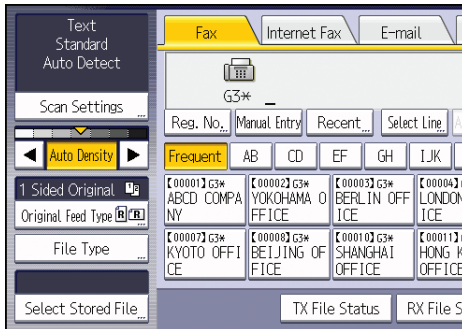


**6. Configure the transmission settings such as "TX Mode" as necessary.**

**7. Specify a destination.**

You can enter the destination's number or address directly or select from the Address Book by pressing the destination key.

If you make a mistake, press the [Clear] key, and then enter again.

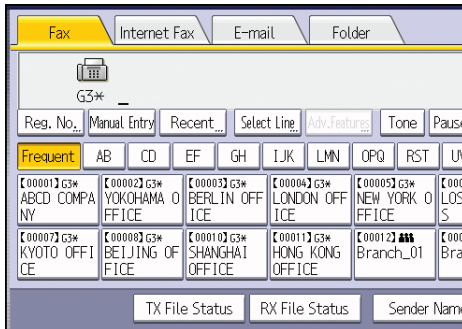

**8. When sending the same original to several destinations (broadcasting), specify the next destination.**

9. If you send documents to Internet Fax or e-mail destinations or enable the "E-mail TX Results" function, specify a sender.
10. Press the [Start] key.

## Registering a Fax Destination

1. Press the [User Tools/Counter] key.
2. Press [Address Book Mangmnt].
3. Check that [Program / Change] is selected.
4. Press [New Program].
5. Press [Change] under "Name".

The name entry display appears.

6. Enter the name, and then press [OK].
7. Press the key for the classification you want to use under "Select Title".

The screenshot shows a menu with the following options: Names, Auth. Info, Protection, Fax Dest., and E. The 'Names' option is selected. Below the menu, there are three sections:

- Name:** A text field containing 'London Office' and a 'Change' button below it.
- Key Display:** A text field containing 'London Office' and a 'Change' button below it.
- Select Title:** A section with three titles:
 

Title 1	Frequent	AB	CD	EF	GH	IJK
Title 2	Frequent	1	2	3	4	5
Title 3	Frequent	1	2			


The keys you can select are as follows:

- [Frequent]: Added to the page that is displayed first.
- [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]: Added to the list of items in the selected title.

You can select [Frequent] and one more key for each title.

8. Press [Fax Dest.].
9. Press [Change] under "Fax Destination".

10. Enter the fax number using the number keys, and then press [OK].

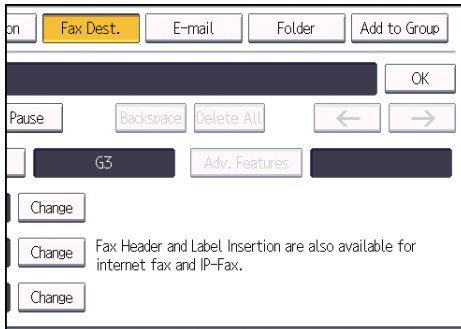

11. Specify optional settings such as "SUB Code", "SEP Code", and "International TX Mode".
12. Press [OK].
13. Press [Exit].
14. Press the [User Tools/Counter] key.

4

## Deleting a Fax Destination

### ★ Important

- If you delete a destination that is a specified delivery destination, messages to its registered Personal Box, for example, cannot be delivered. Be sure to check the settings in the fax function before deleting any destinations.


1. Press the [User Tools/Counter] key.
2. Press [Address Book Mangmnt].
3. Check that [Program / Change] is selected.
4. Select the name whose fax destination you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, fax number, folder name, e-mail address, or IP-Fax destination.

5. Press [Fax Dest.].
6. Press [Change] under "Fax Destination".

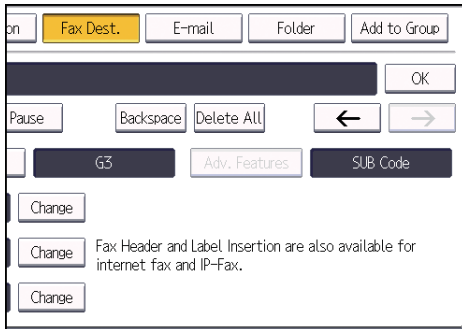

**7. Press [Delete All], and then press [OK].****8. Press [OK].****9. Press [Exit].****10. Press the [User Tools/Counter] key.**

## Transmitting while Checking Connection to Destination (Immediate Transmission)

Using Immediate Transmission, you can send documents while checking the connection to the destination.


You can specify fax or IP-Fax destinations.

If you specify Internet Fax, e-mail, folder destinations, and group or multiple destinations, the transmission mode is automatically switched to Memory Transmission.

### ★ Important


- It is recommended that you call the receivers and confirm with them when sending important documents.

1. Press the [Home] key on the top left of the control panel, and press the [Facsimile] icon on the [Home] screen.

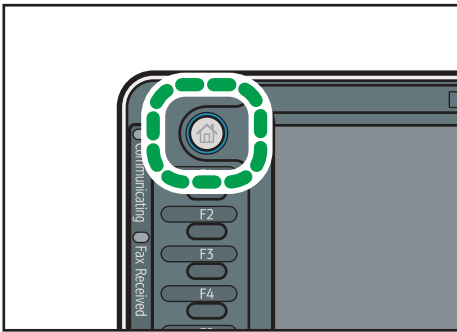

CJS113

2. Make sure "Ready" appears on the screen.
3. Press [Immed. TX].

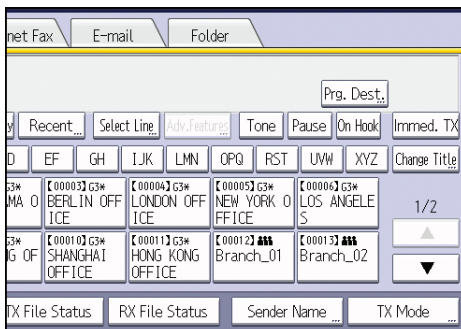

4. Place the original into the ADF.
5. Select the scan settings you require.

**6. Specify a destination.**

If you make a mistake, press the [Clear] key, and then enter again.

**7. Press the [Start] key.**


# Canceling a Transmission

This section explains how to cancel a fax transmission.

## Canceling a Transmission Before the Original Is Scanned

Use this procedure to cancel a transmission before pressing the [Start] key.

1. Press the [Reset] key.

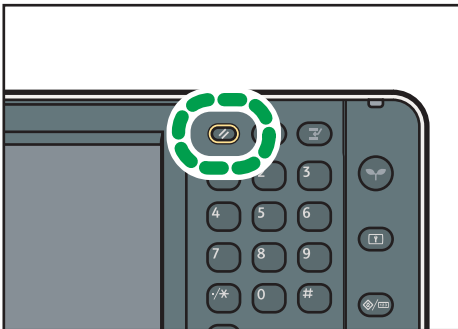

CJN023


4

## Canceling a Transmission While the Original Is Being Scanned

Use this procedure to cancel scanning or transmitting of the original while it is being scanned.

If you cancel a transmission using the standard memory transmission function, you need to follow a different procedure to cancel the transmission. See p.83 "Canceling a Transmission After the Original Is Scanned".

1. Press the [Stop] key.

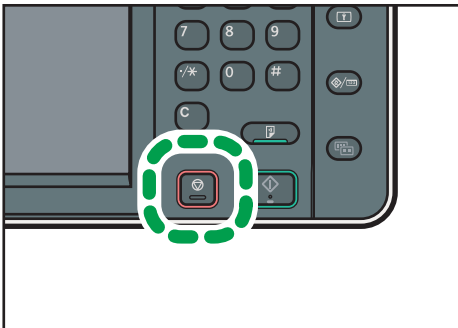

CJN024

## 2. Press [Cancel Scanning] or [Cancel TX].


Depending on the transmission mode and function you use, either [Cancel Scanning] or [Cancel TX] is displayed.

## Canceling a Transmission After the Original Is Scanned

Use this procedure to cancel a transmission after the original is scanned.

You can cancel transmission of a file while the file is being sent, stored in memory, or if it fails to transmit. All the scanned data is deleted from memory.

### 1. Press the [Stop] key.

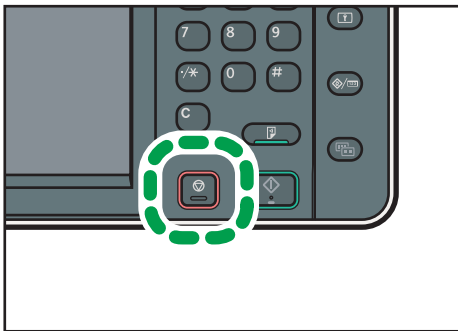

CJN024

You can also press [TX/RX Status / Print], and then [Check / Stop Transmission File].

### 2. Press [Standby File List].

To cancel transmission of a file stored in the memory, press the [File List] tab.

### 3. Select the file you want to cancel.

If the desired file is not shown, press [▲] or [▼] to find it.

### 4. Press [Stop Transmission].

To cancel another file, repeat steps 3 through 4.

### 5. Press [OK].

### 6. Press [Exit].

After pressing [Check / Stop Transmission File] under [TX/RX Status / Print] in step 1, press [Exit] twice.


## Sending at a Specific Time (Send Later)

Using this function, you can instruct the machine to delay transmission of your fax document until a specified later time.


This allows you to take advantage of off-peak telephone charges without having to be by the machine at the time.

Use Memory Transmission for this function. Immediate Transmission is not possible.

### ★ Important

- If the machine is switched off for about one hour, all fax documents stored in memory are lost. If documents are lost for this reason, a Power Failure Report is automatically printed when the main power switch is turned on. Use this report to check the list of lost documents. See "Turning Off the Main Power / In the Event of Power Failure", Troubleshooting .

#### 1. Press [TX Mode].

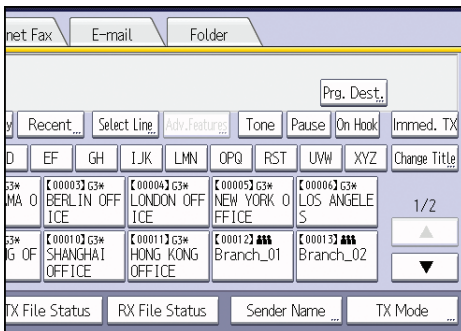

#### 2. Press [Send Later].

#### 3. Enter the time, and then press [#].

 **Region A** (mainly Europe and Asia)

Enter the time (24 hour format) using the number keys.

 **Region B** (mainly North America)

Enter the time using the number keys, and then select [AM] or [PM].

When entering numbers smaller than 10, add a zero at the beginning.

#### 4. Press [OK] twice.

## Storing a Document

You can store and send a document at the same time. You can also just store a document.

The following information can be set for the stored documents as necessary:

### User Name

You can set this function if necessary to know who and what departments stored documents in the machine. A user name can be selected from the Address Book or entered manually.

### File Name

You can specify a name for a stored document. If you do not specify a name, scanned documents will be automatically assigned names such as "FAX0001" or "FAX0002".

### Password


You can set this function so as not to send to unspecified people. A four to eight digit number can be specified as a password.

You can also change the file information after storing files.

#### 1. Place the original, and then specify the scan settings you require.

Specify the "Original Orientation" setting correctly. If you do not, the top/bottom orientation of the original will not be displayed correctly in the preview.

#### 2. Press [Store File].

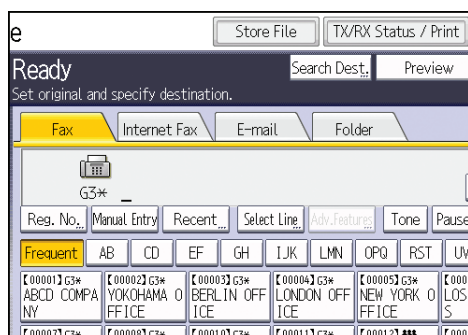


#### 3. Select [Send & Store] or [Store Only].

Select [Send & Store] to send documents after they are stored.

Select [Store Only] to store documents.

#### 4. Set the user name, file name, and password as necessary.

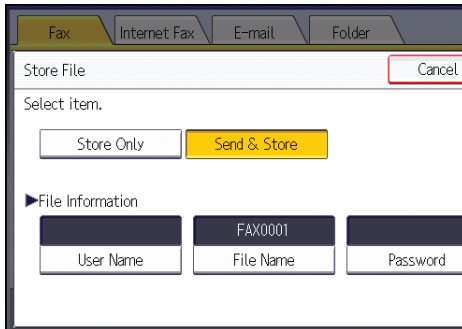

- **User Name**  
Press [User Name], and then select a user name. To specify an unregistered user name, press [Manual Entry], and then enter the name. After specifying a user name, press [OK].
- **File Name**  
Press [File Name], enter a file name, and then press [OK].
- **Password**  
Press [Password], enter a password using the number keys, and then press [OK]. Re-enter the password for confirmation, and then press [OK].

#### 5. Press [OK].

#### 6. If you have selected [Send & Store], specify the receiver.

#### 7. Press the [Start] key.

## Sending Stored Documents

The machine sends documents stored with the facsimile function in the Document Server.

The documents stored in the Document Server can be sent again and again until they are deleted.


The stored documents are sent with the scan settings made when they were stored.

You cannot use the following transmission methods:

- Immediate Transmission
- Parallel Memory Transmission
- On Hook Dial
- Manual Dial



## 1. Press [Select Stored File].

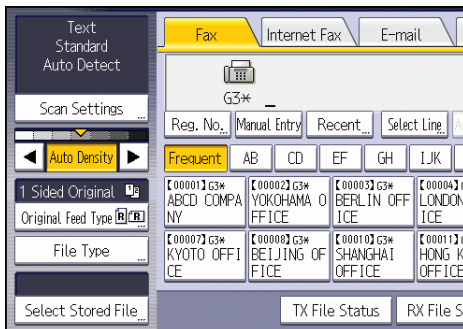

## 2. Select the documents to be sent.

When multiple documents are selected, they are sent in the order of selection.

- Press [User Name] to place the documents in order by programmed user name.
- Press [File Name] to place the documents in alphabetical order.
- Press [Date] to place the documents in order of programmed date.
- Press [Queue] to arrange the order of the documents to be sent.

To view details about stored documents, press [Details].

Press the Thumbnails key to switch the screen to thumbnail display.

3. If you select a document with a password, enter the password using the number keys, and then press [OK].
4. When you want to add your originals to stored documents and send them all at once, press [Original + Stored File] or [Stored file + Original].

When [Original + Stored File] is pressed, the machine sends the originals, and then stored files.  
When [Stored file + Original] is pressed, the machine sends the stored files, and then originals.

5. Press [OK].
6. To add an original to stored documents, place the original, and then select any scan settings you require.
7. Specify the destination, and then press the [Start] key.

## Printing the Journal Manually

To print the Journal manually, select the printing method: "All", "Print per File No.", or "Print per User".

### All

Prints the results of communications in the order made.

### Print per File No.


Prints only the results of communications specified by file number.

### Print per User

Prints the results of communications by individual senders.

## 4

### 1. Press [TX/RX Status / Print].

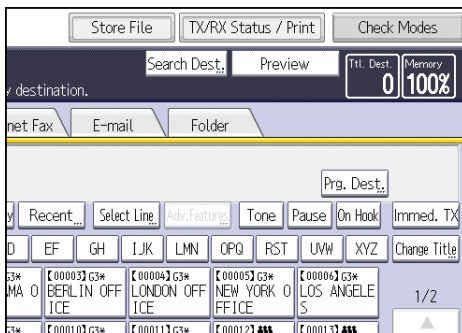

### 2. Press [Print Journal].

### 3. Select the printing method.


4. If you selected "Print per File No." in step 3, enter a 4-digit file number using the number keys.

5. If you selected "Print per User" in step 3, select a user from the list, and then press [OK].

6. Press the [Start] key.

7. Press [Exit] twice.

# 5. Print

This chapter describes frequently used printer functions and operations. For the information not included in this chapter, see Print  on the supplied CD-ROM.

## Quick Install

You can install the printer drivers easily from the CD-ROM provided with this machine.

Using Quick Install, the PCL 6 printer driver is installed under network environment, and the Standard TCP/IP port will be set.

When the machine is connected to a client computer via parallel connection, the printer port is set to [LPT1].

### Important

- **Manage Printers permission is required to install the drivers. Log on as an Administrators group member.**

**1. Quit all applications. (Do not close this manual.)**

**2. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

**3. Select an interface language, and then click [OK].**

**4. Click [Quick Install].**

**5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**

**6. Select the machine model you want to use in the [Select Printer] dialog box.**

For network connection via TCP/IP, select the machine whose IP address is displayed in [Connect To].

For parallel connection, select the machine whose printer port is displayed in [Connect To].

**7. Click [Install].**

**8. Configure the user code, default printer, and shared printer as necessary.**

**9. Click [Continue].**

The installation starts.

If the [User Account Control] dialog box appears, and then click [Yes] or [Continue].

**10. Click [Finish].**

When you are prompted to restart your computer, restart it by following the instructions that appear.

**11. Click [Exit] in the first window of the installer, and then take out the CD-ROM.**

## Displaying the Printer Driver Properties

This section explains how to open the printer driver properties from [Devices and Printers].

### ★ Important

- **Manage Printers permission is required to change the printer settings. Log on as an Administrators group member.**
- **You cannot change the machine default settings for individual users. Settings made in the printer properties dialog box are applied to all users.**

1. On the [Start] menu, click [Devices and Printers].
2. Right-click the icon of the printer you want to use.
3. Click [Printer properties].

# Standard Printing

## ★ Important

- The default setting is duplex printing. If you want to print on only one side, select [Off] for the duplex setting.
- If you send a print job via USB 2.0 while the machine is in Low Power mode or Sleep mode, an error message might appear when the print job is complete. In this case, check if the document was printed.

## When Using the PCL 6 Printer Driver

1. Click the WordPad menu button in the upper left corner of the window, and then click [Print].
2. In the [Select Printer] list, select the printer you want to use.
3. Click [Preferences].
4. In the "Job Type:" list, select [Normal Print].
5. In the "Document Size:" list, select the size of the original to be printed.
6. In the "Orientation:" list, select [Portrait] or [Landscape] as the orientation of the original.
7. In the "Input Tray:" list, select the paper tray that contains the paper you want to print onto.  
If you select [Auto Tray Select] in the "Input Tray:" list, the source tray is automatically selected according to the paper size and type specified.
8. In the "Paper Type:" list, select the type of paper that is loaded in the paper tray.
9. If you want to print multiple copies, specify a number of sets in the "Copies:" box.
10. Click [OK].
11. Start printing from the application's [Print] dialog box.

# Locked Print

---

## Sending a Locked Print File

---

1. Click the WordPad menu button in the upper left corner of the window, and then click [Print].
2. In the "Select Printer" list, select the printer you want to use.
3. Click [Preferences].
4. In the "Job Type:" list, click [Locked Print].
5. Click [Details...].
6. Enter a User ID in the "User ID:" box, and then enter a password in the "Password:" box.
7. Click [OK].
8. Change any other print settings if necessary.
9. Click [OK].
10. Start printing from the application's [Print] dialog box.

5


---

## Printing a Locked Print File Using the Control Panel


---

**★ Important**

- When printing is completed, the stored file will be deleted.
1. Press the [Home] key on the top left of the control panel, and press the [Printer] icon on the [Home] screen.

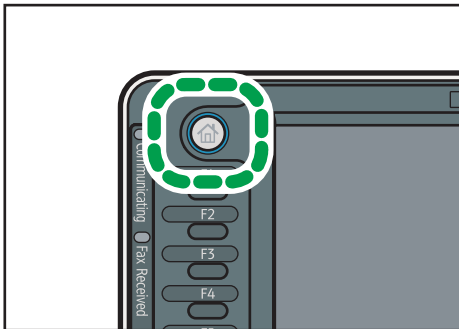

CJS113

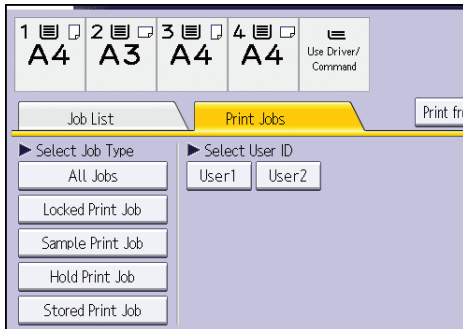**2. Press the [Print Jobs] tab.****3. Press [Locked Print Job].****4. Select the files you want to print.**

You can select all the Locked Print files at once by pressing [Select All Jobs] after selecting a file.

**5. Press [Print].****6. Enter the password using the number keys, and then press [OK].****7. To change the print settings of the document, press [Detailed Settings].****8. Enter the number of copies using the number keys if necessary, and then press [Print].**

# Hold Print

## Sending a Hold Print File

1. Click the WordPad menu button in the upper left corner of the window, and then click [Print].
2. In the "Select Printer" list, select the printer you want to use.
3. Click [Preferences].
4. In the "Job Type:" list, click [Hold Print].
5. Click [Details...].
6. Enter a User ID in the "User ID:" box.

You can optionally set a file name of a Hold Print file.

7. To specify the print time of the document, select the [Set Print Time] check box, and then specify the time.


You can specify the time in 24-hour format.

8. Click [OK].
9. Change any other print settings if necessary.
10. Click [OK].
11. Start printing from the application's [Print] dialog box.

## Printing a Hold Print File Using the Control Panel


### ★ Important

- When printing is completed, the stored file will be deleted.
1. Press the [Home] key on the top left of the control panel, and press the [Printer] icon on the [Home] screen.

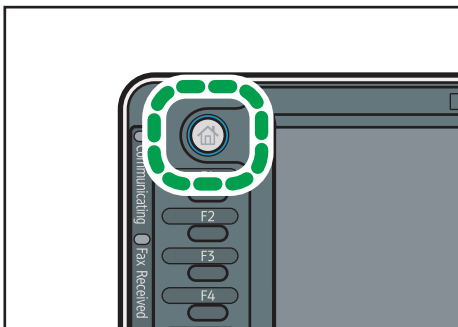

CJS113

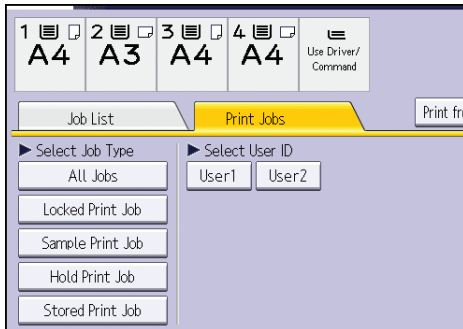

**2. Press the [Print Jobs] tab.****3. Press [Hold Print Job].****4. Select the files you want to print.**

You can select all the Hold Print files at once by pressing [Select All Jobs] after selecting a file.

**5. Press [Print].****6. To change the print settings of the document, press [Detailed Settings].****7. Enter the number of copies using the number keys if necessary, and then press [Print].**

# Stored Print

## Sending a Stored Print File

1. Click the WordPad menu button in the upper left corner of the window, and then click [Print].
2. In the "Select Printer" list, select the printer you want to use.
3. Click [Preferences].
4. In the "Job Type:" list, select the print method to be used for Stored Print files.

You can select four methods of Stored Print:

To use the Stored Print (Shared) and Store and Print (Shared) functions, authentication must be enabled beforehand. For details, see Security Guide .


5


- **Stored Print**  
Stores the file in the machine and prints it later using the control panel.
- **Store and Print**  
Prints the file at once and also stores the file in the machine.
- **Stored Print (Shared)**  
Stores the file in the machine and allows any user who has print privileges to print the file later using the control panel.
- **Store and Print (Shared)**  
Prints the file immediately and also stores the file in the machine. Any user who has print privileges can print any stored file afterward.

5. Click [Details...].
6. Enter a User ID in the "User ID:" box.  
You can optionally set a file name and a password of a Stored Print file.
7. Click [OK].
8. Change any other print settings if necessary.
9. Click [OK].
10. Start printing from the application's [Print] dialog box.

## Printing a Stored Print File Using the Control Panel


### ★ Important

- The stored documents are not deleted even after the printing has been completed. For the procedure to delete the documents, see "Deleting Stored Print files", Print .
- Press the [Home] key on the top left of the control panel, and press the [Printer] icon on the [Home] screen.

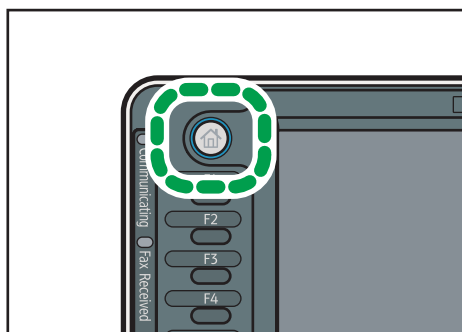

CJS113

- Press the [Print Jobs] tab.

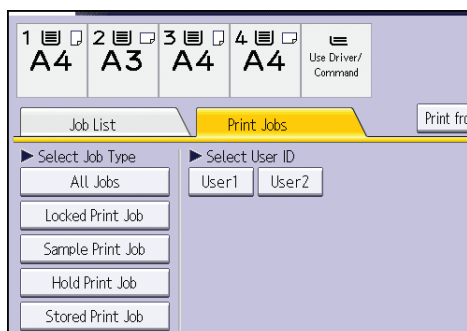

- Press [Stored Print Job].
- Select the files you want to print.

You can select all the Stored Print files at once by pressing [Select All Jobs] after selecting a file.

- Press [Print].

If you set the password in the printer driver, enter the password.

If multiple print files are selected, and some of these require a password, the machine prints files that correspond to the entered password and files that do not require a password. The number of files to be printed is displayed on the confirmation screen.

- To change the print settings of the document, press [Detailed Settings].
- Enter the number of copies using the number keys if necessary, and then press [Print].

# Printing Files from an External Memory Device

## Direct Printing from a Removable Memory Device

- >>Using the Media Slot
- >>Printable File Formats
- >>Printing from a Removable Memory Device
- >>Screen for Direct Printing

## Direct Printing from a Digital Camera (PictBridge)

- >>Using PictBridge
- >>PictBridge Printing
- >>Exiting PictBridge
- >>Supported Functions

## Direct Printing from a Removable Memory Device

You can connect removable memory devices (USB flash memory and SD cards) to the machine and directly print the files stored on them.

Files in the following formats can be printed: JPEG, TIFF, and PDF.

This function is useful for printing files without using a computer.



- This feature is available only if the optional hard disk is installed on the machine.



- Large PDF files might not be printable using the PDF direct print function.
- If print jobs through PDF direct printing are being canceled, print using the printer driver from a PDF viewer such as Adobe Reader.

## Related Topics

[Using the Media Slot](#)

[Printable File Formats](#)

[Printing from a Removable Memory Device](#)

[Screen for Direct Printing](#)

## Using the Media Slot

- USB flash memory devices and SD cards are supported for direct printing. However, certain types of USB flash memory devices and SD cards cannot be used. For details, contact your sales or service representative.
- This machine supports SD cards with a maximum capacity of 32 GB.
- USB flash memory devices with password protection or other security features might not be compatible with this machine.
- Connect only USB flash memory to the USB slot; do not connect any other type of USB device.
- Do not use a USB extension cable to connect a USB flash memory to the machine. Insert the USB memory directly into the media slot.
- This machine does not support the use of external USB hubs or SD card readers.
- Do not turn off the machine while a removable memory device is being accessed. Doing so can damage the memory device and corrupt its data.
- If the machine is accidentally turned off while a removable memory device is being accessed, check that the data on the removable memory device has not been corrupted.
- It is possible that any data stored in the removable memory device will be damaged or lost by user error during operation or software error. Be sure to back up of all data beforehand. The manufacturer shall not be liable to you for damages or loss of any data produced by using this function.

## Printable File Formats

### JPEG files

- Exif version 1.0 or later JPEG files are compatible with this function.

### TIFF files

- Following types of TIFF files are compatible with this function: uncompressed TIFF files, or TIFF files compressed using the MH, MR, or MMR method.

### PDF files


- This function is possible for genuine Adobe PDF files only.
- PDF files whose PDF version is 1.7 (Acrobat 8.0 compatible) or earlier can be printed.
- PDF files created using PDF version 1.5 Crypt Filter functions or more than eight DeviceN Color Space components cannot be printed.
- PDF files created using PDF version 1.6 watermark note functions, or extended optional contents cannot be printed.
- AcroForm is a function specific to PDF version 1.7 and is not supported.

## Printing from a Removable Memory Device


**1** Insert a removable memory device into the media slot.

For details about inserting a removable memory device, see "Inserting/Removing a Memory Storage Device", Getting Started.

**2** Press the [Home] key on the top left of the control panel, and press the [Printer] icon on the [Home] screen.

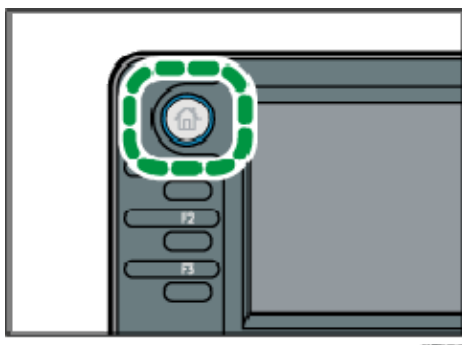

**3** Press [Prt. From Dev.].

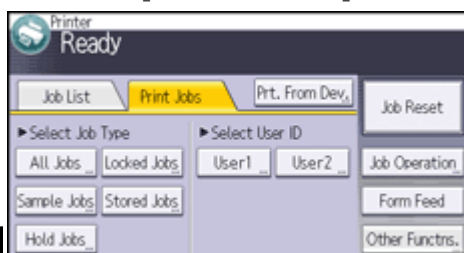

**5**

**4** Select the removable memory device that contains the file you want to print.

Only one removable memory device can be selected at a time.

**5** Select the file you want to print.

You can simultaneously select multiple files of the same file type in the current folder.

**6** If necessary, press [Detailed Sett.] to configure detailed print settings.

Note that certain settings cannot be selected simultaneously.

**7** If necessary, press [Preview] to check the print image of the document.

**8** Press [Start Printing] or the [Start] key to start printing.

If you start printing a file before the current print job is complete, an error message will appear.

**9** When printing is complete, Press [dev. slct.].

**10** Remove the removable memory device.


For details about removing a removable memory device, see "Inserting/Removing a Memory Storage Device", Getting Started.

 Note

- Depending on the security setting, [Prt. From Dev.] may not appear. For details, see Security Guide
- You cannot select multiple files of different formats at the same time.
- Files or groups of files larger than 1 GB cannot be printed.
- You can select up to 999 JPEG files at once, as long as the total size of the files you select does not exceed 1 GB.
- The machine might print data that appears to be black-and-white in color printing mode. If you need to make sure that the data is printed in black-and-white, specify black-and-white for the print job.
- Paper size is not automatically selected when a JPEG file is selected.
- If you insert another removable memory device while following the procedure above, a list of files and folders in the root directory on that removable memory device will appear.
- If the removable memory device is partitioned, only the files stored on the first partition can be printed.
- If a USB flash memory device is inserted in the media slot, the LED on the slot will light up and remain lit.
- If an SD card is inserted in the media slot, the LED on the slot will light up and remain lit.

## Screen for Direct Printing

To display this screen, press the [Home] key on the top left of the control panel, and press the [Printer] icon on the [Home] screen, and then press [Prt. From Dev.]. You can view files either as a list or as thumbnails.

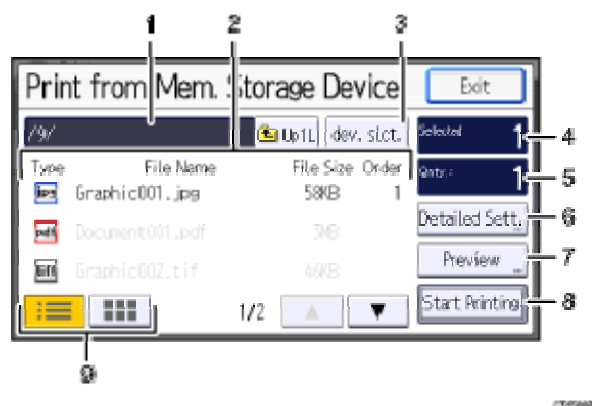

### 1. Current folder

Displays the name and path of the current folder. To display the contents of the parent folder, press [Up1L].

### 2. File/Folder list

Press to select the file you want to print or the folder you want to open. Press [▲] or [▼] to scroll through the list if necessary. Depending on the number of files, up to 999 pages might be shown.

The formats, names, and sizes of files are displayed. If multiple files are selected, the order in which the files were selected will also be displayed.

### 3. [dev. slct.]

Press to display the removable memory device selection screen.

### 4. Selected

Displays the number of selected documents (1-999).

### 5. Qnty.:

Use the number keys to specify the number of the copies (1-999) that you want to print.

### 6. [Detailed Sett.]

Press to configure detailed print settings.

### 7. [Preview]



Press to display the print image of the 1st page of the selected document. You can change the scale factor and display position of the print image.

#### 8. [Start Printing]

Press to print the selected file.

#### 9. List/Thumbnail

Press to switch between list view and thumbnail view.



- The machine can recognize up to a total of 5990 files and folders in a removable memory device.
- File names must not exceed 255 bytes (including the path name). Also, file names must not contain any character that the machine cannot display correctly.
- JPEG format files can be displayed as thumbnails when they are in Exif or DCF format. An icon will be shown for any other type of file.
- Following sizes of JPEG files can be printed:
  - Standard sizes: 8 × 10", Letter (8<sup>1</sup>/<sub>2</sub> × 11"), A4, A5, A6, B5, B6
  - Custom sizes: 2L (5 × 7"), Postcard, 100 mm × 150 mm, 4 × 6"
- Custom size PDF files may not be printed using this function.
- Print settings are effective for the format of the currently selected file, and will remain effective as long as the file of that format stays selected.
- The machine will remember an entered PDF password until you switch out of the printer function.
- If you try to select a removable memory device that the machine has not recognized correctly, an error message will appear.

## Direct Printing from a Digital Camera (PictBridge)

You can connect a PictBridge-compatible digital camera to this machine using a USB cable. This allows you to print photographs taken using the digital camera directly by operating the digital camera.

### Related topics

[Using PictBridge](#)  
[PictBridge Printing](#)  
[Exiting PictBridge](#)  
[Supported Functions](#)

## Using PictBridge

- Check your digital camera is PictBridge-compatible.
- To use this function, the optional Camera Direct Print Card must be installed on the machine.
- Use the USB cable bundled to your digital camera.
- Do not disconnect the USB cable while data is being sent. If you do, printing will fail.
- Up to 999 images can be sent from the digital camera to the machine during one print transaction. If an attempt is made to send more images, an error message is sent to the camera and printing fails.
- The number of copies that can be printed at one time depends on the digital camera that you are using. For details, see the manual provided with the digital camera.
- Since printing conditions are specified on the digital camera, specifiable parameters depend on the particular digital camera. For details, see your digital camera's manual.

5

## PictBridge Printing

**1** Check the machine and the digital camera are both switched on.

**2** Using a USB cable, connect the digital camera to the machine's USB host interface or the media slot.

For details about connecting the digital camera to the machine's USB host interface, see "Connecting a Device to the Machine's USB Host Interface", Connecting the Machine/System Settings. For details about connecting the device via the media slot, see "Inserting/Removing a Memory Storage Device", Getting Started.

**3** On your digital camera, select the images you want to print, and specify the printing conditions.

**4** The machine receives settings from the digital camera and starts printing.



- Since printing conditions are specified on the digital camera, specifiable meters depend on the particular digital camera. For details, see your digital camera's manual.

- Some digital cameras require settings for manual PictBridge operation. For details, see your digital camera's manual.

## Exiting PictBridge



- Do not disconnect the USB cable while data is being sent to the machine. If you do, printing will fail.
- 1** Check the control panel of this machine is displaying the "Ready" state.
  - 2** Disconnect the USB cable from the machine.

## Supported Functions

This machine can perform the following functions using its PictBridge feature.

The settings available for these functions are as follows:

- Single image printing
- Selected image printing
- All image printing
- Index printing
- Trimming
- Date and file name printing
- Paper size
- Image print size
- Multi-Image-Layout
- Duplex printing
- Printing quality
- Color matching
- Paper type specification
- Form printing
- Toner saving
- Camera memo printing



- This machine does not support the following settings:
  - DPOF printing
  - Margin-less printing
- The setting parameters and their names may vary depending on the digital camera. For details, see your digital camera's manual.



# 6. Scan


This chapter describes frequently used scanner functions and operations. For the information not included in this chapter, see Scan ⑧ on the supplied CD-ROM.

## Basic Procedure When Using Scan to Folder

### ★ Important

- Before performing this procedure, refer to "Preparation for Sending by Scan to Folder", Scan ⑧ and confirm the details of the destination computer. Also refer to "Registering Folders", Connecting the Machine/ System Settings ⑨, and register the address of the destination computer to the address book.


1. Press the [Home] key on the top left of the control panel, and press the [Scanner] icon on the [Home] screen.

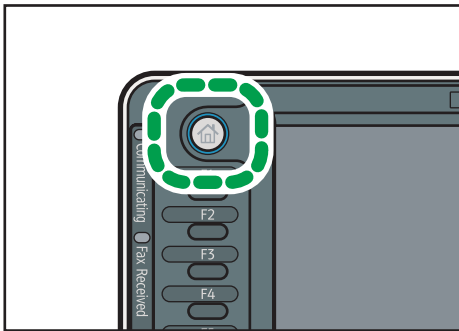

CJS113


2. Make sure that no previous settings remain.  
If a previous setting remains, press the [Reset] key.

3. Press the [Folder] tab.

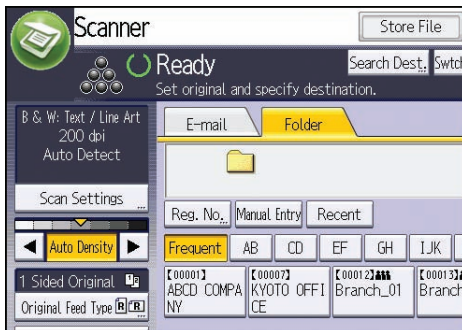

4. Place originals.

### 5. If necessary, specify the scan settings according to the original to be scanned.

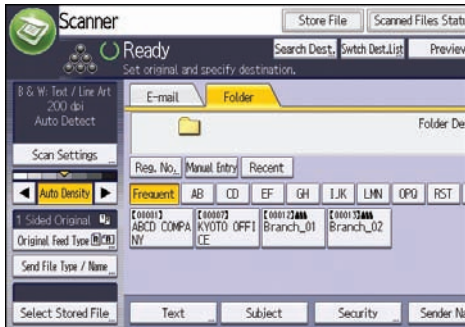

Example: Scanning the document in color/duplex mode, and saving as a PDF file.

- Press [Scan Settings], and then press [Full Colour: Text / Photo] in the [Original Type] tab.
- Press [Original Feed Type], and then press [2 Sided Original].
- Press [PDF] under [Send File Type / Name].

### 6. Specify the destination.

You can specify multiple destinations.

### 7. Press the [Start] key.

## Creating a Shared Folder on a Computer Running Windows/Confirming a Computer's Information

The following procedures explain how to create a shared folder on a computer running Windows, and how to confirm the computer's information. In these examples, Windows 7 Ultimate is the operating system, and the computer is a member in a network domain. Write down the confirmed information.

### Step 1: Confirming the user name and computer name

Confirm the user name and the name of the computer you will send scanned documents to.

1. On the [Start] menu, point to [All Programs], then [Accessories], and then click on [Command Prompt].
2. Enter the command "ipconfig/all", and then press the [Enter] key.
3. Confirm the name of the computer.

The computer's name is displayed under [Host Name].

You can also confirm the IPv4 address. The address displayed under [IP Address] is the IPv4 address of the computer.

4. Next, enter the command "set user", and then press the [Enter] key. (Be sure to put a space between "set" and "user".)

## 5. Confirm the user name.

The user name is displayed under [USERNAME].

## Step 2: Creating a shared folder on a computer running Microsoft Windows

Create a shared destination folder in Windows and enable sharing. In the following procedure, a computer which is running under Windows 7 Ultimate and participating in a domain is used as an example.

### ★ Important

- You must log in as an Administrators group member to create a shared folder.
- If "Everyone" is left selected in step 6, the created shared folder will be accessible by all users. This is a security risk, so we recommend that you give access rights only to specific users. Use the following procedure to remove "Everyone" and specify user access rights.

1. Create a folder, just as you would create a normal folder, in a location of your choice on the computer.

2. Right-click the folder, and then click [Properties].

When using Windows XP, right-click the folder, and then click [Sharing and Security].

3. On the [Sharing] tab, select [Advanced Sharing...].

When using Windows XP, on the [Sharing] tab, select [Share this folder].

Proceed to step 5.

4. Select the [Share this folder] check box.

5. Click [Permissions].

6. In the [Group or user names:] list, select "Everyone", and then click [Remove].

7. Click [Add...].

8. In the [Select Users or Groups] window, click [Advanced...].

9. Specify one or more object types, select a location, and then click [Find Now].

10. From the list of results, select the groups and users you want to grant access to, and then click [OK].

11. In the [Select Users or Groups] window, click [OK].

12. In the [Groups or user names:] list, select a group or user, and then, in the [Allow] column of the permissions list, select either the [Full Control] or [Change] check box.

Configure the access permissions for each group and user.

13. Click [OK].


### Step 3: Specifying access privileges for the created shared folder

If you want to specify access privileges for the created folder to allow other users or groups to access the folder, configure the folder as follows:

1. Right-click the folder created in step 2, and then click [Properties].
2. On the [Security] tab, select [Edit...].
3. Click [Add...].
4. In the [Select Users or Groups] window, click [Advanced...].
5. Specify one or more object types, select a location, and then click [Find Now].
6. From the list of results, select the groups and users you want to grant access to, and then click [OK].
7. In the [Select Users or Groups] window, click [OK].
8. In the [Groups or user names:] list, select a group or user, and then, in the [Allow] column of the permissions list, select either the [Full Control] or [Change] check box.
9. Press [OK] twice.

### Registering an SMB Folder

1. Press the [User Tools/Counter] key.
2. Press [Address Book Mangmnt].
3. Check that [Program / Change] is selected.
4. Press [New Program].
5. Press [Change] under "Name".  
The name entry display appears.
6. Enter the name, and then press [OK].
7. Press the key for the classification you want to use under "Select Title".

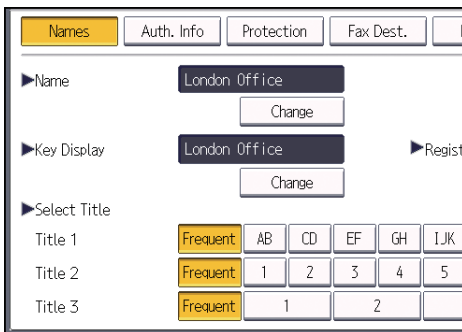

The keys you can select are as follows:



- [Frequent]: Added to the page that is displayed first.
- [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]: Added to the list of items in the selected title.

You can select [Frequent] and one more key for each title.

**8. Press [Auth. Info], and then press [▼Next].**



**9. Press [Specify Other Auth. Info] on the right side of "Folder Authentication".**

When [Do not Specify] is selected, the SMB User Name and SMB Password that you have specified in "Default User Name / Password (Send)" of File Transfer settings are applied.

**10. Press [Change] under "Login User Name".**

**11. Enter the login user name of the destination computer, and then press [OK].**


**12. Press [Change] under "Login Password".**

**13. Enter the password of the destination computer, and then press [OK].**

**14. Enter the password again to confirm, and then press [OK].**

**15. Press [Folder].**

**16. Check that [SMB] is selected.**

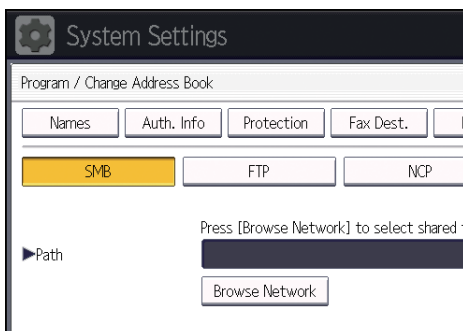

**17. Press [Change] or [Browse Network], and then specify the folder.**

To specify a folder, you can either enter the path manually or locate the folder by browsing the network.

**18. Press [Connection Test] to check the path is set correctly.**

**19. Press [Exit].**


If the connection test fails, check the settings, and then try again.

**20. Press [OK].****21. Press [Exit].****22. Press the [User Tools/Counter] key.**

## Locating the SMB folder manually

**1. Press [Change] under "Path".****2. Enter the path where the folder is located.**

For example: if the name of the destination computer is "User", and the folder name is "Share", the path will be \\User\Share.

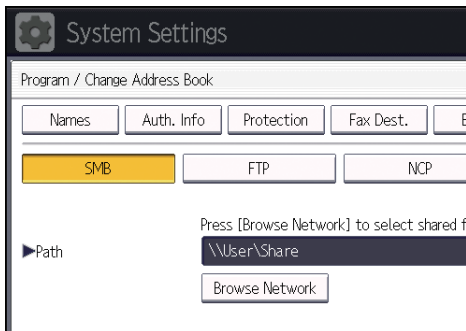

If the network does not allow automatic obtaining of IP addresses, include the destination computer's IP address in the path. For example: if the IP address of the destination computer is "192.168.0.191", and the folder name is "Share", the path will be \\192.168.0.191\Share.

**3. Press [OK].**

If the format of the entered path is not correct, a message appears. Press [Exit], and then enter the path again.

## Locating the SMB folder using Browse Network


**1. Press [Browse Network].**

The client computers sharing the same network as the machine appear.

Network display only lists client computers you are authorized to access.

**2. Select the group that contains the destination computer.****3. Select the computer name of the destination computer.**

Shared folders under it appear.

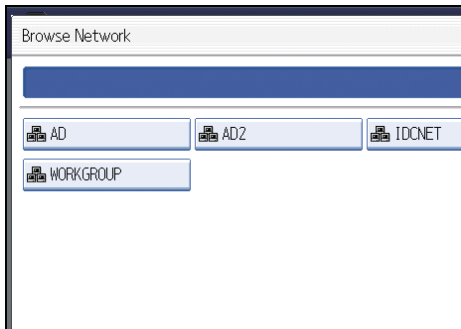

You can press [Up One Level] to switch between levels.

4. Select the folder you want to register.
5. Press [OK].

## Deleting an SMB Registered Folder

1. Press the [User Tools/Counter] key.
2. Press [Address Book Mangmnt].
3. Check that [Program / Change] is selected.
4. Select the name whose folder you want to delete.


Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, fax number, folder name, e-mail address, or IP-Fax destination.

5. Press [Folder].
6. Press the protocol which is not currently selected.  
A confirmation message appears.
7. Press [Yes].
8. Press [OK].
9. Press [Exit].
10. Press the [User Tools/Counter] key.

## Entering the Path to the Destination Manually

1. Press [Manual Entry].

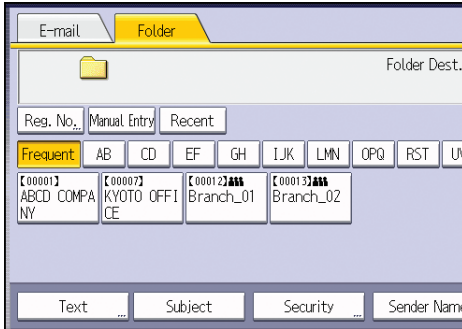

2. Press [SMB].
3. Press [Manual Entry] on the right side of the path field.
4. Enter the path for the folder.


In the following example path, the shared folder name is "user" and the computer name is "desk01":

```
\\desk01\user
```

5. Press [OK].
6. Depending on the destination setting, enter the user name for logging in to the computer.  
Press [Manual Entry] to the right of the user name field to display the soft keyboard.
7. Depending on the destination setting, enter the password for logging in to the computer.  
Press [Manual Entry] for the password to display the soft keyboard.
8. Press [Connection Test].  
A connection test is performed to check whether the specified shared folder exists.
9. Check the connection test result, and then press [Exit].
10. Press [OK].


# Basic Procedure for Sending Scan Files by E-mail

1. Press the [Home] key on the top left of the control panel, and press the [Scanner] icon on the [Home] screen.

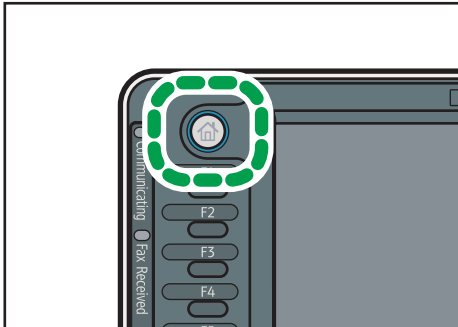

CJS113

2. Make sure that no previous settings remain.  
If a previous setting remains, press the [Reset] key.
3. Press the [E-mail] tab.

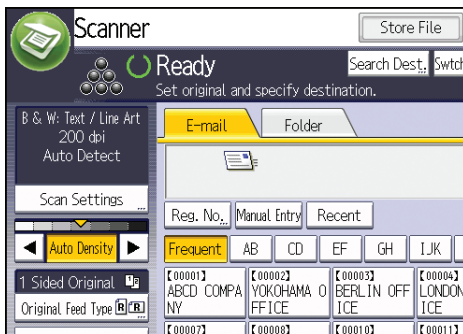

4. Place originals.
5. If necessary, specify the scan settings according to the original to be scanned.



Example: Scanning the document in color/duplex mode, and saving as a PDF file.

- Press [Scan Settings], and then press [Full Colour: Text / Photo] in the [Original Type] tab.
- Press [Original Feed Type], and then press [2 Sided Original].
- Press [PDF] under [Send File Type / Name].

#### 6. Specify the destination.

You can specify multiple destinations.

#### 7. To specify the e-mail sender, press [Sender Name].

#### 8. To use Message Disposition Notification, press [Recept. Notice].

If you select [Recept. Notice], the selected e-mail sender will receive e-mail notification when the e-mail recipient has opened the e-mail.

#### 9. Press the [Start] key.

## Registering an E-mail Destination

1. Press the [User Tools/Counter] key.
2. Press [Address Book Mangmnt].
3. Check that [Program / Change] is selected.

#### 4. Press [New Program].

#### 5. Press [Change] under "Name".

The name entry display appears.

#### 6. Enter the name, and then press [OK].

#### 7. Press the key for the classification you want to use under "Select Title".


The keys you can select are as follows:

- [Frequent]: Added to the page that is displayed first.
- [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]: Added to the list of items in the selected title.


You can select [Frequent] and one more key for each title.

**8. Press [E-mail].**

**9. Press [Change] under "E-mail Address".**

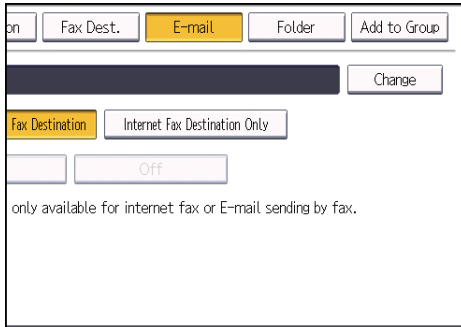

**10. Enter the e-mail address.**

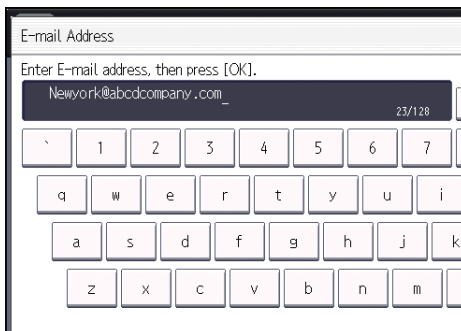

**11. Press [OK].**

**12. Select [E-mail / Internet Fax Destination] or [Internet Fax Destination Only].**

If [E-mail / Internet Fax Destination] is specified, registered e-mail addresses appear in both the internet fax address display and E-mail address display on the fax function screen, and in the address display on the scanner function screen.

If [Internet Fax Destination Only] is specified, registered e-mail addresses only appear in the internet fax display on the fax function screen.

**13. If you want to use Internet fax, specify whether or not to use "Send via SMTP Server".**

**14. Press [OK].**

**15. Press [Exit].**

**16. Press the [User Tools/Counter] key.**

## Deleting an E-mail Destination

**1. Press the [User Tools/Counter] key.**


2. Press [Address Book Mangmnt].
3. Check that [Program / Change] is selected.
4. Select the name whose e-mail address you want to delete.

Press the name key, or enter the registered number using the number keys. You can search by the registered name, user code, fax number, folder name, e-mail address, or IP-Fax destination.

5. Press [E-mail].
6. Press [Change] under "E-mail Address".
7. Press [Delete All], and then press [OK].
8. Press [OK].
9. Press [Exit].
10. Press the [User Tools/Counter] key.

## Entering an E-mail Address Manually

1. Press [Manual Entry].

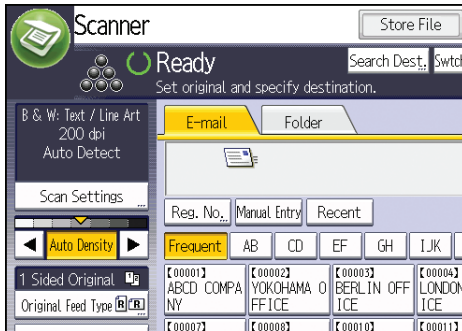

2. Enter the e-mail address.
3. Press [OK].




# Basic Procedure for Storing Scan Files

## ★ Important


- You can specify a password for each stored file. Files that are not password-protected can be accessed by other users on the same local area network using DeskTopBinder. We recommend that you protect stored files from unauthorized access by specifying passwords.
- Scan file stored in the machine may be lost if some kind of failure occurs. We advise against using the hard disk to store important files. The supplier shall not be responsible for any damage that may result from the loss of files. For long-term storage of files, we recommend the use of DeskTopBinder. For details, contact your local dealer, or see the documentation for DeskTopBinder.

1. Press the [Home] key on the top left of the control panel, and press the [Scanner] icon on the [Home] screen.

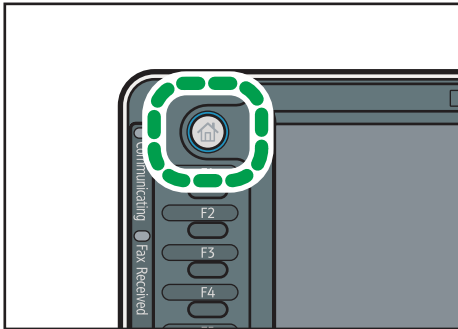

CJS113

2. Make sure that no previous settings remain.  
If a previous setting remains, press the [Reset] key.
3. Place originals.
4. Press [Store File].

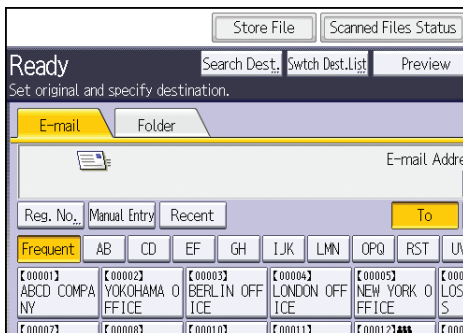

5. Press [Store to HDD].
6. If necessary, specify file information, such as [User Name], [File Name], and [Password].
  - User Name

Press [User Name], and then select a user name. To specify an unregistered user name, press [Manual Entry], and then enter the name. After specifying a user name, press [OK].

- File Name

Press [File Name], enter a file name, and then press [OK].

- Password

Press [Password], enter a password, and then press [OK]. Re-enter the password for confirmation, and then press [OK].

**7. Press [OK].**

**8. If necessary, press [Scan Settings] to specify scanner settings such as resolution and scan size.**


**9. Press the [Start] key.**

## Checking a Stored File Selected from the List

This section explains how to preview a file selected from the list of stored files.

6

**1. Press [Select Stored File].**

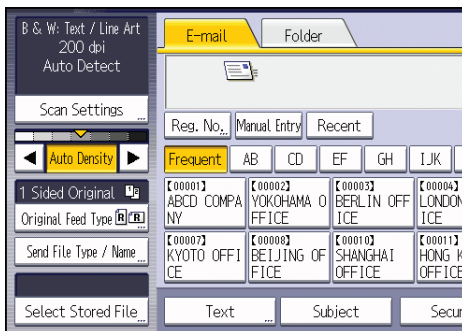

**2. From the list of stored files, select the file you want to check.**

You can select more than one file.

**3. Press [Preview].**

# Specifying the File Type

This section explains the procedure for specifying the file type of a file you want to send.

File types can be specified when sending files by e-mail or Scan to Folder, sending stored files by e-mail or Scan to Folder, and saving files on a removable memory device.


You can select one of the following file types:

- Single Page: [TIFF / JPEG], [PDF], [High Compression PDF], [PDF/A]


If you select a single-page file type when scanning multiple originals, one file is created for each single page and the number of files sent is the same as the number of pages scanned.

- Multi-page: [TIFF], [PDF], [High Compression PDF], [PDF/A]


If you select a multi-page file type when scan multiple originals, scanned pages are combined and sent as a single file.

Selectable file types differ depending on the scan settings and other conditions. For details about file types, see "Notes About and Limitations of File Types", Scan .

## 1. Press [Send File Type / Name].

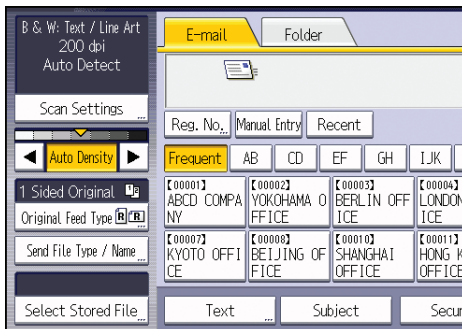


## 2. Select a file type.

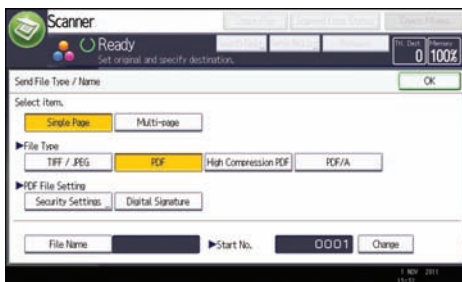


## 3. Press [OK].

# Specifying Scan Settings

1. Press [Scan Settings].

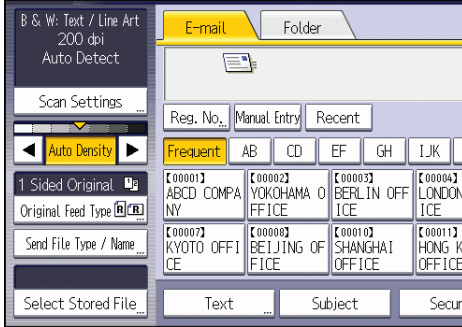

2. Specify resolution, scan size, and other settings, as required.

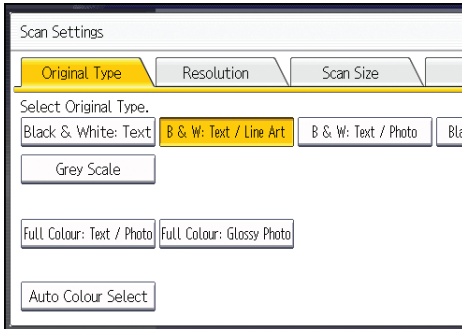

3. Press [OK].

# Storing the Scanned Documents to a USB Flash Memory or SD Card

This section explains how to save data on external media using the scanner function.

## CAUTION

- Keep SD cards or USB flash memory devices out of reach of children. If a child accidentally swallows an SD card or USB flash memory device, consult a doctor immediately.

## Important


- For details about the optional units required for this function, see "Functions Requiring Optional Configurations", Getting Started.

## Basic Procedure for Saving Scan Files on a Removable Memory Device

### Important

- This machine supports FAT16 or FAT32 format USB flash memory and SD cards. Other forms of removable memory device are not compatible.
- SD cards with storage capacity up to 32GB can be used.
- Make sure that the format of the removable memory device is FAT16 or FAT32.
- Saving might fail if the USB flash memory features password protection or other security features.
- Connect only USB flash memory to the USB slot, not any other form of USB device.
- Do not use a USB extension cable to connect a USB memory to the machine. Insert the USB memory directly into the media slot.
- Do not remove the media while data is being written. Doing so will result in corrupted data.
- Do not turn the machine's main power switch to off while data is being written. Doing so will result in corrupted data.
- If the machine's main power is accidentally switched off while data is being written, you must check the data on your media for corruption when you switch the machine back on.
- USB flash memory devices and SD cards are supported for direct printing. However, certain types of USB flash memory devices and SD cards cannot be used. For details, contact your sales or service representative.

- 1** Press the [Home] key on the top left of the control panel, and press the [Scanner] icon on the [Home] screen.

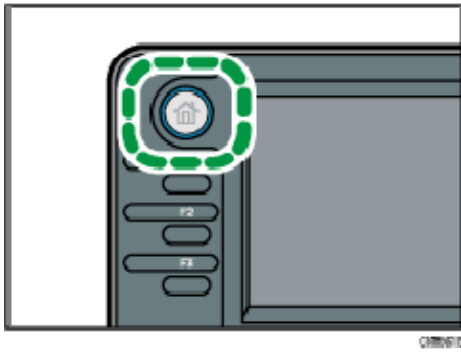

- 2** Insert a removable memory device in the media slot.


You can connect only one removable memory device at a time. The media slot cannot be used if both an SD card and a USB flash memory are inserted into it at the same time.

- 3** Make sure that no previous settings remain.

If a previous setting remains, press the [Reset] key.

- 4** Place originals.

- 5** Press [Send Settings].

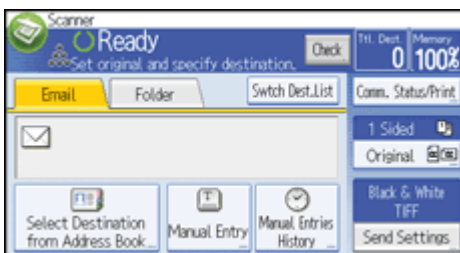

**6**

- 6** Press [▼] three times, and then press [Store File].

- 7** Press [Store to Memory Device].

- 8** Press [OK] twice.

**9** If necessary, select [Send Settings] or [Original], and specify the scan settings according to the original to be scanned.

Example: Scanning the document in color/duplex mode, and saving as a PDF file.

- Press [Original], and then press [2 Sided].
- Press [Send Settings]. Select [Type of Original], and then press [Full Colour].
- Press [Send Settings]. Select [File Type], and then press [PDF].

For information about other settings, see [Various Scan Settings](#).

- 10** Press the [Start] key.

When scanning batches, place subsequent originals after the scan files have been sent.

When writing is complete, a confirmation message appears.

- 11** Press [Exit].

**12 Remove the memory device from the media slot.**

Remove the media from the media slot only after data has been written completely.

Removing the media while data is being written will result in corrupted data.


**Note**

- The amount of time required to save files to a USB flash memory device or SD card will vary according to the device's specifications.
- The documents stored on the removable media device can be printed from the machine's control panel. For details, see "Printing Files from an External Memory Device", Print.
- The documents stored on the removable media device cannot be sent from the machine's control panel.
- Depending on the security settings, [Store to Memory Device] may not be displayed. Consult your administrator.
- You cannot specify where the data is saved. Files are saved in the root directory of the removable memory device.
- If the removable memory device is partitioned, files are saved on the first partition.
- You cannot configure file information such as [User Name], [File Name], and [Password].
- The amount of free space on the memory device is displayed. Note that if the amount of free space exceeds 10 GB, "9999.99 MB" will be displayed.
- To cancel writing, press the [Stop] key. If files are being written when writing is cancelled, any partially written files are deleted. Only complete files are stored on the removable memory device.





# 7. Document Server

This chapter describes frequently used Document Server functions and operations. For the information not included in this chapter, see Copy/ Document Server  on the supplied CD-ROM.

## Storing Data

This section describes the procedure for storing documents on the Document Server.


### Important

- A document accessed with a correct password remains selected even after operations are complete, and it can be accessed by other users. After the operation, be sure to press the [Reset] key to cancel the document selection.
- The user name registered to a stored document in the Document Server is to identify the document creator and type. It is not to protect confidential documents from others.
- When turning on the fax transmission or scanning by the scanner, make sure that all other operations are ended.

### File Name

A file name such as "COPY0001" and "COPY0002" is automatically attached to the scanned document. You can change the file name.


### User Name

You can register a user name to identify the user or user group that stored the documents. To assign it, select the user name registered in the Address Book, or enter the name directly. Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about the Address Book, see "Registering Addresses and Users for Facsimile/Scanner Functions", Connecting the Machine/ System Settings .

### Password

To prevent unauthorized printing, you can specify a password for any stored document. A protected document can only be accessed if its password is entered. If a password is specified for the documents, the key icon appears on the left side of the file name.

1. Press the [Home] key on the top left of the control panel, and press the [Document Server] icon on the [Home] screen.

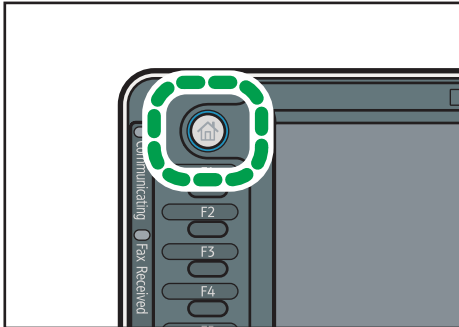

CJS113

2. Press [To Scanning Screen].
3. Press [User Name].
4. Specify a user name, and then press [OK].

The user names shown are names that were registered in the Address Book. To specify a name not shown in the screen, press [Manual Entry], and then enter a user name.

5. Press [File Name].
6. Enter a file name, and then press [OK].
7. Press [Password].
8. Enter a password with the number keys, and then press [OK].  
You can use four to eight digits for the password.
9. For double-check, enter the password again, and then press [OK].
10. Place the original.
11. Specify the original scanning conditions.
12. Press the [Start] key.

The original is scanned. The document is saved in the Document Server.


After scanning, a list of stored documents will be displayed. If the list does not appear, press [Finish Scanning].

# Printing Stored Documents

Prints stored documents on the Document Server.

The items you can specify on the printing screen are as follows:

- Paper tray
- The number of prints
- [Finishing] ([Finisher], [Fold])
- [Cover/Slip Sheet] ([Front Cover], [Back Cover], [Designate/Chapter], [Slip Sheet])
- [Edit / Stamp] ([Margin Adj.], [Stamp])
- [2 Sided / Book] ([1 Sided Print], [2 Sided Top to Top], [2 Sided Top to Bottom], [Specify Duplex Pages], [Booklet], [Magazine])

For details about each function, see Copy/ Document Server .

## 1. Select a document to be printed.

Type	User Name	File Name	Date	Page	Order
<input type="checkbox"/>	User5	COPY0005	31 Dec.	5	
<input type="checkbox"/>	User4	COPY0004	31 Dec.	5	
<input type="checkbox"/>	User3	COPY0003	31 Dec.	5	
<input type="checkbox"/>	User2	COPY0002	31 Dec.	5	
<input type="checkbox"/>	User1	COPY0001	31 Dec.	5	

## 2. When printing two or more documents at a time, repeat step 1.

Up to 30 documents can be printed.

## 3. When specifying printing conditions, press [To Printing Screen], and then configure print settings.

## 4. Enter the number of print copies with the number keys.

The maximum quantity that can be entered is 999.

## 5. Press the [Start] key.



# 8. Web Image Monitor

This chapter describes frequently used Web Image Monitor functions and operations. For the information not included in this chapter, see Connecting the Machine/ System Settings on the supplied CD-ROM or Web Image Monitor Help.

## Displaying Top Page

This section explains the Top Page and how to display Web Image Monitor.

### ★ Important

- When entering an IPv4 address, do not begin segments with zeros. For example: If the address is "192.168.001.010", you must enter it as "192.168.1.10".

1. Start your Web browser.
2. Enter "http://(machine's IP address or host name)/" in your Web browser's URL bar.

Top Page of Web Image Monitor appears.

If the machine's host name has been registered on the DNS or WINS server, you can enter it.

When setting SSL, a protocol for encrypted communication, under environment which server authentication is issued, enter "https://(machine's IP address or host name)/".

Web Image Monitor is divided into the following areas:



CKD001

### 1. Menu area



If you select a menu item, its content will be shown.


### 2. Header area

The dialog box for switching to the user mode and administrator mode appears, and each mode's menu will be displayed.

The link to Help and dialog box for keyword search appears.

### 3. Refresh/Help

 (Refresh): Click  at the upper right in the work area to update the machine information. Click the Web browser's [Refresh] button to refresh the entire browser screen.

 (Help): Use Help to view or download Help file contents.

### 4. Basic Information area

Displays the basic information of the machine.


### 5. Work area

Displays the contents of the item selected in the menu area.

# Viewing Received Fax Documents Using Web Image Monitor

1. Start Web Image Monitor.
2. Click [Fax Received File] on the [Print Job/Stored File] menu in the left pane.
3. If you have programmed a user code for the stored reception file, enter the code, and then press [OK].

If the programmed user code was deleted from the Address Book, a message indicating incorrect user code entry appears. If this is the case, reprogram a user code.

4. Click the property icon  of the desired fax document.
5. View the content of the fax document.
6. To download the received fax document, select [PDF], [PDF/A], or [Multi-page: TIFF], and then click [Download].

When you select [PDF], make the necessary "PDF File Security Settings" before clicking [Download]. Adobe Acrobat Reader/Adobe Reader starts and the selected document is displayed.

7. Quit Web Image Monitor.







# 9. Adding Paper and Toner


This chapter describes how to load paper into the paper tray and recommended paper sizes and types.

## Loading Paper into Tray 1

### ★ Important

- When paper loaded in the right side of tray 1 runs out, paper on the left is automatically shifted to the right. Do not pull out tray 1 while the tray is moving paper; wait until sounds stop coming from the tray.
- For the right stack, align the right edge of the paper with the right edge of the tray. For the left stack, align the left edge of the paper to the left edge of the tray.
-  **Region A** (mainly Europe and Asia)  
Tray 1 can hold A4 paper only. If you want to print on  $8\frac{1}{2} \times 11$  from tray 1, contact your service representative.
-  **Region B** (mainly North America)  
Tray 1 can hold  $8\frac{1}{2} \times 11$  paper only. If you want to print on A4 from tray 1, contact your service representative.

1. Carefully pull out tray 1 until it stops.

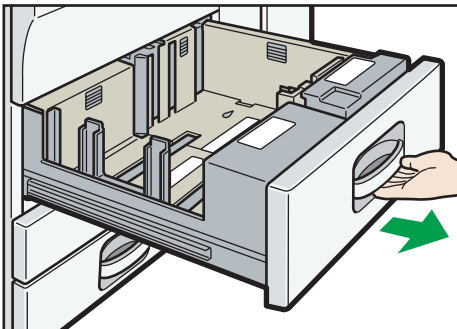


CJW105


2. Square the paper and load it print side down.

Do not stack paper over the limit mark.

- Whole tray pulled out

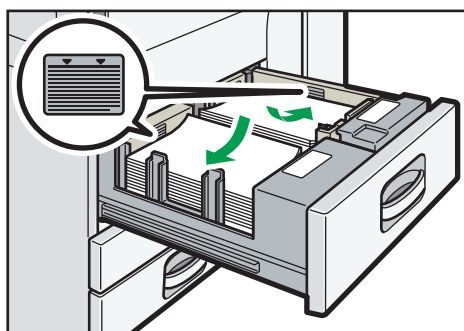

- Left half of the tray pulled out

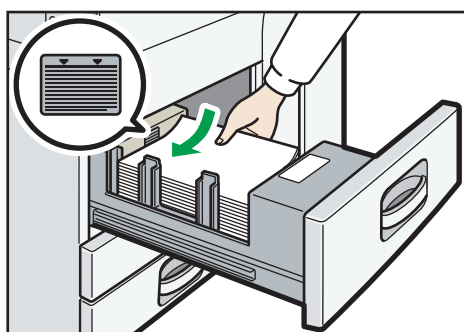



**3. Carefully push the paper tray fully in.**

**↓ Note**


- You can load paper even if tray 1 is in use. It is okay to pull out the left half of the tray while tray 1 is in use.

# Loading Paper into the A3/11 × 17 Tray Unit

## ★ Important

-  **Region A** (mainly Europe and Asia)  
 A3/11 × 17 tray unit can hold A3 paper only. If you want to print on A4, B4 JIS, 11 × 17, 8 1/2 × 14, or 8 1/2 × 11, contact your service representative.
-  **Region B** (mainly North America)  
 A3/11 × 17 tray unit can hold 11 × 17 paper only. If you want to print on A3, A4, B4 JIS, 8 1/2 × 14, or 8 1/2 × 11, contact your service representative.
- Check the paper edges are aligned at the right side.


- Carefully pull out the paper tray until it stops.

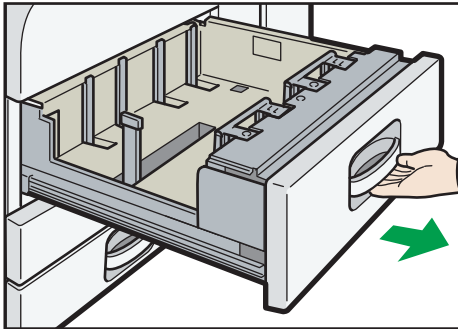

CJW124

- Square the paper and load it print side down.

Do not stack paper over the limit mark.

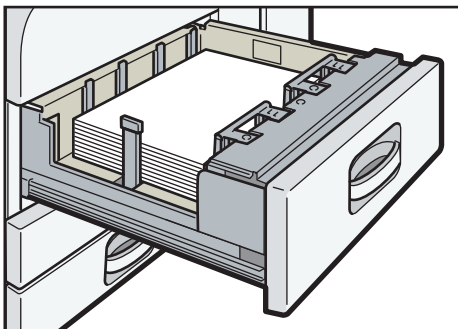

CJW125

- Carefully push the paper tray fully in.


# Loading Paper into Trays 2 and 3

In the following example procedure, paper is loaded into tray 2.

**★ Important**

- If a paper tray is pushed vigorously when putting it back into place, the position of the tray's side fences may slip out of place.
- Check the paper edges are aligned at the right side.
- When loading a low number of sheets, be sure not to squeeze the side fences in too tightly. If the side fences are squeezed too tightly against the paper, the edges may crease, the paper may misfeed, or if it weighs between 52–59 g/m<sup>2</sup> (14–15 lb. Bond), it may wrinkle.


1. Carefully pull out the paper tray until it stops.

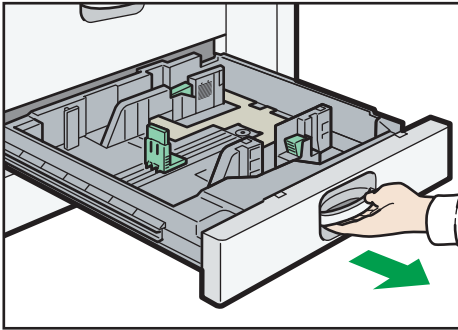

CJW103

2. Square the paper and load it print side down.


Do not stack paper over the limit mark.

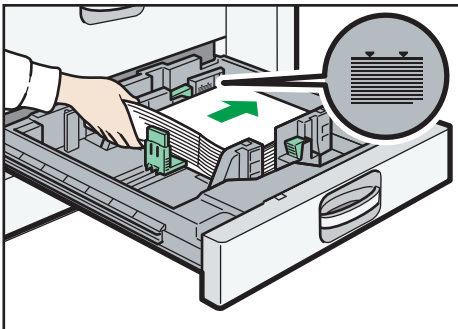

CJW104


3. Carefully push the paper tray fully in.

**↓ Note**

- Various sizes of paper can be loaded in trays 2–3 by adjusting the positions of side fences and end fence. For details, see "Changing the Paper Size in Trays 2 and 3", Paper Specifications and Adding Paper .


## Loading Tab Stock into Trays 2 and 3

- When loading tab stock, always use the tab sheet holder.

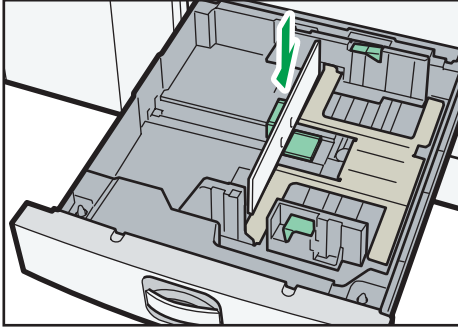

CJW101

- Load tab stock so that the side with the tab faces the tab sheet holder.
- When loading tab stock, adjust the end fence position so that the tab sheet holder will fit the tab stock.

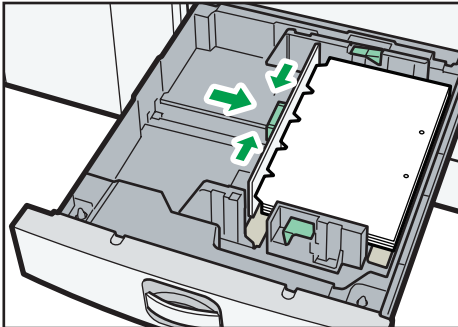

CJW102


# Loading Paper into the Bypass Tray

Use the bypass tray to use OHP transparencies, adhesive labels, translucent paper, and paper that cannot be loaded in the paper trays.

**★ Important**

- The maximum number of sheets you can load at the same time depends on paper type. Load only as much paper as can be held between the paper guides on the bypass tray. For the maximum number of sheets you can load, see p.135 "Recommended Paper Sizes and Types".

**1. Open the bypass tray.**

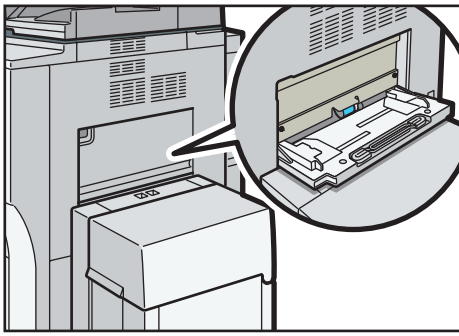


CJW115

**2. Insert the paper face up until you hear the beep.**


**3. Align the paper guides to the paper size.**

If the guides are not flush against the paper, images might be skewed or paper misfeeds might occur.

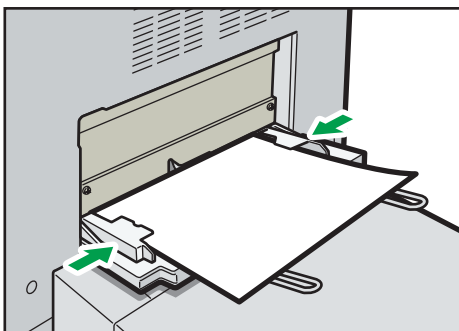


CJW116

**↓ Note**


- When copying from the bypass tray, see "Copying from the Bypass Tray", Copy/ Document Server . When printing from a computer, see p.130 "Settings to Use the Bypass Tray under the Printer Function".

- Certain types of paper might not be detected properly when placed on the bypass tray. If this happens, remove the paper and place it on the bypass tray again.
- Pull the extender out when loading A4, 8 1/2 × 11 or larger sheets in the bypass tray. Adjust the extenders to match the width of the paper you load.
  - When loading wide paper

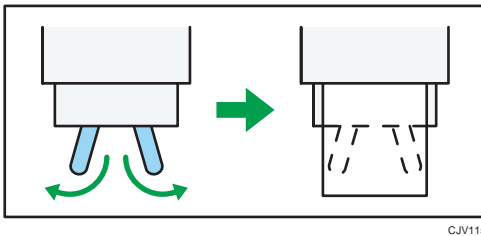

CJV115

- When loading narrow paper

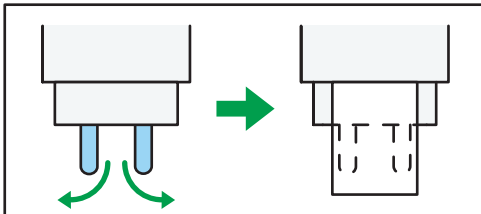


CJV116


- When the [Panel Key Sound] is turned off, it does not sound if you insert paper into the bypass tray. For details about [Panel Key Sound], see "System Settings", Connecting the Machine/ System Settings.
- If the machine stops detecting paper sizes while copying or printing, remove the paper and reload it.
- Specify the sizes of paper that are not automatically detected. For details about the sizes that can be detected automatically, see p.135 "Recommended Paper Sizes and Types". For details about how to specify sizes, see p.130 "Settings to Use the Bypass Tray under the Printer Function", "Copying from the Bypass Tray", Copy/ Document Server.
- When loading thick paper, translucent paper, or OHP transparencies, specify the paper size and the paper type.
- Letterhead paper must be loaded in a specific orientation. See, "Loading Orientation-Fixed Paper or Two-Sided Paper", Paper Specifications and Adding Paper.

## Settings to Use the Bypass Tray under the Printer Function

### ★ Important


- If you select [Machine Setting(s)] in [Bypass Tray] under [Tray Setting Priority] in [System] of the Printer Features menu, the settings made using the control panel have priority over the printer driver settings. For details, see "System", Print .
- The default setting of [Bypass Tray] is [Driver / Command].

### ↓ Note

- Settings remain valid until they are changed. After printing, be sure to clear settings for the next user.
- For details about setting printer drivers, see "Printing Documents", Print .
- [Auto Detect] is the default setting for [Printer Bypass Paper Size].


## Setting the paper size using the control panel

1. Press the [User Tools/Counter] key.

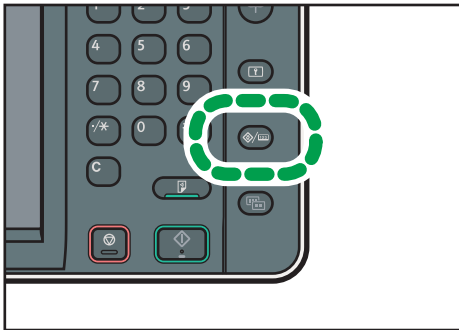

CJS039

2. Press [Tray Paper Settings].
3. Press [Printer Bypass Paper Size].
4. Select the paper size.

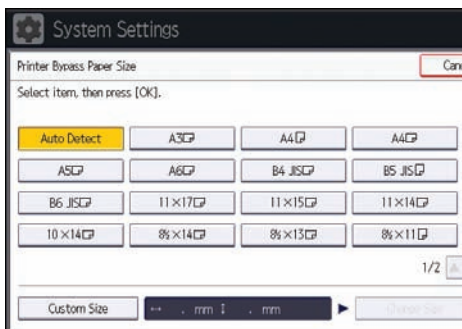




5. Press [OK].
6. Press the [User Tools/Counter] key.

**Note**

- When loading thick paper or OHP transparencies, specify the paper size and the paper type.

## Setting custom size paper using the control panel

1. Press the [User Tools/Counter] key.

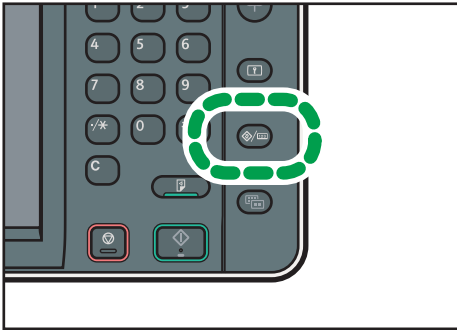

CJS039

2. Press [Tray Paper Settings].
3. Press [Printer Bypass Paper Size].
4. Press [Custom Size].  
If a custom size is already set, press [Change Size].
5. Press [Vertical], enter the size of the paper using the number keys, and then press [#].
6. Press [Horizontal], enter the size of the paper using the number keys, and then press [#].
7. Press [OK] twice.
8. Press the [User Tools/Counter] key.

**Note**


- When loading thick paper or OHP transparencies, specify the paper size and the paper type.

## Setting thick paper or OHP transparencies using the control panel

**Important**

- Use A4 or 8<sup>1</sup>/<sub>2</sub> × 11 size OHP transparencies, and specify their size.
- When you load OHP transparencies, check the front and back of the sheets, and place them correctly.
- When printing onto OHP transparencies, remove printed sheets one by one.

1. Press the [User Tools/Counter] key.

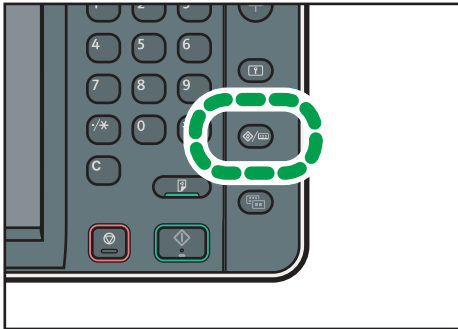

CJS039


2. Press [Tray Paper Settings].

3. Press [▼Next].

4. Press [Paper Type: Bypass Tray].

5. Select the proper items, according to the paper type you want to set.


- Press [OHP (Transparency)] on the [Paper Type] area when loading OHP transparencies.
- To load thick paper, press [Do not Display] on the [Paper Type] area, and then select the appropriate paper thickness in the [Paper Thickness] area.

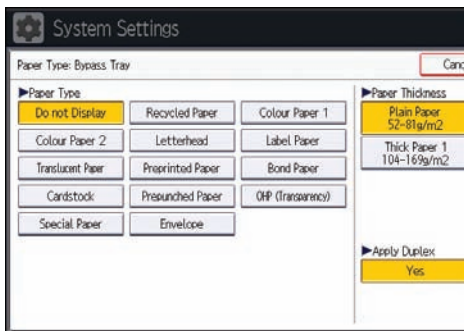

6. Press [OK].



7. Press the [User Tools/Counter] key.

↓ **Note**


- We recommend that you use specified OHP transparencies.
- For details about paper thickness, see "System Settings", Connecting the Machine/ System Settings .

# Loading Paper into the Large Capacity Tray

## ★ Important

-  **Region A** (mainly Europe and Asia)  
 The LCT can hold A4 paper only. If you want to print on 8<sup>1</sup>/<sub>2</sub> × 11 or B5 JIS from the LCT, contact your service representative.
-  **Region B** (mainly North America)  
 The LCT can hold 8<sup>1</sup>/<sub>2</sub> × 11 paper only. If you want to print on A4 or B5 JIS from the LCT, contact your service representative.
- The extension unit is required to load A4, B4 JIS, 8<sup>1</sup>/<sub>2</sub> × 14, or 8<sup>1</sup>/<sub>2</sub> × 11.


### 1. Open the top cover of the LCT.

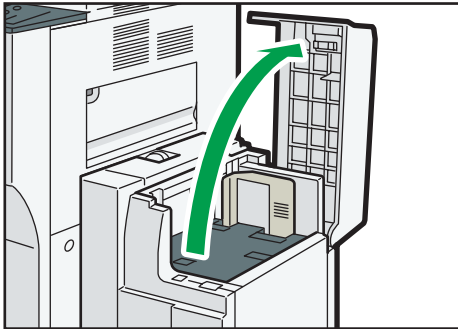

CJW108

### 2. Load paper into the paper tray with the print side up and place it against the left side of the tray.


Do not stack paper over the limit mark.

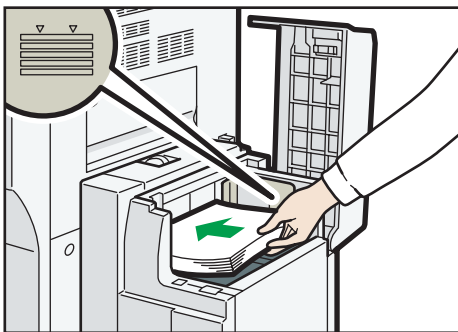

CJW109

### 3. Press the [Down] key.

The key blinks while the bottom plate is moving down.

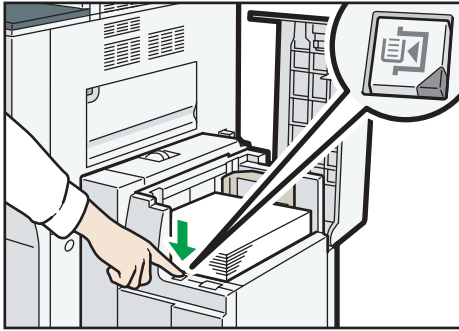

CJW110

4. Load paper by repeating steps 2 and 3.
5. Close the top cover of the LCT.




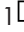

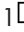


# Recommended Paper Sizes and Types

This section describes recommended paper sizes and types.

## ★ Important





- If you use damp or curled paper, a staple clogging or paper jam may occur.
- Do not use paper designed for inkjet printers, as these may stick to the fusing unit and cause a misfeed.
- When you load OHP transparencies, check the front and back of the sheets, and place them correctly, or a misfeed might occur.
- For details about and recommendations concerning thick paper, see p. 146 "Thick Paper".




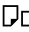











### Tray 1

Paper type and weight	Paper size	Paper capacity
52–169 g/m <sup>2</sup> (14 lb. Bond–90 lb. Index) Plain Paper–Thick Paper 1	 Region <b>A</b> A4   Region <b>B</b> 8 1/2 × 11 	1,550 sheets × 2
52–169 g/m <sup>2</sup> (14 lb. Bond–90 lb. Index) Plain Paper–Thick Paper 1	*1  Region <b>A</b> 8 1/2 × 11   Region <b>B</b> A4 	1,550 sheets × 2

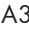\*1 To load paper any of the sizes specified above, contact your service representative.

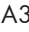

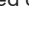


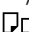
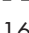
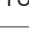







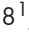












### Tray 1 (A3/11 × 17 tray unit)

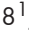

Paper type and weight	Paper size	Paper capacity
52–128 g/m <sup>2</sup> (14–34 lb. Bond) Plain Paper–Thick Paper 1	 Region <b>A</b> A3   Region <b>B</b> 11 × 17 	1,000 sheets

Paper type and weight	Paper size	Paper capacity
52–128 g/m <sup>2</sup> (14–34 lb. Bond) Plain Paper–Thick Paper 1	*1  Region <b>A</b> A4  , B4 JIS  , 11 × 17   , 8 1/2 × 14  , 8 1/2 × 11    Region <b>B</b> A3  , A4  , B4 JIS  , 8 1/2 × 14  , 8 1/2 × 11  	1,000 sheets

\*1 To load paper any of the sizes specified above, contact your service representative.

**Tray 2**

Paper type and weight	Paper size	Paper capacity
52–169 g/m <sup>2</sup> (14 lb. Bond–90 lb. Index) Plain Paper–Thick Paper 1	Paper sizes that can be detected automatically: A3  , A4  , A5  , B4 JIS   , B5 JIS  , 11 × 17  , 8 1/2 × 14  , 8 1/2 × 13  , 8 1/2 × 11  , 8 1/4 × 13   , 8 × 13  , 7 1/4 × 10 1/2   , 5 1/2 × 8 1/2  , 8K  , 16K 	550 sheets
52–103 g/m <sup>2</sup> (14–28 lb. Bond) Plain Paper–Middle Thick	Paper sizes that can be detected automatically: A5  , 5 1/2 × 8 1/2 	550 sheets
52–169 g/m <sup>2</sup> (14 lb. Bond–90 lb. Index) Plain Paper–Thick Paper 1	Select the paper size using the System Settings menu: 8 1/4 × 14  , 8 × 10 1/2  , 182 × 210 mm  , 170 × 210 mm  , 210 × 340 mm  , 11 × 15  , 11 × 14  , 10 × 15 	550 sheets



Paper type and weight	Paper size	Paper capacity
52–169 g/m <sup>2</sup> (14 lb. Bond–90 lb. Index) Plain Paper–Thick Paper 1	*1  Region A Vertical: 139.7–297.0 mm Horizontal: 139.7–432.0 mm  Region B Vertical: 5.50–11.69 inches Horizontal: 5.50–17.00 inches	550 sheets
Tab Stock *2 52–169 g/m <sup>2</sup> (14 lb. Bond–90 lb. Index) Plain Paper–Thick Paper 1	A4☐, 8 1/2 × 11☐, 8 1/2 × 14☐	550 sheets

\*1 For details about how to load custom size paper, contact your service representative.

\*2 The tab sheet holder is required.

### Tray 3

Paper type and weight	Paper size	Paper capacity
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	Paper sizes that can be detected automatically: A3☐, A4☐☐, A5☐, B4 JIS☐, B5 JIS☐☐, 11 × 17☐, 8 1/2 × 14☐, 8 1/2 × 13☐, 8 1/2 × 11☐☐, 8 1/4 × 13☐, 8 × 13☐, 7 1/4 × 10 1/2☐☐, 5 1/2 × 8 1/2☐, 8K☐, 16K☐☐	550 sheets
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	Select the paper size using the System Settings menu: 8 1/4 × 14☐, 8 × 10 1/2☐, 182 × 210 mm☐, 210 × 340 mm☐, 11 × 15☐, 11 × 14☐, 10 × 15☐	550 sheets

Paper type and weight	Paper size	Paper capacity
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	*1  Region A Vertical: 139.7–297.0 mm Horizontal: 180.0–432.0 mm  Region B Vertical: 5.50–11.69 inches Horizontal: 7.09–17.00 inches	550 sheets
Tab Stock *2 52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	A4☐, 8 1/2 × 11☐, 8 1/2 × 14☐	550 sheets

\*1 For details about how to load custom size paper, contact your service representative.

\*2 The tab sheet holder is required.

**Bypass tray  (mainly Europe and Asia)**

Paper type and weight	Paper size	Paper capacity
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	Paper sizes that can be detected automatically: A3☐, A4☐☐, A5☐☐, 100 × 148 mm☐	<ul style="list-style-type: none"> <li>• Plain Paper–Middle Thick: 100 sheets</li> <li>• Thick Paper 1: 30 sheets</li> <li>• Thick Paper 2: 20 sheets</li> </ul>



Paper type and weight	Paper size	Paper capacity
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	*1 A6☐, B4 JIS☐, B5 JIS☐☐, B6 JIS☐☐, 11 × 17☐, 8 <sup>1</sup> / <sub>2</sub> × 14☐☐, 8 <sup>1</sup> / <sub>2</sub> × 13☐, 8 <sup>1</sup> / <sub>2</sub> × 11☐☐ ☐, 8 <sup>1</sup> / <sub>4</sub> × 14☐, 8 <sup>1</sup> / <sub>4</sub> × 13☐, 8 × 13☐, 8 × 10 <sup>1</sup> / <sub>2</sub> ☐☐, 8 × 10☐☐, 7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub> ☐☐, 5 <sup>1</sup> / <sub>2</sub> × 8 <sup>1</sup> / <sub>2</sub> ☐☐, 11 × 15☐, 11 × 14☐, 10 × 15☐, 10 × 14☐	<ul style="list-style-type: none"> <li>• Plain Paper–Middle Thick: 100 sheets</li> <li>• Thick Paper 1: 30 sheets</li> <li>• Thick Paper 2: 20 sheets</li> </ul>
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	Custom size *2: <ul style="list-style-type: none"> <li>• When no finisher is installed                Vertical: 100.0–305.0 mm                Horizontal: 139.7–600.0 mm *3</li> <li>• When Finisher SR4060/Booklet Finisher SR4070 is installed                Vertical: 100.0–305.0 mm                Horizontal: 139.7–487.6 mm *3</li> <li>• When Finisher SR4080 is installed                Vertical: 100.0–305.0 mm                Horizontal: 139.7–458.0 mm *3</li> </ul>	<ul style="list-style-type: none"> <li>• Plain Paper–Middle Thick: 100 sheets</li> <li>• Thick Paper 1: 30 sheets</li> <li>• Thick Paper 2: 20 sheets</li> </ul>

Paper type and weight	Paper size	Paper capacity
OHP transparencies	<ul style="list-style-type: none"> <li>When no finisher is installed A4, 8 1/2 × 11</li> <li>When a finisher is installed A4</li> </ul>	50 sheets
Translucent paper	A3, A4, B4 JIS, B5 JIS	50 sheets
Label paper (adhesive labels)	<ul style="list-style-type: none"> <li>When no finisher is installed B4 JIS, A4</li> <li>When a finisher is installed A4</li> </ul>	1 sheet

- \*1 Select the paper size. For copier mode, see "Copying onto Regular Size Paper from the Bypass Tray", Copy/ Document Server. For printer mode, see p.130 "Setting the paper size using the control panel".
- \*2 Enter the paper size. For copier mode, see "Copying onto Custom Size Paper from the Bypass Tray", Copy/ Document Server. For printer mode, see p.131 "Setting custom size paper using the control panel".
- \*3 When paper larger than 432 mm (17 inches) in size is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.

**Bypass tray**  **Region B (mainly North America)**

Paper type and weight	Paper size	Paper capacity
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	Paper sizes that can be detected automatically: A3, A5, 11 × 17, 8 1/2 × 14, 8 1/2 × 11, 5 1/2 × 8 1/2, 100 × 148 mm	<ul style="list-style-type: none"> <li>Plain Paper–Middle Thick: 100 sheets</li> <li>Thick Paper 1: 30 sheets</li> <li>Thick Paper 2: 20 sheets</li> </ul>



Paper type and weight	Paper size	Paper capacity
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	*1 A4☐☐, A5☐, A6☐, B4 JIS☐, B5 JIS☐☐, B6 JIS☐, 8 <sup>1</sup> / <sub>2</sub> × 13☐, 8 <sup>1</sup> / <sub>4</sub> × 14 ☐, 8 <sup>1</sup> / <sub>4</sub> × 13☐, 8 × 13 ☐, 8 × 10 <sup>1</sup> / <sub>2</sub> ☐☐, 8 × 10 ☐☐, 7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub> ☐☐, 11 × 15☐, 11 × 14☐, 10 × 15☐, 10 × 14☐	<ul style="list-style-type: none"> <li>• Plain Paper–Middle Thick: 100 sheets</li> <li>• Thick Paper 1: 30 sheets</li> <li>• Thick Paper 2: 20 sheets</li> </ul>
52–216 g/m <sup>2</sup> (14 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	Custom size *2: <ul style="list-style-type: none"> <li>• When no finisher is installed Vertical: 3.94–12.00 inches Horizontal: 5.50–23.62 inches *3</li> <li>• When Finisher SR4060/Booklet Finisher SR4070 is installed Vertical: 3.94–12.00 inches Horizontal: 5.50–19.19 inches *3</li> <li>• When Finisher SR4080 is installed Vertical: 3.94–12.00 inches Horizontal: 5.50–18.03 inches *3</li> </ul>	<ul style="list-style-type: none"> <li>• Plain Paper–Middle Thick: 100 sheets</li> <li>• Thick Paper 1: 30 sheets</li> <li>• Thick Paper 2: 20 sheets</li> </ul>

Paper type and weight	Paper size	Paper capacity
OHP transparencies	<ul style="list-style-type: none"> <li>When no finisher is installed A4☐☐, 8 1/2 × 11☐☐</li> <li>When a finisher is installed A4☐☐</li> </ul>	50 sheets
Translucent paper	A3☐☐, A4☐☐, B4 JIS☐☐, B5 JIS☐☐	50 sheets
Label paper (adhesive labels)	<ul style="list-style-type: none"> <li>When no finisher is installed B4 JIS☐☐, A4☐☐</li> <li>When a finisher is installed A4☐☐</li> </ul>	1 sheet

- \*1 Select the paper size. For copier mode, see "Copying onto Regular Size Paper from the Bypass Tray", Copy/ Document Server ☺. For printer mode, see p.130 "Setting the paper size using the control panel".
- \*2 Enter the paper size. For copier mode, see "Copying onto Custom Size Paper from the Bypass Tray", Copy/ Document Server ☺. For printer mode, see p.131 "Setting custom size paper using the control panel".
- \*3 When paper larger than 432 mm (17 inches) in size is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.

LCT

Paper type and weight	Paper size	Paper capacity
52–128 g/m <sup>2</sup> (14–34 lb. Bond) Plain Paper–Thick Paper 1	Region A A4☐☐ Region B 8 1/2 × 11☐☐	4,000 sheets



Paper type and weight	Paper size	Paper capacity
52–128 g/m <sup>2</sup> (14–34 lb. Bond) Plain Paper–Thick Paper 1	*1  Region <b>A</b> B5 JIS $\square$ , 8 <sup>1</sup> / <sub>2</sub> × 11 $\square$  Region <b>B</b> A4 $\square$ , B5 JIS $\square$	4,000 sheets



\*1 To load paper any of the sizes specified above, contact your service representative.

### Extension unit

Paper type and weight	Paper size	Paper capacity
52–128 g/m <sup>2</sup> (14–34 lb. Bond) Plain Paper–Thick Paper 1	A4 $\square$ $\square$ , B4 JIS $\square$ , B5 JIS $\square$ , 8 <sup>1</sup> / <sub>2</sub> × 14 $\square$ , 8 <sup>1</sup> / <sub>2</sub> × 11 $\square$ $\square$	2,500 sheets

### Interposer

Paper type and weight	Paper size	Paper capacity
64–216 g/m <sup>2</sup> (17 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	Paper sizes that can be detected automatically:  Region <b>A</b> A3 $\square$ , A4 $\square$ $\square$ , A5 $\square$ $\square$ , B4 JIS $\square$ , B5 JIS $\square$ $\square$ , 8 <sup>1</sup> / <sub>2</sub> × 13 $\square$ $\square$ , 8K $\square$ , 16K $\square$ $\square$  Region <b>B</b> A3 $\square$ , A4 $\square$ $\square$ , 11 × 17 $\square$ , 8 <sup>1</sup> / <sub>2</sub> × 14 $\square$ , 8 <sup>1</sup> / <sub>2</sub> × 11 $\square$ $\square$ , 7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub> $\square$ , 5 <sup>1</sup> / <sub>2</sub> × 8 <sup>1</sup> / <sub>2</sub> $\square$ $\square$ , 10 × 14 $\square$	200 sheets

Paper type and weight	Paper size	Paper capacity
64–216 g/m <sup>2</sup> (17 lb. Bond–80 lb. Cover) Plain Paper–Thick Paper 2	*1  <b>Region A</b> 11 × 17□, 8 <sup>1</sup> / <sub>2</sub> × 11□□, 8 <sup>1</sup> / <sub>4</sub> × 13□, 8 × 13□  <b>Region B</b> 8 <sup>1</sup> / <sub>2</sub> × 13□, 8 × 10□, 7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub> □	200 sheets

\*1 If you want to make these sizes detectable, contact your service representative.

### Paper Thickness





Paper Thickness *1, *2	Paper weight
Plain Paper	52–81 g/m <sup>2</sup> (14–20 lb. Bond)
Middle Thick	82–103 g/m <sup>2</sup> (21–28 lb. Bond)
Thick Paper 1	104–169 g/m <sup>2</sup> (39 lb. Cover–90 lb. Index)
Thick Paper 2	170–216 g/m <sup>2</sup> (65–80 lb. Cover)

\*1 Print quality will decrease if the paper you are using is close to the minimum or maximum weight. Change the paper weight setting to thinner or thicker.

\*2 When loading paper of 52–59 g/m<sup>2</sup> (14–15 lb. Bond), the edges may crease or the paper misfeed depending on the paper type.

#### Note

- Certain types of paper produce noise when delivered. This noise does not indicate a problem and print quality is unaffected. (Glossy paper and OHP transparencies can produce noise when delivered.)
- The paper capacity described in the tables above is an example. Actual paper capacity might be lower, depending on the paper type.
- When loading paper, make sure the stack height does not exceed the limit mark of the paper tray.
- If multiple sheet feeding occurs, fan sheets thoroughly or load sheets one by one from the bypass tray.
- Flatten out curled sheets before loading them.
- When loading thick paper of 157–216 g/m<sup>2</sup> (42 lb. Bond–80 lb. Cover), see p.146 "Thick Paper".






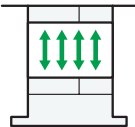
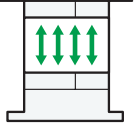
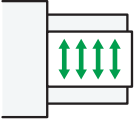
- When copying or printing onto letterhead paper, the paper placing orientation is different depending on which function you are using. See "Loading Orientation-Fixed Paper or Two-Sided Paper", Paper Specifications and Adding Paper .
- When using the sort function or duplex function, the copy/print speed is slower than usual.
- When copying or printing onto tab stock, the copy/print speed is slower than usual.
- If you load paper of the same size and same type in two or more trays, except for the bypass tray, the machine automatically shifts to the other tray when the first tray in use runs out of paper. This function is called Auto Tray Switching. (However, if the paper type of one tray is recycled or special paper, the settings of the other trays must be the same for the Auto Tray Switching function to work.) This saves interrupting a copy run to replenish paper when making a large number of copies. You can set the paper type of the paper trays under [Paper Type: Tray 1]–[Paper Type: Tray 3] and [Paper Type: LCT]. See "System Settings", Connecting the Machine/ System Settings . For the setting procedure of the Auto Tray Switching function, see "Copier / Document Server Features", Copy/ Document Server .
- When loading label paper:
  - We recommend that you use specified label paper.
  - It is recommended to place one sheet at a time.
  - Press [Bypass], and the [#] key, and then select [Thick Paper 1] or [Thick Paper 2] for [Paper Type].
- When loading OHP transparencies:
  - When copying onto OHP transparencies, see "Copying onto OHP Transparencies", Copy/ Document Server .
  - It is recommended to place one sheet at a time.
  - When printing on OHP transparencies from the computer, see p.131 "Setting thick paper or OHP transparencies using the control panel".
  - Fan OHP transparencies thoroughly whenever you use them. This prevents OHP transparencies from sticking together, and from feeding incorrectly.
  - Remove copied or printed sheets one by one.
  - The copy/print speed may be slower than usual.
- When loading translucent paper:
  - Remove copied or printed sheets one by one.
  - It is recommended to place one sheet at a time.
  - When loading translucent paper, always use long grain paper, and set the paper direction according to the grain.
  - Translucent paper easily absorbs humidity and becomes curled. Remove curl in the translucent paper before loading.


## Thick Paper

This section gives you various details about and recommendations concerning thick paper.

When loading thick paper of 157–169 g/m<sup>2</sup> (42 lb. Bond–90 lb. Index) in trays 1 and 2, 157–216 g/m<sup>2</sup> (42 lb. Bond–80 lb. Cover) in tray 3 or bypass tray, follow the recommendations below to prevent misfeeds and loss of image quality.

- Store all your paper in the same environment - a room where the temperature is 20–25 °C (68–77 °F) and the humidity is 30–65%.
- When loading thick paper, be sure to load at least 20 sheets. Also, be sure to position the side fences flush against the paper stack.
- Jams and misfeeds can occur when printing on thick glossy sheets. To prevent such problems, be sure to fan glossy sheets thoroughly before loading them. If sheets continue to become jammed or feed in together even after they are fanned, load them one by one from the bypass tray.
- When loading thick paper, set the paper direction according to its grain, as shown in the following diagram:

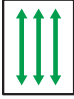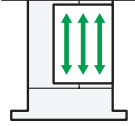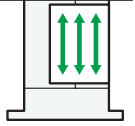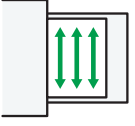Direction of paper grain	Tray 1	Trays 2 and 3	Bypass tray
			
	*1 		

\*1 You can load paper in the  orientation into tray 1 only if the A3/11 × 17 tray unit is installed.

 **Note**

- When copying or printing onto thick paper, the copy/print speed is slower than usual.
- Select [Thick Paper 1] or [Thick Paper 2] in [Tray Paper Settings] under the System Settings menu.
- Even if thick paper is loaded as described above, normal operations and print quality might still not be possible, depending on the paper type.
- Prints might have prominent vertical creases.
- Prints might be noticeably curled. Flatten out prints if they are creased or curled.



# Adding Toner

This section explains precautions when adding toner, how to send faxes or scanned documents when the toner has run out, and how to dispose of used toner.

## **WARNING**

- Do not incinerate toner (new or used) or toner containers. Doing so risks burns. Toner will ignite on contact with naked flame.

## **WARNING**

- Do not store toner (new or used) or toner containers anywhere near naked flames. Doing so risks fire and burns. Toner will ignite on contact with naked flame.

## **WARNING**

- Do not use the cleaner to suck spilled toner (including used toner). Sucked toner may cause firing or explosion due to electrical contact flickering inside the cleaner. However, it is possible to use the cleaner designed for dust explosion-proof purpose. If toner is spilled over the floor, sweep up spilled toner slowly and clean remainder with wet cloth.

## **CAUTION**

- Do not crush or squeeze toner containers. Doing so can cause toner spillage, possibly resulting in dirtying of skin, clothing, and floor, and accidental ingestion.

## **CAUTION**

- Store toner (new or used), toner containers, and components that have been in contact with toner out of reach of children.

## **CAUTION**

- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.

## **CAUTION**

- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

## **CAUTION**

- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.

### CAUTION

- When removing jammed paper or replacing toner, avoid getting toner (new or used) on your clothing. If toner comes into contact with your clothing, wash the stained area with cold water. Hot water will set the toner into the fabric and make removing the stain impossible.

### CAUTION





- When removing jammed paper or replacing toner, avoid getting toner (new or used) on your skin. If toner comes into contact with your skin, wash the affected area thoroughly with soap and water.

### Important

- Always replace the toner cartridge when a notification appears on the machine.
- Fault may occur if you use toner other than the recommended type.
- When adding toner, do not turn off the main power. If you do, settings will be lost.
- Store toner where it will not be exposed to direct sunlight, temperatures above 35 °C (95 °F), or high humidity.
- Store toner on a flat surface.
- Do not shake the toner cartridge with its mouth down after removing it. Residual toner may scatter.
- Do not repeatedly install and remove toner cartridges. This will result in toner leakage.

Follow the instruction on the screen regarding how to replace a toner cartridge.

### Note

- If " Toner Cartridge is almost empty." appears, the toner has almost run out. Have a replacement toner cartridge at hand.
- If  appears when there is a lot of toner, follow the toner replacement instructions that appear on the screen: Pull out the cartridge, and then reinstall it.
- You can check the name of the required toner and the replacement procedure using the [ Add Toner] screen.
- For details about how to check contact number where you can order supplies, see "Enquiry", Maintenance and Specifications .

---

## Sending Faxes or Scanned Documents When Toner Has Run Out

---

When the machine has run out of toner, the indicator on the display lights. Note that even if there is no toner left, you can still send faxes or scanned documents.

**★ Important**

- If number of communications executed after the toner has run out and not listed in the automatically output Journal exceeds 200, communication is not possible.
1. Make sure the machine is in facsimile or scanner mode.
  2. Press [Exit], and then perform transmission operation.

The error message disappears.

**↓ Note**

- Any reports are not printed.

---

## Disposing of Used Toner

---

This section describes what to do with used toner.

Toner cannot be re-used.

Pack used toner containers in the container's box or a bag to prevent the toner from leaking out of the container when you dispose of it.

 **Region A** (mainly Europe and Asia)

If you want to discard your used toner container, please contact your local sales office. If you discard it by yourself, treat it as general plastic waste material.

 **Region B** (mainly North America)

Please see our local company website for information on the recycling of supply products, or you can recycle items according to the requirements of your local municipalities or private recyclers.



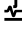










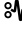



# 10. Troubleshooting

This chapter describes basic troubleshooting procedures.

## Indicators

This section describes the indicators displayed when the machine requires the user to remove misfed paper, to add paper, or to perform other procedures.


Indicator	Status
 : Paper Misfeed indicator	Appears when a paper misfeed occurs. For details about removing jammed paper, see "Removing Jammed Paper", Troubleshooting  .
 : Original Misfeed indicator	Appears when an original misfeed occurs. For details about removing jammed paper, see "Removing Jammed Paper", Troubleshooting  .
 : Load Paper indicator	Appears when paper runs out. For details about loading paper, see "Loading Paper", Paper Specifications and Adding Paper  .
 : Add Toner indicator	Appears when toner runs out. For details about adding toner, see "Adding Toner", Maintenance and Specifications  .
 : Add Staple indicator	Appears when staples run out. For details about adding staples, see "Adding Staples", Maintenance and Specifications  .
 : Waste Toner Full indicator	Appears when the waste toner bottle is full. Contact your sales or service representative.
 : Empty Hole Punch Receptacle indicator	Appears when the hole punch receptacle is full. For details about removing punch waste, see "Removing Punch Waste", Troubleshooting  .
 : Waste Staple Full indicator	Appears when the waste staple receptacle is full. Contact your service representative.
 : Service Call indicator	Appears when the machine is malfunctioning or requires maintenance.

Indicator	Status
☐* : Open Cover indicator	Appears when one or more covers of the machine are open.

# When an Indicator for the [Check Status] Key Is Lit

If an indicator for the [Check Status] key lights up, press the [Check Status] key to display the [Check Status] screen. Check the status of each function in the [Check Status] screen.

[Check Status] screen

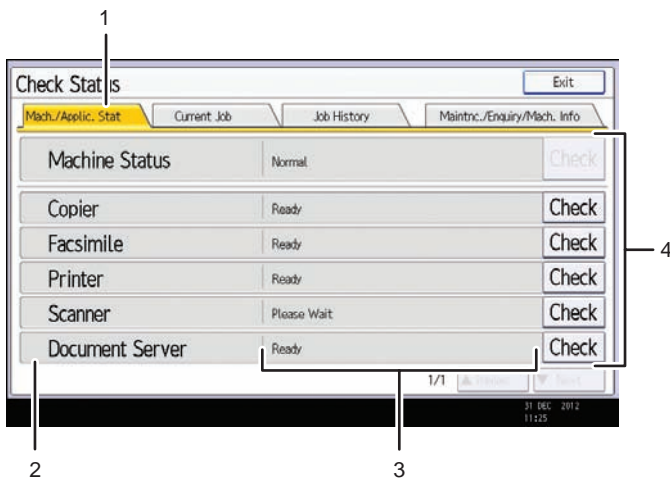


CNM024

## 1. [Mach./Applic. Stat] tab


Indicates the status of the machine and each function.

## 2. Status icons

Each icon that can be displayed is described below:

: The function is performing a job.

: An error has occurred on the machine.

: An error has occurred in the function being used. Or, the function cannot be used because an error has occurred on the machine.

## 3. Messages

Displays a message that indicates the status of the machine and each function.



## 4. [Check]

If an error occurs in the machine or a function, press [Check] to view details.

Pressing [Check] displays an error message or the corresponding function screen. Check the error message displayed on the function screen and take the appropriate action.

- p. 163 "Messages Displayed When Using the Copy/Document Server Function"
- p. 168 "Messages Displayed When Using the Facsimile Function"
- p. 184 "Messages Displayed When Using the Printer Function"
- p. 199 "Messages Displayed When Using the Scanner Function"

The following table explains problems that cause the indicator to light.

Problem	Causes	Solutions
Documents and reports do not print out.	The paper output tray is full.	Remove the prints from the tray.
Documents and reports do not print out.	There is no paper left.	Load paper. For details about loading paper, see "Loading Paper", Paper Specifications and Adding Paper  .
An error has occurred.	A function which has the status "Error Occurred" in the [Check Status] screen is defective.	Press [Check] in the function which the error has occurred. Then check the displayed message, and take appropriate action. For details about error messages and their solutions, see p.163 "When Messages Are Displayed on the Control Panel". You can use other functions normally.
The machine is unable to connect to the network.	A network error has occurred.	<ul style="list-style-type: none"> <li>• Press [Check] in the function which error is occurred. And then check the displayed message, and take appropriate action. For details about error messages and their solutions, see p.163 "When Messages Are Displayed on the Control Panel".</li> <li>• Check that the machine is correctly connected to the network, and that the machine is correctly set. For details about how to connect the network, see "Interface Settings", Connecting the Machine/ System Settings .</li> <li>• For details about connecting to the network, contact your administrator.</li> <li>• If the indicator is still lit even after trying to solve the problem as described here, contact your service representative.</li> </ul>




## Panel Tone

The following table describes the meaning of the various beep patterns that the machine produces to alert users about left originals and other machine conditions.

Beep pattern	Meaning	Causes
Single short beep	Panel/screen input accepted.	A control panel or screen key was pressed.
Short, then long beep	Panel/screen input rejected.	An invalid key was pressed on the control panel or screen, or the entered password was incorrect.
Single long beep	Job completed successfully.	A Copier/Document Server Features job has finished.
Two long beeps	Machine has warmed up.	When the power is turned on or the machine exits Sleep mode, the machine has fully warmed up and is ready for use.
Five long beeps	Soft alert	An auto reset was performed through the simple display of the Copier/Document Server function, the Facsimile function, or the Scanner function.
Five long beeps repeated four times.	Soft alert	An original has been left on the exposure glass or paper tray is empty.
Five short beeps repeated five times.	Strong alert	The machine requires user attention because paper has jammed, the toner needs replenishing, or other problems have occurred.



### ↓ Note







- Users cannot mute the machine's beep alerts. When the machine beeps to alert users of a paper jam or toner request, if the machine's covers are opened and closed repeatedly within a short space of time, the beep alert might continue, even after normal status has resumed.
- You can select to enable or disable beep alerts. For details about Panel Key Sound, see "General Features", Connecting the Machine/ System Settings .











## When You Have Problems Operating the Machine




This section describes common problems and messages. If other messages appear, follow the instructions displayed.

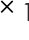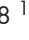
Problem	Causes	Solutions
The [Facsimile] or [Scanner] icon does not appear on the [Home] screen even though the copier screen appears when the machine is turned on using the main power switch.	Functions other than the copier function are not yet ready.	Wait a little longer.
The machine has just been turned on and the User Tools screen is displayed, but the User Tools menu has items missing.	Functions other than the copier function are not yet ready. Time required varies by function. Functions appear in the User Tools menu when they become ready for use.	Wait a little longer.
The lamp remains lit and the machine does not enter Sleep mode even though the [Energy Saver] key was pressed.	This occurs in the following cases: <ul style="list-style-type: none"> <li>• The ADF is open.</li> <li>• The machine is communicating with external equipment.</li> <li>• The hard disk is active.</li> </ul>	<ul style="list-style-type: none"> <li>• Close the ADF.</li> <li>• Check if the machine is communicating with external equipment.</li> <li>• Wait a little longer.</li> </ul>
The display is off.	The machine is in Low Power mode.	Touch the display panel or press one of the keys on the control panel to cancel Low Power mode.
The display is off.	The machine is in Sleep mode.	Press the [Energy Saver] key or the [Check Status] key to cancel Sleep mode.

Problem	Causes	Solutions
Nothing happens when the [Check Status] key or the [Energy Saver] key is pressed.	The main power switch is turned off.	Turn on the main power switch.
"Please wait." appears.	This message appears when you press the [Energy Saver] key.	Wait for a while. If the machine does not get ready in five minutes, contact your service representative.
"Please wait." appears.	This message appears when the machine is warming up.	<ul style="list-style-type: none"> <li>• Wait for a while. If the machine does not get ready in five minutes, contact your service representative.</li> <li>• Wait until the message disappears. Do not turn off the main power switch while the message is showing.</li> </ul>
"Please wait." appears.	This message appears when you change the toner cartridge.	Wait for a while. If the message does not disappear in five minutes, contact your service representative.
"Memory is full. Do you want to store scanned file?" appears.	The scanned originals exceed the number of sheets/pages that can be stored on the hard disk.	<ul style="list-style-type: none"> <li>• Press [Yes] to store pages that have been scanned. Delete unnecessary files by pressing [Delete File].</li> <li>• Press [No] if you are not storing pages that have been scanned. Delete unnecessary files by pressing [Delete File].</li> </ul>
The user code entry screen is displayed.	Users are restricted by User Code Authentication.	For details about how to log in when User Code Authentication is enabled, see "When the Authentication Screen is Displayed", Getting Started  .
The Authentication screen appears.	Basic Authentication, Windows Authentication, LDAP Authentication or Integration Server Authentication is set.	Enter your login user name and user password. For details about the Authentication screen, see "When the Authentication Screen is Displayed", Getting Started  .

Problem	Causes	Solutions
"Authentication has failed." appears.	The entered login user name or login password is not correct.	For details about the correct login user name and login password, see Security Guide  .
"Authentication has failed." appears.	The machine cannot perform authentication.	For details about authentication, see Security Guide  .
"You do not have the privileges to use this function." continues to be displayed even though you have entered a valid user name.	The logged in user name does not have permission for the selected function.	For details about how to set permissions, see Security Guide  .
An error message remains, even if misfed paper is removed.	<ul style="list-style-type: none"> <li>When a misfeed message appears, it remains until you open and close the cover as required.</li> <li>Paper is still jammed in the tray.</li> </ul>	Remove misfed paper, and then open and close the cover. For details about removing jammed paper, see "Removing Jammed Paper", Troubleshooting  .
Original images are printed on the reverse side of the paper.	You may have loaded the paper incorrectly.	Load paper into the paper tray with the print side down. Load paper into the Large capacity tray (LCT), or bypass tray with the print side up.
Misfeeds occur frequently.	The tray's side or end fences may not be set properly.	<ul style="list-style-type: none"> <li>Remove misfed paper. For details about removing jammed paper, see "Removing Jammed Paper", Troubleshooting .</li> <li>Check that the side or end fences are set properly. Also, check that the side fences are locked. For details about setting the side and end fences, see "Changing the Paper Size", Paper Specifications and Adding Paper .</li> </ul>

Problem	Causes	Solutions
Misfeeds occur frequently.	Paper of undetectable size has been loaded.	<ul style="list-style-type: none"> <li>Remove misfed paper. For details about removing jammed paper, see "Removing Jammed Paper", Troubleshooting .</li> <li>If you load a paper size that is not selected automatically, you need to specify the paper size with the control panel. For details about specifying paper size with the control panel, see "Changing to a Size That Is Not Automatically Detected", Paper Specifications and Adding Paper .</li> </ul>
Misfeeds occur frequently.	There is a foreign object on the finisher tray.	<ul style="list-style-type: none"> <li>Remove misfed paper. For details about removing jammed paper, see "Removing Jammed Paper", Troubleshooting .</li> <li>Do not place anything on the finisher tray.</li> </ul>
Wrinkling occurs when gate fold, letter fold-in, or letter fold-out is applied.	Wrinkling can occur if gate fold, letter fold-in, or letter fold-out is applied to B4 JIS  , A3  , 8 1/2 × 14  , 11 × 17  , 8K  , or larger sizes of paper.	When applying gate fold, letter fold-in, or letter fold-out to paper larger than A4, we recommend you enable image reduction and use paper no larger than A4  .
When you print Z-folded paper, the machine indicates that the output tray is full even though the amount of output paper on the tray is less than the stack capacity.	The Z-fold support tray is not set.	Set the Z-fold support tray for finisher or multi-folding unit. For details about how to add the Z-fold support tray, see "Using the Z-fold Function", Troubleshooting  .

Problem	Causes	Solutions
Cannot print in duplex mode.	You have selected a paper tray that is not set for duplex printing.	Change the setting for "Apply Duplex" in [System Settings] to enable duplex printing for the paper tray. For details about setting the "Apply Duplex", see "Tray Paper Settings", Connecting the Machine/ System Settings  .
Cannot print in duplex mode.	You have selected a paper type that cannot be used for duplex printing.	In [Tray Paper Settings], select a paper type that can be used for duplex printing. For details about the paper types that can be used, see "Duplex Copying", Copy/ Document Server  .
The multi-folding unit outputs sheets with creased edges when gate fold is applied.	The paper is curled.	Remove the paper, and then reload it upside down. Alternatively, remove the paper, and then reload it in the opposite direction.
The position of the fold is incorrect when letter fold-in is applied to B5 sheet.	Multi-sheet fold has been specified when only one sheet is being printed.	In [Finishing] on the initial copier screen, under [Fold], select [Letter Fold-in]. Press [Change], and then set "Multi-sheet Fold" to [Off]. For details about how to specify the multi-sheet fold function, see "Finishing", Copy/ Document Server  .
"Following output tray is full. Remove paper." appears.	The output tray is full.	Remove paper from the output tray to resume printing. If paper is destined for the finisher shift tray, to prevent paper from falling off the tray press the [Stop] key to suspend printing, and then remove the paper. Press [Continue] on the display panel to resume printing.
"Turn main Power Switch off" appears.	The machine does not shut down normally when the main power switch is turned off, and then immediately turned on.	Turn off the machine. Wait for ten seconds or more after shutting it down, and then turn it on again.

Problem	Causes	Solutions
"Shutting down... Please wait. Main power will be turned off automatically. Maximum waiting time: 3 minute(s)" appears.	The shut down procedure has begun because the main power switch was turned off while the machine was in standby mode or performing an operation.	Follow the message that appears and wait until the machine has shut down. Do not turn on the main power switch while this message is displayed. If the main power switch has been turned on, follow the message that appears. For details about turning the main power switch on and off, see "Turning On/Off the Power", Getting Started  .
An error has occurred when the Address Book is changed from the display panel or Web Image Monitor.	The Address Book cannot be changed while deleting the multiple stored documents.	Wait a while, and then retry the operation.
Cannot use Web Image Monitor to print documents stored in Document Server.	When print volume limits are specified, users cannot print beyond their print volume limit. Print jobs selected by users who have reached their print volume limits will be canceled.	<ul style="list-style-type: none"> <li>For details about specifying print volume limits, see Security Guide .</li> <li>To view the status of a print job, see [Print Job History]. In Web Image Monitor, click [Job] on the [Status/Information] menu. And then click [Print Job History] in "Document Server".</li> </ul>
"Home is in use by another function." appears.	The [Home] screen is being edited by another function.	Wait for a while, and then try to create the shortcut on the [Home] screen again.
"The image data size is not valid. See the manual for required data." appears.	The image data size is not valid.	For details about file size for shortcut image, see "Customizing the [Home] Screen", Convenient Functions  .
"The format of the image data is not valid." appears.	The file format of the shortcut image to be added is not supported.	The file format of shortcut images to be added must be JPEG. Specify the image again.

 **Note**

- If you cannot make copies as you want because of paper type, paper size, or paper capacity problems, use the recommended paper. For details about recommended paper, see p.135 "Recommended Paper Sizes and Types".

- Using curled paper often causes misfeeds, soiled paper edges, or slipped positions while performing staple or stack printing. When using curled paper, take the stiffness out of the paper with your hands to straighten out the curl, or load the paper up side down. Also, lay paper on a flat surface to prevent paper from curling, and do not lean it against the wall.



# When Messages Are Displayed on the Control Panel

## Messages Displayed When Using the Copy/Document Server Function


This section describes the machine's main messages. If other messages appear, follow their instructions.




### ★ Important

- If you cannot make copies as you want because of the paper type, paper size or paper capacity problems, use recommended paper. For details about recommended paper, see p.135 "Recommended Paper Sizes and Types".
- For messages that are not listed here, see p.156 "When You Have Problems Operating the Machine".




Message	Causes	Solutions
"Cannot detect original size."	The original placed on the exposure glass is a non-standard size.	<ul style="list-style-type: none"> <li>• Place the original on the exposure glass again. Face the original down.</li> <li>• If the machine cannot detect the size of the original, specify the size manually - do not use Auto Paper Select mode or the Auto Reduce/Enlarge function. For details about specifying the settings, see "Sizes Detectable with Auto Paper Select", Paper Specifications and Adding Paper ⑧.</li> </ul>
"Cannot detect original size."	Original is not placed, or the original placed on the exposure glass is a non-standard size.	<ul style="list-style-type: none"> <li>• Place the original correctly.</li> <li>• Specify the paper size.</li> <li>• When placing an original directly on the exposure glass, the lifting/lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by 30 degrees or more.</li> </ul>

Message	Causes	Solutions
"Cannot punch this paper size."	The Punch function cannot be used with paper size selected.	For details about paper, see "Specifications for Punch Unit (Finisher SR4060, Booklet Finisher SR4070)" or "Specifications for Punch Unit (Finisher SR4080)", Maintenance and Specifications  .
"Cannot staple paper of this size."	The Staple function cannot be used with paper size selected.	Select a proper paper size. For details about paper, see "Specifications for Finisher SR4060", "Specifications for Booklet Finisher SR4070", or "Specifications for Finisher SR4080", Maintenance and Specifications  .
"Check paper size."	An irregular paper size is set.	If you press the [Start] key, the copy will start using the selected paper.
"Duplex is not available with this paper size."	A paper size not available in Duplex mode has been selected.	Select a proper paper size. For details about the paper sizes that can be used, see "Duplex Copying", Copy/Document Server  .
"Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?"	The number of scanned pages exceeds the capacity per file of the Document Server.	<ul style="list-style-type: none"> <li>• If you want to store the scanned pages as a file in the Document Server, press [Yes].</li> <li>• If you do not want to store scanned pages, press [No]. Scanned data is deleted.</li> </ul>
"Exceeded the maximum number of multi-sheet fold. Printing will be cancelled."	A print job was canceled because more than the maximum number of multi-sheet folds was specified.	Specify fewer sheets for the multi-sheet fold function.
"Exceeded the maximum number of sheets that can be used. Copying will be stopped."	The number of pages the user is permitted to copy has been exceeded.	For details about how to check the number of copies available per user, see Security Guide  .
"File being stored exceeded max. number of pages per file. Copying will be stopped."	The scanned originals have too many pages to store as one document.	Press [Exit], and then store again with an appropriate number of pages.

Message	Causes	Solutions
"Magazine or Booklet mode is not available due to mixed image mode."	You selected the "Magazine" or "Booklet" function for originals scanned using different functions, such as copy and printer.	Make sure originals for the "Magazine" or "Booklet" function are scanned using the same function.
"Maximum number of sets is n." (A figure is placed at n.)	The number of copies exceeds the maximum copy quantity.	You can change the maximum copy quantity from [Max. Copy Quantity] in [General Features] under [Copier / Document Server Features]. For details about Max. Copy Quantity, see "General Features", Copy/ Document Server  .
"Original(s) is being scanned for a different function."	A function of the machine other than the Copier function is being used such as the Document Server function.	Cancel the job that is being processed. For example, press [Exit], and then press the [Home] key. Next, press the [Document Server] icon on the [Home] screen, and then press the [Stop] key. When the message "The Stop key has been pressed, scanning, and also other print jobs that were being processed and which could be stopped, have been suspended. To continue scanning and printing press [Continue], to cancel scanning press [Cancel Scanning]. To delete other suspended jobs press [Job List]." appears, press [Cancel Scanning].
"Please wait."	The destination list is being updated from the network using Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.

Message	Causes	Solutions
"Rotate Sort is not available with this paper size."	A size of paper for which Rotate Sort is not available is selected.	Select a proper paper size. For details about paper, see "Sort", Copy/Document Server  .
"Stapling capacity exceeded."	The number of sheets per set is over the staple capacity.	Check the stapler capacity. For details about the stapler capacity, see "Specifications for Finisher SR4060", "Specifications for Booklet Finisher SR4070", or "Specifications for Finisher SR4080", Maintenance and Specifications  .
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the authority to do so.	Files can be deleted by the person who created the file. To delete a file which you are not authorized to delete, contact the person who created the file.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	For details about how to set permissions, see Security Guide  .

### Connect Copy

Message	Causes	Solutions
"Cannot connect to the sub-machine. Check the status of the sub-machine."	The  indicator is lit. The hard disk of the sub-machine is malfunctioning.	Press [Exit] on the main machine and follow the instructions on the display.
"Cannot print from the sub-machine. Check the status of the sub-machine."	A paper or staple jam has occurred on the sub-machine, or toner or other supplies need to be replaced.	Follow the instructions displayed. For details about adding toner, see "Adding Toner", Maintenance and Specifications   For details about jammed paper or jammed staples, see "Removing Jammed Paper", or "Removing Jammed Staples", Troubleshooting   If the sub-machine's display indicates that a cover is open, follow the instructions displayed.

Message	Causes	Solutions
"Cannot print from the sub-machine. Check the status of the sub-machine."	The sub-machine's User Tools menu is open.	Press the [User Tools/Counter] key to close the User Tools menu.
"Cannot print from the sub-machine. Sub-machine will be disconnected."	The sub-machine has stopped due to power failure or communication error.	Continue copying using the main machine.
"Fold is available only when Sort mode is selected in Connect Copy."	Sort has not been selected with fold.	Select the Sort function.
"No stamp data in the sub-machine."	Stamp data on the sub-machine has been deleted.	Reprogram the stamp on the sub-machine.
"Sub-machine does not have the same paper setting(s)."	Paper type or tray settings on the two machines do not match.	Make the same settings on both machines.
"Sub-machine is in Interrupt mode."	The sub-machine is in Interrupt mode.	Press the [Interrupt] key on the sub-machine to cancel Interrupt mode.
"Sub-machine paper settings must be the same to use this tray."	Paper tray settings on the two machines do not match.	Make the same settings on both machines.
"The Cover Sheet setting(s) of the sub-machine is different from the main machine."	Cover Sheet settings on the two machines do not match.	Make the same settings on both machines.
"The Designation Sheet n setting(s) of sub-machine is different from main machine." ( <i>"n"</i> in the message represents a changeable number.)	Designation Sheet settings on the two machines do not match.	Make the same settings on both machines.
"The Slip Sheet setting(s) of the sub-machine is different from the main machine."	Slip Sheet settings on the two machines do not match.	Make the same settings on both machines.


## When the memory becomes full while using the copy/document server function

Message	Causes	Solutions
"Memory is full. nn originals have been scanned. Press [Print] to copy scanned originals. Do not remove remaining originals." "n" in the message represents a changeable number.	The scanned originals exceed the number of pages that can be stored in memory.	Press [Print] to copy scanned originals and cancel the scanning data. Press [Clear Memory] to cancel the scanning data and not copy.
"Press [Continue] to scan and copy remaining originals."	The machine checked if the remaining originals should be copied, after the scanned originals were printed.	Remove all copies, and then press [Continue] to continue copying. Press [Stop] to stop copying.

### Connect Copy

Message	Causes	Solutions
"Sub-machine memory is full. Sub-machine will be disconnected."	The quantity of data exceeds the capacity of the sub-machines.	Continue printing on the main machine.

#### ↓ Note





- If you set [Memory Full Auto Scan Restart] in [Input / Output] of User Tools to [On], even if the memory becomes full, the memory overflow message will not be displayed. The machine will make copies of the scanned originals first, and then automatically proceed to scan and to copy the remaining originals. In this case, the resulting sorted pages will not be sequential. For details about Memory Full Auto Scan Restart, see "Input / Output", Copy/ Document Server .





## Messages Displayed When Using the Facsimile Function

This section describes the machine's main messages. If other messages appear, follow their instructions.


#### ↓ Note



- Settings that can be confirmed in System Settings or Facsimile Features on the control panel can also be confirmed from Web Image Monitor. For details about how to confirm the settings from Web Image Monitor, see Web Image Monitor Help.




Message	Causes	Solutions
"Cannot detect original size. Select scan size."	The machine failed to detect the size of the original.	On the control panel, under [Scan Size], specify the scan area in [Scan Settings], and then resend the document. For details about settings scan size, see "Scan Settings", Fax  .
"Cannot find the specified path. Please check the settings."	The name of the computer or folder entered as the destination is wrong.	Check that the computer name and the folder name for the destination are correct.
"Check whether there are any network problems." [13-10]	The alias telephone number you entered is already registered on the gatekeeper by another device.	<ul style="list-style-type: none"> <li>• Check that the correct alias phone number is listed in [H.323 Settings] of [Facsimile Features]. For details about H.323 Settings, see "Initial Settings", Fax .</li> <li>• For details about network problems, contact your administrator.</li> </ul>
"Check whether there are any network problems." [13-11]	Cannot access gatekeeper.	<ul style="list-style-type: none"> <li>• Check that the correct gatekeeper address is listed in [H.323 Settings] of [Facsimile Features]. For details about H.323 Settings, see "Initial Settings", Fax .</li> <li>• For details about network problems, contact your administrator.</li> </ul>
"Check whether there are any network problems." [13-17]	Registering of user name is rejected by SIP server.	<ul style="list-style-type: none"> <li>• Correct that the correct SIP Server IP Address and SIP User Name are listed in [SIP Settings] of [Facsimile Features]. For details about SIP Settings, see "Initial Settings", Fax .</li> <li>• For details about network problems, contact your administrator.</li> </ul>



Message	Causes	Solutions
"Check whether there are any network problems." [13-18]	Cannot access SIP server.	<ul style="list-style-type: none"> <li>• Check that the correct SIP Server IP Address is listed in [SIP Settings] of [Facsimile Features]. For details about SIP Settings, see "Initial Settings", Fax .</li> <li>• For details about network problems, contact your administrator.</li> </ul>
"Check whether there are any network problems." [13-24]	The password registered for the SIP server is not the same as the password registered for this machine.	For details about network problems, contact your administrator.
"Check whether there are any network problems." [13-25]	In [Effective Protocol], the IP address is not enabled, or an incorrect IP address has been registered.	<ul style="list-style-type: none"> <li>• Check that IPv4 in [Effective Protocol] is set to "Active" in [System Settings]. For details about effective protocol, see "Interface Settings", Connecting the Machine/ System Settings .</li> <li>• Check that the correct IPv4 address is specified for the machine in [System Settings]. For details about IPv4 address, see "Interface Settings", Connecting the Machine/ System Settings .</li> <li>• For details about network problems, contact your administrator.</li> </ul>
"Check whether there are any network problems." [13-26]	The "Effective Protocol" and "SIP Server IP Address" settings are different, or an incorrect IP address has been registered.	<ul style="list-style-type: none"> <li>• Check that the correct IP address is specified for the machine in [System Settings]. For details about IP address, see "Interface Settings", Connecting the Machine/ System Settings .</li> <li>• For details about network problems, contact your administrator.</li> </ul>




Message	Causes	Solutions
<p>"Check whether there are any network problems." [14-01]</p>	<p>The DNS server, SMTP server, or folder specified for transfer to was not found, or the destination for Internet Fax around (not through) the SMTP server could not be found.</p>	<ul style="list-style-type: none"> <li>• Check that the following settings in [System Settings] are listed correctly. <ul style="list-style-type: none"> <li>• DNS server</li> <li>• Server name and IP address for the SMTP Server</li> </ul> <p>For details about these settings, see "Interface Settings" or "File Transfer", Connecting the Machine/ System Settings .</p> </li> <li>• Check that the folder for transfer is correctly specified.</li> <li>• Check that the computer in which the folder for transfer is specified is correctly operated.</li> <li>• Check that the LAN cable is correctly connected to the machine.</li> <li>• For details about network problems, contact the administrator of the destinations.</li> <li>• For details about network problems, contact your administrator.</li> </ul>

Message	Causes	Solutions
<p>"Check whether there are any network problems." [14-09]</p>	<p>E-mail transmission was refused by SMTP authentication, POP before SMTP authentication, or login authentication of the computer in which the folder for transfer is specified.</p>	<ul style="list-style-type: none"> <li>• Check that User Name and Password for the following settings in [System Settings] are listed correctly. <ul style="list-style-type: none"> <li>• SMTP Authentication</li> <li>• POP before SMTP</li> <li>• Fax E-mail Account</li> </ul> <p>For details about these settings, see "File Transfer", Connecting the Machine/ System Settings .</p> </li> <li>• Check that the user ID and password for the computer with the folder for forwarding are correctly specified.</li> <li>• Check that the folder for forwarding is correctly specified.</li> <li>• Confirm that the computer with the folder for forwarding is properly working.</li> <li>• For details about network problems, contact your administrator.</li> </ul>
<p>"Check whether there are any network problems." [14-33]</p>	<p>E-mail addresses for the machine and the administrator are not registered.</p>	<ul style="list-style-type: none"> <li>• Check that the correct E-mail Address is listed in [Fax E-mail Account] of [System Settings]. For details about Fax E-mail Account, see "File Transfer", Connecting the Machine/ System Settings .</li> <li>• For details about network problems, contact your administrator.</li> </ul>






Message	Causes	Solutions
<p>"Check whether there are any network problems." [15-01]</p>	<p>No POP3/IMAP4 server address is registered.</p>	<ul style="list-style-type: none"> <li>• Check that the correct Server Name or Server Address is listed in [POP3 / IMAP4 Settings] of [System Settings]. For details about POP3 / IMAP4 Settings, see "File Transfer", Connecting the Machine/ System Settings .</li> <li>• For details about network problems, contact your administrator.</li> </ul>
<p>"Check whether there are any network problems." [15-02]</p>	<p>Cannot log in to the POP3/IMAP4 server.</p>	<ul style="list-style-type: none"> <li>• Check that the correct User Name and Password are listed in [Fax E-mail Account] of [System Settings]. For details about Fax E-mail Account, see "File Transfer", Connecting the Machine/ System Settings .</li> <li>• For details about network problems, contact your administrator.</li> </ul>
<p>"Check whether there are any network problems." [15-03]</p>	<p>No machine e-mail address is programmed.</p>	<ul style="list-style-type: none"> <li>• Check that the correct machine e-mail address is specified in [System Settings]. For details about settings of e-mail address, see "File Transfer", Connecting the Machine/ System Settings .</li> <li>• For details about network problems, contact your administrator.</li> </ul>

Message	Causes	Solutions
<p>"Check whether there are any network problems." [15-11]</p>	<p>Cannot find the DNS server or POP3/IMAP4 server.</p>	<ul style="list-style-type: none"> <li>• Check that the following settings in [System Settings] are listed correctly. <ul style="list-style-type: none"> <li>• IP address of the DNS Server</li> <li>• the server name or IP address of the POP3/IMAP4 server</li> <li>• the port number of the POP3/IMAP4 server</li> <li>• Reception Protocol</li> </ul> <p>For details about these settings, see "Interface Settings" or "File Transfer", Connecting the Machine/ System Settings .</p> </li> <li>• Check that the LAN cable is correctly connected to the machine.</li> <li>• For details about network problems, contact your administrator.</li> </ul>
<p>"Check whether there are any network problems." [15-12]</p>	<p>Cannot log in to the POP3/IMAP4 server.</p>	<ul style="list-style-type: none"> <li>• Check that the following settings in [System Settings] are listed correctly. <ul style="list-style-type: none"> <li>• the user name and password for [Fax E-mail Account]</li> <li>• the user name and password for POP before SMTP authentication</li> </ul> <p>For details about these settings, see "File Transfer", Connecting the Machine/ System Settings .</p> </li> <li>• For details about network problems, contact your administrator.</li> </ul>

Message	Causes	Solutions
"Check whether there are any network problems." [16-00]	<ul style="list-style-type: none"> <li>• An IP address has not been registered for the remote machine.</li> <li>• A network is not connected properly.</li> </ul>	<ul style="list-style-type: none"> <li>• Check that the correct IP address is specified for the machine in [System Settings]. For details about the IP address of the remote machine, contact your administrator.</li> <li>• For details about network problems, contact your administrator.</li> </ul>
"Connection with LDAP server has failed. Check the server status."	A network error has occurred and connection has failed.	Try the operation again. If the message is still shown, the network may be busy.  Check the settings for LDAP server in [System Settings]. For details about settings for LDAP server, see "Programming the LDAP server", Connecting the Machine/ System Settings  .
"Error occurred, and transmission was cancelled."	<ul style="list-style-type: none"> <li>• Original jammed during Immediate Transmission.</li> <li>• A problem occurred in the machine, or noise occurred on the telephone line.</li> </ul>	Press [Exit], and then send the documents again.
"Exceeded max. No. of display search results. Max.: n" (A figure is placed at n.)	The number of search results has exceeded the maximum number of items that can be displayed.	Search again after changing the search conditions.

Message	Causes	Solutions
"Exceeded time limit for LDAP server search. Check the server status."	A network error has occurred and connection has failed.	<ul style="list-style-type: none"> <li>• Try the operation again. If the message is still shown, the network may be busy.</li> <li>• Check that the correct settings for LDAP server are listed in [Administrator Tools] of [System Settings]. For details about LDAP server, see "Programming the LDAP server", Connecting the Machine/ System Settings .</li> </ul>
"Functional problem occurred. Stopped processing."	The main power switch was turned off while the machine was receiving a document by Internet Fax.	Even if you turn the main power switch back on immediately, depending on the mail server, the machine might not be able to resume reception of the Internet Fax if the timeout period has not expired. Wait until the mail server's timeout period has expired, and then resume reception of the Internet Fax. For details about reception of the Internet Fax, contact your administrator.
"Functional problems with facsimile. Data will be initialized."	There is a problem with the fax.	Record the code number shown on the screen, and then contact your service representative. Other functions can be used.
"LDAP server authentication has failed. Check the settings."	A network error has occurred and connection has failed.	Make settings correctly for the user name and the password for LDAP server authentication.

Message	Causes	Solutions
"Original(s) is being scanned for a different function."	A function of the machine other than the Facsimile function is being used such as the Document Server function.	Before sending a file by fax, cancel the job in progress. For example, press [Exit], and then press the [Home] key. Press the [Document Server] icon on the [Home] screen. Next, press the [Stop] key. When the message "The Stop key has been pressed, scanning, and also other print jobs that were being processed and which could be stopped, have been suspended. To continue scanning and printing press [Continue], to cancel scanning press [Cancel Scanning]. To delete other suspended jobs press [Job List]." appears, press [Cancel Scanning].
"Put original back, check it and press the Start key."	Original jammed during Memory Transmission.	Press [Exit], and then send the documents again.
"Remove the paper from Copy Tray."	Copy Tray is full.	Remove the paper. If the other tray is also full, the tray name shown on the screen changes. Remove paper from the tray indicated on the display.
"Some invalid destination(s) contained. Do you want to select only valid destination(s)?"	The specified group contains fax destinations, e-mail destinations, and/or folder destinations, either of which are incompatible with the specified transmission method.	In the message that appears at each transmission, press [Select].
"Some page(s) are near blank. To cancel, press the Stop key."	The first page of the document is almost blank.	The original's blank side might have been scanned. Be sure to place your originals correctly. For details about determining the cause of blank pages, see "Detecting Blank Pages", Fax  .







Message	Causes	Solutions
"Some page(s) are near blank."	The first page of the document is almost blank.	The original's blank side might have been scanned. Be sure to place your originals correctly. For details about determining the cause of blank pages, see "Detecting Blank Pages", Fax  .
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You tried to delete a document for which you do not have permission to delete.	To check your access permission for stored documents, or to delete a document you do not have permission to delete, see Security Guide  .
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated from the network using Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operation is not possible while this message is displayed.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	For details about how to set permissions, see Security Guide  .
"Authentication with remote machine failed. Check remote machine's auth. settings."	User authentication on the remote machine has failed.	For details about user authentication, see Security Guide  .
"Authentication with remote machine failed. Check remote machine's auth. settings."	User Code Authentication is set on the device connected via the remote fax function.	The remote fax function does not support User Code Authentication. Disable the User Code Authentication on the remote machine.
"Authentication with remote machine failed. Check remote machine's auth. settings."	The user does not have permission to use the function on the remote machine.	For details about how to set permissions, see Security Guide  .








Message	Causes	Solutions
"Connection with the remote machine has failed. Check the remote machine status."	A network error occurred while using the remote fax function.	<ul style="list-style-type: none"> <li>• Check that the remote machine supports the remote fax function.</li> <li>• Check that the remote machine is working normally.</li> <li>• Check that the correct IP address or host name is set for the remote machine in [System Settings]. For details about these settings, contact your administrator.</li> <li>• Check that the LAN cable is correctly connected to the machine.</li> <li>• For details about network problems, contact your administrator.</li> </ul>
"Connection with the remote machine has failed. Check the remote machine status."	The remote machine's main power switch is off.	Turn on the remote machine's main power switch.
"Connection with the remote machine has failed. Check the remote machine status."	A timeout error occurred while an attempt was made to connect the device via remote fax function.	<ul style="list-style-type: none"> <li>• Check that the LAN cable is correctly connected to the machine.</li> <li>• Check that the remote machine is working correctly.</li> <li>• For details about connection with remote machine, see "Sending/Receiving Documents Using a Remote Machine (Remote Fax)", Fax ⑤.</li> </ul>
"Connection with the remote machine has failed. There is a problem with the remote machine structure. Contact the administrator."	The settings or machine configuration for using the remote fax function to connect to the remote machine are incorrect.	For details about the settings and machine configuration for using the remote fax function to connect to a remote machine, contact your administrator.



Message	Causes	Solutions
"Remote fax is not available because [User Code Authentication] is active."	The remote fax function does not support User Code Authentication.	When using the remote fax function, disable User Code Authentication. For details about user code authentication, see Security Guide  .
"Transfer error has occurred. Check the status of the remote machine."	A network error occurred during transfer.	<ul style="list-style-type: none"> <li>• Check that the correct IP address or host name is set for the remote machine in [System Settings]. For details about these settings, contact your administrator.</li> <li>• Check that the remote machine is working correctly.</li> <li>• Check that the LAN cable is correctly connected to the machine.</li> <li>• For details about transmission, contact your administrator.</li> </ul>
"The HDD of the remote machine is full."	The hard disk became full after using the remote fax function to scan an original.	Delete unnecessary files.
"Specified operation cannot be performed. The file is in use or the file transmission has completed."	When you attempt to check the status of a job on the remote machine from your machine, the job had already been sent.	Press [TX/RX Status / Print], and then press [Check / Stop Transmission File]. Check the details of a job on the [Check / Stop Transmission File] screen.
"The destination cannot be selected because its certificate is not currently valid."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .
"The group destination cannot be selected because it contains a destination with a certificate that is not currently valid."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .

Message	Causes	Solutions
"Transmission cannot be performed because the certificate used for the S/MIME signature is not currently valid."	The device certificate (S/MIME) has expired.	A new device certificate (S/MIME) must be installed. For details about how to install a device certificate (S/MIME), see Security Guide  .
"The program contains a destination(s) with a certificate that is not currently valid. The destination(s) cannot be recalled."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .
"The specified destination for E-mail TX Result, which is registered to the program, has a certificate that is not currently valid. The destination cannot be recalled."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .
"The specified destinations for E-mail TX Result, which is registered to the program, contains a destination(s) that has a certificate that is not currently valid. The destination(s) cannot be recalled."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .
"Transmission cannot be performed because the certificate for encryption is not currently valid."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .
"XXX cannot be YYY because the device certificate used for the S/MIME signature is not currently valid." (XXX and YYY indicate the user action.)	The device certificate (S/MIME) has expired.	A new device certificate (S/MIME) must be installed. For details about how to install a device certificate (S/MIME), see Security Guide  .

Message	Causes	Solutions
"E-mail TX Result cannot be set because the specified destination's certificate is not currently valid."	The user certificate (destination certificate) has expired.	For details about the user certificate (destination certificate), see Security Guide  .
"The program contains a destination(s) that does not have a certificate."	There is no user certificate (destination certificate).	For details about the user certificate (destination certificate), see Security Guide  .
"The specified destination for E-mail TX Result, which is registered to the program, has no certificate for encryption."	There is no user certificate (destination certificate).	For details about the user certificate (destination certificate), see Security Guide  .
"The specified destinations for E-mail TX Result, which is registered to the program, contain a destination(s) that has no certificate for encryption."	There is no user certificate (destination certificate).	For details about the user certificate (destination certificate), see Security Guide  .
"The device certificate used for the S/MIME signature is not currently valid. XXX which is registered to the program cannot be recalled." (XXX indicates the e-mail destination(s) or destination(s) for E-mail TX Result.)	The device certificate (S/MIME) has expired.	For details about the device certificate (S/MIME), see Security Guide  .
"XXX cannot be YYY because there is a problem with the device certificate used for the S/MIME signature. Check the device certificate." (XXX and YYY indicate the user action.)	There is no device certificate (S/MIME), or the certificate is invalid.	For details about the device certificate (S/MIME), see Security Guide  .

Message	Causes	Solutions
<p>"XXX cannot be recalled because there is a problem with the device certificate used for the S/MIME signature."</p> <p>(XXX indicates the e-mail destination(s) or destination(s) for E-mail TX Result.)</p>	There is no device certificate (S/MIME), or the certificate is invalid.	For details about the device certificate (S/MIME), see Security Guide  .
<p>"The PDF Digital Signature's device certificate is not currently valid. The e-mail destination(s) which is registered to the program cannot be recalled."</p>	The device certificate (PDF with digital signature) has expired.	A new device certificate (PDF with digital signature) must be installed. For details about how to install a device certificate (PDF with digital signature), see Security Guide  .
<p>"XXX cannot be YYY because the PDF Digital Signature's device certificate is not currently valid."</p> <p>(XXX and YYY indicate the user action.)</p>	The device certificate (PDF with digital signature) has expired.	A new device certificate (PDF with digital signature) must be installed. For details about how to install a device certificate (PDF with digital signature), see Security Guide  .
<p>"XXX cannot be YYY because there is a problem with the PDF Digital Signature's device certificate. Check the device certificate."</p> <p>(XXX and YYY indicate the user action.)</p>	There is no device certificate (PDF with digital signature), or the certificate is invalid.	A new device certificate (PDF with digital signature) must be installed. For details about how to install a device certificate (PDF with digital signature), see Security Guide  .
<p>"The e-mail destination(s) which is registered to the program cannot be recalled because there is a problem with the PDF Digital Signature's device certificate."</p>	There is no device certificate (PDF with digital signature), or the certificate is invalid.	A new device certificate (PDF with digital signature) must be installed. For details about how to install a device certificate (PDF with digital signature), see Security Guide  .

### ↓ Note

- If "Check whether there are any network problems." appears, the machine is not correctly connected to the network or the settings of the machine are not correct. If you do not need to connect to a network, you can specify the setting so this message is not displayed, and then the [Check Status] key no longer lights. For details about how to do this, see "Parameter Settings", Fax . If you reconnect the machine to the network, be sure to set "Display" by configuring the appropriate User Parameter.
- If the paper tray runs out of paper, "There is no paper. Load paper." appears on the screen, asking you to add paper. If there is paper left in the other trays, you can receive documents as usual, even if the message appears on the screen. You can turn this function on or off with "Parameter Settings". For details about how to do this, see "Parameter Settings", Fax .

## When the memory becomes full while using the facsimile function

Message	Causes	Solutions
"Memory is full. Cannot scan more. Transmission will be stopped."	The memory is full.	If you press [Exit], the machine returns to standby mode and starts transmitting the stored pages.  Check the pages that have not been sent using the Communication Result Report, and then resend those pages.

## Messages Displayed When Using the Printer Function

This section describes the principal messages that appear on the display panel, error logs or reports. If other messages appear, follow their instructions.

10

### Status messages

Message	Status
"Hex Dump Mode"	In Hex Dump mode, the machine receives data in hexadecimal format. Press [Job Reset] to cancel Hex Dump mode.
"Job Suspended..."	Printing was temporarily stopped by SmartDeviceMonitor for Client. You can resume printing via [My Job List] in SmartDeviceMonitor for Client, or via the Web Image Monitor. To resume printing via Web Image Monitor, ask your system administrator first.

Message	Status
"Offline"	The machine is offline.
"Please wait."	This message might appear for a second or two while the machine is preparing, performing initial adjustments, or adding toner. Wait a while.
"Printing..."	The machine is printing. Wait a while.
"Ready"	This is the default ready message. The machine is ready for use. No action is required.
"Resetting job..."	The machine is resetting the print job. Wait until "Ready" appears on the display panel.
"Setting change..."	The machine is changing settings. You cannot use the control panel while this message is displayed. Wait a while.
"Waiting for print data..."	The machine is waiting for the next data to print. Wait a while.
"Suspending print jobs..."	Printing was temporarily suspended because [Job Operation], the [Suspend/Resume] key, or the [Stop] key was pressed.
"Updating certificate..."	The @Remote certificate is being updated. Wait a while.

## Messages displayed on the control panel when using the printer function




### ↓ Note


- Before turning the main power switch off, see p.45 "Turning On/Off the Power".

Message	Causes	Solutions
"Cannot connect with the wireless card. Turn the main power switch off, then check the card."	<ul style="list-style-type: none"> <li>• The wireless LAN board was not inserted when the machine was turned on.</li> <li>• The wireless LAN board was pulled out after the machine was turned on.</li> <li>• The settings are not updated although the unit is detected.</li> </ul>	Turn off the main power switch, and then confirm the wireless LAN board is inserted correctly. And then, turn on the main power switch again. If the message appears again, contact your service representative.

Message	Causes	Solutions
"Cannot connect with the Bluetooth interface. Check the Bluetooth interface."	<ul style="list-style-type: none"> <li>The Bluetooth interface unit was installed while the machine was turned on.</li> <li>The Bluetooth interface unit was removed while the machine was turned on.</li> </ul>	Turn off the main power switch, and then confirm that the Bluetooth interface unit was installed correctly. And then, turn on the main power switch again. If the message appears again, contact your service representative.
"Hardware Problem: Ethernet"	An error has occurred in the Ethernet interface.	Turn off the main power switch, and then back on again. If the message appears again, contact your service representative.
"Hardware Problem: HDD"	An error has occurred in the hard disk.	Turn off the main power switch, and then back on again. If the message appears again, contact your service representative.
"Hardware Problem: Parallel I/F"	An error has occurred in the IEEE 1284 interface board.	Turn off the main power switch, and then back on again. If the message appears again, contact your service representative.
"Hardware Problem: USB"	An error has occurred in the USB interface.	Turn off the main power switch, and then back on again. If the message appears again, contact your service representative.
"Hardware Problem: Wireless Card" (A "wireless LAN board" or "Bluetooth interface unit" is referred to as a "wireless card".)	The wireless LAN board can be accessed, but an error was detected.	Turn off the main power switch, and then confirm the wireless LAN board is inserted correctly. And then, turn on the main power switch again. If the message appears again, contact your service representative.



Message	Causes	Solutions
<p>"Hardware Problem: Wireless Card"</p> <p>(A "wireless LAN board" or "Bluetooth interface unit" is referred to as a "wireless card".)</p>	<ul style="list-style-type: none"> <li>The Bluetooth interface unit was connected while the machine was turned on.</li> <li>The Bluetooth interface unit was removed while the machine was turned on.</li> </ul>	<p>Turn off the main power switch, and then confirm the Bluetooth interface unit is inserted correctly. And then, turn on the main power switch again. If the message appears again, contact your service representative.</p>
<p>"Load following paper in n. To cancel job, press [Job Reset]."</p> <p>(A figure is placed at n.)</p>	<p>The printer driver settings are incorrect or the tray does not contain paper of the size selected in the printer driver.</p>	<p>Check that the printer driver settings are correct, and then load paper of the size selected in the printer driver into the input tray. For details about how to change the paper size, see "Changing the Paper Size", Paper Specifications and Adding Paper .</p>
<p>"Paper size and type are mismatched. Select another tray from the following and press [Continue]. To cancel job, press [Job Reset]. Paper size and type can also be changed in User Tools."</p>	<p>The printer driver settings are incorrect or the tray does not contain paper of the size or type selected in the printer driver.</p>	<ul style="list-style-type: none"> <li>Check that the printer driver settings are correct, and then load paper of the size selected in the printer driver into the input tray. For details about how to change the paper size, see "Changing the Paper Size", Paper Specifications and Adding Paper .</li> <li>Select the tray manually to continue printing, or cancel a print job. For details about how to select the tray manually, or cancel a print job, see "If an Error Occurs with the Specified Paper Size and Type", Print .</li> </ul>
<p>"Paper size of n is mismatched. Select another tray from the following and press [Continue]. Paper type can also be changed in User Tools."</p> <p>(A tray name is placed at n.)</p>	<p>The size of the paper in the tray does not match the paper size specified in the printer driver.</p>	<p>Select a tray containing paper that is the same size as the specified paper size.</p>


Message	Causes	Solutions
"Problem: Printer Font Error"	An error has occurred in the font settings.	Contact your service representative.
"Problems with the wireless card. Please call service." (A "wireless LAN board" or "Bluetooth unit" is referred to as a "wireless card".)	The machine has detected a Bluetooth failure, or it could not detect a Bluetooth unit. It may be incorrectly installed.	Check that the Bluetooth unit is installed properly, or contact your service representative.
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the authority to do so.	To check your access permission for stored documents, or to delete a document you do not have permission to delete, see Security Guide  .
"The same paper tray cannot be set for the main sheets and slip sheets ([Designate]). Check the setting."	The tray selected for other pages is the same as the one for slip sheets.	Reset the job. Be sure the tray you select for slip sheets is not providing paper for other pages.
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated from the network using Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	For details about how to set permissions, see Security Guide  .



**Messages during Direct print from a removable memory device**


Message	Causes	Solutions
"Cannot display files from the selected memory device."	The memory device used cannot be recognized.	For details about the recommended memory devices for the Direct printing function from removable memory devices, contact your service representative. The USB flash memory that features password protection or other security features may not work normally.
"The size of the selected file(s) is too large."	<ul style="list-style-type: none"> <li>The size of the selected file exceeds 1GB.</li> <li>The total size of the selected files exceeds 1GB.</li> </ul>	<p>Files or groups of files larger than 1GB cannot be printed.</p> <ul style="list-style-type: none"> <li>When the total size of the multiple files that are selected exceeds 1GB, select files separately.</li> <li>When the size of selected file exceeds 1GB, print by using a function other than the Direct printing function from removable memory devices.</li> </ul> <p>You cannot select files of different formats at the same time.</p>
"Exceeded the limit value for total data size of the selected files. Cannot select more files."	<ul style="list-style-type: none"> <li>The size of the selected file exceeds 1GB.</li> <li>The total size of the selected files exceeds 1GB.</li> </ul>	<p>Files or groups of files larger than 1GB cannot be printed.</p> <ul style="list-style-type: none"> <li>When the total size of the multiple files that are selected exceeds 1GB, select files separately.</li> <li>When the size of selected file exceeds 1GB, print by using a function other than the Direct printing function from removable memory devices.</li> </ul> <p>You cannot select files of different formats at the same time.</p>



## Other messages

This section describes likely causes of and possible solutions for the error messages that are printed on the error logs or reports.

Message	Causes	Solutions
"84: Error"	There is no work area available for image processing.	<ul style="list-style-type: none"> <li>In [Printer Features], under [System], set [Memory Usage] to [Font Priority].</li> <li>Decrease the number of files sent to the machine.</li> </ul>
"85: Error"	The specified graphics library is unavailable.	<ul style="list-style-type: none"> <li>In [Printer Features], under [System], set [Memory Usage] to [Font Priority].</li> <li>Check that the data is valid.</li> </ul>
"86: Error"	Parameters of the control code are invalid.	Check the print settings.
"91: Error"	Printing was canceled by the auto job cancel function due to a command error.	Check that the data is valid.
"92: Error"	Printing was canceled because [Job Reset] or the [Stop] key was selected on the machine's control panel.	Perform the print operation again if necessary.
"98: Error"	The machine could not access Hard disk correctly.	Turn off the main power switch, and then back on again. If the message appears frequently, contact your service representative.
"A function which cannot be used with Fold mode was set. The job has been cancelled."	A print job was cancelled because a function(s) not available with Fold was selected.	Cancel the function(s) not available with Fold. For details about the functions not available with Fold, see "Fold", Print  .
"Address Book is currently in use by another function. Authentication has failed."	The machine currently cannot perform authentication because the Address Book is being used by another function.	Wait a while, and then retry the operation.


Message	Causes	Solutions
"An error occurred while processing an Unauthorized Copy Prevention job. The job was cancelled."	You tried to store a file in the Document Server when the [Unauthorized Copy Prevention] was specified.	On the printer driver, select a job type other than [Document Server] in the "Job Type:" or deselect [Unauthorized Copy Prevention].
"An error occurred while processing an Unauthorized Copy Prevention job. The job was cancelled."	The [Enter User Text:] field on the [Unauthorized Copy Prevention for Pattern Details] screen is blank.	On the printer driver's [Detailed Settings] tab, click [Effects] in the "Menu:". Select [Unauthorized Copy Prevention], and then click [Details] to display [Unauthorized Copy Prevention for Pattern Details]. Enter text in [Enter User Text:].
"An error occurred while processing an Unauthorized Copy Prevention job. The job was cancelled."	The resolution is set to a value less than 600 dpi when [Unauthorized Copy Prevention] is specified.	On the printer driver, set the resolution to 600 dpi or higher, or deselect [Unauthorized Copy Prevention].
"Auto-registration of user information has failed."	Automatic registration of information for LDAP Authentication or Windows Authentication failed because the Address Book is full.	For details about automatic registration of user information, see Security Guide  .
"Cannot store data of this size."	The paper size exceeded the capacity of the Document Server.	Reduce the paper size of the file that you want to send to a size that the Document Server can store. Custom size files can be sent but not stored afterward.
"Classification Code is incorrect."	The classification code has not been entered, or the classification code has been entered incorrectly.	Enter the correct classification code.
"Classification Code is incorrect."	The classification code is not supported with the printer driver.	Select Optional for classification code. For details about how to specify classification code settings, see "Configuring Classification Codes", Print  .

Message	Causes	Solutions
"Collate has been cancelled."	Collate was canceled.	Turn off the main power switch, and then back on again. If the message appears again, contact your service representative.
"Command Error"	An RPCS command error occurred.	Check using the following procedure: <ul style="list-style-type: none"> <li>• Check if the communication between the computer and the machine is working correctly.</li> <li>• Check if the correct printer driver is being used.</li> <li>• Check if the machine's memory size is set correctly in the printer driver.</li> <li>• Check that the printer driver is the most up-to-date version available.</li> </ul>
"Compressed Data Error."	The printer detected corrupt compressed data.	<ul style="list-style-type: none"> <li>• Check the connection between the computer and the printer.</li> <li>• Check that the program you used to compress the data is functioning correctly.</li> </ul>
"Data storage error."	You tried to print a Sample Print, Locked Print, Hold Print, or Stored Print file, or to store a file in the Document Server when the hard disk was malfunctioning.	Contact your service representative.
"Document Server is not available to use. Cannot store."	You cannot use the Document Server function.	For details about using Document Server function, contact your administrator.  For details about how to set permissions, see Security Guide  .

Message	Causes	Solutions
"Duplex has been cancelled."	Duplex printing was canceled.	<ul style="list-style-type: none"> <li>• Select the proper paper size for the duplex function. For details about paper, see "Specifications for the Main Unit", Maintenance and Specifications .</li> <li>• Change the setting for "Apply Duplex" in [System Settings] to enable duplex printing for the paper tray. For details about setting the "Apply Duplex", see "Tray Paper Settings", Connecting the Machine/ System Settings .</li> </ul>
"Error has occurred."	A syntax error, etc., occurred.	Check that the PDF file is valid.
"Exceeded max. capacity of Document Server. Cannot store."	The hard disk became full after a file was stored.	Delete some of the files stored in the Document Server or reduce the size that you want to send.
"Exceeded max. number of files of Document Server. Cannot store."	The maximum file capacity of the Document Server was exceeded.	Delete some of the files stored in the Document Server.
"Exceeded max. number of files to print for temporary / stored jobs."	While printing a Sample Print, Locked Print, Hold Print, or Stored Print file, the maximum file capacity was exceeded.	Delete unneeded files stored in the machine.
"Exceeded max. number of files. (Auto)"	While using the error job store function to store Normal Print jobs as Hold Print files, the maximum file capacity for file storage or Hold Print file management (automatic) was exceeded.	Delete Hold Print files (automatic) or unneeded files stored in the machine.
"Exceeded the maximum number of multi-sheet fold. The job has been cancelled."	The maximum number of multi-sheet fold was exceeded.	<p>Specify fewer sheets for the multi-sheet fold function.</p> <p>Multi-sheet folding can be applied to a maximum of three sheets at once.</p>


Message	Causes	Solutions
"Exceeded max. number of pages of Document Server. Cannot store."	The maximum page capacity of the Document Server was exceeded.	Delete some of the files stored in the Document Server or reduce the number of pages that you want to send.
"Exceeded max. number of pages to print for temporary / stored jobs."	While printing a Sample Print, Locked Print, Hold Print, or Stored Print file, the maximum page capacity was exceeded.	Delete unneeded files stored in the machine. Reduce the number of pages to print.
"Exceeded max. pages. Collate is incomplete."	The number of pages exceeds the maximum number of sheets that you can use Collate with.	Reduce the number of pages to print.
"Exceeded max. number of pages. (Auto)"	While using the error job store function to store Normal Print jobs as Hold Print files, the maximum page capacity was exceeded.	Delete unneeded files stored in the machine. Reduce the number of pages to print.
"Exceeded the maximum unit count for Print Volume Use. The job has been cancelled."	The number of pages the user is permitted to print has been exceeded.	For details about print volume use limitation, see Security Guide  .
"Failed to obtain file system."	PDF direct printing could not be performed because the file system could not be obtained.	Turn off the main power switch, and then back on again. If the message appears again, contact your service representative.
"File system is full."	PDF file does not print out because the capacity of the file system is full.	Delete all unnecessary files from the hard disk, or decrease the file size sent to the machine.
"Fold is not available with the settings. The job has been cancelled."	Fold function is not available with the current settings.	Check the paper settings. For details about the limitations of the Fold function, see "Fold", Print  .
"Folding Unit Error."	There is a problem with the Multi-Folding Unit.	Contact your service representative.




Message	Causes	Solutions
"HDD is full."	The hard disk became full while printing a Sample Print, Locked Print, Hold Print, or Stored Print file.	Delete unneeded files stored in the machine.  Alternatively, reduce the data size of the Sample Print, Locked Print, Hold Print, or Stored Print file.
"HDD is full."	When printing with the PostScript 3 printer driver, the hard disk capacity for fonts and forms has been exceeded.	Delete unneeded forms or fonts registered in the machine.
"HDD is full. (Auto)"	The hard disk became full while using the error job store function to store Normal Print jobs as Hold Print files.	Delete unneeded files stored in the machine.  Alternatively, reduce the data size of the Temporary Print file and/or the Stored Print file.
"I/O buffer overflow."	An input buffer overflow occurred.	<ul style="list-style-type: none"> <li>• In [Printer Features], under [System], set [Memory Usage] to [Font Priority].</li> <li>• In [Printer Features], under [Host Interface], select [I/O Buffer], and then set the maximum buffer size to a larger value.</li> <li>• Reduce the number of files being sent to the machine.</li> </ul>
"Information for user authentication is already registered for another user."	The user name for LDAP or Integration Server authentication was already registered in a different server with a different ID, and a duplication of the user name occurred due to a switching of domains (servers), etc..	For details about user authentication, see Security Guide  .


Message	Causes	Solutions
"Insufficient Memory"	A memory allocation error occurred.	<p>In [Printer Features], under [System], set [Memory Usage] to [Font Priority].</p> <p><b>PCL 5e</b></p> <p>Select a lower resolution on the printer driver. For details about how to change the resolution setting, see the printer driver Help.</p> <p><b>PCL 6</b></p> <ul style="list-style-type: none"> <li>• Select a lower resolution on the printer driver. For details about how to change the resolution setting, see the printer driver Help.</li> <li>• On the printer driver's [Detailed Settings] tab, click [Print Quality] in the "Menu:", and then select [Raster] in the "Vector/Raster:" list. In some cases, it will take a long time to complete a print job.</li> </ul> <p><b>PostScript 3</b></p> <p>Select a lower resolution on the printer driver. For details about how to change the resolution setting, see the printer driver Help.</p>
"Memory Retrieval Error"	A memory allocation error occurred.	Turn off the main power switch, and then back on again. If the message appears again, replace the RAM. For details about replacing the RAM, contact your service representative.
"No response from the server. Authentication has failed."	A timeout occurred while connecting to the server for LDAP authentication or Windows Authentication.	Check the status of the server.

Message	Causes	Solutions
"Output tray has been changed."	The output tray was changed because the paper size of the specified output tray is limited.	Specify the proper output tray.
"Print overrun."	Images were discarded while printing.	<p>In [Printer Features], under [System], set [Memory Usage] to [Frame Priority].</p> <p><b>PCL 5e</b></p> <p>Select a lower resolution on the printer driver. For details about how to change the resolution setting, see the printer driver Help.</p> <p><b>PCL 6</b></p> <p>Select a lower resolution on the printer driver. For details about how to change the resolution setting, see the printer driver Help.</p> <p><b>PostScript 3</b></p> <p>Select a lower resolution on the printer driver. For details about how to change the resolution setting, see the printer driver Help.</p>
"Printing privileges have not been set for this document."	The PDF document you have tried to print has no privileges to print.	Contact the owner of the document.
"Punch has been cancelled."	Punch printing was canceled.	Check the paper orientation, print orientation, and then punch position. Certain settings can produce print results that might not be as expected.
"Receiving data failed."	Data reception was aborted.	Resend the data.
"Selected ppr. size is not supported. Job was cancelled."	Job reset is automatically performed if the specified paper size is incorrect.	Specify the correct paper size, and then print the file again.

Message	Causes	Solutions
"Sending data failed."	The machine received a command to stop transmission from the printer driver.	Check if the computer is working correctly.
"Staple has been cancelled."	Stapling printing was canceled.	Check the paper orientation, paper quantity, print orientation, and staple position. Certain settings can produce print results that might not be as expected.
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. memory."	The hard disk became full after a file was stored.	Delete the files stored in the Document Server or reduce the file size to be sent.
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. number of files."	The maximum file capacity of the Document Server was exceeded.	Delete the files stored in the Document Server.
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. number of pages per file."	The maximum page capacity of the Document Server was exceeded.	Delete some of the files stored in the Document Server or reduce the number of pages that you want to send.
"The selected paper type is not supported. This job has been cancelled."	Job reset is automatically performed if the specified paper type is incorrect.	Specify the correct paper type, and then print the file again.
"You do not have a privilege to use this function. This job has been cancelled."	The entered login user name or login password is not correct.	Check that the user name and password are correct.
"You do not have a privilege to use this function. This job has been cancelled."	The logged in user is not allowed to use the selected function.	For details about how to set permissions, see Security Guide  .


Message	Causes	Solutions
"You do not have a privilege to use this function. This operation has been cancelled."	The logged in user does not have the privileges to register programs or change the paper tray settings.	For details about how to set permissions, see Security Guide  .

### Messages during Direct print from a removable memory device

Message	Causes	Solutions
"99: Error"	This data cannot be printed. The specified data is either corrupt or not supported by the Direct printing function from removable memory devices.	Check that the data is valid. For details about the kinds of data supported by the Direct printing function from removable memory devices, see "Direct Printing from a Removable Memory Device", Print  .

If printing does not start, contact your service representative.



#### Note


- The contents of errors may be printed on the Configuration Page. Check the Configuration Page in conjunction with the error log. For details about how to print the Configuration Page, see "List / Test Print", Print .



## Messages Displayed When Using the Scanner Function

This section describes likely causes of and possible solutions for the error messages that appear on the control panel. If a message not described here appears, act according to the message.




Message	Causes	Solutions
"Authentication with the destination has failed. Check settings. To check the current status, press [Scanned Files Status]."	The entered user name or password was invalid.	<ul style="list-style-type: none"> <li>Check that the user name and password are correct.</li> <li>Check that the ID and password for the destination folder are correct.</li> <li>A password of 128 or more characters may not be recognized.</li> </ul>

Message	Causes	Solutions
"Cannot communicate with PC. Contact the administrator."	WSD (Device) protocol or WSD (Scanner) protocol is disabled.	For details about how to enable or disable the WSD protocol, see Security Guide  .
"Cannot detect original size. Select scan size."	The original placed on the exposure glass is a nonstandard size.	<ul style="list-style-type: none"> <li>Place the original correctly.</li> <li>Specify the scan size.</li> <li>When placing an original directly on the exposure glass, the lifting/lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by 30 degrees or more.</li> </ul>
"Cannot find the specified path. Please check the settings."	The destination computer name or folder name is invalid.	Check whether the computer name and the folder name for the destination are correct.
"Cannot find the specified path. Please check the settings."	An antivirus program or a firewall is preventing the machine connecting to your computer.	<ul style="list-style-type: none"> <li>Antivirus programs and firewalls can prevent client computers from establishing connection with this machine.</li> <li>If you are using anti-virus software, add the program to the exclusion list in the application settings. For details about how to add programs to the exclusion list, see the anti-virus software Help.</li> <li>To prevent a firewall blocking the connection, register the machine's IP address in the firewall's IP address exclusion settings. For details about the procedure for excluding an IP address, see your firewall's Help.</li> </ul>
"Cannot start scanning because communication was failed."	Scan Profile is not set on the client computer.	Set Scan Profile. For details about how to do this, see "Changing a Scan Profile", Scan  .





Message	Causes	Solutions
"Cannot start scanning because communication was failed."	The [Take no action] setting has been selected on the client computer, forcing the client computer to remain inactive when it receives scan data.	Open scanner properties, click the [Events] tab, and then select [Start this program] as the computer's response on receipt of scan data. For details, see your operating system's Help.
"Cannot start scanning. Check the setting(s) on the PC."	The Scan Profile might be incorrectly configured.	Check the Scan Profile configuration.
"Cannot write on the memory storage device. Check the memory storage device and machine settings."	The memory device is faulty, or the file name contains a character that cannot be used.	<ul style="list-style-type: none"> <li>• Check to see if the memory device is defective.</li> <li>• Check the memory device. It might be unformatted, or its format might be incompatible with this machine.</li> <li>• Check the file name set at the time of scanning. For details about the characters that can be used in file names, see "Specifying the File Name", Scan .</li> </ul>
"Cannot write on the memory storage device because remaining free space is insufficient."	The memory device is full and scan data cannot be saved. Even if the memory device appears to have sufficient free space, data might not be saved if the maximum number of files that can be saved is exceeded.	<ul style="list-style-type: none"> <li>• Replace the memory device.</li> <li>• If the document is scanned as single-page or divided multiple pages, data already written to the memory device is saved as is. Replace the memory device, and then press [Retry] to save the remaining data, or press [Cancel] to redo the scan.</li> </ul>
"Cannot write on the memory storage device because the device is write-protected."	The memory device is write-protected.	Unlock the write-protection on the memory device.


Message	Causes	Solutions
"Captured file exceeded max. number of pages per file. Cannot send the scanned data."	The maximum number of pages per file has been exceeded.	Reduce the number of pages in the transmitted file, and then resend the file. For details about the maximum number of pages per file, see "Storage Function", Scan  .
"Connection with LDAP server has failed. Check the server status."	A network error has occurred and connection has failed. Try the operation once more.	<ul style="list-style-type: none"> <li>• Try the operation again. If the message is still shown, the network may be busy.</li> <li>• Check that the correct settings for LDAP server are listed in [Administrator Tools] of [System Settings]. For details about LDAP server, see "Programming the LDAP server", Connecting the Machine/ System Settings .</li> </ul>
"Could not send the data because the PC timed out before it was sent."	A time out occurred when using WSD Scanner. Time outs occur when too much time passes between scanning an original and sending its data. The followings are likely causes of time outs: <ul style="list-style-type: none"> <li>• Too many originals per set.</li> <li>• Misfed originals.</li> <li>• Transmission of other jobs.</li> </ul>	<ul style="list-style-type: none"> <li>• Reduce the number of originals, and then scan again.</li> <li>• Remove any misfed original, and then scan again.</li> <li>• Use Scanner Journal to check there are no jobs awaiting transmission, and then scan again.</li> </ul>
"Entered user code is not correct. Please re-enter."	You have entered an incorrect user code.	Check the authentication settings, and then enter a correct user code.




Message	Causes	Solutions
"Exceeded max. E-mail size. Sending E-mail has been cancelled. Check [Max. E-mail Size] in Scanner Features."	The file size per page has reached the maximum e-mail size specified in [Scanner Features].	Change the facsimile features settings as follows: <ul style="list-style-type: none"> <li>• Increase the e-mail size limit in [Max. E-mail Size].</li> <li>• Change the [Divide &amp; Send E-mail] setting to [Yes (per Page)] or [Yes (per Max. Size)]. For details about these settings, see "Send Settings", Scan .</li> </ul>
"Exceeded max. No. of results to display. Max.: n" (A figure is placed at n.)	Search results have exceeded the max. displayable number.	Search again after changing the search conditions.
"Exceeded max. data capacity. Check scanning resolution, then press Start key again."	The scanned data exceeded maximum data capacity.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. For details about the settings for scan function, see "Relationship between Resolution and Scan Size", Scan  .
"Exceeded max. data capacity. Check the scanning resolution, then reset original(s)."	The scanned original exceeded maximum data capacity.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. For details about the settings for scan function, see "Relationship between Resolution and Scan Size", Scan  .
"Exceeded max. number of alphanumeric characters for the path."	The maximum number of specifiable alphanumeric characters in a path has been exceeded.	The maximum number of characters which can be entered for the path is 256. Check the number of characters you entered, and then enter the path again.


Message	Causes	Solutions
"Exceeded max. number of alphanumeric characters."	The maximum enterable number of alphanumeric characters has been exceeded.	Check the maximum number of characters which can be entered, and then enter it again. For details about the maximum enterable number of characters, see "Values of Various Set Items for Transmission/Storage / Delivery Function", Scan  .
"Exceeded max. number of files which can be sent at the same time. Reduce the number of the selected files."	The number of files exceeded the maximum number possible.	Reduce the number of files, and then send them again.
"Exceeded max. number of files which can be used in Document Server at the same time."	The maximum number of files that can be stored in the Document Server has been exceeded.	Check the files stored by the other functions, and then delete unneeded files. For details about how to delete files, see "Deleting Stored Documents", Copy/ Document Server  .
"Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?"	The file being stored has exceeded the maximum number of pages for one file.	Specify whether to store the data or not. Scan the pages that were not scanned, and then store them as a new file. For details about storing files, see "Storing and Saving the Scanned Documents", Scan  .
"Exceeded max. number of standby files. Try again after the current file is sent."	The maximum number of standby files was exceeded.	There are 100 files waiting in the sending queue for e-mail, Scan to Folder, or delivery functions. Wait until files have been sent.
"Exceeded max. number of stored files. Cannot send the scanned data as capturing files is unavailable."	Too many files are waiting to be delivered.	Try again after they have been delivered.
"Exceeded max. page capacity per file. Press [Send] to send the scanned data, or press [Cancel] to delete."	The number of scanned pages exceeded the maximum page capacity.	Select whether to send the data that has already been scanned.


Message	Causes	Solutions
"Exceeded max. page capacity per file. Press [Write] to write the scanned data to the memory storage device, or press [Cancel] to delete."	The scan could not be completed because the maximum number of pages that can be scanned by this machine was exceeded during writing to the memory device.	Reduce the number of documents to be written to the memory device, and then try again.
"Exceeded maximum number of file to store. Delete all unnecessary files."	Too many files are waiting to be delivered.	Try again after they have been delivered.
"Exceeded time limit for LDAP server search. Check the server status."	A network error has occurred and connection has failed.	<ul style="list-style-type: none"> <li>• Try the operation again. If the message is still shown, the network may be busy.</li> <li>• Check that the correct settings for LDAP server are listed in [Administrator Tools] of [System Settings]. For details about LDAP server, see "Programming the LDAP server", Connecting the Machine/ System Settings .</li> </ul>
"LDAP server authentication has failed. Check the settings."	The user name and password differ from those set for LDAP Authentication.	For details about LDAP Authentication, see Security Guide  .
"Memory is full. Cannot scan. The scanned data will be deleted."	Because of insufficient hard disk space, the first page could not be scanned.	<p>Try one of the following measures:</p> <ul style="list-style-type: none"> <li>• Wait for a while, and then retry the scan operation.</li> <li>• Reduce the scan area or scanning resolution. For details about changing scan area and scanning resolution, see "Scan Settings" of Various Scan Settings, Scan .</li> <li>• Delete unneeded stored files. For details about how to delete stored files, see "Deleting a Stored File", Scan .</li> </ul>

Message	Causes	Solutions
"Memory is full. Do you want to store scanned file?"	Because there is not enough free hard disk space in the machine for storing in the Document Server, only some of the pages could be scanned.	Specify whether to use the data or not.
"Memory is full. Press [Write] to write the current scanned data to the memory storage device, or press [Cancel] to delete."	The scan could not be completed because there was insufficient hard disk memory at the time of saving to the memory device.	Select whether or not to save the scanned document to the memory device.
"Memory is full. Scanning has been cancelled. Press [Send] to send the scanned data, or press [Cancel] to delete."	Because there is not enough free hard disk space in the machine for delivering or sending by e-mail while storing in the Document Server, only some of the pages could be scanned.	Specify whether to use the data or not.
"Memory storage device not detected. Insert the device."	There is no memory device inserted.	Insert a memory device, or check to see whether the memory device is properly inserted in the media slot.
"No paper. Load paper of one of the following sizes."	No paper is set in the specified paper tray.	Load paper of the sizes listed in the message. For details about loading paper, see "Loading Paper", Paper Specifications and Adding Paper  .


Message	Causes	Solutions
"Original(s) is being scanned for a different function."	A function of the machine other than the Scanner function is being used such as the Copier function.	Cancel the job that is being processed. For example, press [Exit], and then press the [Home] key. Next, press the [Copier] icon on the [Home] screen, and then press the [Stop] key. When the message "The Stop key has been pressed, copying, and also other print jobs that were being processed and which could be stopped, have been suspended. To continue copying and printing press [Continue], to cancel copying press [Cancel Copying]. To delete other suspended jobs press [Job List]." appears, press [Cancel Copying].
"Output buffer is full. Sending the data has been cancelled. Please try again later."	Too many jobs are in standby state, and sending was canceled.	Retry sending after sending jobs in standby state completes.
"SMTP authentication E-mail address and Administrator E-mail address mismatch."	The SMTP authentication e-mail address and the administrator's e-mail address do not match.	For details about how to set SMTP authentication, see "File Transfer", Connecting the Machine/ System Settings  .
"Scanner journal is full. Please check Scanner Features."	"Print & Delete Scanner Journal" in [Scanner Features] is set to [Do not Print: Disable Send], and Scanner Journal is full.	Print or delete Scanner Journal. For details about Scanner Features, see "General Settings", Scan  .
"Selected file is currently in use. File name cannot be changed."	You cannot change the name of a file whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the file name.






Message	Causes	Solutions
"Selected file is currently in use. Password cannot be changed."	You cannot change the password of a file whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the password.
"Selected file is currently in use. User name cannot be changed."	You cannot change the sender's name whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the user name.
"Sending the data has failed. The data will be resent later."	A network error has occurred and a file was not sent correctly.	Wait until sending is retried automatically after the preset interval. If sending fails again, contact your administrator.
"Some invalid destination(s) contained. Do you want to select only valid destination(s)?"	The specified group contains e-mail destinations and Scan to Folder destinations, either of which are incompatible with the specified transmission method.	In the message that appears at each transmission, press [Select].
"Some of selected files are currently in use. They could not be deleted."	You cannot delete a file which is waiting to be transmitted ("Waiting..." status displayed) or whose information is being changed with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then delete the file.
"Some page(s) are near blank. To cancel, press the Stop key."	The first page of the document is almost blank.	The original's blank side might have been scanned. Be sure to place your originals correctly.
"The entered file name contains invalid character(s). Enter the file name again using any of the following 1 byte characters. " 0 to 9 ", " A to Z ", " a to z ", " . - _ ""	The file name contains a character that cannot be used.	Check the file name set at the time of scanning. For details about characters that can be used in file names, see "Specifying the File Name", Scan  .





Message	Causes	Solutions
"The entered file name contains invalid character(s). Enter the file name again using any of the following 1 byte characters. " 0 to 9 ", " A to Z ", " a to z ", " . - _ ""	The file name contains a character that cannot be used.	Check the file name specified at the time of scanning. The file name specified in the Sending Scan Files to Folders function cannot contain the following characters: \ / : * ? " < >   The file name cannot start or end with a period ".".
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the authority to do so.	To check your access permission for stored documents, or to delete a document you do not have permission to delete, see Security Guide  .
"Transmission has failed. Insufficient memory in the destination hard disk. To check the current status, press [Scanned Files Status]."	Transmission has failed. There was not enough free space on the hard disk of the SMTP server, FTP server, or client computer at the destination.	Allocate sufficient space.
"Transmission has failed. To check the current status, press [Scanned Files Status]."	While a file was being sent, a network error occurred and the file could not be sent correctly.	If the same message appears again after scanning again, the cause could be a mixed network, or else network settings were changed during WSD scanner transmission. For details about network error, contact your administrator.

Message	Causes	Solutions
"Updating the destination list has failed. Try again?"	A network error has occurred.	<ul style="list-style-type: none"> <li>• Check whether the server is connected.</li> <li>• Antivirus programs and firewalls can prevent client computers from establishing connection with this machine.</li> <li>• If you are using anti-virus software, add the program to the exclusion list in the application settings. For details about how to add programs to the exclusion list, see the anti-virus software Help.</li> <li>• To prevent a firewall blocking the connection, register the machine's IP address in the firewall's IP address exclusion settings. For details about the procedure for excluding an IP address, see your firewall's Help.</li> </ul>
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	A specified destination or sender's name was cleared when the destination list in the delivery server was updated.	Specify the destination or sender's name again.
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated from the network using Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	For details about how to set permissions, see Security Guide  .



Message	Causes	Solutions
"Exceeded max. data capacity." "Check the resolution and the ratio and then press the Start key again."	The data being scanned is too large for the scale ratio specified in [Specify Size].	Reduce the resolution or [Specify Size] value, and then try to scan the original again.
"The size of the scanned data is too small." "Check the resolution and the ratio and then press the Start key again."	The data being scanned is too small for the scale ratio specified in [Specify Size].	Specify a higher resolution or a large size in [Specify Size], and then try to scan the original again.
"Not all of the image will be scanned."	If the scaling factor specified in [Specify Reproduction Ratio] is too large, part of the image may be lost.	Reduce the scaling factor in [Specify Reproduction Ratio], and then try to scan the original again.  If displaying the entire image is not necessary, press the [Start] key to start scanning with the current scaling factor.
"Not all of the image will be scanned."	Using [Specify Reproduction Ratio] to scale down a large document may cause part of the image to be lost.	Specify a large size in [Specify Size], and then try to scan the original again.  If displaying the entire image is not necessary, press the [Start] key to start scanning with the current scaling factor.
"Check original's orientation."	Documents may sometimes not be scanned depending on a combination of items such as the specified scaling factor and document size.	Change the orientation of the original, and then try to scan the original again.
"The PDF Digital Signature's device certificate has expired. The file cannot be sent."	The device certificate (PDF with digital signature) has expired.	A new device certificate (PDF with digital signature) must be installed. For details about how to install a device certificate (PDF with digital signature), see Security Guide  .



Message	Causes	Solutions
"XXX cannot be YYY because the PDF Digital Signature's device certificate is not currently valid." (XXX and YYY indicate the user action.)	The device certificate (PDF with digital signature) has expired.	A new device certificate (PDF with digital signature) must be installed. For details about how to install a device certificate (PDF with digital signature), see Security Guide  .
"The PDF Digital Signature's device certificate is invalid. The file cannot be sent."	There is no device certificate (PDF with digital signature) or the certificate is invalid.	A new device certificate (PDF with digital signature) must be installed. For details about how to install a device certificate (PDF with digital signature), see Security Guide  .
"XXX cannot be YYY because there is a problem with the PDF Digital Signature's device certificate. Check the device certificate." (XXX and YYY indicate the user action.)	There is no device certificate (PDF with digital signature) or the certificate is invalid.	A new device certificate (PDF with digital signature) must be installed. For details about how to install a device certificate (PDF with digital signature), see Security Guide  .
"XXX cannot be YYY because there is a problem with the device certificate used for the S/MIME signature. Check the device certificate." (XXX and YYY indicate the user action.)	There is no device certificate (S/MIME) or the certificate is invalid.	A new device certificate (S/MIME) must be installed. For details about how to install a device certificate (S/MIME), see Security Guide  .
"XXX cannot be YYY because the device certificate used for the S/MIME signature is not currently valid." (XXX and YYY indicate the user action.)	The device certificate (S/MIME) has expired.	A new device certificate (S/MIME) must be installed. For details about how to install a device certificate (S/MIME), see Security Guide  .


Message	Causes	Solutions
"Transmission cannot be performed because the certificate used for the S/MIME signature is not currently valid."	The device certificate (S/MIME) has expired.	A new device certificate (S/MIME) must be installed. For details about how to install a device certificate (S/MIME), see Security Guide  .
"The destination cannot be selected because its certificate is not currently valid."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .
"The group destination cannot be selected because it contains a destination with a certificate that is not currently valid."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .
"Transmission cannot be performed because the certificate for encryption is not currently valid."	The user certificate (destination certificate) has expired.	A new user certificate must be installed. For details about the user certificate (destination certificate), see Security Guide  .


# When Messages Are Displayed on Your Computer Screen



## Messages Displayed When Using the Scanner Function

This section describes likely causes of and possible solutions for the main error messages displayed on the client computer when using the TWAIN driver. If a message not described here appears, act according to the message.

Message	Causes	Solutions
"Any of Login User Name, Login Password or Driver Encryption Key is incorrect."	The entered login user name, password, or driver encryption key was invalid.	Check your login user name, login password, or driver encryption key, and then enter them correctly. For details about login user name, login password, and driver encryption key, see Security Guide  .
"Authentication succeeded. However, the access privileges for scanner function has been denied."	The logged in user name does not have permission for scanner function.	For details about how to set permissions, see Security Guide  .
"Call Service" "Please call your service representative."	An unrecoverable error has occurred in the machine.	Contact your service representative.
"Cannot add any more scanning mode."	The maximum number of registerable scan modes has been exceeded.	The maximum number of modes that can be stored is 100. Delete unneeded modes.
"Cannot connect to the scanner. Check the network Access Mask settings in User Tools."	An access mask is set.	For details about an access mask, contact your administrator.


Message	Causes	Solutions
"Cannot detect the paper size of the original. Specify the scanning size."	The set original was misaligned.	<ul style="list-style-type: none"> <li>Place the original correctly.</li> <li>Specify the scan size.</li> <li>When placing an original directly on the exposure glass, the lifting/lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by 30 degrees or more.</li> </ul>
"Cannot find "XXX" scanner used for the previous scan. "YYY" will be used instead." ( "XXX" and "YYY" indicate scanner names.)	The main power switch of the previously used scanner is not set to "On".	Check whether the main power switch of the scanner used for the previous scan is turned on.
"Cannot find "XXX" scanner used for the previous scan. "YYY" will be used instead." ( "XXX" and "YYY" indicate scanner names.)	The machine is not connected to the network correctly.	<ul style="list-style-type: none"> <li>Check that the previously used scanner is connected to the network correctly.</li> <li>Cancel the personal firewall of the client computer. For details about firewall, see Windows Help.</li> <li>Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. For details about how to check this, see "Remote Maintenance Using telnet", Connecting the Machine/ System Settings .</li> <li>Select the scanner used for the previous scan.</li> </ul>
"Cannot specify any more scanning area."	The maximum number of registerable scan areas has been exceeded.	The maximum number of scanning areas that can be stored is 100. Delete unneeded scanning areas.

Message	Causes	Solutions
"Clear Misfeed(s) in ADF."	A paper misfeed has occurred inside the ADF.	<ul style="list-style-type: none"> <li>Remove jammed originals, and then insert them again. For details about jammed paper, see "Removing Jammed Paper", Troubleshooting .</li> <li>When a misfeed occurs, replace the jammed originals.</li> <li>Check whether the originals are suitable to be scanned by the machine.</li> </ul>
"Communication error has occurred on the network."	A communication error has occurred on the network.	Check whether the client computer can use the TCP/IP protocol.
"Error has occurred in the scanner driver."	An error has occurred in the driver.	<ul style="list-style-type: none"> <li>Check whether the network cable is connected correctly to the client computer.</li> <li>Check whether the Ethernet board of the client computer is recognized correctly by Windows.</li> <li>Check whether the client computer can use the TCP/IP protocol.</li> </ul>
"Error has occurred in the scanner."	The application-specified scan conditions have exceeded the setting range of the machine.	Check whether the scanning settings made with the application exceed the setting range of the machine.
"Fatal error has occurred in the scanner."	An unrecoverable error has occurred on the machine.	An unrecoverable error has occurred in the machine. Contact your service representative.
"Insufficient memory. Close all other applications, then restart scanning."	Memory is insufficient.	<ul style="list-style-type: none"> <li>Close all the unnecessary applications running on the client computer.</li> <li>Uninstall the TWAIN driver, and then reinstall it after restarting the computer.</li> </ul>

Message	Causes	Solutions
"Insufficient memory. Reduce the scanning area."	Scanner memory is insufficient.	<ul style="list-style-type: none"> <li>• Reset the scan size.</li> <li>• Lower the resolution.</li> <li>• Set with no compression. For details about the settings, see TWAIN driver Help.</li> </ul> <p>The problem may be due to the following cause:</p> <ul style="list-style-type: none"> <li>• Scanning cannot be performed if large values are set for brightness when using halftone or high resolution. For details about the relationship between scan settings, see "Relationship between Resolution and Scan Size", Scan .</li> <li>• If a misfeed occurs, you might not scan an original. Remove the misfeed, and then scan the original again.</li> </ul>
"Invalid Winsock version. Please use version 1.1 or higher."	You are using an invalid version of Winsock.	Install the operating system of the computer or copy Winsock from the operating system CD-ROM.
"No User Code is registered. Consult your system administrator."	Access is restricted with user codes.	For details about user code authentication, see Security Guide  .
"No response from the scanner."	The machine or client computer is not connected to the network correctly.	<ul style="list-style-type: none"> <li>• Check whether the machine or client computer is connected to the network correctly.</li> <li>• Disable the client computer's own firewall. For details about firewall, see Windows Help.</li> </ul>
"No response from the scanner."	The network is crowded.	Wait for a while, and then try to reconnect.

Message	Causes	Solutions
"Scanner is in use for other function. Please wait."	A function of the machine other than the Scanner function is being used such as the Copier function.	<ul style="list-style-type: none"> <li>• Wait for a while, and then reconnect.</li> <li>• Cancel the job that is being processed. For example, press [Exit], and then press the [Home] key. Next, press the [Copier] icon on the [Home] screen, and then press the [Stop] key. When the message "The Stop key has been pressed, copying, and also other print jobs that were being processed and which could be stopped, have been suspended. To continue copying and printing press [Continue], to cancel copying press [Cancel Copying]. To delete other suspended jobs press [Job List]." appears, press [Cancel Copying].</li> </ul>
"Scanner is not available on the specified device."	The TWAIN scanner function cannot be used on this machine.	Contact your service representative.
"Scanner is not available. Check the scanner connection status."	The machine's main power switch is off.	Turn on the main power switch.



Message	Causes	Solutions
"Scanner is not available. Check the scanner connection status."	The machine is not connected to the network correctly.	<ul style="list-style-type: none"> <li>• Check whether the machine is connected to the network correctly.</li> <li>• Deselect the personal firewall function of the client computer. For details about firewall, see Windows Help.</li> <li>• Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. For details about how to check this, see "Remote Maintenance Using telnet", Connecting the Machine/ System Settings .</li> </ul>
"Scanner is not available. Check the scanner connection status."	Network communication is not available because the machine's IP address could not be obtained from the host name. If only "IPv6" is set to [Active], the IPv6 address might not be obtained.	<ul style="list-style-type: none"> <li>• Check whether the machine's host name is specified in the Network Connection Tool. For the WIA driver, check the [Network Connection] tab in the properties.</li> <li>• Use Web Image Monitor to set "LLMNR" of "IPv6" to [Active].</li> <li>• In Windows XP, IPv6 address cannot be obtained from the host name. Specify the machine's IPv6 address in the Network Connection Tool.</li> </ul>
"Scanner is not ready. Check the scanner and the options."	The ADF cover is open.	Check whether the ADF cover is closed.
"The name is already in use. Check the registered names."	You tried to register a name that is already in use.	Use another name.



# 11. Appendix

This chapter describes the trademarks.

## Trademarks

Adobe, Acrobat, PostScript, PostScript 3, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

Microsoft, Windows, Windows Server, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The SD is a trademark of SD-3C, LLC.

The proper names of the Windows operating systems are as follows:

- The product names of Windows XP are as follows:
  - Microsoft® Windows® XP Professional
  - Microsoft® Windows® XP Home Edition
  - Microsoft® Windows® XP Media Center Edition
  - Microsoft® Windows® XP Tablet PC Edition
- The product names of Windows Vista are as follows:
  - Microsoft® Windows Vista® Ultimate
  - Microsoft® Windows Vista® Business
  - Microsoft® Windows Vista® Home Premium
  - Microsoft® Windows Vista® Home Basic
  - Microsoft® Windows Vista® Enterprise
- The product names of Windows 7 are as follows:
  - Microsoft® Windows® 7 Home Premium
  - Microsoft® Windows® 7 Professional
  - Microsoft® Windows® 7 Ultimate
  - Microsoft® Windows® 7 Enterprise
- The product names of Windows Server 2003 are as follows:
  - Microsoft® Windows Server® 2003 Standard Edition
  - Microsoft® Windows Server® 2003 Enterprise Edition
- The product names of Windows Server 2003 R2 are as follows:
  - Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

- The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Standard

Microsoft® Windows Server® 2008 Enterprise

- The product names of Windows Server 2008 R2 are as follows:

Microsoft® Windows Server® 2008 R2 Standard

Microsoft® Windows Server® 2008 R2 Enterprise

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

# INDEX

2 Sided Print.....9

## A

A3/11 × 17 tray unit.....31, 125  
Address book 11, 77, 78, 102, 104, 105, 108, 109  
ADF.....7, 27, 49  
Authentication screen.....47  
Auto Document Feeder.....7, 27, 49  
Auto Reduce/Enlarge.....14, 52

## B

Beep alert.....155  
Booklet.....14  
Booklet Finisher SR4070.....31  
Bypass tray.....28, 61, 128

## C

Canceling a transmission.....82, 83  
Check Status key.....33, 153  
Check Status screen.....153  
Checking a stored file.....112  
Clear key.....33  
Combine.....9, 14, 56  
Communicating indicator.....34  
Confidential File indicator.....34  
Connect Copy.....17  
Control panel.....28, 32  
Converting documents to electronic formats.....10  
Copier.....51  
Copy connector.....30  
Copy Data Security unit.....26  
Copy tray.....27, 31  
Counter key.....33  
Creating a shared folder.....100  
Custom size paper.....61, 131

## D

Data In indicator.....34  
Display panel.....32  
Document Server.....10, 16, 74, 85, 86, 115, 117  
Double Parallel Fold.....72  
Duplex.....14, 54  
Duplex Copy.....9, 54

## E

E-mail address.....108, 109, 110  
E-mail destination.....108, 109, 110  
Energy Saver key.....33  
Enter key.....33  
Error message. 163, 168, 184, 185, 190, 199, 214  
Exposure glass.....27, 49  
Extender.....28  
Extension unit.....30  
External options.....30

## F

Fax destination.....77, 78  
Fax Received indicator.....34  
File type.....113  
Finisher SR4060.....30  
Finisher SR4080.....31  
Finishing.....62  
Fold.....66  
Folder destination.....102, 104, 105, 106  
Front cover.....28  
Function keys.....32

## G

Gate Fold.....73

## H

Half Fold.....68  
Hold Print.....15, 94  
Home key.....32  
Home screen.....13, 35, 36  
How to Read the Manuals.....5

## I

Icon.....35, 36, 37  
Immediate Transmission.....80  
Indicator.....151  
Information screen.....9  
Installing the printer driver.....89  
Internet Fax.....20  
Interposer.....30  
Interrupt key.....33  
IP-Fax.....20

---

## J

Journal.....88

## L

LAN-Fax.....9, 18  
Large capacity tray.....7, 30, 133  
LCT.....7, 30, 133  
Letter Fold-in.....71  
Letter Fold-out.....69  
Loading paper.....123, 125, 126, 128, 133  
Loading tab stock.....127  
Locked Print.....15, 92  
Logging in to the machine.....47  
Logging out the machine.....48  
Login key.....33  
Login/Logout key.....33  
Logout key.....33

## M

Magazine.....14  
Mailbox.....31  
Main power indicator.....33  
Main power switch.....27, 45  
Media access lamp.....34  
Media slots.....34  
Memory.....168, 184  
Memory Transmission.....75  
Message. 156, 163, 168, 184, 185, 190, 199, 214  
Model-specific information.....6  
Multi-Folding unit.....30

## N

Names of major features.....7  
Number keys.....33

## O

OHP transparency.....131  
One-Sided Combine.....57  
Options.....30  
Output jogger.....31

## P

Paper capacity.....135  
Paper guide.....28

Paper size.....130, 135  
Paper thickness.....135  
Paper tray.....28  
Paper type.....135  
Paper weight.....135  
Paperless Fax.....9, 18  
Placing originals.....49  
Preventing information leakage.....24  
Printer.....91  
Printer Bypass Paper Size.....130, 131  
Printer driver properties.....90  
Problem.....156  
Program.....12, 40, 42  
Program as Defaults.....12  
Program key.....32  
Punch.....64

## Q

Quick install.....89

## R

Region A.....6  
Region B.....6  
Registering destinations.....11  
Remote Fax.....22  
Reset key.....32  
Running out of toner.....148

## S

Sample Copy key.....33  
Sample Print.....15  
Saving paper.....9  
Scan Settings.....114  
Scan to E-mail.....23, 107  
Scan to Folder.....23, 99  
Security functions.....24  
Send Later.....84  
Sending stored documents.....86  
Shared folder.....100  
Shortcut icon.....12, 35, 36, 37  
Simple Screen key.....33  
SMB folder.....102, 104, 105  
Standard printing.....91  
Staple.....62

---

Start key.....	33
Status message.....	184
Stop key.....	33
Stored Print.....	15, 96, 97
Storing a document.....	85
Storing data.....	74
Storing received documents.....	18
Storing scan files.....	111
Symbols.....	5

## T

---

Tab stock.....	127
Thick paper.....	131, 146
Toner.....	147, 148, 149
Trademark.....	221
Tray 1.....	123
Tray 2.....	126
Tray 3.....	126
Turning off the power.....	45
Turning on the power.....	45
Two-Sided Combine.....	58

## U

---

Unauthorized copy prevention.....	26
Used toner.....	149
User code authentication.....	47
User Tools key.....	33
User Tools/Counter key.....	33

## V

---

Ventilation holes.....	28, 29
------------------------	--------

## W

---

Web Image Monitor.....	25, 119, 121
------------------------	--------------

## Z

---

Z-fold.....	66
-------------	----

---

MEMO



---

MEMO

---

MEMO







# Operating Instructions

## Driver Installation Guide



# TABLE OF CONTENTS

---

## 1. Introduction

---

Start Installer.....	3
Software and Utilities Included on the CD-ROM.....	5
Printer Drivers.....	5
TWAIN Driver.....	7
LAN-Fax Driver.....	8
Font Manager.....	9
For Mac OS X Users.....	10

## 2. Installing the Printer Driver

---

Confirming the Connection Method.....	11
Network Connection.....	11
Local Connection.....	12
Quick Install.....	13
Installing the Printer Driver for a Network Connection.....	14
Installing the Printer Driver for the Selected Port.....	14
Using as a Network Printer.....	22
Installing the Printer Driver for a Local Connection.....	27
USB Connection.....	27
Parallel Connection.....	31
Bluetooth Connection.....	31
Configuring Option Settings for the Printer.....	35
Conditions for Bidirectional Communication.....	35
If Bidirectional Communication is Disabled.....	36
Installing Font Manager.....	37
Using Adobe PageMaker Version 6.0, 6.5, or 7.0.....	38

## 3. Installing the Scanner Driver

---

Installing the TWAIN Driver.....	39
Installing a TWAIN-Compliant Application on the Same Client Computer.....	39

## 4. Installing the Facsimile Driver

---

Installing the LAN-Fax Driver.....	41
Specifying the Same Port as the Printer Driver.....	41
Specifying the Port When Installing the LAN-FAX Driver.....	42
Enabling the Function to Prevent Transmission to the Wrong Destination.....	44

---

Editing the Configuration File.....	44
Installing the LAN-FAX driver in "Add Printer".....	45
Setting LAN-Fax Driver Properties.....	47
Setting Print Properties.....	47
Configuring Option Settings for the Facsimile.....	48

## **5. Troubleshooting**

---

Messages Displayed When Installing the Printer Driver.....	49
If USB Connection Fails.....	51

## **6. Installing the Printer Driver Under Mac OS X**

---

Installing the PPD Files.....	53
Registering the Printer.....	54
USB Connection.....	54
Network Connection.....	55
Configuring Option Settings for the Printer Under Mac OS X.....	57

## **7. Appendix**

---

Updating or Deleting the Driver.....	59
Updating the Driver.....	59
Deleting the Driver.....	60
Trademarks.....	63
<b>INDEX</b> .....	65



# 1. Introduction

This chapter explains the software included on the supplied CD-ROM.

## Start Installer

To connect this machine to a client computer and use its printer, scanner, and fax functions, the software included on the provided CD-ROM must be installed on the client computer.

The installer starts automatically when you insert the provided CD-ROM into the CD-ROM drive of a client computer running under Windows or Windows Server. You can then install the various software included on the CD-ROM.

The contents (display item) of the installer are as follows:

### Quick Install

Install the PCL 6 printer driver, and configure the Standard TCP/IP port to establish a connection with a network printer. Quick Install is also available when the machine is connected with a client computer via parallel connection.

For details, see p.13 "Quick Install".

### PCL Printer Drivers

Installs the PCL 6 and/or PCL 5e printer drivers.

For details about installing the driver, see p.14 "Installing the Printer Driver for a Network Connection" or p.27 "Installing the Printer Driver for a Local Connection".

### PostScript 3 Printer Driver

Install the PostScript 3 printer driver.

For details about installing the driver, see p.14 "Installing the Printer Driver for a Network Connection" or p.27 "Installing the Printer Driver for a Local Connection".

### LAN-Fax Driver

This software enables you to fax documents directly from your computer. Address Book and LAN-Fax Cover Sheet Editor will also be installed.

For details about installing the driver, see p.41 "Installing the LAN-Fax Driver".

### TWAIN Driver

This software enables you to utilize image data from other TWAIN compliant applications.

For details about installing the driver, see p.39 "Installing the TWAIN Driver".

### Font Manager

This software enables you to use screen fonts.

For details about installing the software, see p.37 "Installing Font Manager".

### Select Language

Change the interface language.

### Browse This CD-ROM

Browse the contents of this CD-ROM.

### Exit

Quit Installer.

#### ↓ Note

- Manage Printers permission is required to install the driver. Log on as an Administrators group member.
- Auto Run might not work automatically with certain OS settings. If this is the case, double-click "SETUP.EXE", located on the CD-ROM root directory, or click [Run SETUP.EXE] in the [AutoPlay] dialog box.
- If you want to cancel Auto Run, hold down the left [Shift] key while inserting the CD-ROM. Keep the [Shift] key held down until the computer stops reading the CD-ROM.

# Software and Utilities Included on the CD-ROM

This section explains the software and utilities CD-ROM provided with this machine.

## ↓ Note

- For the latest information on the corresponding operating system, see "Readme.txt" file in the DRIVERS folder.
- For the latest information on Windows terminal service, Citrix Presentation Server, and Citrix Xen App, see the manufacturer's Web site.

## Printer Drivers

Printing requires installation of a printer driver for your operating system. The following drivers are included on the CD-ROM.

Operating System	Printer Language		
	PCL 5e	PCL 6	PostScript 3
Windows XP <sup>*1</sup> <sup>*6</sup>	OK	OK	OK
Windows Vista <sup>*2</sup> <sup>*6</sup>	OK	OK	OK
Windows 7 <sup>*3</sup> <sup>*6</sup>	OK	OK	OK
Windows Server 2003 <sup>*4</sup> <sup>*6</sup>	OK	OK	OK
Windows Server 2008 <sup>*5</sup> <sup>*6</sup>	OK	OK	OK
Mac OS X <sup>*7</sup>	—	—	OK

\*1 Microsoft Windows XP Professional Edition/Microsoft Windows XP Home Edition/Microsoft Windows XP Media Center Edition/Microsoft Windows XP Tablet PC Edition

\*2 Microsoft Windows Vista Ultimate/Microsoft Windows Vista Enterprise/Microsoft Windows Vista Business/Microsoft Windows Vista Home Premium/Microsoft Windows Vista Home Basic

\*3 Microsoft Windows 7 Home Premium/Microsoft Windows 7 Professional/Microsoft Windows 7 Ultimate/Microsoft Windows 7 Enterprise

\*4 Microsoft Windows Server 2003 Standard Edition/Microsoft Windows Server 2003 Enterprise Edition/Microsoft Windows Server 2003 R2 Standard Edition/Microsoft Windows Server 2003 R2 Enterprise Edition

\*5 Microsoft Windows Server 2008 Standard/Microsoft Windows Server 2008 Enterprise/Microsoft Windows Server 2008 R2 Standard/Microsoft Windows Server 2008 R2 Enterprise

\*6 Supports both versions (32/64 bit)

\*7 Mac OS X 10.2 or later (native mode). Any versions higher than Mac OS X 10.6 are not supported.

## PCL printer drivers

Two kinds of PCL printer driver (PCL 5e and PCL 6) are included. These drivers allow your computer to communicate with this machine via a printer language.

## Adobe® PostScript® printer driver and PPD files

Adobe PostScript printer driver allows the computer to communicate with the printer using a printer language. PPD files allow the printer driver to enable specific printer functions.

Depending on the machine you are using, PostScript 3 unit must be installed.

## PPD files

PPD files allow the printer driver to enable specific printer functions.

### Note

- Some applications may require installation of the PCL 5e printer driver. In this case, you can install PCL 5e without having to install PCL 6.
- For details about installing the driver, see p.14 "Installing the Printer Driver for a Network Connection" or p.27 "Installing the Printer Driver for a Local Connection".

## Supported languages

The languages supported in each printer driver are as follow:

Supported languages	Printer Language			
	PCL 5e *1	PCL 6 *2	PostScript 3 *2	PPD (Mac OS X)
English	○	○	○	○
German	○	○	○	○
French	○	○	○	○
Italian	○	○	○	○
Spanish	○	○	○	○
Dutch	○	○	○	○
Swedish	○	○	○	○
Norwegian	○	○	○	○
Danish	○	○	○	○
Finnish	○	○	△	△

Supported languages	Printer Language			
	PCL 5e <sup>*1</sup>	PCL 6 <sup>*2</sup>	PostScript 3 <sup>*2</sup>	PPD (Mac OS X)
Hungarian	○	○	△	△
Czech	○	○	△	△
Polish	○	○	△	△
Portuguese	○	○	△	△
Russian	○	○	△	△
Catalan	○	○	△	△
Turkish	○	○	△	△
Brazilian Portuguese	△	○	△	△
Greek	△	○	△	△

○: Supported

△: Supported, but the printer language is displayed in English

\*1 The PCL 5e printer driver does not support Brazilian Portuguese and Greek. Use the English version of the driver.

\*2 The PCL 6 and PostScript 3 printer drivers use the same interface language as the one specified by your operating system. However, the PostScript 3 printer will be displayed in English if your operating system uses one of the following languages: Finnish, Hungarian, Czech, Polish, Portuguese, Russian, Catalan, Turkish, Brazilian Portuguese, Greek.

## TWAIN Driver

This driver is required to scan an original using a scanner. To use the machine as a network TWAIN scanner, this driver must be installed.

### File path

The driver is included in the following folder on the CD-ROM:

`\X86\DRIVERS\TWAIN`

### System requirements

- Hardware  
PC/AT-compatible machines that support the following operating system properly
- Operating system <sup>\*1</sup>

Windows XP/Vista/7

Windows Server 2003/2003 R2/2008/2008 R2

\* 1 Operates in 32-bit compatibility mode on 64-bit operating systems

- Display resolution  
800 × 600 pixels, 256 colors or higher

### Supported languages

The TWAIN driver uses the same interface language as the one specified by your operating system.

#### ↓ Note

- For details about installing the driver, see p.39 "Installing the TWAIN Driver".

---

## LAN-Fax Driver

---

This driver is required to use LAN-Fax functions.

### File path

The driver is included in the following folder on the CD-ROM:

- 32-bit driver  
`\X86\DRIVERS\LAN-FAX\XP_VISTA`
- 64-bit driver  
`\X64\DRIVERS\LAN-FAX\X64`

### System requirements

- Hardware  
PC/AT-compatible machines that support the following operating system properly
- Operating systems  
Windows XP/Vista/7  
Windows Server 2003/2003 R2/2008/2008 R2
- Display  
VGA 640 × 480 pixels or more

### Supported languages

The interface language is supported in the language specified when installing driver.

#### ↓ Note

- For details about installing the driver, see p.41 "Installing the LAN-Fax Driver".

---

## Font Manager

---

For installing new screen fonts, or organizing and managing fonts already in the system. For details about Font Manager, see the manual on the CD-ROM.

### File path

The software is included in the following folder on the CD-ROM:

`\FONTMAN\DISK1`

#### Note

- For details about installing the software, see p.37 "Installing Font Manager".

## For Mac OS X Users

1

If you are using Mac OS X, the following limitations apply to each function:

- When using the scanner function, the TWAIN driver cannot be used.
- When using the fax function, the LAN-Fax driver cannot be used.
- When using the printer function, use the printer driver for Mac OS X.  
For details, see p.53 "Installing the Printer Driver Under Mac OS X".



# 2. Installing the Printer Driver

This chapter explains how to install and configure the printer drivers for use on the Windows operating system.

## Confirming the Connection Method

This machine supports network and local connection.

Before installing the printer driver, check how the machine is connected. Follow the driver installation procedure that is appropriate to the connection method.

### Network Connection

This machine can be used as a Windows printing port or network printer.

#### Using the Windows printing port

Network connections can be established through Ethernet and Wireless LAN.

Available ports are determined based on the combination of Windows operating system version and connection method used.

#### Windows XP, Windows Server 2003/2003 R2

Connection Method	Available Ports
<ul style="list-style-type: none"><li>Ethernet</li><li>Wireless LAN</li></ul>	<ul style="list-style-type: none"><li>Standard TCP/IP port</li><li>IPP port</li><li>LPR port</li><li>SmartDeviceMonitor for Client port</li></ul>

#### Windows Vista/7, Windows Server 2008/2008 R2

Connection Method	Available Ports
<ul style="list-style-type: none"><li>Ethernet</li><li>Wireless LAN</li></ul>	<ul style="list-style-type: none"><li>Standard TCP/IP port</li><li>IPP port</li><li>LPR port</li><li>WSD port</li><li>SmartDeviceMonitor for Client port</li></ul>

**Note**

- For details about how to install the printer driver for each type of port, see p.14 "Installing the Printer Driver for the Selected Port".

**Using as a network printer**

2

This machine can be used as a remote printer using the Windows or NetWare print server function.

Client OS	Using Server
<ul style="list-style-type: none"> <li>• Windows XP</li> <li>• Windows Server 2003/2003 R2</li> </ul>	<ul style="list-style-type: none"> <li>• Windows XP print server</li> <li>• Windows Vista print server</li> <li>• Windows 7 print server</li> <li>• Windows Server 2003/2003 R2 print server</li> <li>• Windows Server 2008/2008 R2 print server</li> <li>• NetWare print server (using IPv4 only)</li> <li>• NetWare file server (using IPv4 only)</li> </ul>
<ul style="list-style-type: none"> <li>• Windows Vista</li> <li>• Windows 7</li> <li>• Windows Server 2008/2008 R2</li> </ul>	<ul style="list-style-type: none"> <li>• Windows 2000 print server</li> <li>• Windows XP print server</li> <li>• Windows Vista print server</li> <li>• Windows 7 print server</li> <li>• Windows Server 2003/2003 R2 print server</li> <li>• Windows Server 2008/2008 R2 print server</li> </ul>

**Note**

- For details about how to install the printer driver to print server, see p.22 "Using as a Network Printer".

**Local Connection**

Local connections can be established via USB, parallel and Bluetooth connections.

**Note**

- For details about how to install the printer driver for each method of connections, see p.27 "Installing the Printer Driver for a Local Connection".

# Quick Install

You can install the printer drivers easily from the CD-ROM provided with this machine.

Using Quick Install, the PCL 6 printer driver is installed under network environment, and the Standard TCP/IP port will be set.

When the machine is connected to a client computer via parallel connection, the printer port is set to [LPT1].

## ★ Important

- **Manage Printers permission is required to install the drivers. Log on as an Administrators group member.**

**1. Quit all applications. (Do not close this manual.)**

**2. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

**3. Select an interface language, and then click [OK].**

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**4. Click [Quick Install].**

**5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**

**6. Select the machine model you want to use in the [Select Printer] dialog box.**

For network connection via TCP/IP, select the machine whose IP address is displayed in [Connect To].

For parallel connection, select the machine whose printer port is displayed in [Connect To].

**7. Click [Install].**

**8. Configure the user code, default printer, and shared printer as necessary.**

**9. Click [Continue].**

The installation starts.

If the [User Account Control] dialog box appears, and then click [Yes] or [Continue].

**10. Click [Finish].**

When you are prompted to restart your computer, restart it by following the instructions that appear.

**11. Click [Exit] in the first window of the installer, and then take out the CD-ROM.**

## ↓ Note

- Quick Install is not available unless bidirectional communication between the machine and computer is enabled via parallel connection. For details about meeting the bidirectional communication conditions, see p.35 "Configuring Option Settings for the Printer".

# Installing the Printer Driver for a Network Connection

This section describes the installation procedure of the printer drivers for network connection.

## ★ Important

- **Manage Printers permission is required to install the driver. Log on as an Administrators group member.**

## ↓ Note

- If the [User Account Control] dialog box appears during the driver installation procedure, click [Yes] or [Continue].
- If the [Windows Security] dialog box appears during the driver installation procedure, click [Install this driver software anyway].
- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See p.49 "Messages Displayed When Installing the Printer Driver".

## Installing the Printer Driver for the Selected Port

Describes the driver installation procedure for each printer port. See the installation procedure for the printer port you are using.

## ★ Important

- **To use the SmartDeviceMonitor for Client port, you must first download SmartDeviceMonitor for Client from the manufacturer's Web site and install it on your computer. Contact your local dealer for information on downloading SmartDeviceMonitor for Client. For details about SmartDeviceMonitor for Client, see "Software that You Can Download", Getting Started.**

Port Type	Printer Driver Type	Reference
Standard TCP/IP port	PCL PS3	p. 15 "Using the Standard TCP/IP port"
IPP port	PCL PS3	p. 15 "Using the IPP port"
LPR port	PCL PS3	p. 17 "Using the LPR port"
WSD port	PCL PS3	p. 18 "Using the WSD port"
SmartDeviceMonitor for Client port	PCL PS3	p.20 "Using the SmartDeviceMonitor for Client port"

## Using the Standard TCP/IP port

PCL PS3

1. Quit all applications. (Do not close this manual.)

2. Insert the provided CD-ROM into the computer's CD-ROM drive.

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

3. Select an interface language, and then click [OK].

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

4. Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].

5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].

If installing the PostScript 3 printer driver, proceed to step 7.

6. Select a printer driver you want to use, and then click [Next].

7. Select the check box of the manufacturer and machine model you want to use.

8. Double-click the machine name to display the printer settings.

9. Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.

10. Click [Standard TCP/IP Port], and then click [OK].

If [Standard TCP/IP Port] does not appear, see Windows Help, and then configure the settings.

11. Click [Next].

12. Enter the machine name or IP address, and then click [Next].

When the device type selection appears, select "RICOH Network Printer C model".

13. Click [Finish].

14. Check that the port of the selected printer is displayed in [Port :].

15. Configure the user code, default printer, and shared printer as necessary.

16. Click [Continue].

The installation starts.

17. Click [Finish].

Select one of the options to restart the computer either now or later, and then click [Finish].

## Using the IPP port

PCL PS3

### ★ Important

- To print via IPP-SSL, use the SmartDeviceMonitor for Client port.

- Installation of the certificate is especially necessary for users who want to print via IPP-SSL from Windows Vista/7 or Windows Server 2008/2008 R2. For details, consult your administrator.
- If a certificate authority issues a certificate that must be authenticated by an intermediate certificate authority, and the certificate is installed on this machine, an intermediate certificate must be installed on the client computer. Otherwise, validation by the certificate authority will not be performed correctly.
- If validation cannot be performed properly, a warning message informing you that installation is not possible might appear when you try to add a printer using IPP-SSL under Windows Vista/7 or Windows Server 2008/2008 R2. To enable authentication from the client computer, install the intermediate certificate on the client computer, and then reestablish connection.
- Intermediate certificates cannot be installed on this machine.

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Devices and Printers].
3. Click [Add a printer].
4. Click [Add a network, wireless or Bluetooth printer].
5. Click [The printer that I want isn't listed].
6. In the [Select a shared printer by name] box, enter "http://(machine's IP address or host name)/printer (or ipp)" as the printer's address, and then click [Next].
7. Click [Have Disk...].
8. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Close].
9. Click [Browse...], and then specify a location for the INF file.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:

- PCL 5e  
32-bit driver D:\X86\DRIVERS\PCL5E\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5E\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

10. Click [Open].
11. Click [OK] to close the [Install From Disk] window.

12. **Select the manufacturer and model name of the machine you want to use, and then click [Next].**

The installation starts.

13. **Follow the instructions that appear. Modify settings such as printer name and default printer configuration, as necessary. You can also print a test page.**

14. **Click [Finish].**

If a check box for setting the machine as a default printer appears, configure as necessary.

## Using the LPR port

PCL  PS3

1. **Quit all applications. (Do not close this manual.)**

2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

3. **Select an interface language, and then click [OK].**

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

4. **Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].**

5. **The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**

If installing the PostScript 3 printer driver, proceed to step 7.

6. **Select a printer driver you want to use, and then click [Next].**

7. **Select the check box of the machine model you want to use.**

8. **Double-click the machine name to display the printer settings.**

9. **Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.**

10. **Click [LPR Port], and then click [OK].**

If [LPR Port] does not appear, see Windows Help and install it.

11. **Enter the machine name or IP address in the [Name or address of server providing lpd:] box.**

12. **Enter "lp" in the [Name of printer or print queue on that server:] box, and then click [OK].**

13. **Check that the port of the selected printer is displayed in [Port:].**

14. **Configure the user code, default printer, and shared printer as necessary.**

15. **Click [Continue].**

The installation starts.

16. **Click [Finish].**

Select one of the options to restart the computer either now or later, and then click [Finish].

## Using the WSD port

---

PCL PS3

### ★ Important

- The WSD port can be used under Windows Vista/7, or Windows Server 2008/2008 R2.
- You can connect to the printer only if both the printer and computer are on the same network segment, or "Network discovery" is enabled. For details, see Windows Help.

2

### Windows Vista, Windows Server 2008

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Network].
3. Right-click the machine's icon, and then click [Install].
4. Click [Locate and install driver software (recommended)].
5. Click [Browse my computer for driver software (advanced)].
6. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Close].
7. Click [Browse...], and then specify the location of the INF file.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:

- PCL 5e  
32-bit driver D:\X86\DRIVERS\PCL5E\XP\_VISTA\{Language}\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5E\X64\{Language}\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

8. Click [Next].
9. Click [Close].

If installation is successful, the icon of the printer connected to the WSD port will appear in the window for configuring printers.

### ↓ Note

- The port name that follows "WSD" uses random character strings. It cannot be changed freely.



- To stop the installation, click [Cancel] before the installation is complete. When re-installing the WSD Port, right-click the printer's icon in the [Network] window, and then click [Uninstall].

## Windows 7, Windows Server 2008 R2

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Computer].
3. Click [Network].
4. Right-click the machine's icon, and then click [Install].
5. On the [Start] menu, click [Devices and Printers].
6. Click [Add a printer].
7. Click [Add a local printer].
8. Check the [Use an existing port:] check box, and select WSD port.
9. Click [Next].
10. Click [Have Disk...].
11. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Close].
12. Click [Browse...], and then specify the location of the INF file.  
If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:
  - PCL 5e  
32-bit driver D:\X86\DRIVERS\PCL5E\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5E\X64\Language\DISK1
  - PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
  - PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1
 For details about the languages supported in the printer drivers, see p.6 "Supported languages".
13. Click [Open].
14. Click [OK] to close the [Install From Disk] window.
15. Select the manufacturer and model name of the machine you want to use, and then click [Next].
16. Follow the instructions that appear. Modify settings such as printer name, default printer, and printer sharing configuration, as necessary. You can also print a test page.

### 17. Click [Finish].

If installation is successful, the icon of the printer connected to the WSD port will appear in the window for configuring printers.

#### Note

- To stop installation of the selected driver, click [Cancel] before the installation is complete. When re-installing the WSD Port, right-click the machine's icon in the [Network] window, and then click [Uninstall].

## Using the SmartDeviceMonitor for Client port

---

PCL  PS3

To use this function, you must first download SmartDeviceMonitor for Client from the manufacturer's Web site and install it on your computer. Contact your local dealer for information on downloading SmartDeviceMonitor for Client.

### 1. Quit all applications. (Do not close this manual.)

### 2. Insert the provided CD-ROM into the computer's CD-ROM drive.

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

### 3. Select an interface language, and then click [OK].

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

### 4. Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].

### 5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].

If installing the PostScript 3 printer driver, proceed to step 7.

### 6. Select a printer driver you want to use, and then click [Next].

### 7. Select the check box of the machine model you want to use.

### 8. Double-click the machine name to display the printer settings.

### 9. Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.

### 10. Click [SmartDeviceMonitor], and then click [OK].

### 11. To configure port settings using TCP/IP, click [TCP/IP], and then click [Search].

To configure port settings using IPP, proceed to step 13.

### 12. Select the machine you want to use, and then click [OK].

Only machines that respond to a broadcast from the computer appear. To use a machine not listed here, click [Specify Address], and then enter the IP address or host name of the machine.

Proceed to step 18.

### 13. To configure port settings using IPP, click [IPP].

- 14. In the [Printer URL] box, enter "http://machine's IP address/printer" as the machine's address.**

If the server authentication is issued, enter "https://machine's IP address/printer" to enable SSL (a protocol for encrypted communication). Example IP address: 192.168.15.16

http://192.168.15.16/printer

https://192.168.15.16/printer

You can enter "http://machine's IP address/ipp" as the machine's address.

- 15. Enter a name for identifying the machine in the [IPP Port Name] box. Use a name different from the one of any existing ports.**

If a name is not specified here, the address entered in the [Printer URL] box becomes the IPP port name.

- 16. Click [Detailed Settings] Settings to make necessary settings.**

For details about the settings, see SmartDeviceMonitor for Client Help.

- 17. Click [OK].**

- 18. Check that the port of the selected printer is displayed in [Port:].**

- 19. Configure the user code, default printer, and shared printer as necessary.**

- 20. Click [Continue].**

The installation starts.

- 21. Click [Finish].**

Select one of the options to restart the computer either now or later, and then click [Finish].

## Changing the port settings for SmartDeviceMonitor for Client

Follow the procedure below to change the SmartDeviceMonitor for Client settings, such as TCP/IP protocol.

### Windows XP, Windows Server 2003/2003 R2

- 1. On the [Start] menu, click [Printers and Faxes].**
- 2. Click the icon of the machine you want to use. On the [File] menu, click [Properties].**
- 3. Click the [Ports] tab, and then click [Configure Port].**

The [Port Configuration:] window appears.

### Windows Vista, Windows Server 2008:

- 1. On the [Start] menu, click [Control Panel].**
- 2. Click [Printer].**
- 3. Right-click the icon of the machine you want to use, and then click [Properties].**

**4. Click the [Ports] tab, and then click [Configure Port].**

The [Port Configuration:] window appears.

**Windows 7, Windows Server 2008 R2:**

**1. On the [Start] menu, click [Devices and Printers].**

**2. Right-click the icon of the machine you want to use, and then click [Printer Properties].**

**3. Click the [Ports] tab, and then click [Configure Port].**

The [Port Configuration:] window appears.

**Note**

- User, proxy, and timeout settings can be configured for IPP.
- For details about these settings, see SmartDeviceMonitor for Client Help.

**Using as a Network Printer**

Describes the driver installation procedure for each print server. See the installation procedure for the print server you are using.

**Important**

- When using NetWare, an optional NetWare unit is required.

Server OS	Client OS	Printer Driver Type	Reference
Windows Server	Windows	PCL PS3	p.22 "Using Windows print server"
NetWare	Windows	PCL PS3	p.23 "Using NetWare print server"

**Using Windows print server**

PCL PS3

**1. Quit all applications. (Do not close this manual.)**

**2. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

**3. Select an interface language, and then click [OK].**

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**4. Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].**

5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].

If installing the PostScript 3 printer driver, proceed to step 7.

6. Select a printer driver you want to use, and then click [Next].
7. Select the check box of the machine model you want to use.
8. Double-click the machine name to display the machine settings.
9. Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.
10. Click [Network Printer], and then click [OK].
11. Double-click the computer name you want to use as a print server in the [Browse for Printer] window.
12. Select the machine you want to use, and then click [OK].
13. Check that the port of the selected printer is displayed in [Port :].
14. Configure the user code, default printer, and shared printer as necessary.
15. Click [Continue].

The installation starts.

16. Click [Finish].

Select one of the options to restart the computer either now or later, and then click [Finish].

#### ↓ Note

- If you print with a print server connected to the machine using the SmartDeviceMonitor for Client port, Recovery Printing and Parallel Printing cannot be used from the client computer.
- If you print under Windows Vista/7 or Windows Server 2008 print server, notification functions of SmartDeviceMonitor may not be used with the client computer.

## Using NetWare print server

PCL PS3

1. Quit all applications. (Do not close this manual.)
2. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. Select an interface language, and then click [OK].  
For details about the languages supported in the printer drivers, see p.6 "Supported languages".
4. Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].
5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].

If installing the PostScript 3 printer driver, proceed to step 7.

6. Select a printer driver you want to use, and then click [Next].
7. Select the check box of the machine model you want to use.
8. Double-click the machine name to display the printer settings.
9. Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.
10. Click [Network Printer], and then click [OK].
11. Double-click the name of the NetWare file server on the network tree.  
The created queue is displayed.
12. Select the print queue, and then click [OK].
13. Check that the port of the selected printer is displayed in [Port :].
14. Click [Continue].  
The installation starts.
15. Click [Finish] in the [Select Program] dialog box.
16. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].  
Restart the computer to complete installation.
17. After restarting the computer, open the printer window.
  - Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
  - Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
  - Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].
18. Open the printer properties dialog box.
  - Windows XP/Vista, Windows Server 2003/2008:  
Right-click the machine's icon, and then click [Properties].
  - Windows 7, Windows Server 2008 R2:  
Right-click the machine's icon, and then click [Printer properties].
19. Click the [NetWare Settings] tab.
20. Clear the [Form Feed] and [Enable Banner] check boxes.  
Do not select these check boxes since they are automatically selected by the printer driver. If you select the check boxes, the printer may not print correctly.
21. Click [OK].

**Note**

- The protocol is set to inactive as default. Enable the protocol on the control panel, using Web Image Monitor, SmartDeviceMonitor or telnet.

## Notes when using NetWare

### Form Feed

Do not use NetWare to configure form feed. Form feed is controlled by the printer driver on Windows. If NetWare form feed is configured, the printer may not print properly.

Follow the procedure below to disable form feed according to the operating system used:

- Clear the [Form feed] check box on the [NetWare Settings] tab in the printer properties dialog box.

### Banner Page

Do not use NetWare to configure banner page.

Follow the procedure below to disable banner page according to the operating system used:

- Clear the [Enable banner] check box on the [NetWare Settings] tab in the printer properties dialog box.

### When using the PostScript 3 Printer Driver

Follow the procedure below to set up the PostScript 3 printer driver.

1. Open the printer window.
  - Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
  - Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
  - Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].
2. Open the printer properties dialog box.
  - Windows XP/Vista, Windows Server 2003/2008:  
Right-click the machine's icon, and then click [Properties].
  - Windows 7, Windows Server 2008 R2:  
Right-click the machine's icon, and then click [Printer properties].
3. Click the [Device Settings] tab.
4. Select [No] on the [Send CTRL-D Before Each Job:] and [Send CTRL-D After Each Job:], and then click [Apply].

5. Click [OK].

### **Printing after Resetting the Printer**

Printer to print server connection requires 30 - 40 seconds to resume after the printer is reset. During this period, jobs may be accepted (depending on NetWare specifications) but not printed.

To print after resetting the printer as the remote printer, check on the print server that the remote printer is disconnected, or wait for two minutes before trying to print.



# Installing the Printer Driver for a Local Connection

This section describes the installation procedure of the printer drivers for USB, parallel, or Bluetooth connection.

## ★ Important

- **Manage Printers permission is required to install the driver. Log on as an Administrators group member.**

## ↓ Note

- If the [User Account Control] dialog box appears in driver installation procedure, click [Yes] or [Continue].
- If the [Windows Security] dialog box appears in driver installation procedure, click [Install this driver software anyway].
- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See p.49 "Messages Displayed When Installing the Printer Driver".

## USB Connection

This section explains how to install the printer drivers using USB.

Before installing, check that only the operating system is running on the computer and no print jobs are in progress.

If the printer driver has already been installed, and plug and play is enabled, the icon of the printer connected to the "USB" port is added to the [Printers], [Printers and Faxes], or [Devices and Printers] window.

If the printer driver is not installed, follow the plug-and-play instructions of the machine to install it from the CD-ROM provided with this machine.

## ↓ Note

- To disable Auto Run, press the left Shift key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.

## Windows XP, Windows Server 2003/2003 R2

1. **Quit all applications. (Do not close this manual.)**
2. **Check that the power of the machine is off.**

**3. Connect the machine and computer using the USB cable.**

Connect the USB cable firmly.

**4. Turn on the power of the machine.**

Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

**5. Select [No, not this time], and then click [Next].**

**6. Click [Install from a list or specific location [Advanced]], and then click [Next].**

**7. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If Auto Run starts, click [Cancel] and then [Exit].

**8. Select the [Search removable media (floppy, CD-ROM...)] check box under [Search for the best driver in these locations.], and then click [Next].**

**9. Select the name of the machine whose driver you want to install.**

Check the location where the source files of the printer driver is stored.

If the CD-ROM drive is D, the source files are stored in the following locations:

- PCL 5e  
32-bit driver D:\X86\DRIVERS\PCL5E\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5E\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**10. Click [Next].**

The installation starts.

**11. Click [Finish].**

If the printer driver has already been installed and plug and play is enabled, the icon of the printer connected to the "USB001" port is added to the [Printers], [Printers and Faxes], or [Devices and Printers] window.

The number after "USB" varies depending on the number of printers connected.

---

## Windows Vista, Windows Server 2008

---

**1. Quit all applications. (Do not close this manual.)**

**2. Check that the power of the machine is off.****3. Connect the machine and computer using a USB cable.**

Connect the USB cable firmly.

**4. Turn on the power of the machine.**

Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

**5. In the [Found New Hardware] window, click [Locate and install driver software (recommended)].****6. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Close].

**7. Select the name of the machine whose driver you want to install.**

Check the location where the source files of the printer driver is stored.

If the CD-ROM drive is D, the source files are stored in the following locations:

- PCL 5e  
32-bit driver D:\X86\DRIVERS\PCL5E\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5E\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**8. Click [Next].**

The installation starts.

**9. Click [Close].**

If the printer driver has already been installed and plug and play is enabled, the icon of the printer connected to the "USB001" port is added to the [Printers], [Printers and Faxes], or [Devices and Printers] window.

The number after "USB" varies depending on the number of printers connected.

---

**Windows 7, Windows Server 2008 R2**

---

**1. Quit all applications. (Do not close this manual.)****2. Check that the power of the machine is off.**

**3. Connect the machine and computer using a USB cable.**

Connect the USB cable firmly.

**4. Turn on the power of the machine.**

Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

**5. Click [Devices and Printers] from the [Start] menu.**

**6. Double-Click the icon of machine you want to use in the [Unspecified] category.**

**7. Click the [Hardware] tab.**

**8. Click [Properties].**

**9. Click the [General] tab.**

**10. Click [Change settings].**

**11. Click [Driver] tab.**

**12. Click [Update Driver...].**

**13. Click [Browse my computer for driver software].**

**14. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Close].

**15. Click [Browse], and then select the printer driver location.**

If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:

- PCL 5e  
32-bit driver D:\X86\DRIVERS\PCL5E\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5E\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**16. Click [Next].**

The installation starts.

**17. Click [Close].**

If the printer driver has already been installed and plug and play is enabled, the icon of the printer connected to the "USB001" port is added to the [Printers], [Printers and Faxes], or [Devices and Printers] window.

The number after "USB" varies depending on the number of printers connected.

---

## Parallel Connection

---

To use a printer connected using a parallel interface, click [LPT1] when installing the printer driver.

1. **Quit all applications. (Do not close this manual.)**
2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

3. **Select an interface language, and then click [OK].**

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

4. **Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].**
5. **The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**

If installing the PostScript 3 printer driver, proceed to step 7.

6. **Select a printer driver you want to use, and then click [Next].**
7. **Select the check box of the machine model you want to use.**
8. **Double-click the machine name to display the printer settings.**
9. **Click [Port:].**
10. **Select [LPT1:] in the [Change settings for 'Port'] drop-down list.**
11. **Configure the user code, default printer, and shared printer as necessary.**
12. **Click [Continue].**

The installation starts.

13. **Click [Finish].**

Select one of the options to restart the computer either now or later, and then click [Finish].

---

## Bluetooth Connection

---

### Important

- The Bluetooth unit and the optional wireless LAN unit cannot be used simultaneously.

---

## Supported profiles and restrictions

---

### Supported Profiles

- SPP (Serial Port Profile)
- HCRP (Hardcopy Cable Replacement Profile)
- BIP (Basic Imaging Profile)

### Restrictions on SPP, HCRP

- A maximum of two Bluetooth adaptor or Bluetooth-equipped computers can be connected at the same time using the Bluetooth interface: one by SPP, one by HCRP.
- When connecting more than one Bluetooth adaptor or Bluetooth-equipped computer at the same time, the first device that establishes connection is selected. When selecting the connection between the other devices, cancel the first established connection.
- SPP connection does not support bidirectional communications.
- HCRP connection supports bidirectional communications.
- Depending on the machine, additional printer option may be required to use SPP, HCRP. To see if your machine requires additional printer option, see the manual provided with the machine.

### Restrictions on BIP

- PostScript 3 must be installed on the printer to connect via BIP. For information about PostScript 3, see the manual provided with the printer.
- Only one Bluetooth adaptor or Bluetooth-equipped computer can be connected via BIP.
- Only JPEG images can be printed using BIP.
- User codes are disabled for BIP.
- You cannot print if print functions are restricted.
- Some printers do not support BIP.

Instructions in this manual relate to printing via HCRP. To print using SPP or BIP, see the Help supplied with the Bluetooth adapter you want to use, or the Microsoft Web site.

## Adding a Bluetooth printer

---

If your computer is running SP1 or an earlier version of Windows XP, there are additional applications that you must install. For details about these, see the Help supplied with your Bluetooth device.

### Important

- **To connect to a Bluetooth printer, your computer must have a Bluetooth device installed. Make sure a Bluetooth device is installed on your computer.**

### Windows XP, Windows Server 2003/2003 R2

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Printers and Faxes].
3. Click [Add a printer].
4. Click [Next].

**5. Click [Bluetooth Printer], and then click [Next].**

The computer begins searching for available Bluetooth printers.

If a new printer is discovered, the [Found New Hardware Wizard] window appears. To ignore a discovered device and continue searching, click [Cancel]. The computer resumes searching for other available Bluetooth printers.

**6. Click [No, I will not connect], and then click [Next].**

**7. Click [Install from a list or specific location (Advanced)], and then click [Next].**

**8. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, select the [Search removable media (floppy, CD-ROM...)] check box, and then click [Next].**

**9. If the [Hardware Installation] window appears, click [Continue].**

**10. If the installation was successful, click [Finish].**

**11. Select [Test Print], and then click [Next].**

**12. Click [Finish].**

**Note**

- Actual Bluetooth printer operations will vary according to your Bluetooth device and/or Bluetooth-installed computer. For details, see the Help supplied with your Bluetooth device and/or Bluetooth-equipped computer.
- After printing the test page, check it, and then click [Close] to close the window.
- If there is a problem with the test page, click [Troubleshooting] in the test print window.

### Windows Vista, Windows Server 2008

**1. Quit all applications. (Do not close this manual.)**

**2. On the [Start] menu, click [Control Panel].**

**3. In the "Hardware and Sound" area, click [Printers].**

**4. In the top part of the window, click [Add a printer].**

**5. In the [Add Printer] window, select [Add a network, wireless or Bluetooth printer], and then click [Next].**

The computer begins searching for available Bluetooth devices.

**6. From the list of discovered devices, select the machine you want to use, and then click [Next].**

All discovered wireless printers appear in the list of discovered printers, not only Bluetooth printers.

Make sure the machine you select is a Bluetooth printer.

**7. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, and then click [Browse my computer for driver software (advanced)] on the [Found New Hardware] display.**

8. In the [Found New Hardware] window, select the printer driver you want to use, and then click [Next].

The installation starts.

9. If the [Windows Security] window appears, click [Install this driver software anyway].
10. Click [Close].
11. If you want to change the printer name, enter the new name in the [Printer Name Settings] window.
12. If you want to print a test page, click [Printing Test Page] on the "Test Print" page.

Otherwise, click [Finish].

**Note**

- If you print the test page, after checking it, click [Close] to close the test print window.
- If there is a problem with the test page, click [Troubleshooting Printer Problems] in the test print window.

### Windows 7, Windows Server 2008 R2

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Devices and Printers].
3. Click [Add a printer].
4. Click [Add a network, wireless or Bluetooth printer].  
The computer begins searching for available Bluetooth devices.
5. From the list of discovered devices, select the machine you want to use, and then click [Next].
6. If you want to change the printer name, enter the new name in the [Printer Name:], and then click [Next].
7. To share the printer, configure the necessary settings, and then click [Next].
8. If you want to print a test page, click [Print a test page] on the "Test Print" page.

Otherwise, click [Finish].

**Note**

- If you print the test page, after checking it, click [Close] to close the test print window.
- If there is a problem with the test page, click [Get help with printing] in the test print window.



# Configuring Option Settings for the Printer

When bidirectional communication works correctly, your computer obtains information about option, paper size and paper feed direction settings from the machine automatically. Bidirectional communication also allows you to monitor machine status.

When bidirectional communication is disabled, you have to set up option, paper size and paper feed direction settings on your computer manually.

## Conditions for Bidirectional Communication

To support bidirectional communication, the following conditions must be met:

### When connected with parallel cables

- The computer must support bidirectional communication.
- The interface cable must support bidirectional communication.
- The machine must be connected to the computer using the standard parallel cables and parallel connectors.

### When connected with the network

- The Standard TCP/IP port must be used.
- In addition to the above, one of the following conditions must also be met:
  - The TCP/IP protocol or the IPP protocol is used. (When using the IPP protocol, the IPP port name must include the IP address.)

### When connected with USB

- The machine must be connected to the computer's USB port using the USB interface cable.
- The computer must support bidirectional communication.
- [Enable bidirectional support] must be selected, and [Enable printer pooling] must not be selected on the [Ports] tab with the printer driver.

### ↓ Note

- The PCL 6 and PostScript 3 printer drivers support bidirectional communication and automatic printer status updates.
- To obtain printer information automatically using the bidirectional communication function of the PCL 6 or PostScript 3 printer driver, you must select the [Automatically Update Printer Information] check box on the [Accessories] tab in the printer driver's properties window.
- The PCL 5e printer driver supports bidirectional communication. You can update the printer status manually.

---

## If Bidirectional Communication is Disabled

---

This section describes how to set up option, paper size and paper feed direction settings on your computer manually.

### ★ Important

- **Manage Printers permission is required to change the printer properties. Log on as an Administrators group member.**

#### 1. Open the printer window.

- Windows XP, Windows Server 2003:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

#### 2. Open the printer properties dialog box.

- Windows XP/Vista, Windows Server 2003/2008:  
Right-click the machine's icon, and then click [Properties].
- Windows 7, Windows Server 2008 R2:  
Right-click the machine's icon, and then click [Printer properties].

#### 3. Click the [Accessories] tab.

If options in the [Accessories] tab are disabled, bidirectional connection is enabled. In this case, no change is necessary for option settings.

#### 4. Select options installed from the [Options] area, and then make the necessary settings.

#### 5. Click [Change Input Tray Settings...].

#### 6. In [Input Tray:] select which trays to use, and then, in [Paper Size:] select the size of the paper that you want to load in each tray.

Click [Modify Input Tray/Paper Size] to apply the setting for each tray.

#### 7. Click [OK].

#### 8. Click [OK] to close the printer properties window.

### ↓ Note

- For details about making option settings for the machine using a Mac OS X, see p.57 "Configuring Option Settings for the Printer Under Mac OS X".

# Installing Font Manager

## ★ Important

- Manage Printers permission is required to install Font Manager. Log on as an Administrators group member.
- The operating systems compatible with Font Manager are Windows XP/Vista.

1. Quit all applications. (Do not close this manual.)
2. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. Select an interface language, and then click [OK].
4. Click [Font Manager].
5. Follow the instructions on the display.

# Using Adobe PageMaker Version 6.0, 6.5, or 7.0

Under Windows XP with Adobe PageMaker<sup>®</sup>, you need to copy PPD files to the PageMaker folder.

PPD files have the .ppd extension in the folder "X86\DRIVERS\PS\PM6\ (Language)" on the CD-ROM.

The third folder "(Language)" may be substituted by an appropriate language name.

Copy the .ppd file to the PageMaker folder.

- **For PageMaker 6.0 default installation**

The directory is "C:\PM6\RSRC\PPD4".

- **For PageMaker 6.5 default installation**

The directory is "C:\PM65\RSRC\USENGLISH\PPD4".

The "USENGLISH" may vary depending on your language selection.

- **For PageMaker 7.0 default installation**

The directory is "C:\PM7\RSRC\USENGLISH\PPD4".

The "USENGLISH" may vary depending on your language selection.

 **Note**

- If the driver is not set correctly after copying the ".ppd" file, printing may not be performed properly.
- When using PageMaker, the optional features that can be selected by the printer driver will not be active. The following procedure describes how to activate the optional printer features.
  1. On the [File] menu, click [Print].

The [Print Document] dialog box appears.
  2. Make the necessary settings in the [Features] box.

# 3. Installing the Scanner Driver

This chapter explains how to install the TWAIN driver on a client computer.

## Installing the TWAIN Driver

To use the network TWAIN scanner, you must install the TWAIN driver on a client computer.

1. **Quit all applications. (Do not close this manual.)**
2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

3. **Select an interface language, and then click [OK].**

For details about the languages supported in the TWAIN driver, see p.7 "TWAIN Driver".

4. **Click [TWAIN Driver].**

5. **The installer of the TWAIN driver starts. Follow the instructions.**

### ↓ Note

- Before you start the installation, check the system requirements for the TWAIN driver. For details about the system requirements, see p.5 "Software and Utilities Included on the CD-ROM".
- When the installation is complete, a message about restarting the client computer may appear. In this case, restart the client computer.
- After the installation is complete, a folder with the name of the machine in use is added in [Programs] or [All Programs] on the [Start] menu. Help can be displayed from here.
- Notes on using the network TWAIN scanner are provided in "Readme.txt". Be sure to read them before use.

## Installing a TWAIN-Compliant Application on the Same Client Computer

To use this machine as a network TWAIN scanner, a TWAIN-compliant application, such as DeskTopBinder, must be installed on the client computer.

You can download DeskTopBinder from the manufacturer's Web site and then install it on the client computer. For details about DeskTopBinder, see "Software that You Can Download", Getting Started.



# 4. Installing the Facsimile Driver

This chapter explains how to install and configure the LAN-Fax driver on a client computer.

## Installing the LAN-Fax Driver

Address Book and LAN-Fax Cover Sheet Editor are installed with the LAN-Fax Driver. Address Book helps you edit LAN-Fax transmission destinations. LAN-Fax Cover Sheet Editor helps you edit LAN-Fax cover sheets.

### ★ Important

- **Manage Printers permission is required to install the drivers. Log on as an Administrators group member.**
- **In an IPv6 environment, you cannot use the Standard TCP/IP port. Use the SmartDeviceMonitor for Client port.**

### Enabling the function to prevent transmission to the wrong destination

The following function is available to prevent a document from being transmitted to the wrong destination even if the incorrect destination was entered. To enable this function, edit the configuration file before you install the driver.

- Prompt user to reenter the destination number multiple times.
- Prompt user to confirm that the destination number is correct.
- Allow user to select the destination from the destination list only, and prohibit the destination from being manually entered.

For details, see p.44 "Enabling the Function to Prevent Transmission to the Wrong Destination".

### Specifying the same port as the printer driver

If a port name that is the same as one that is already in use by the existing driver is specified, the LAN-FAX driver installation may fail. If the printer driver is already installed, make sure that the port numbers of the LAN-FAX driver and the printer driver match.

For details, see p.41 "Specifying the Same Port as the Printer Driver".

---

## Specifying the Same Port as the Printer Driver

---

1. **Quit all applications. (Do not close this manual.)**
2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. **Select an interface language, and then click [OK].**

For details about the languages supported in the LAN-Fax driver, see p.8 "LAN-Fax Driver".

4. Click [LAN-Fax Driver].
5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].
6. Click [Next].
7. Double-click [Printer Name : <LAN-Fax M(number)>].
8. Click [Port:].
9. Select the same port as the one selected in the printer driver from the ['Change settings for 'Port'] drop-down list.
10. Click [Continue].  
The installation starts.
11. Click [Finish].  
Select one of the options to restart the computer either now or later, and then click [Finish].

## Specifying the Port When Installing the LAN-FAX Driver

To specify a port that is different from the printer driver when installing the LAN-FAX driver, see the installation procedure of the printer driver.

If places where the procedure or description differs depending on the driver to be installed, replace the corresponding procedure or description accordingly, and install the driver.

Installation procedures	Corresponding items to replace
p.15 "Using the Standard TCP/IP port"	1, 2, 4
p.15 "Using the IPP port"	3
p.17 "Using the LPR port"	1, 2, 4
p.18 "Using the WSD port"	3
p.20 "Using the SmartDeviceMonitor for Client port"	1, 2, 4

### List of Items to Replace

No.	Items to be replaced	Procedure/description in the printer driver	Procedure/description in the LAN-Fax driver
1	The name of the button that starts the installation procedure	Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].	Click [LAN-Fax Driver].



No.	Items to be replaced	Procedure/description in the printer driver	Procedure/description in the LAN-Fax driver
2	The procedures in the [Install Printer Driver] dialog box	<ul style="list-style-type: none"> <li>• Select the check box of the machine model you want to use.</li> <li>• Double-click the machine name to display the printer settings.</li> </ul>	Double-click [Printer Name : <LAN-Fax M(number)>].
3	The destination folder in which the driver files are stored	The destination folder is written in the description.	<p>The LAN-FAX driver is installed in the following folder:</p> <ul style="list-style-type: none"> <li>• 32-bit driver X86\DRIVERS\LAN-FAX\XP_VISTA\DISK1</li> <li>• 64-bit driver X64\DRIVERS\LAN-FAX\X64\DISK1</li> </ul>
4	Availability of the User Code setting	Can be specified.	Cannot be specified.

# Enabling the Function to Prevent Transmission to the Wrong Destination

To enable the function to prevent transmission to the wrong destination, edit the configuration file before you install the driver. This section explains how to edit the configuration file and install the LAN-Fax driver using the edited configuration file.

---

## Editing the Configuration File

---

4

**1. Quit all applications. (Do not close this manual.)**

**2. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Close].

**3. Copy the LAN-FAX driver in the provided CD-ROM to the hard disk of your computer.**

If the drive letter of the CD-ROM drive is "D:", copy one of the following folders. Select either 32-bit or 64-bit version according to the environment you are using. Do not copy the files to the desktop or a directory whose path name contains multi-byte characters.

- 32-bit driver D:\X86\DRIVERS\LAN-FAX
- 64-bit driver D:\X64\DRIVERS\LAN-FAX

**4. Open the file "lfxShLnk.ini" that has been copied to your computer using a text editor.**

**5. Edit the items that are related to the prevention function.**

Edit the following three items:

- ConfirmFAXNo

Syntax: ConfirmFAXNo=0/1/2/3/4/5/6/7/8/9/10

Description: Specify the number of times the confirmation dialog box for reentering the destination number appears. Enter the number of times to prompt the user to reenter the destination from 0 to 10.

Example: ConfirmFAXNo=1

- ConfirmAddress

Syntax: ConfirmAddress=ON/OFF

Description: When set to "ON", the destination confirmation dialog appears.

Example: ConfirmAddress=ON

- ProhibitDirectAddress

Syntax: ProhibitDirectAddress=ON/OFF

Description: When set to "ON", the destination cannot be entered manually.

Example: ProhibitDirectAddress=ON

## 6. Save the configuration file that has been edited.

---

## Installing the LAN-FAX driver in "Add Printer"

---

Install the LAN-FAX driver after the configuration file has been edited.

### 1. Open the printer window.

- Windows XP, Windows Server 2003:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

### 2. Click [Add Printer] or [Add a printer].

### 3. Click [Add a local printer].

### 4. Select the port.

- To use the same port as the printer drive:
  1. Click [Use an existing port:].
  2. Select the same port as the one selected in the printer driver from the [Use an existing port:] list.
  3. Click [Next].
- To use another Standard TCP/IP port:
  1. Click [Create a new port:].
  2. Select [Standard TCP/IP Port] in the [Type of port:] list.
  3. Click [Next].
  4. Enter the machine name or IP address in the [Hostname or IP address:] box.
  5. Click [Next].

### 5. Select the manufacturer and model name of the machine you want to use, and then click [Next].

### 6. Change the machine name if you want, and then click [Next].

The installation starts.

### 7. Follow the instructions that appear. Modify settings such as the default printer and printer sharing configuration, as necessary. You can also print a test page.

**8. Click [Finish].**

When you are prompted to restart your computer, restart it by following the instructions that appear.

# Setting LAN-Fax Driver Properties

## Note

- Manage Printers permission is required to set the properties for the LAN-Fax driver. Log on as an Administrators group member.
- The method for selecting the LAN-Fax driver will vary according to your operating system. For details, see Windows Help.

## Setting Print Properties

This section explains how to make settings such as paper size or resolution.

4

### 1. Open the printer window.

- Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

### 2. Open the printer properties dialog box.

- Windows XP/Vista, Windows Server 2003/2003 R2/2008:  
Right-click the [LAN-Fax M(number)] icon, and then click [Properties].
- Windows 7, Windows Server 2008 R2:  
Right-click the [LAN-Fax M(number)] icon, and then click [Printer properties].

### 3. To set the following properties.

- Paper Size
- Orientation
- Tray
- Resolution

### 4. Click [OK].

---

## Configuring Option Settings for the Facsimile

---

### 1. Open the printer windows.

- Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

### 2. Open the printer properties dialog box.

- Windows XP/Vista, Windows Server 2003/2003 R2/2008:  
Right-click the [LAN-Fax M(number)] icon, and then click [Properties].
- Windows 7, Windows Server 2008 R2:  
Right-click the [LAN-Fax M(number)] icon, and then click [Printer properties].

### 3. Click the [Accessories] tab, and then make the settings for the option configuration.

### 4. Select the check boxes for the installed optional units.

### 5. Click [Apply].

Option configuration settings are complete.

### 6. Click [OK].

## [Accessories] tab

The [Accessories] tab contains the following items besides option configuration items.

- Enable E-mail  
Check this when using Internet Fax with the LAN-Fax function.
- IP-Fax  
Check this option when using IP-Fax.

After checking this option, select a protocol by clicking an appropriate radio button.

### ↓ Note

- If the options on this machine are not configured as instructed, LAN-Fax functions may fail.
- If this machine is connected to a network and SmartDeviceMonitor for Client is installed on your computer, configuration of each option installed on the machine will be performed automatically. If the settings do not match the installed optional units, click [Load from Device].

# 5. Troubleshooting

This chapter provides solutions for driver installation and USB connection problems.

## Messages Displayed When Installing the Printer Driver

This section describes what to do if a message appears when installing the printer driver.

Message number 58 or 34 indicates that the printer driver cannot be installed using Auto Run. Install the printer driver using Add Printer Wizard.

Message number 58 appears if there is a newer version of the printer driver already installed.

### 1. Open the printer window.

- Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

### 2. Click [Add a printer].

### 3. Follow the instructions in Add Printer Wizard.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:

- PCL 5e  
32-bit driver D:\X86\DRIVERS\PCL5E\XP\_VISTA\{(Language)\DISK 1  
64-bit driver D:\X64\DRIVERS\PCL5E\X64\{(Language)\DISK 1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK 1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK 1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK 1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK 1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

### 4. Specify a port.

 **Note**

- Available ports vary according to your Windows operating system or the type of interface. For details, see p.11 "Confirming the Connection Method".



## If USB Connection Fails

This section describes how to troubleshoot a problem related to USB connections.

Problem	Causes	Solutions
The machine is not automatically recognized.	The USB cable is not connected properly.	Disconnect the USB cable, and then turn off the main power switch. Turn on the main power switch again. When the machine has fully booted up, reconnect the USB cable.
Windows has already configured the USB settings.	Check whether the computer has identified the machine as an unsupported device.	Open Windows' Device Manager, and then, under [Universal Serial Bus controllers], remove any conflicting devices. Conflicting devices have a [!] or [?] icon by them. Take care not to accidentally remove required devices. For details, see Windows Help.
The machine does not recognize the USB connection even when a USB cable is inserted.	If the USB cable is connected while the machine is off, the machine might not recognize the USB connection.	Press the operation switch, and then disconnect the USB cable. When the machine has returned to the ready condition, reconnect the USB cable.



# 6. Installing the Printer Driver Under Mac OS X

This chapter explains how to install and configure the printer drivers for use on the Mac OS X operating system.

## Installing the PPD Files

To print using the printer specific features under Mac OS X, install the PPD files.

### ★ Important

- Mac OS X 10.2 or higher is required.
- You need an administrator name and a password (phrase). For details, consult your network administrator.
- For the latest information on the corresponding operating system, see the "Readme.txt" file in the DRIVERS folder.

1. Quit all applications. (Do not close this manual.)
2. Insert the provided CD-ROM into the computer's CD-ROM drive.
3. Double-click the CD-ROM drive icon.
4. Double-click the [Mac OS X] folder.
5. Double-click the [(brand name)] folder.
6. Double-click the [Mac OS X 10.2 or later] or [Mac OS X 10.5 or later] folder, depending on your operating system.
7. Double-click the [MacOSX PPD Installer] folder.
8. Double-click the package file icon.
9. Follow the instructions on the screen.

### ↓ Note

- The PPD files will be automatically installed in the following location:
  - Mac OS X 10.2 - 10.4:  
`\Library\Printers\PPDs\Contents\Resources\([language code *1]).lproj`  
\*1 da=Danish, de=German, en=English, es=Spanish, fr=French, it=Italian, nl=Dutch, no=Norwegian, sv=Swedish
  - Mac OS X 10.5 - 10.6:  
`\Library\Printers\PPDs\Contents\Resources\`

## Registering the Printer

To use the machine, the printer must be registered in the printer list.

Make sure the machine and computer are connected and turned on, and perform the following procedure.

For how to connect the machine to the computer, see "Connecting the Machine", Connecting the Machine/ System Settings.

### ★ Important

- Depending on the machine you are using, PostScript 3 unit must be installed.

### ↓ Note

- When printing with a USB connection to a Macintosh computer, the printer language does not change automatically. Use the control panel on this machine to change the printer language to [Auto Detect] or [PS] before printing.
- The operating procedure under Mac OS X differs depending on the version of the operating system. Consult the procedure described in this manual, and make the necessary settings according to the manual of each version.

---

## USB Connection

---

### ★ Important

- Make sure the computer and the machine are connected using the USB cable, and the power of the devices are turned on beforehand.
- USB2.0 can be used only with Mac OS X 10.3.3 or higher.

## Mac OS X 10.2 - 10.3

---

1. Start Print Center or Printer Setup Utility in Applications\Utilities.
2. Click [Set Up Printers].  
Depending on your computer's operating system, [Set Up Printers] may not appear.
3. Click [Add].
4. Select [USB] on the pop-up menu.
5. Select the machine.
6. Select the machine you are using from the [Printer Model:] pop-up menu.

If the machine you are using is not selected in [Printer Model:], select its manufacturer or [Other...] in the pop-up menu, and then select the PPD file of the machine. For the location of the PPD files, see p.53 "Installing the PPD Files".

7. Click [Choose].

8. Click [Add].

If the option settings need to be configured, see p.57 "Configuring Option Settings for the Printer Under Mac OS X".

9. Quit Print Center or Printer Setup Utility.

---

## Mac OS X 10.4 - 10.6

---

1. Start System Preferences.

2. Click [Print & Fax].

3. Click the [+] button.

4. Click [Default Browser] or [Default].

5. Select the machine that has "USB" indicated in the [Connection] or [Kind] column.

6. Select the machine you are using from the [Print Using:] pop-up menu.

If the machine you are using is not selected in [Print Using:], select its manufacturer, [Select a driver to use...], or [Select Printer Software...] in the pop-up menu, and then select the PPD file of the machine. For the location of the PPD files, see p.53 "Installing the PPD Files".

7. Click [Add].

If the option settings need to be configured, click [Configure...] in the dialog box that appears, and then configure the option settings.

8. Quit System Preferences.

---

## Network Connection

---

---

### Mac OS X 10.2 - 10.3

---

1. Start Print Center or Printer Setup Utility in Applications\Utilities.

2. Click [Set Up Printers].

Depending on your computer's operating system, [Set Up Printers] may not appear.

3. Click [Add].

4. Select [Directory Services] on the pop-up menu, and then select [Rendezvous].

5. Select the machine.

If the machine name is not displayed, select the icon that corresponds to your network environment (TCP/IP, etc.).

**6. Select the machine you are using from the [Printer Model:] pop-up menu.**

If the machine you are using is not selected in [Printer Model:], select its manufacturer or [Other...] in the pop-up menu, and then select the PPD file of the machine. For the location of the PPD files, see p.53 "Installing the PPD Files".

**7. Click [Choose].**

**8. Click [Add].**

If the option settings need to be configured, see p.57 "Configuring Option Settings for the Printer Under Mac OS X".

**9. Quit Print Center or Printer Setup Utility.**

---

## Mac OS X 10.4 - 10.6

---

**1. Start System Preferences.**

**2. Click [Print & Fax].**

**3. Click the [+] button.**

**4. Click [Default Browser] or [Default].**

**5. Select the machine that has "Bonjour" indicated in the [Connection] or [Kind] column.**

If the machine name is not displayed, select the icon that corresponds to your network environment (TCP/IP, etc.).

**6. Select the machine you are using from the [Print Using:] pop-up menu.**

If the machine you are using is not selected in [Print Using:], select its manufacturer, [Select a driver to use...], or [Select Printer Software...] in the pop-up menu, and then select the PPD file of the machine. For the location of the PPD files, see p.53 "Installing the PPD Files".

**7. Click [Add].**

If the option settings need to be configured, click [Configure...] in the dialog box that appears, and then configure the option settings.

**8. Quit System Preferences.**

# Configuring Option Settings for the Printer Under Mac OS X

This section explains how to configure the printer driver.

## Mac OS X 10.2 - 10.3

1. Start **Print Center** or **Printer Setup Utility** in **Applications\Utilities**.
2. Click **[Set Up Printers...]**.  
Depending on your computer's operating system, **[Set Up Printers...]** may not appear.
3. Select the machine you are using, and then click **[Show Info]** on the **[Printers]** menu.
4. Select **[Installable Options]** in the pop-up menu, and then configure settings needed.
5. Click **[Apply Changes]**, and then close the **[Printer Info]** dialog box.
6. Quit **Print Center** or **Printer Setup**.

## Mac OS X 10.4

1. Start **System Preferences**.
2. Click **[Print & Fax]**.
3. Select the machine you are using, and then click **[Printer Setup...]**.
4. Select **[Installable Options]** in the pop-up menu, and then configure settings as needed.
5. Click **[Apply Changes]**, and then close the **[Printer Info]** dialog box.
6. Quit **System Preferences**.

## Mac OS X 10.5 - 10.6

1. Start **System Preferences**.
2. Click **[Print & Fax]**.
3. Select the machine you are using, and then click **[Options & Supplies...]**.
4. Click **[Driver]**, and then configure settings as needed.
5. Click **[OK]**.
6. Quit **System Preferences**.

### ↓ Note

- If the option you want to select is not displayed, PPD files may not be set up correctly. To complete the setup, check the name of the PPD file displayed in the dialog box.





# 7. Appendix

---

## Updating or Deleting the Driver

### ★ Important

- Administrator permission is required to update or delete the driver in use. Log on as an Administrators group member.

### ↓ Note

- If the [User Account Control] dialog box appears, click [Yes] or [Continue].
- If the [Windows Security] dialog box appears, click [Install this driver software anyway].

---

## Updating the Driver

---

### Printer driver / LAN-Fax driver

---

You can download the most recent version of the driver from the manufacturer's Web site. Download the latest driver, and then perform the following procedure.

**1. Open the printer window.**

- Windows XP, Windows Server 2003:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

**2. Open the printer properties dialog box.**

- Windows XP/Vista, Windows Server 2003/2008:  
Right-click the machine's icon, and then click [Properties].
- Windows 7, Windows Server 2008 R2:  
Right-click the machine's icon, and then click [Printer properties].

**3. Click the [Advanced] tab.**

**4. Click [New Driver...], and then click [Next].**

**5. Click [Have Disk...].**

**6. Click [Browse...], and then select the driver location.**

7. Click [OK].
8. Select the machine model, and then click [Next].  
The driver update starts.
9. Click [Finish].
10. Click [OK] to close the printer properties window.
11. Restart the computer.

## TWAIN driver

---

You can download the most recent version of the TWAIN driver from the manufacturer's Web site.

Delete the old version of the TWAIN driver first, and then install the new TWAIN driver. For details about how to delete the driver, see p.60 "Deleting the Driver".

---

## Deleting the Driver

---

### Printer driver / LAN-Fax driver

---

7

#### Windows XP, Windows Server 2003/2003 R2

1. On the [Start] menu, click [Printers and Faxes].
2. Right-click the icon of the machine you want to delete, and then click [Delete].
3. Click [Server Properties] on the [File] menu.
4. Click the [Drivers] tab.
5. Select the driver you want to delete, and then click [Remove].
6. Click [Yes].
7. Click [Close] to close the print server properties window.

#### Windows Vista, Windows Server 2008

1. On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
2. Right-click the icon of the machine you want to delete, and then click [Delete].
3. On the [File] menu, point to [Run as administrator], and then click [Server Properties...].
4. Click the [Drivers] tab.
5. Select the driver you want to delete, and then click [Remove...].
6. Select [Remove driver and driver package.], and then click [OK].
7. Click [Yes].

8. Click [Delete].
9. Click [OK].
10. Click [Close] to close the print server properties window.

### Windows 7, Windows Server 2008 R2

1. On the [Start] menu, click [Devices and Printers].
2. Right-click the icon of the machine you want to delete, and then click [Remove Device].
3. Click [Yes].
4. Click any machine icon, and then click [Print server properties].
5. Click the [Drivers] tab.
6. Click the [Change Driver Settings] button if it is displayed.
7. Select the driver you want to delete, and then click [Remove...].
8. Select [Remove driver and driver package.], and then click [OK].
9. Click [Yes].
10. Click [Delete].
11. Click [OK].
12. Click [Close] to close the print server properties window.

### TWAIN driver

1. Start uninstaller.
  - **Windows XP, Windows Server 2003/2003 R2:**  
On the [Start] menu, select [Control Panel], and then click [Add or Remove Programs].
  - **Windows Vista/7, Windows Server 2008 R2:**  
On the [Start] menu, select [Control Panel], and then click [Uninstall a program].
  - **Windows Server 2008:**  
On the [Start] menu, select [Control Panel], and then double-click [Programs and Features].
2. Remove the TWAIN driver.
  - **Windows XP, Windows Server 2003/2003 R2:**
    1. Select [(model type) TWAIN Driver Ver.4].
    2. Click [Change/Remove].
  - **Windows Vista/7, Windows Server 2008/2008 R2:**
    1. Select [(model type) TWAIN Driver Ver.4].
    2. Click [Uninstall/Change].

**3. Quit uninstaller.**

# Trademarks

Adobe, PageMaker, and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or countries.

Macintosh, and Mac OS are registered trademarks of Apple Inc, registered in the U.S. and other countries.

IPS is a trademark or registered trademark of Zoran Corporation and/or its subsidiaries in the United States or other countries.

Microsoft®, Windows®, Windows Server®, and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Monotype is a registered trademark of Monotype Imaging, Inc.

NetWare, IPX, IPX/SPX are either registered trademarks or trademarks of Novell, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all right to those marks.

The proper names of the Windows operating systems are as follows:

- The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

- The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional Edition

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

- The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

Microsoft® Windows Vista® Enterprise

- The product names of Windows 7 are as follows:

Microsoft® Windows® 7 Home Premium

Microsoft® Windows® 7 Professional

Microsoft® Windows® 7 Ultimate

Microsoft® Windows® 7 Enterprise

- The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

- The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

- The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Standard

Microsoft® Windows Server® 2008 Enterprise

- The product names of Windows Server 2008 R2 are as follows:

Microsoft® Windows Server® 2008 R2 Standard

Microsoft® Windows Server® 2008 R2 Enterprise

# INDEX

## B

- Bidirectional communication.....35
- BIP.....31
- Bluetooth.....31
- Bluetooth printer.....32

## C

- CD-ROM.....5
- Confirming the connection method.....11
- Connection fails.....51

## D

- Delete.....59, 60
- DeskTopBinder.....39

## E

- Error message.....49

## F

- Facsimile.....41
- Font Manager.....9, 37

## H

- HRCP.....31

## I

- Installer.....3
- IPP port.....15

## L

- LAN-Fax driver.....8, 41
- LAN-Fax driver properties.....47
- Launcher.....3
- Local connection.....12, 27
- LPR port.....17

## M

- Mac OS X.....10
- Messages displayed when installing the printer driver.....49

## N

- NetWare.....22, 25
- NetWare print server.....23
- Network connection.....11, 14, 55

- Network printer.....12, 22

## O

- Option settings.....35, 48, 57

## P

- PageMaker.....38
- Parallel connection.....13, 31
- PCL.....5, 13, 14, 22
- PostScript 3.....5, 14, 22
- PPD.....5
- Prevent Transmission to the Wrong Destination..44
- Printer driver.....5, 14, 27
- Printer port type.....14

## Q

- Quick Install.....13

## R

- Registering the printer.....54

## S

- Scanner.....39
- Setting print properties.....47
- SmartDeviceMonitor for Client port.....20, 21
- Software.....5
- SPP.....31
- Standard TCP/IP port.....15
- Supported language.....6
- Supported profiles and restrictions.....31

## T

- Trademarks.....63
- TWAIN driver.....7, 39

## U

- Uninstall.....60
- Update.....59
- USB connection.....27, 51, 54
- Utilities.....5

## W

- Windows print server.....22
- Windows Server.....22
- WSD port.....18

---

MEMO



---

MEMO

---

MEMO







# Operating Instructions IPDS Supplement



# TABLE OF CONTENTS

---

- Manuals for the IPDS card.....2
- Notice.....3
  - Important.....3
- How to Read This Manual.....4
  - Symbols.....4
- 1. Getting Started**

---
- About IPDS.....5
- 2. Using Web Image Monitor**

---
- List of the Setting Items.....7
  - Configuration.....7
- 3. Accessing User Tools**

---
- User Tools Settings.....9
  - List/Test Print.....9
  - Maintenance.....9
  - IPDS Menu.....9
- 4. Appendix**

---
- Precautions.....21
  - Limitations.....21
  - About AFP/IPDS Fonts.....21
- Trademarks.....22
- INDEX**.....23

---

# Manuals for the IPDS card

Refer to the manuals that are relevant to what you want to do with the IPDS card.

## ★ Important

- Adobe® Acrobat® Reader®/Adobe Reader must be installed in order to view the manuals as PDF files.

### IPDS Supplement (IPDS.pdf)

Explains how to configure the IPDS card for the machine. It also explains about items selectable from the Web browser.

### IPDS Printing Configuration Guide (IPDS\_CONF.pdf) \*English Only

Explains about the environment necessary for connecting the mainframe to the machine and performing IPDS printing.

### IPDS Technical Reference 1 (IPDS\_TEC1.pdf) \*English Only

Explains about commands and functions for IPDS printing.

### IPDS Technical Reference 2 (IPDS\_TEC2.pdf) \*English Only

Explains about IPDS commands.

## ↓ Note

- For details about the necessary environment and how to install the IPDS card and machine, consult your sales or service representative. For details about the necessary environments and operation of the mainframe, contact IBM.



---

# Notice

---

## Important

---

Contents of this manual are subject to change without prior notice.

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

---

# How to Read This Manual

---

## Symbols

---

This manual uses the following symbols:

### **Important**

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

### **Note**

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

### [ ]

Indicates the names of keys on the machine's display or control panels.

# 1. Getting Started

---

## About IPDS

IPDS (Intelligent Printer Data Stream) is a page printing format for IBM mainframe and client computers. This machine can perform IPDS printing if the IPDS card is installed.



# 2. Using Web Image Monitor

## List of the Setting Items

If you install the IPDS card to the machine, following Web Image Monitor items can be viewed or modified depending on the selected mode on the Web browser.

Select one of the following modes to log on Web Image Monitor:

- User mode: logged on as a user
- Administrator mode: logged on as an administrator

**Note**

- IPDS cannot use the delete reservation function of Web Image Monitor. After you login to administrator mode in Web Image Monitor, even if you select a currently printing IPDS job at the Current/Waiting Jobs and then click [Delete Reservation], nothing happens.
- For details about Web Image Monitor, see the manual explaining the network functions provided by the supplier or Web Image Monitor Help.

## Configuration

### Printer

Menu	User mode	Administrator mode
Basic Settings	Read	Read/Modify
IPDS Form List	Read	Read/Modify
Reset IPDS Fonts	None	Read/Modify

**Note**

- "IPDS Menu" will appear in Basic Settings.

### Network

Menu	User mode	Administrator mode
IPv4	Read	Read/Modify

**↓ Note**

- "IPDS" and "IPDS Port Number" will be displayed.

## Security

---

2

Menu	User mode	Administrator mode
Network Security	None	Read/Modify

**↓ Note**

- "IPDS" will be displayed.

# 3. Accessing User Tools

---

## User Tools Settings

When the IPDS card is installed, IPDS print settings become available and will appear on the control panel.

---

### List/Test Print

---

3

#### IPDS Font List

Prints a list of IPDS-supported fonts.

 **Note**

- The layout of the IPDS Font List produced by the test print is fixed to A4 or 8<sup>1</sup>/<sub>2</sub> × 11 (letter) size. We recommend you load A4 or 8<sup>1</sup>/<sub>2</sub> × 11 (letter) size paper (plain or recycled) in one of the paper trays.
- For details about printing lists, see the manual explaining how to print lists provided by the supplier.

---

### Maintenance

---

#### Reset IPDS Resources

Delete all IPDS resources that saved on its hard disk.

 **Note**

- Only the Machine Administrator can reset IPDS fonts.

---

### IPDS Menu

---

#### Tray Form

Specifies an IPDS form for each paper tray.

- Tray 1
- Tray 2
- Tray 3
- Tray 4
- LCT
- Bypass Tray

For each paper tray, select the form you want to allocate to it.

### Emulation Mode

Specifies the emulation mode.

Default: **[Native]**

- Native
- 4028

### Print Mode

Specifies the print mode.

Default: **[Enhanced]**

- Standard
- Enhanced

### Default Code Page

Specifies the default code page.

Default: **[037]**

- 037 : US, Canada, Netherlands, Portugal
- 038 : US English ASCII
- 260 : Canadian French
- 273 : Austrian/German
- 274 : Belgium
- 276 : Canadian French
- 277 : Danish/Norwegian
- 278 : Finnish/Swedish
- 280 : Italian
- 281 : Japanese
- 284 : Spanish
- 285 : UK English
- 286 : Austrian/German (alternate)
- 287 : Danish/Norwegian (alternate)
- 288 : Finnish/Swedish (alternate)
- 290 : Japanese/Katakana
- 297 : French
- 420 : Arabic
- 423 : Greek



- 424 : Hebrew
- 500 : Belgium, Switzerland/International
- 870 : Latin 2 Multilingual
- 871 : Icelandic
- 875 : Greek
- 880 : Cyrillic
- 892 : OCR - A
- 893 : OCR - B
- 905 : Turkish
- 1025 : Cyrillic
- 1026 : Turkish

The following code pages include the Euro character:

- 1140 : US, Canada, Netherlands, Brazil, Portugal
- 1141 : Austrian/German
- 1142 : Danish/Norwegian
- 1143 : Finnish/Swedish
- 1144 : Italian
- 1145 : Spanish
- 1146 : UK English
- 1147 : French
- 1148 : Belgium, Switzerland/International
- 1149 : Icelandic

### Default FGID

Specifies the default FGID (Font Typeface Global Identifier), which identifies the printer's default resident font.

Default: **[416]** (Courier Roman Medium 10).

To display a list of the fonts and FGIDs that the printer supports, print out the list of IPDS resident fonts. For details about printing lists, see the manual explaining how to print lists provided by the supplier.

- 3 : OCR B
- 11 : Courier 10
- 12 : Prestige Pica
- 18 : Courier Italic 10
- 19 : OCR A

- 46 : Courier Bold 10
- 85 : Courier 12
- 86 : Prestige Elite
- 92 : Courier Italic 12
- 111 : Prestige Elite Bold
- 112 : Prestige Elite Italic
- 159 : Boldface
- 164 : Prestige PSM Roman Medium
- 203 : Gothic Text
- 221 : Prestige 15
- 223 : Courier 15
- 254 : Courier.17 ss
- 256 : Prestige 17
- 281 : Letter Gothic
- 283 : Gothic Text
- 290 : Gothic Text
- 304 : Katakana Gothic
- 305 : OCR A
- 306 : OCR B
- 318 : Prestige Bold
- 319 : Prestige Italic
- 400 : Letter Gothic
- 404 : Letter Gothic Bold
- 416 : Courier Roman Medium 10
- 420 : Courier Roman Bold
- 424 : Courier Italic Medium
- 428 : Courier Italic Bold
- 432 : Prestige
- 2304 : Helvetica Roman Medium
- 2305 : Helvetica Roman Bold
- 2306 : Helvetica Italic Medium
- 2307 : Helvetica Italic Bold
- 2308 : Times New Roman Medium

- 2309 : Times New Roman Bold
- 2310 : Times New Roman Italic Medium
- 2311 : Times New Roman Italic Bold
- 5687 : Times Roman
- 5707 : Times Roman Bold
- 5815 : Times Roman Italic
- 5835 : Times Roman Bold Italic
- 20224 : Boldface

### Characters Per Inch

Specifies the number of characters per inch (pitch) for the default font. Valid values are 5.0 to 30.0 in units of one tenth of an inch.

Default: [10.0]

### Valid Printable Area Check

Specifies whether or not to report the Position check error (NACK 08C1..00) to the host, when valid printable area is checked

Default: [On]

- On

The printer checks for pixels that fall outside the intersection of the logical and physical pages. If there are pixels outside the area and error reporting has been set using the "IPDS Exception Handling Control" command, the printer reports an error to the host.

- Off

The printer does not report pixels outside the valid printable area.

### Edge to Edge

Turns "Edge to Edge" printing on or off.

Default: [Off]

- On

The printer allows printing up to the physical page size.

- Off

The printer maintains a border of 2 mm (0.078 inches) on the leading edge, but prints to all other page borders.

#### Note

- To prevent toner from accumulating inside the printer, we recommend leaving [Edge to Edge] set to [Off] for IPDS, and setting it to [On] only when necessary.
- The "Edge to Edge" IPDS Menu item affects IPDS data only.
- When using IPDS, the "Edge to Edge" setting on System menu will be invalid.

### Font Substitution

Turns font substitution on or off.

Default: [Off]

- On

If a job requests a font that is not loaded on the printer, the printer uses a substitute font.

- Off

If a job requests a font that is not loaded on the printer, the printer generates an IPDS NACK (Negative Acknowledgement) message and the host holds the job.

### Caching

Specifies whether or not to use caching for repeated overlays.

Default: [Off]

- On

The printer uses caching, which provides better performance for jobs with repeated overlays, but uses more memory.

- Off

The printer does not use caching, which requires less memory but provides less performance for jobs with repeated overlays.

#### Note

- Overlay caching is recommended for repeated overlays. Overlay caching does not improve performance with non-overlay IPDS data or overlays that are used only once or infrequently.

### Font Capture

Sets Font Capture processing.

Default: [On]

- On

The printer saves downloaded font resources on its hard disk drive for use beyond the duration of the current power cycle. The IPDS host must provide the "Activate Resource" command with the correct resource identifiers before downloading the font resource to be captured.

- Off

The printer stores downloaded font resources for the duration of one power cycle only.

### Resolution

Specifies the resolution reported to the host in the "IPDS XOA-OPC" command for raster coded fonts and IM1 image support. The [Resolution] menu item also helps determine whether or not a printer-resident raster font is used. For example, 240 dpi raster fonts are activated at the [240 dpi] setting, not at [300 dpi] or [600 dpi]. The [Resolution] setting does not affect outline fonts, nor does it determine which raster fonts can be downloaded to the printer as temporary activation fonts.

Default: **[Auto]**

- Auto
 

Reports to the host that the printer supports raster fonts of any dpi value and IM 1 images. "Resident" or "Captured" raster fonts of other resolutions are not activated unless a matching "Font Resolution" and "Metric Technology Triplet" is provided with the activation request.
- 240 dpi
 

Reports to the host that the printer supports 240 dpi raster fonts and IM 1 images. "Resident" or "Captured" raster fonts of other resolutions are not activated unless a matching "Font Resolution" and "Metric Technology Triplet" is provided with the activation request.
- 300 dpi
 

Reports to the host that the printer supports 300 dpi raster fonts and IM 1 images. "Resident" or "Captured" raster fonts of other resolutions are not activated unless a matching "Font Resolution" and "Metric Technology Triplet" is provided with the activation request.
- 600 dpi
 

Reports to the host that the printer supports 600 dpi raster fonts and IM 1 images. "Resident" or "Captured" raster fonts of other resolutions are not activated unless a matching "Font Resolution" and "Metric Technology Triplet" is provided with the activation request.

**Note**

- If you select [Standard] for the [Print Mode] setting, the resolution changes to [300 dpi].
- To set the IPDS resolution to [240 dpi], [600 dpi], or [Auto], you must first set [Print Mode] to [Enhanced]. Enhanced print mode produces optimal print quality, but can slow down the printing of complex jobs.

### Graphic Character String

Specifies the Graphic Character String (Graphic Character Sizing) processing method.

Default: **[Auto]**

- Auto
 

Applies the value specified by the [Emulation Mode] item ([Native] or [4028]).
- Character Scale
 

Applies 4028 IPDS Emulation. Prints graphics and text characters by scaling the characters in a currently activated font. Character cell size is defined in the GOCA data stream. Not available for DBCS.
- Font Activation
 

Applies Native IPDS Emulation. Prints graphics and text characters using a currently activated font at the font's activation size, without scaling. GOCA data stream Character cell size information is ignored.

### Bar Code

Specifies the barcode level protocol.

Default: **[Auto]**

- Auto  
Applies the value specified by the [Emulation Mode] item ([Native] or [4028]).
- 4028  
Applies 4028 IPDS Emulation.
- Native  
Applies Native IPDS Emulation.

### Box Draw

Specifies the Box Draw processing.

Default: **[Off]**

- On  
Uses special outline fonts to draw Symbol Set box characters. Select [On] to fill gaps caused by special raster fonts that contain extended length box characters (as found in older applications, for example).
- Off  
Uses Symbol Set outline font characters to draw boxes as the font-defined characters.

### Color Simulation

Allows you to select how color specification controls are processed on a monochromatic printer.

Default: **[Fidelity]**

- Fidelity  
The printer accepts all color specification controls and simulates unique colors with shades of gray.
- Legacy  
The printer accepts all color specification controls, but performs only limited color simulation using black.

### Text Color Simulation

Specifies how text color specification controls are processed on a monochrome laser printer.

Default: **[On]**

- On  
The printer accepts all text color specification controls and simulates the unique colors with shades of gray.
- Off

The printer accepts all text color specification controls, but performs only limited color simulation using black.

**Note**

- This menu item is available only if [Color Simulation] mode is set to [Fidelity].

### Suppress Staple Count Nacks

Selects whether or not to notify the user when stapling errors occur.

Default: [Off]

- On
- Off

**Note**

- This menu appears only when using the machine with finisher.

### Suppress Punch Nacks

Selects whether or not to notify the user when punching errors occur.

Default: [Off]

- On
- Off

### Tray Mapping

Maps the media source (input tray) to an ID the host uses for the media source.

- Tray 1

Default: [Auto]

- Auto
- IPDS Tray

- Tray 2

Default: [Auto]

- Auto
- IPDS Tray

- Tray 3

Default: [Auto]

- Auto
- IPDS Tray

- Tray 4

Default: [Auto]

- Auto

- IPDS Tray
- LCT  
Default: [**Auto**]
  - Auto
  - IPDS Tray
- Bypass Tray  
Default: [**Auto**]
  - Auto
  - IPDS Tray

**Note**

- If [IPDS Tray] is selected, enter the tray parameter replacement value for each paper tray, using up to 254 digits.

**Corner Staple Angle**

Selects [Vertical] or [Slant] for the angle of stapling.

Default: [**Vertical**]

- Vertical  
Staples vertically.
- Slant  
Staples diagonally.

**Offset**

Specifies whether or not the output is offset (jogged).

Default: [**On**]

- On  
Output is offset (jogged) when requested by the job.
- Off  
Output is never offset (jogged).

**Note**

- This menu appears only when using the machine with finisher.

**Default Punch Pattern**

Specifies the default number of holes to punch if the punch unit provides a selection (for example, two or four holes).

**Note**

- [Tray Form] and [Tray Mapping] appear differently depending on the machine type.



- [Tray Form] allocates the form specified using Web Image Monitor's [IPDS Form List] to the installed tray. For details about IPDS Form List, see the Web Image Monitor Help.
- Tray commands of [Tray Form] differ depending on the machine you want to use. For details about selectable tray commands, see "Load Copy Control", IPDS Technical Reference 2.
- For details about the control panel settings, see the manual explaining how to specify the control panel settings, provided by the supplier.



# 4. Appendix

---

## Precautions

---

### Limitations

---

PCL fonts are not accessible via AFP/IPDS, nor can PCL access AFP/IPDS fonts.

PostScript® fonts are not accessible via AFP/IPDS, nor can PostScript access AFP/IPDS fonts.

The mainframe or host computer will not be notified of errors that happen before this machine establishes connection with them.

---

### About AFP/IPDS Fonts

---

The AFP/IPDS Single Byte Character Set (SBCS) font is stored on the hard disk drive.

# Trademarks

Adobe, Acrobat, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

AFP/ADVANCED FUNCTION PRINTING, IPDS and Intelligent Printer Data Stream are trademarks of Ricoh Co., Ltd.

IBM® is a trademark of International Business Machines Corporation in the United States, other countries, or both.

PCL® is a registered trademark of Hewlett-Packard Company.

Monotype is a registered trademark of Monotype Imaging, Inc.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

# INDEX

## A

About AFP/IPDS Fonts.....	21
About IPDS.....	5

## B

Bar Code.....	9
Box Draw.....	9

## C

Caching.....	9
Characters Per Inch.....	9
Color Simulation.....	9
Configuration.....	7
Corner Staple Angle.....	9

## D

Default Code Page.....	9
Default FGID.....	9
Default Punch Pattern.....	9

## E

Edge to Edge.....	9
Emulation Mode.....	9

## F

Font Capture.....	9
Font Substitution.....	9

## G

Graphic Character String.....	9
-------------------------------	---

## I

IPDS Font List.....	9
IPDS Menu.....	9

## L

Limitations.....	21
List/Test Print.....	9

## M

Maintenance.....	9
------------------	---

## N

Network.....	7
Notice.....	3

## O

Offset.....	9
-------------	---

## P

Precautions.....	21
Print Mode.....	9
Printer.....	7

## R

Reset IPDS Fonts.....	9
Resolution.....	9

## S

Security.....	8
Suppress Punch Nacks.....	9
Suppress Staple Count Nacks.....	9
Symbols.....	4

## T

Text Color Simulation.....	9
Trademarks.....	22
Tray Form.....	9
Tray Mapping.....	9

## U

User Tools Settings.....	9
--------------------------	---

## V

Valid Printable Area Check.....	9
---------------------------------	---

## W

Web Image Monitor.....	7
------------------------	---

---

MEMO









## IPDS Technical Reference 1





# TABLE OF CONTENTS

---

- Manuals for the IPDS card.....4
- Notice.....5
  - Important.....5
- How to Read This Manual.....6
  - Symbols.....6
- About This Book.....7
  - Audience.....7
  - Terminology.....7
- About IPDS.....8
- Capabilities of IPDS.....9
- Printing a Letter.....10
- Using Overlays.....12
- Using Page Segments.....13
- Using Images and Graphics.....14
  - IM and IO Images.....14
  - Graphics.....14
- Using Bar Codes.....15
- Printing in Duplex Mode.....16
- 1. IPDS Overview**

---
- About the IPDS Feature.....17
- IPDS Operating States.....18
  - Home State.....18
  - Overlay State.....18
  - Font State.....18
- IPDS Command Format.....19
  - Reserved Bytes.....22
  - Flag Byte.....22
  - Correlation ID (CID).....22
  - Error Processing.....23
  - Page and Copy Counters.....24
- Data Types.....25
  - Text.....25
  - Image.....25

---

Graphics.....	26
Bar Code.....	26
Coordinate System.....	27
Xm, Ym Coordinate System (Medium Presentation Space).....	27
Xp, Yp Coordinate System (Logical Page Presentation Space).....	27
I, B Coordinates System (Text).....	27
Other Text Positioning Terms.....	28
Notation Conventions.....	29
Color Simulation.....	30
Simulation Modes Supported.....	30
Color Simulation Processes and Algorithms.....	30
Logical Page and Object Area Coloring.....	33
Presentation Space Reset Mixing.....	37
<b>2. Summary of IPDS Commands</b>	
IPDS Initialization Defaults.....	39
Page Printer Initialization Sequence.....	42
<b>3. IPDS Command Set</b>	
About IPDS Command Set.....	43
<b>4. Exception Reporting, Sense Data, and Recovery</b>	
About Exception Reporting, Sense Data, and Recovery.....	45
General Reply Rules.....	45
Exception-Handling Control (EHC).....	46
Classes of Data Stream Exceptions.....	47
Sense Byte Information.....	47
Exception-Reporting Codes.....	51
TCP/IP Sense Data.....	53
IPDS Exceptions Reported.....	53
Page Counter Adjustments.....	76
Page and Copy Counter Adjustments for Data-Stream Exceptions.....	81
<b>5. Code Page and Font Identification</b>	
About Code Page and Font Identification.....	85
RRL RT'06' Code Page (CPGID).....	85
RRL RT'12' Specific Code Pages (GCSGID/CPGID).....	85

---

RRL RT'11' Graphic Character Sets (GCSGID SUB/SUPERSETS).....	85
RRL RT'07' Font Character Sets (GCSGID/FGID/FW).....	86
RRL RT'01'/'03'/'10' RIDF'03' (GCSGID/CPGID/FGID/FW = GRID).....	87

## 6. Fonts

---

IBM Font Structure.....	89
Coded Font.....	89
Character Set.....	89
Code Page.....	90
Operating System/400 Terms.....	92
Font Terms.....	93
Font and Code Page Selection.....	94
Resident IPDS Fonts.....	95
Resident Font Activation Methods.....	95
IBM Core Interchange Resident Scalable Font Set (IPDS only).....	96
IBM Core Interchange Resident Code Page Set.....	106
4028 Compatibility Resident Font Set.....	115
4028 Compatibility Resident Code Page Set.....	117
IBM Coordinated Font Set (IPDS).....	119
IBM Coordinated Font Set Code Page Set.....	121
IPDS Default Font.....	122
Factory Setting.....	122
Selectable IPDS Default Font.....	123
Selectable Code Pages.....	123
Selectable Fonts.....	125
4028 Selectable Fonts.....	126
Selectable Font Widths.....	128
IPDS Bar Code Printing.....	129
IPDS Font Bolding.....	129

## 7. Appendix

---

Trademarks.....	131
<b>INDEX</b> .....	133

---

# Manuals for the IPDS card

Refer to the manuals that are relevant to what you want to do with the IPDS card.

## ★ Important

- Adobe® Acrobat® Reader®/Adobe Reader must be installed in order to view the manuals as PDF files.

### IPDS Supplement (IPDS.pdf)

Explains how to configure the IPDS card for the machine. It also explains about items selectable from the Web browser.

### IPDS Printing Configuration Guide (IPDS\_CONF.pdf) \*English Only

Explains about the environment necessary for connecting the mainframe to the machine and performing IPDS printing.

### IPDS Technical Reference 1 (IPDS\_TEC1.pdf) \*English Only

Explains about commands and functions for IPDS printing.

### IPDS Technical Reference 2 (IPDS\_TEC2.pdf) \*English Only

Explains about IPDS commands.

## ↓ Note

- For details about the necessary environment and how to install the IPDS card and machine, consult your sales or service representative. For details about the necessary environments and operation of the mainframe, contact IBM.

---

# Notice

---

## Important

---

Contents of this manual are subject to change without prior notice.

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

---

# How to Read This Manual

---

## Symbols

---

This manual uses the following symbols:

 **Important**

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

 **Note**

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

[ ]

Indicates the names of keys on the machine's display or control panels.



---

# About This Book

This book provides technical reference information about how printers support the IPDS data stream.

---

## Audience

---

This publication is intended for the system programmers, application programmers, and systems engineers who are familiar with data streams and are writing or modifying programs to operate your printer with the IPDS data stream.

---

## Terminology

---

### Paper Input and Output Receptacles

---

Input receptacles are called trays. Output receptacles are called stackers or bins.

---

## Related Publications

---

This book refers to the following:

- PostScript Language Reference Manual, second edition, by Adobe Systems, Inc.
- PCL 5 Printer Language Technical Reference Manual by Hewlett-Packard Company
- PCL 5 Comparison Guide by Hewlett-Packard Company
- Printer Job Language Technical Reference Manual by Hewlett-Packard Company

### Note

- For details on the IPDS Architecture, see the Intelligent Printer Data Stream Reference, S544-3417.

---

# About IPDS

This chapter introduces the Intelligent Printer Data Stream (IPDS) and describes some of the capabilities of IPDS.

IPDS lets you print pages containing an unlimited mix of different types of data: high-quality text, images, vector graphics, and bar codes.

You can send IPDS data to printers attached to the IBM Application System/400 (AS/400) intelligent work stations, local area networks, IBM 3270-family controllers, Ethernet, and spooled systems. In some of these environments, you can create applications to directly control IPDS printers such as this printer. For more information about IPDS as a component of printing subsystems, refer to Intelligent Printer Data Stream Reference.

IBM provides a variety of host software products with components that generate IPDS commands for this printer or other IPDS printers. These software products vary in their use of IPDS functions. Some of the software products available are:

- OS/400 Version 5.4 or later
- Graphical Data Display Manager (GDDM) Version 2.3 or later
- Print Service Facility (PSF for z/OS) Version 4.1.0 or later
- Print Service Facility (PSF for i5/OS and OS/400) Version 5.4 or later
- InfoPrint Manager for AIX Version 4.2 or later
- InfoPrint Manager for Windows Version 2.2 or later
- InfoPrint Process Director for Linux Version 1.3.1 or later
- InfoPrint Process Director for AIX Version 1.3.1 or later

## Note

- The capabilities of the printer depend on the host software and the IPDS functions that the software enables.

---

# Capabilities of IPDS


A printer controlled by IPDS has a number of advantages over conventional printers. With IPDS you can:

- Use the printer's all-points-addressable printing to print text, graphics, images, or bar codes at any point on a page or that is within the printers printable area.
- Print text in a variety of type styles and switch fonts within a printed page.
- Use both images and vector graphics (explained later in this chapter) to print line drawings, pie charts, bar charts, graphics, logos, tables, and signatures.
- Combine text with images and graphics on the same page (creating what is known as a composite document).
- Electronically store and later print forms and letterheads that are always printed in the same predetermined type style.
- Electronically store and later print text where the type style printed is the same as that used in the rest of the text.
- Print any of 16 different kinds of bar codes in many sizes and with a number of variations.
- Print either portrait (upright, letter orientation) or landscape (printing "on the side", with the page wider than it is tall).
- Print on either one side or both sides of the paper (with duplex option).


---

## Printing a Letter

IPDS lets you print a letter in just one step. In conventional printing, you must load letterhead paper into your printer, print the text of your letter, and then manually sign the letter.

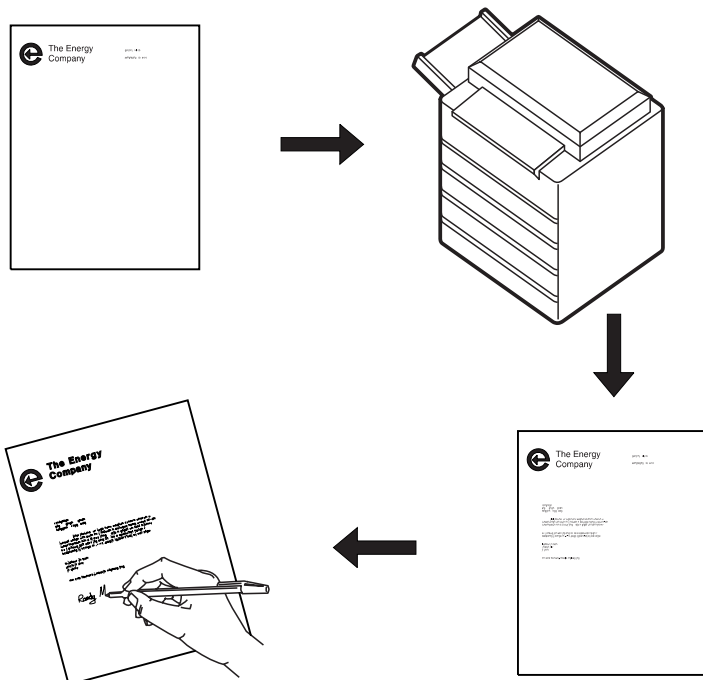

Using IPDS, you can temporarily store your letterhead and signature in the printer's memory and then merge the letterhead, text, and signature with additional data to form a complete letter. You can also include graphics, such as a line chart or bar chart, in your letter, creating a composite document.

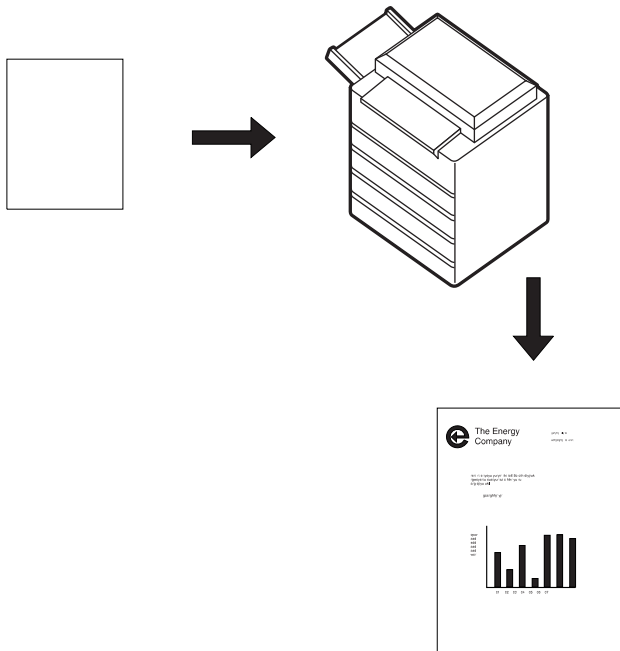

An IPDS-driven printer offers flexibility. For example, you can highlight a list of items by printing the list in a different type style from the rest of the text; or you can print your letterhead in one font and your text in another font.

You can electronically store your letterhead so it is always printed in the same type style. This printing concept is discussed in p.12 "Using Overlays".

You can store your printed signature block so it is printed in the type style used in the rest of the letter or memo. That way the signature block's type style matches the letter in which it appears, no matter how many different fonts you use for different kinds of letters. This printing concept is discussed in p.13 "Using Page Segments".


You can include bar charts or line graphs in your letter. Such graphic material can be generated through either the Image function or the Graphics function. See p.14 "Using Images and Graphics".

# Using Overlays

Overlays are stored constructs (text, graphics, images, and bar codes), often in complex configurations, with all the instructions needed to print. An overlay always prints in the type style used when it was stored and can be positioned anywhere on the page.


Overlays are useful for letterheads and for forms, as shown below.

Electronically Stored Form Overlay


<b>POWER</b> ANY TOWN AMERICA 					
Name-Service Address				Service Period	
				From	
				To	
Account No.					
Rate	Meter Readings		Mult.	K.W.H. Used	Amount
	Present	Previous			
City		State	Franchise	Total Tax	

Variable Page Data

John Jones 1225 Stone Street Any Town, State 65432						10/02/85
						11/01/85
0130-7817-2						
10	1054	1944	10	1:100	61.85	
				2.27	.12	2.49
						64.35

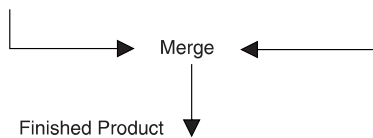

Finished Product


<b>POWER</b> ANY TOWN AMERICA 						
Name-Service Address				Service Period		
John Jones 1225 Stone Street Any Town, State 65432				From	10/02/85	
				To	11/01/85	
Account No. 0130-7817-2						
Rate	Meter Readings		Mult.	K.W.H. Used	Amount	
	Present	Previous				
10	1054	1944	10	1:100	61.85	
City		State	Franchise	Total Tax		
				2.27	.12	2.49
						64.35

---

# Using Page Segments

Page segments are similar to overlays, except that the construct is stored without specific instructions for type styles and position on the page. Page segments are printed in the type style in use at print time. You can place a page segment anywhere on the page.

One way to use a page segment is as text under a signature, as shown below.

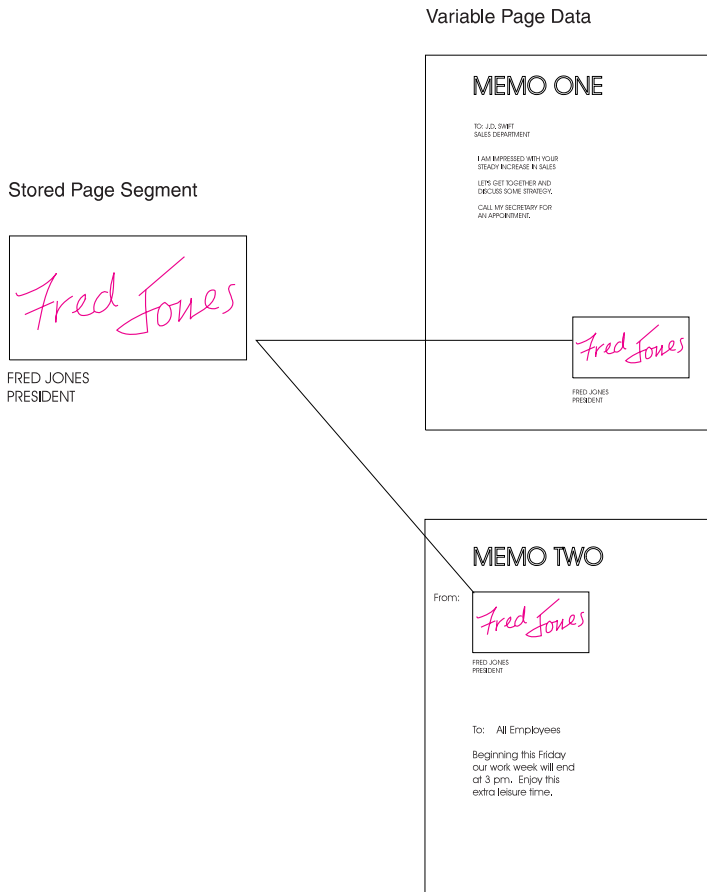

---

# Using Images and Graphics

Graphic material - charts, engineering drawings, and line drawings - can be sent to the printer as IM Images, IO Images, or Graphics. In all-points-addressable printing by the printer, a page can consist of 300 points per inch, 7.8 million printable points, each one of which is individually addressable. These addressable points are called picture elements or pixels.

---

## IM and IO Images

---

Images are figures on the page created by explicitly specifying each pixel in the figure. There is one bit of image data per pixel, so a large quantity of data is needed to create an image.

IM images are uncompressed raster data images. A raster pattern is composed of a series of pixels arranged in scan lines.

IO images are compressed or uncompressed raster data images. Compression generally reduces the amount of data sent to the printer and should significantly save transmission time. IO images may be arbitrarily scaled and corrected for resolution differences between the scanner and the printer.

---

## Graphics

---

Graphics are line drawings created from separate lines, arcs, and markers. With vector graphics, only control information such as the end points of a line are sent to the printer. This process lets you create complex figures with a minimum of data.

For details on graphics commands, see IBM Data Stream and Object Architectures Graphics Object Content Architecture (GOCA) Reference, SC31-6804. For details on IO image commands, see IBM Data Stream and Object Architectures Image Object Content Architecture (IOCA) Reference, SC31-6805.



# Using Bar Codes

Bar code data is encoded information that is recognized by optical scanning devices.

The printer can print the bar code types as shown below in many sizes and variations, such as with or without the human-readable characters.

 <p>123456</p> <p>3 of 9 Alphanumeric</p>	 <p>A - 0 0 - 2 9 - D</p> <p>USS Codabar</p>	 <p>1234567</p> <p>EAN-8</p>
 <p>123456789012</p> <p>EAN-13</p>	 <p>123456789</p> <p>Interleaved 2 of 5</p>	 <p>12345</p> <p>Industrial 2 of 5</p>
 <p>1234567890</p> <p>Matrix 2 of 5</p>		 <p>1234567890</p> <p>MSI</p>
 <p>1 12345678901 2</p> <p>UPC Version A See Note.</p>	 <p>02345600005</p> <p>UPC Version E See Note.</p>	
 <p>12345678901234567</p> <p>3 4 5 6 7</p> <p>EAN-13 with 5-Digit Supplemental</p>		 <p>12345678901234</p> <p>3 4</p> <p>EAN-13 with 2-Digit Supplemental</p>
 <p>POSTNET</p>		 <p>012</p> <p>CODE 128</p>

**Note:** Also can have 2-digit and 5-digit supplemental the same as EAN 13 below.

---

## Printing in Duplex Mode

The printer can print on one or both sides of the paper. All of the printer's IPDS capabilities are provided in either mode.

Duplex printing is controlled through the IPDS Load Copy Control (LCC) command.

# 1. IPDS Overview

---

## About the IPDS Feature

The Intelligent Printer Data Stream (IPDS) is a structured field data stream designed to manage and control All Points Addressable (APA) printers. APA is a printing concept that allows users to position text, images, graphics, and overlays at any defined point on a printed page.

IPDS allows both data and commands to be streamed to the printer via channels, controllers or any type of networking link which supports the transparent transmission of data to print processes that are resident in the device.

Commands within the data stream also allow the "Host" process to control the media handling capabilities of the device, select source drawers, jog output and other operations dealing with paper. In addition, the commands provide the means for managing the downloading of fonts and other stored resources such as overlays and page segments that are required at presentation time to construct the printed page. Finally, the commands provide the means for returning error information and performing recovery actions. The source IPDS architecture document is the Intelligent Printer Data Stream Reference.

The machine supports the following IPDS Architecture command sets.

- Device Control (DC1)
- Text (TX1 with PTOCA PT1, PT2 and PT3)
- IM Image (IM1 with IMD1)
- IO Image (IO1 with IOCA FS10 + 8-bit Grayscale via half-toning), FS11, FS40, FS42 and FS45)
- Graphics (GR1 with GOCA DR/2V0)
- Page Segments (PS1)
- Object Container (OC1)
- Overlay (OL1)
- Loaded Font (LF1 and LF3)
- Bar Code (BC1 with BCD1)

# IPDS Operating States

If the host sends a command inappropriate for the printer state, the printer returns an error code identifying the error and follows Exception Handling Control processing.

---

## Home State

---

The following actions can force the printer to home state, regardless of the current state of the printer:

1. The Set Home State (SHS) command
2. The Execute Order Anystate--Discard Buffered Data (XOA/DBD) command
3. The printer's transmission of a NACK to the host
4. The Arctic link-level Clear command
5. Any non-IPDS print order in NDS (New Display System)
6. An NDS Reset order
7. An NDS System Status Available No Mode order

All these actions will also force the printer to an IPDS command boundary if it is not already on one. To interpret SHS or XOA/DBD, the printer and the host must already be in agreement as to where the IPDS command boundaries are.

Deactivation of fonts with the DF command occurs in Home State.

---

## Overlay State

---

Overlays can be nested to a depth of 6 as indicated in the STM Overlay Command-Set Vector, see "Overlay Command Set", IPDS Technical Reference 2.

---

## Font State

---

An operating state for downloading single-byte Coded Font patterns, Font Character Sets, and Code Pages.

# IPDS Command Format

All IPDS commands are encoded in the following patterns:

Offset	Range	Meaning	Error Code
0-1	X'0005' X'7FFF'	LENGTH	X'0202..02'
2-3		COMMAND	X'8001..00'
	X'D601'	Manage IPDS Dialog	
	X'D603'	No Operation	
	X'D60F'	Load Font Index	
	X'D619'	Load Font Character Set Control	
	X'D61A'	Load Code Page Control	
	X'D61B'	Load Code Page	
	X'D61D'	Load Equivalence	
	X'D61F'	Load Font Control	
	X'D62D'	Write Text	
	X'D62E'	Activate Resource	
	X'D62F'	Load Font	
	X'D633'	Execute Order Anystate	
	X'D634'	Presentation Fidelity Control	
	X'D63C'	Write Object Container Control	

Offset	Range	Meaning	Error Code
2-3	X'D63D'	Write Image Control	
	X'D63E'	Write Image Control 2	
	X'D63F'	Load Font Equivalence	
	X'D64C'	Write Object Container	
	X'D64D'	Write Image	
	X'D64E'	Write Image 2	
	X'D64F'	Deactivate Font	
	X'D65B'	Deactivate Data-Object-Font Component	
	X'D65C'	Deactivate Data Object Resource	
	X'D65D'	End	
	X'D65F'	Begin Page Segment	
	X'D66C'	Data Object Resource Equivalence	
	X'D66D'	Logical Page Position	
	X'D66F'	Deactivate Page Segment	
	X'D67C'	Include Data Object	
	X'D67D'	Include Overlay	
	X'D67F'	Include Page Segment	
	X'D680'	Write Bar Code Control	

Offset	Range	Meaning	Error Code
2-3	X'D681'	Write Bar Code	
	X'D684'	Write Graphics Control	
	X'D685'	Write Graphics	
	X'D68F'	Execute Order Homestate	
	X'D697'	Set Home State	
	X'D69F'	Load Copy Control	
	X'D6AF'	Begin Page	
	X'D6BF'	End Page	
	X'D6CF'	Logical Page Descriptor	
	X'D6DF'	Begin Overlay	
	X'D6E4'	Sense Type and Model	
	X'D6EF'	Deactivate Overlay	
4		FLAGS (Active when Bit value = 1)	X'0204..02'
	Bit 0 0/1	Acknowledgement Required (ARQ)	
	Bit 1 0/1	Correlation Number Present	
	Bit 2 0/1	Acknowledgement Continuation	
	Bit 3-6 000	Reserved	
	Bit 7 0/1	Persistent NACK (DSC non-SNA ONLY, otherwise Reserved)	
5-6	X'0000'-X'FFFF'	CORRELATION ID	

Offset	Range	Meaning	Error Code
7		DATA - The specific operands, parameters and/or data fields as appropriate for the given command.	

## Reserved Bytes

Throughout the command descriptions in the following chapters, some data fields, bytes, and bits are specified as reserved.

When the description for a reserved field, byte, or bit specifies "should be zero," the printer does not check the contents of the bytes or bits. The reserved data should be set to zero, because they could be defined in future changes to the printer. However, non zero values do not cause an error and are ignored by the printer.

When the description for a reserved field, byte, or bit specifies it "must be zero," the printer checks the contents of the bytes or bits and will return error status to the host if the field contains a non zero value.

## Flag Byte

Bit 7 is the Persistent NACK bit for 3270 Non-SNA DSC (Data Stream Compatibility) Mode NACKs. This bit has no meaning in other attachment environments.

Valid values for the Acknowledge Reply Flag byte are described in the Intelligent Printer Data Stream Reference.

## Correlation ID (CID)

The correlation ID (CID) is an identifier of a specific instance of an IPDS command.

It is used to correlate errors with the command that generated them.

It is not possible to correlate all errors with particular IPDS commands. Mechanism errors (for example, out of paper position checks and unpopulated character positions in resident fonts) are never correlated.

Therefore, it is possible for some NACKs to be returned without correlation numbers even if all downstream commands had correlation numbers.



---

## Error Processing

---

The machine supports Page Continuation Action error processing. See Intelligent Printer Data Stream Reference for details.

The printer stops if there is a probability that it is not parsing commands correctly.

This means that, regardless of the setting of the Exception Handling Control (EHC) the printer will stop processing, send a NACK, and enter home state immediately if one of the following conditions occurs:

1. The command length is less than 5 (No correlation number present).
2. The command length is less than 7 (Correlation number present).
3. The command length is greater than 32767.
4. The command does not have X'D6' as the first byte of the command code.
5. The command does have X'D6' as the first byte but is otherwise unrecognized.
6. A resource download is interrupted, resulting in a purge of the partial resource object.

The maximum numbers of queued asynchronous and synchronous errors are as followed.

- One for ARCTIC and NDS DSC mode
- Seven for NDS LU1 mode
- Seven for TCP/IP mode

Intervention required and equipment check exception types will be reported for NDS and TCP/IP interface type.

---

## Exception Highlight Support

---

If a position exception occurs and the "position-check highlight" flag (XOAEHC byte 2, bit 6) is on (B'1'), or if a Page Continuation Action (PCA) is taken for a position check, the approximate location of each unique occurrence of the position check will be highlighted with a Print-Error-Marker (PEM). Other exceptions detected in page state, or a derivative of page state, or when printing a medium overlay, which have a PCA defined, are also indicated by a PEM when the PCA is taken.

A PEM is a distinguishing mark which is placed in close proximity to the area on the page where the exception has occurred.

- The PEM for Position Check processing is a solid rectangular mark, placed in close proximity to the area on the page where the exception occurred. For the exception detected, the associated code (08C100) will be located at the top of the logical page, starting in the left hand corner.
- The PEM for PCA processing is a hollow rectangular mark enclosing a +, placed in close proximity to the area on the page where the exception has occurred, if the location can be accurately specified. For the exception detected, the associated code (040B00) will be located at the top of the logical page, starting in the left hand corner.

- Multiple exception code highlighting is limited to only the codes that will fit across the top of the logical page (10).
- PEM Size: 600 Pixel (80 by 80)

If error exception handling is set to allow printing of an undefined character, the undefined character will appear as:

- A Space if it is unprintable.
- The Character itself if printable.

---

## Page and Copy Counters

---

Page and Copy Counter information is reported using the 18-byte counter format described in Intelligent Printer Data Stream Reference, section "Acknowledge Reply". The following counters are supported:

- Received Page
- Committed Page
- Committed Copy
- Operator Viewing Page
- Operator Viewing Copy
- Jam Recovery Page
- Jam Recovery Copy
- Stacked Page
- Stacked Copy

For Action Code 22, counters are adjusted as follows:

- Received Page - Actual Received Count
- Committed Page - Mapped to Stacked Page
- Committed Copy - Mapped to Stacked Copy
- Operator Viewing Page Counter - Mapped to Stacked Page Counter
- Operator Viewing Copy Counter - Mapped to Stacked Copy Counter
- Jam Recovery Page Counter - Mapped to Stacked Page Counter
- Jam Recovery Copy Counter - Mapped to Stacked Copy Counter
- Stacked Page Counter - Last value
- Stacked Copy Counter - Last Value

---

# Data Types

The machine supports four different types of data that may be used to create an output page. These are: text, graphics, images, and bar codes. The printed page can include any combination of these data types.

Blocks of graphics, bar code or image data are presented as a single unit to the printer. The printer enters the appropriate "Block" State (graphics block, image block, bar code block) to create the entire data group for that block of data.

Page segments and Overlays are any combinations of text, graphics, bar codes and images. The printer can store these segments and overlays for later use as the page is created.

---

## Text

---

Presentation Text is the data type used to present lines of character information on a logical page.

The information to be presented is represented as a string of graphic character IDs and X'2B' control sequences that are sent to the printer in the Write Text command (See "Write Text", IPDS Technical Reference 2). The initial conditions governing the presentation of the data are established via control parameters that are sent to the printer in the Logical Page Description command (See "Logical Page Descriptor", IPDS Technical Reference 2).

The source architecture document for Text is Presentation Text Object Content Architecture Reference.

---

## Image

---

Image is the data type used to present rectangular arrays of raster data in an Image block area on a page.

This data may have been created originally by a scanning process or generated by a computer program. The machine supports the IM Image Function Set (See "IM Image Command Set", IPDS Technical Reference 2). and the IO Image Function Set (See "IO Image Command Set", IPDS Technical Reference 2).

The IM Image Function Set has a syntax and functional content that is based on AFPDS image arrays and cells. The IO Image Function Set has a syntax and functional content based on the IOCA architecture for image data (See Image Object Content Architecture Reference).

The raster data to be presented is represented as a sequence of scan lines 'm' lines deep by 'n' picture elements (pixels) wide. In IO image data, there may be more than one bit per pixel if the image data is grayscale encoded. The format of the data and the recording algorithms used to encode the image array are sent to the printer as control parameters of the Write Image Control 2 command that prepares the printer for processing image data. The data itself is sent in the Write Image 2 command.

---

## Graphics

---

1

Graphics is the data type used to present line art picture drawings in a graphics block area on a page.

The information to be presented is represented by a sequence of primitive drawing orders that are used by the device to construct arcs, lines, fillets, character strings, markers and other elements that define the drawing. These primitive orders, in turn, are grouped into one or more drawing segments that are executed to present the picture.

The Write Graphics Control command (See "Graphics Command Set", IPDS Technical Reference 2) is sent to the printer to establish the clipping window control parameters and initial drawing conditions to be used in presenting the picture data. The picture segments are sent to the printer as data in zero or more Write Graphics commands of the architecture.

The graphics drawing orders are summarized in "Drawing Orders", IPDS Technical Reference 2. The source architecture document for graphics data is the Graphics Object Content Architecture Reference.

---

## Bar Code

---

Bar Code is the data type used to present machine-scannable bar code symbols in a bar code block area on a page.

The Write Bar Code Control command (See "Bar Code Command Set", IPDS Technical Reference 2) is sent to the printer to establish the bar code pattern parameters to be used in presentation. Data for the bar code symbols is sent to the printer in zero or more Write Bar Code commands.

# Coordinate System

## Xm, Ym Coordinate System (Medium Presentation Space)

The Xm, Ym coordinate system is the medium presentation space coordinate system. The origin of this system ( $X_m=0$ ,  $Y_m=0$ ) can be set by the IPDS XOH Set Media Origin command to any of the four corners of the media. If this command is not sent to the printer the origin is the top-left corner (viewed from the center). In this case, positive Xm values begin at the origin and increase along the top edge from left to right. Positive Ym values begin at the origin and increase along the left side from top to bottom. Top is defined as the short edge which leads into the printer. See Intelligent Printer Data Stream Reference for a description of the Xm, Ym Coordinate System and default media origin for envelopes.

## Xp, Yp Coordinate System (Logical Page Presentation Space)

### Identifying the Size of the Logical Page or Overlay

The size of the logical page or overlay presentation space is set during a printer initialization using the "IPDS Initialization Defaults" or by the host program when it sends a Logical Page Descriptor command.

Overlays are logical pages and are handled as such by the printer with the following special considerations:

1. Overlays are positioned in relationship to the logical page presentation space origin ( $X_p=0$ ,  $Y_p=0$ ) when they are merged with the Include Overlay command.
2. Overlays are positioned in relationship to the origin of the medium presentation space ( $X_m=0$ ,  $Y_m=0$ ) when they are merged with the Merge Overlay keyword in a copy control record.

#### Reference

- For details about the "IPDS Initialization Defaults", see p.39 "IPDS Initialization Defaults".

## I, B Coordinates System (Text)

The +I and +B directions for the logical page or overlay are specified in degrees of rotation in relationship to the +Xp direction on the logical page.

The printer sets the +I and +B directions during the initialization through the "IPDS Initialization Defaults". The host program can change the +I and +B directions through the Logical Page Descriptor command (See Intelligent Printer Data Stream Reference).

The host program can also change the +I and +B directions as it builds a page or overlay through text controls in the print data sent by a Write Text command (See "Write Text", IPDS Technical Reference 2).

**Note**

- Setting the orientations of the +I and +B axes also implicitly sets their origins as one of the four corners of the logical page or overlay.

**Reference**

- For details about the "IPDS Initialization Defaults", see p.39 "IPDS Initialization Defaults".

---

## Other Text Positioning Terms

---

Some other terms that relate to text positioning and fonts include:

### Text Orientation

---

The combination of the inline sequence direction (the direction which characters are added to a line) and the baseline sequence direction (the direction which lines are added to a page or overlay) identify the text orientation for a page. The inline sequence direction can be 0, 90, 180 or 270 degrees. The machine supports baseline sequence directions that are always rotated plus or minus 90 degrees from the inline sequence direction. Therefore, there are eight text orientations for printing pages or overlays.

### Printing Baseline

---

An imaginary line that extends across the page or overlay in the positive inline sequence direction (+I), between pixels, and beginning from the baseline sequence printing coordinate (Bc). (Sometimes shown as baseline as in the font terms baseline offset and baseline extent.)

In languages with a right to left or left to right reading order (for example, English), the printing baseline is the imaginary line on which the main body of the character appears to rest. Descenders (the "tails" of lower case g, j, p, q, and y characters) usually extend below the printing baseline.

In languages with a top to bottom reading order (for example, Kanji), the printing baseline is an imaginary vertical line that passes through the center of the character.

Each font index record contains a Font Inline Sequence field. The field value specifies a relationship between the inline sequence direction and the font rotation (the character pattern rotation for the font). The printer uses the font index record to identify how to place characters on the printing baseline for a page or overlay. The characters are placed in the combination of the inline sequence direction (the printing direction) and the font rotation.

The Baseline Offset value is another field in the font index record. This value locates the printing baseline relationship to a specified character box reference edge.

---

## Notation Conventions

---

Some field values (or ranges of values) are specified assuming a unit of measure of 14400 L-units per 10 inches (5670 L-units per 10 centimeters). To determine supported values for a unit of measure of 2400 L-units per 10 inches (945 L-units per 10 centimeters) use the following steps.

1. Convert the specified value from hex (2's complement) to decimal.
2. Divide the + or - decimal number by 6.
3. Round to the nearest integer.
4. Convert the + or - decimal value back to hex (2's complement).

For example, if the specified value is X'8000' the following steps would be performed.

1.  $8000(H) = -32768(D)$
2.  $-32768/6 = -5461.333$
3.  $-5461(D) = EAAB(H)$

# Color Simulation

1

This printer provides "limited color simulation" by either simulating with generated grayscales or substituting "black" in special cases.

- Data objects whose colors are simulated with "grayscale":
  - PTOCA (characters, underscores, overscores, text rules)
  - GOCA (characters, lines, arcs, image, solid-area fill, pattern fill)
  - IM1/IOCA (bi-level image)
  - Object Areas (Pages, Overlays, BCOCA and IOCA)
- Data objects whose colors are simulated with "black":
  - GOCA Markers
  - BCOCA Bar Code Symbols and HRI
- Full Color Image is not supported on this printer since the transformation to grayscale would be very costly from a performance perspective. Host utilities are available to convert full color images to bi-level images for printing on monochrome printers.
- Grayscale Image (8 bits/pixel) is supported on this printer, however for very large images unacceptable performance degradation may result, due to the dithering process to produce bi-level image.

---

## Simulation Modes Supported

---

There are two color simulation modes that may be supported:

- Legacy Mode (Substituting "black" or Pattern Creation)
- Fidelity Mode (Simulation with Grayscale)

The machine supports both the Legacy Mode and the Fidelity Mode of color simulation.

The Legacy Mode is provided to support customer legacy applications where simulation with grayscale would produce unacceptable results. There are console configuration menus to allow customers to select what level of color simulation best meets their needs. There are also console configuration menus to allow customers to select whether or not Color PTOCA (text) Objects should be simulated with grayscale or rendered with black. Rendering all PTOCA objects with black may be desirable, especially when small fonts are utilized.

---

## Color Simulation Processes and Algorithms

---

To allow printing of documents containing color specifications, the specified colors in the document should be simulated in a consistent and predictable manner.



Color simulation occurs independently at the object level.

- Named Colors

Convert Named Color to RGB Process Color using the following table.

This table defines the valid color values used to specify named colors in PTOCA, GOCA, BCOCA, IOCA and IM objects. The table also specifies the RGB values for each named color, assuming that each component is specified with 8 bits and that the component intensity range 0 to 1 is mapped to the binary value range 0 to 255. For a definition of the supported colors for individual objects refer to the appropriate OCA specifications, since some objects only support a subset of the colors.

Range	Named Color	Red (R)	Green (G)	Blue (B)
X'0000' or X'FF00'	Printer Default (Black)	0	0	0
X'0001' or X'FF01'	Blue	0	0	255
X'0002' or X'FF02'	Red	255	0	0
X'0003' or X'FF03'	Pink (magenta)	255	0	255
X'0004' or X'FF04'	Green	0	255	
X'0005' or X'FF05'	Turquoise (cyan)	0	255	255
X'0006' or X'FF06'	Yellow	255	255	0
X'0007'	White	255	255	255
X'0008'	Black	0	0	0
X'0009'	Dark Blue	0	0	170
X'000A	Orange	255	128	0
X'000B'	Purple	170	0	170
X'000C'	Dark Green	0	146	0
X'000D'	Dark Turquoise	0	147	170
X'000E'	Mustard	196	160	32

Range	Named Color	Red (R)	Green (G)	Blue (B)
X'000F'	Gray	131	131	131
X'0010'	Brown	144	48	0
X'FF07'	Printer Default (Black)	0	0	0
X'FF08'	Color of Medium (Reset)			

#### – Simulate RGB Process Color with Grayscale

- Full-process Colors. To maintain output consistency across different printer families, process colors to be simulated are converted to grayscale intensities based on color "luminance" (Y). A luminance of 0 is defined to be black and a luminance of 1 is defined to be white. CIE luminance (Y) is derived using the following "architected" equations:

##### **RGB Color Space:**

Where Y=0 is black, Y=1 is white

$$Y = 0.212(R) + 0.701(G) + 0.087(B)$$

assuming 0 R,G,B 1

Where R, G and B represent the non-gamma-corrected (linear) red, green and blue components.

##### **CIE Lab Color Space:**

CIE Lab space is the exception where the current implementation directly utilizes Lightness (L).

$$L = L$$

assuming 0 L 100

##### **CMYK Color Space:**

Where Y=0 is black, Y=1 is white

$$Y = 1 - \min(1, (0.212C + 0.701M + 0.087Y + K))$$

assuming 0 C,M,Y,K 1

Where the function min (a,b) selects the smaller of (a,b).

- Highlight Colors  
Color Mapping Tables (CMT) are not supported, therefore mapping to process color is not provided.
- Highlight colors are mapped to black with the % coverage applied to produce a gray level.

## Logical Page and Object Area Coloring

### Color Specification

The Color Specification triplet is used to specify the foreground color of the logical page or object area before any object data is placed on the logical page or object area.

Offset	Range	Meaning	Error Code
0	X'0E'-X'10'	TRIPLET LENGTH	X'020E..01'
1	X'4E'	COLOR SPECIFICATION TRIPLET	
2	X'00'	RESERVED	
3		COLOR SPACE (Note 1)	X'020E..02'
	X'01'	RGB - Limited Simulated Color Support	
	X'04'	CMYK - Limited Simulated Color Support	
	X'06'	Highlight - Limited Simulated Color Support	
	X'08'	CIELAB - Limited Simulated Color Support	
	X'40'	Standard OCA - Limited Simulated Color Support	
4-7	X'00000000'	RESERVED	

Offset	Range	Meaning	Error Code
8		1ST COLOR COMPONENT BITS	X'020E..05'
	X'01' - X'08'	(RGB, CMYK, CIELAB)	
	X'10'	(Standard OCA, Highlight)	
9		2ND COLOR COMPONENT BITS	X'020E..05'
	X'00' - X'08'	(RGB, CMYK, Highlight, CIELAB)	
10		3RD COLOR COMPONENT BITS	X'020E..05'
	X'00' - X'08'	(RGB, CMYK, CIELAB)	
11		4TH COLOR COMPONENT BITS	X'020E..05'
	X'00' - X'08'	(CMYK)	

Offset	Range	Meaning	Error Code
12-15		COLOR VALUE	X'020E..03'
		RGB Color Space	X'020E..04'
	X'nn'	Red Intensity	
	X'nn'	Green Intensity	
	X'nn'	Blue Intensity	
		CMYK Color Space	
	X'nn'	Cyan Intensity	
	X'nn'	Magenta Intensity	
	X'nn'	Yellow Intensity	
	X'nn'	Black Intensity	
		Highlight Color Space	
	X'nnnn'	Highlight Color Number	
	X'nn'	Percent Coverage	
	X'nn'	Percent Shading	
		CIELAB Color Space	
	X'nn'	Luminance (L)	
	X'nn'	Chrominance Difference (a)	

Offset	Range	Meaning	Error Code
12-15	X'nn'	Chrominance Difference (b)	
		Standard OCA Color Space	
	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue	
	X'0002' or X'FF02'	Red	
	X'0003' or X'FF03'	Pink	
	X'0004' or X'FF04'	Green	
	X'0005' or X'FF05'	Turquoise	
	X'0006' or X'FF06'	Yellow	
	X'0007'	White - Color of Medium (Reset)	
	X'0008'	Black	
	X'0009'	Dark Blue	
	X'000A'	Orange	
	X'000B'	Purple	
	X'000C'	Dark Green	
	X'000D'	Dark Turquoise	
	X'000E'	Mustard	
	X'000F'	Gray	
	X'0010'	Brown	
	X'FF07'	Printer Default (Black)	
X'FF08'	Color of Medium (Reset)		

## Presentation Space Reset Mixing

The Presentation Space Reset Mixing triplet is used to specify whether or not a logical page or object area is reset to the color of medium before any object data is placed on the logical page or object area.

Offset	Range	Meaning	Error Code
0	X'03'	TRIPLET LENGTH	X'020E..01'
1	X'70'	PRESENTATION SPACE RESET MIXING TRIPLET	
2	Bit 0 0	MIXING FLAGS Do not reset to color of the logical page to color of medium.	
	Bit 0 1	Reset to color of the logical page to color of medium.	
	Bits 1-7 0000000	Reserved	





# 2. Summary of IPDS Commands

## IPDS Initialization Defaults

This chapter lists the IPDS commands that can be used with the printer. For more information about how to use these commands, see the Intelligent Printer Data Stream Reference.

Printer commands listed on the following pages are the valid values as identified in Intelligent Printer Data Stream Reference unless otherwise noted. Where the IPDS architecture allows choices, those choices are indicated.

When you set the printer power switch to the On ( | ) position, various IPDS data stream parameters are set to their initialization default values. These values are used for control parameters when:

- The command stream specifies that the printer default should be used,
- No explicit values are specified in the command stream sent to the printer, or
- Previously transmitted values are lost and initial machine settings are reestablished at POR time.

These values remain in effect until overridden by specific data stream commands from the host application program. The following list of values remain in effect until explicitly overridden by the following IPDS commands:

- Load Copy Control
- Load Font Equivalence
- Logical Page Descriptor
- Logical Page Position
- XOA Exception Handling Control
- XOH Select Input Media Source
- XOH Set Media Origin
- XOH Set Media Size
- Text Control Sequences (STO, SIM, SIA, SBI, SCFL, STC, DIR, and DBR)

Meaning	Default Value
L-Units Base Value	X'00' (10 inches)
L-Units per Base	X'3840' (14400 per 10 inches)
Input Media Source	Determined by the printer's control panel, Forms Device Setting
Media Origin	X'00' (top-left)

Meaning	Default Value
Width of the Physical Page	Derived from X-Extent of Medium Presentation Space
Length of the Physical Page	Derived from Y-Extent of Medium Presentation Space
Width of the Logical Page in L-Units (X p-Extent)	Derived from X-Extent of Medium Presentation Space
Length of the Logical Page in L-Units (Y p-Extent)	Derived from Y-Extent of Medium Presentation Space
Ordered Data Flags	X'00' (Unordered page, block, and text flags)
Inline Sequence	X'0000' (0 degrees)
Baseline Sequence	X'2D00' (90 degrees)
Initial I Print Coordinate	X'0000'
Initial B Print Coordinate	X'00C0' (192 L-Units below the logical page origin)  Text printing on the first line requires the Current B Text Position to be large enough to accommodate the height of the current font.
Xm-Coordinate page origin	X'000000' Logical page X-displacement from the physical page origin (0 in)
Ym-Coordinate page origin	X'000000' Logical page Y-displacement from the physical page origin (0 in)
Initial Inline Margin in L-Units	X'0000'
Inter-character Adjustment	X'0000'
Baseline Increment	X'00F0' (240 L-Units)
Text Color	Black
Code Page ID	From configuration settings

Meaning	Default Value
Font Type	<p>Font selection from configuration settings.</p> <p>The default font may be changed to another font which supports the selected Code Page. For printer generated bar codes with human readable information (HRI), the default font is OCR-B (UPC and EAN bar code types) or OCR-A (other bar code types with HRI).</p>
Exception Handling Control	<p>X'C10101' Report undefined characters, position checks, and all other exceptions. Do not take Alternate Exception Action. Terminate, print page, and go to home state. No highlighting of position checks.</p>
Number of Copy Groups	X'01'
X-Extent of Medium Presentation Space	Determined by Configuration
Y-Extent of Medium Presentation Space	Determined by Configuration
X Coordinate (logical page origin)	X'0000'
Y Coordinate (logical page origin)	X'0000'
Xp-Extent of Logical Page	Derived from X-Extent of Medium Presentation Space
Yp-Extent of Logical Page	Derived from Y-Extent of Medium Presentation Space
Code Page Global ID (CPGID)	Determined by Configuration
Font Global ID (FGID)	Determined by Configuration
Font Width (FW)	Determined by Configuration
Copy Group Definition Length	X'04' (The default copy group definition is four bytes long.)
Number of Identical Copies	X'01' (The printer prints one copy of each page.)
Keyword Entry	X'C100' (The printer prints simplex, no text suppression, no overlays.)

## Page Printer Initialization Sequence

Before printing begins, the host may determine characteristics of the printer and its resources and may specify certain parameters related to subsequent printing.

Following is a typical sequence of initialization commands.

2

- Sense Type and Model (STM) with ARQ
- XOH Obtain Printer Characteristics (OPC) with ARQ
- Set Home State (SHS)
- Logical Page Descriptor (LPD)
- Logical Page Position (LPP)
- Load Copy Control (LCC)
- Load Font Equivalence (LFE) with ARQ

# 3. IPDS Command Set

---

## About IPDS Command Set

For details about following IPDS command sets, see IPDS Technical Reference 2.

- Device Control Command Set
- Presentation Text Command Set
- IM Image Command Set
- IO Image Command Set
- Graphics Command Set
- Bar Code Command Set
- Overlay Command Set
- Page Segment Command Set
- Object Container Command Set
- Loaded Font Command Set



# 4. Exception Reporting, Sense Data, and Recovery

---

## About Exception Reporting, Sense Data, and Recovery

This chapter supplies information about Acknowledge Reply, which the IPDS uses for exception reporting.

The chapter begins with general information followed by tables of the exception reporting codes for the printer. The tables contain details about the specific exceptions. The chapter concludes with a section on printer counter adjustments.

### ↓ Note

- When you have questions about codes from the printer, use this chapter instead of the exception-reporting chapter in the Intelligent Printer Data Stream Reference. Although the two chapters are similar, this chapter contains only those exception codes that the printer returns.

---

### General Reply Rules

---

IPDS uses the Acknowledge Reply command to return both positive and negative replies to the host.

Positive messages are Acknowledge Replies. The negative messages (exception messages) are NACKs and are sent as sense-byte information in the special data area. For more information about Acknowledge Replies, see "Device Control Command Set", IPDS Technical Reference 2.

The following general rules apply to printer replies:

- The printer reports a data-stream exception with a NACK. Only one exception can be returned in each NACK.
- The printer sends an ACK or a NACK in response to an Acknowledgement Required (ARQ) flag. If there is an exception, the printer sends a NACK without receiving an ARQ.
- If the printer receives a command requesting an acknowledgement, it expects the host to wait for the acknowledgement before sending more commands.
- Any data received after an exception is reported is discarded until all queued NACKs have been either sent to the host or cleared by an appropriate linklevel command. An exception on a command can be reported before receiving the entire command data. When an Alternate Exception Action (AEA) or Page Continuation Action (PCA) is not to be taken, the next data received should be part of a new command. Otherwise, an 8001..00 exception may result. The printer might not discard the remaining bytes in a command with an error when reported. Therefore, the next data received should be the start of a new command. As a result, begin the host

data re-transmission only after a synchronizing command (such as XOH Print Buffered Data or XOA Discard Buffered Data) is successfully acknowledged. A terminating condition causes the first NACK to be reported. The next NACK is reported when the next five bytes of data are received. This is usually an IPDS command header. Reporting a NACK discards all data currently received. The process of receiving five bytes and sending a NACK repeats until the NACK queue is exhausted or cleared by the appropriate link-level command.

- An ACK indicates that the data stream was checked and that commands were transformed into the printer's internal command language, with the following exceptions: – Asynchronous-position exceptions and undefined character exceptions are not detected until print time. – The data stream is not checked when IPDS is being saved for future use, as in overlays and page segments, and when more than one copy group is specified in a Load Copy Control (LCC) command. An exception in an overlay or page segment is reported synchronously with the End Page (EP) command on the page it is used. An exception in a saved copy group is reported synchronously after the EP command; that is, in the next command after the EP.
- The XOA Exception-Handling Control (EHC) order tells the printer how to handle exceptions. More information about the EHC order follows.

---

## Exception-Handling Control (EHC)

---

The EHC order lets you control the three exception-handling functions listed below. Brief descriptions of the functions follow this listing.

- Exception Reporting. You can record three types of exception conditions and related exception information and have them reported at specified times using NACKs.
- Alternate Exception Actions (AEA). You can specify whether the printer is to take Alternate Exception Actions (AEAs), which prescribe actions to take when the printer is given an IPDS command or parameters it does not support.
- Exception-Presentation Processing. The exception-presentation processing function has two parts:
  - Page Continuation Actions (PCA). You can specify whether to end or continue processing a page that has an exception.
  - Exception Page Print. You can specify whether the printer is to print or discard a page that was terminated.

## Exception Reporting

---

Use the exception-reporting bits in the Exception-Handling Control (EHC) record to control the recording and reporting of three classes of exceptions:

- Undefined characters
- Position exceptions
- All other exceptions that have AEAs.



When you instruct the printer to record a given class of exception, it always records exceptions that fit in that class. If you instruct the printer not to record a given class of exception, the printer still records such exceptions if the printer was told not to take the AEA.

---

## Classes of Data Stream Exceptions

---

All printer data stream exceptions are returned in 24 bytes of detailed sense information in the special data area of the NACK. The exception-code identifier consists of three bytes: 0, 1, and 19. Byte 0 specifies the exception class; bytes 1 and 19 identify the particular exception.

The six classes of data-stream exceptions are:

- Command Reject
- Intervention Required
- Equipment Check
- Data Check
- Specification Check
- IO Images
- Bar Codes
- Graphics
- General
- Conditions Requiring Host Notification.

For details, see p.51 "Exception-Reporting Codes".

---

## Sense Byte Information

---

The following list gives details of the information in each sense byte.

Byte(s)	Meaning
0	Defines the exception class for the specific exception. It is the first byte of each 3-byte exception ID.
1	Together with sense byte 19, byte 1 defines the specific exception within an exception class. It is the second byte of each 3-byte exception ID.
2	Contains exception-recovery action codes that specify the required actions for the exception conditions. For details, see p.48 "Action Codes in Sense Byte 2".

Byte(s)	Meaning
3	Reserved
4 through 18	<p>Describe the specific cause in three separate formats:</p> <ul style="list-style-type: none"> <li>• Format 0 Provides details about all data stream exceptions other than data check positioning exceptions.</li> <li>• Format 2 Provides details about device exceptions, including intervention-required exceptions, equipment-check exceptions, and conditions requiring host notification.</li> <li>• Format 7 Provides details about data check positioning exceptions.</li> </ul> <p>For details about formats, see p.49 "Formats 0, 1, and 2 for Sense Bytes 4-18 and 20-23".</p>
19	Together with sense byte 1, byte 19 defines the specific exception within an exception class. It is the third byte of each 3-byte exception ID.
20 through 23	Contain additional information about the state of the printer when it senses an exception.

### Action Codes in Sense Byte 2

The action codes in sense byte 2 classify the exception to assist host-exception recovery and allow printing to continue. The action codes listed are the only ones returned by the printer.

Action Code (in hex)	Exception-Recovery Action
01 Data Stream Exception	A syntax error exists in the IPDS data stream. The specific recovery actions depend on the specific exception (sense bytes 0, 1, and 19 in the tables of printer exception codes) and host support requirements. Data stream exceptions occur on the page or resource just before the received page counter.
08 Paper Jam	The printer detects a paper jam. Retransmit all pages and associated resources (overlays, page segments, and fonts) that have not passed the printer-defined jam recovery point.

Action Code (in hex)	Exception-Recovery Action
09 Data-Related Print Exception	A sheet cannot be printed because of something within the data stream. The data might be too complex, too dense, or the media source selected might be incompatible with the media destination selected. The printer has discarded all buffered pages and modified the page and copy counters.
0C Resource Storage Exception	The printer cannot accept a page or resource (overlay, page segment, or font) because the storage area is full. Delete all resources not necessary to continue printing and retransmit the page in progress. If this action fails, the recovery action depends on host support requirements.
15 Cancel	The printer operator requests that the current job be canceled. Cancel the job containing the page at the host-defined canceling point.
1A Re-drive Buffered Pages	The printer may not be in Ready State, may need paper or toner, or may have a full exit tray. Take the appropriate recovery action for the exception code and retransmit all pages and associated resources that have not been committed for printing.
1D Printer Characteristics Changed	At least one of the printer characteristics that is reported in the reply to an XOH OPC command has changed. The host should issue an XOH OPC command to obtain the new printer characteristics.
1E Asynchronous Out-of-Storage Exception	A resource or a page that is not currently being received at the Received Page ID caused an out-of-storage exception. The printer has discarded all buffered pages and reset the page and copy counters.  The page on which this exception was discovered will not print.  The host must issue an XOH PBD to ensure that the page and copy counters are accurately adjusted. After the XOH PBD has returned an ACK, the page in error is the page just before the Committed Page Counter. Cancel the printed data containing the page just before the Committed Page ID.
22 Printer Communications Inoperative	A printer condition exists from which the printer cannot recover without operator intervention. End the communication and the session.

### Formats 0, 1, and 2 for Sense Bytes 4-18 and 20-23

Sense bytes 4 through 18 and 20 through 23 describe the cause of each exception condition. (Sense byte 19 is byte 3 of the exception code.) These descriptions are presented in three separate formats, which are explained below.

**Format 0**

Format 0 provides detailed information for all data stream exceptions except data check positioning exceptions. This format applies to all data check, specification-check, and command-reject exceptions, except for exceptions X'08C1..00', X'020A..05', and X'0411..00'.

Byte(s)	Meaning
4	Data exception, X'DE'
5	Format Identifier, X'00'
6,7	Count of occurrences of the exception (the printer provides an approximate count of occurrences of some exceptions)
8,9	ID of overlay that has an exception
10,11	ID of page segment that has an exception
12,13	Command in process when exception found
14,15	Object Identifier (other than overlay or page segment that has an exception, such as a font exception)
16,17	Identifies a part within an object that has the exception, such as "font"
18	Reserved
20-23	Page Identifier for the page that has the exception

**Format 1**

Format 1 provides detailed information for both data check positioning exceptions. This format applies only to data check exceptions X'08C1..00', X'020A..05', and X'0411..00'.

Byte(s)	Meaning
4	Data exception, X'DE'
5	Format Identifier, X'01'
6, 7	Count of occurrences of the exception (the printer provides an approximate count of occurrences of some exceptions)
8, 18	Reserved
20-23	Page Identifier for the page that has the exception

## Format 2

Format 2 provides detailed information for all device exceptions. This format applies to all intervention-required and equipment-check exceptions and for conditions requiring host notification.

Byte(s)	Meaning
4	System Reference Code, X'BF'
5	Format Identifier, X'02'
6-23	Format Identifier, X'02'

4

## Exception-Reporting Codes

The following tables describe all printer exception codes that are returned to the host in the special data area of a NACK.

Each exception code is identified by three bytes: byte 0, byte 1, and byte 19. The first table lists the names of the exception classes which are returned in byte 0. The subsequent tables give detailed information about each of the groups listed in the first table.

### ↓ Note

- The printer provides an approximate count of occurrences of some exceptions.

## Exception Classes

Sense Byte 0	Exception Class and Description
X'80'	Command Reject—the printer cannot recognize a received command.
X'50'	Equipment Check with Intervention Required—the printer detects a condition caused by hardware failure or hardware limitations, and manual intervention at the printer is required.
X'40'	Intervention Required—the printer detects a condition that requires manual intervention, such as "out of paper".
X'20'	Reserved
X'10'	Equipment Check—the printer detects an equipment malfunction or hardware error.

Sense Byte 0	Exception Class and Description
X'08'	Data Check—the printer detects a position exception or an undefined character exception.
X'05'	Specification Check - IO Images—the printer detects an invalid or unsupported data value in an IO image command.
X'04'	Specification Check - Bar Codes—the printer detects an invalid or unsupported data value in a bar code command.
X'03'	Specification Check - Graphics—the printer detects an invalid or unsupported data value in a graphics command.
X'02'	Specification Check - General—the printer detects an invalid or unsupported data value in a received command.
X'01'	Conditions Requiring Host Notification—the printer detects a condition that requires action by the host.

### Tables of Printer Exception Codes

The following tables list specific exception classes and are arranged in three columns. The first column lists the 3-byte ID given in sense bytes 0, 1, and 19. The second column gives a description of each exception. The third column lists the action code given in sense byte 2.

Typically, when an exception has a defined AEA, the PCA is the AEA. Also, no PCA is taken when the command is received in Home state or Font state.

In each table, the exceptions are listed in ascending numeric order.

#### ↓ Note

- The term architecturally valid refers to the range of values permitted by the IPDS architecture. An "invalid" value denotes one outside the range defined by the architecture. "Supported" values are those that the printer accepts. Therefore, "unsupported" values may be valid by architecture but not in the printer implementation.
  - The machine supports 24 Byte Sense data (See "Sense Type and Model", IPDS Technical Reference 2).
  - The machine supports AEA and PCA error processing. See Intelligent Printer Data Stream Reference for details on Sense byte information and error processing.
- The maximum number of queued asynchronous and synchronous errors is 1 for Twinax and Coax DSC mode and 7 for Coax LU1 mode and TCP/IP mode.
- The cause of the exception and the Alternate Exception Action (AEA) are the same as specified in Intelligent Printer Data Stream Reference unless otherwise noted.

## TCP/IP Sense Data

### Intervention Required Sense Data

Exception ID	Meaning	Action Code
X'4000..00'	Printer not ready	3
X'4001..00'	Out of paper	3
X'4002..00'	Output bin full	3
X'4004..00'	Out of toner	3
X'4031..00'	Paper Length Check	3
X'4033..00'	Paper Width Check	3
X'407C..00'	Out of Staples	3
X'407C..01'	Staple jam	3
X'407C..03'	Punch waste bin full	3
X'40E6..00'	Cover open	3

## IPDS Exceptions Reported

### Command Reject Exceptions

Exception ID	Meaning	Action Code
X'8001..00'	Invalid IPDS command code	01
X'8002..00'	Invalid IPDS command sequence	01
X'8004..00'	Data received after ARQ	01
X'80E0..00'	Invalid IPDS command length	01

### Equipment Check with Intervention Required

Exception ID	Meaning	Action Code
50F8..00	Media Source X'nn' is not available (has been disabled).	01

### Intervention Required Exceptions

Exception ID	Meaning	Action Code
X'4000..00'	<p>Printer is not ready:</p> <ul style="list-style-type: none"> <li>• The printer is in a not-ready state.</li> <li>• Alternate Exception Action: none.</li> <li>• Page Continuation Action: none.</li> </ul>	1A
X'4001..00'	<p>Printer is out of paper:</p> <ul style="list-style-type: none"> <li>• The printer is out of paper, and paper was not added within specified amount of time.</li> <li>• Alternate Exception Action: none.</li> <li>• Page Continuation Action: none.</li> </ul>	1A
X'4002..00'	<p>The printer's exit tray is full:</p> <ul style="list-style-type: none"> <li>• The printer's exit tray is full and it was not emptied within a specified amount of time.</li> <li>• Alternate Exception Action: none.</li> <li>• Page Continuation Action: none.</li> </ul>	1A



Exception ID	Meaning	Action Code
X'4004..00'	<p>Printer is out of toner:</p> <ul style="list-style-type: none"> <li>The printer is out of toner, and toner was not added within a specified amount of time.</li> <li>Alternate Exception Action: none.</li> <li>Page Continuation Action: none.</li> </ul>	1A
X'4031..00'	<p>Paper Length Check</p> <ul style="list-style-type: none"> <li>The printer has detected a paper-length check, and it has not been corrected by the operator after a specified amount of time.</li> <li>Alternate Exception Action: none.</li> <li>Page Continuation Action: none.</li> </ul>	1A
X'4033..00'	<p>Paper Width Check</p> <ul style="list-style-type: none"> <li>The printer has detected a paper-width check, and it has not been corrected by the operator after a specified amount of time.</li> <li>Alternate Exception Action: none.</li> <li>Page Continuation Action: none.</li> </ul>	1A
X'407C..00'	Out of Staples	1A
X'407C..01'	Staple jam	08
X'407C..03'	Punch waste bin full	1A

Exception ID	Meaning	Action Code
X'40E5..00'	Paper jam recovery needed: <ul style="list-style-type: none"> <li>• A paper jam has occurred and has not been cleared within a specified amount of time. Any lost pages must be resent.</li> <li>• Alternate Exception Action: none.</li> <li>• Page Continuation Action: none.</li> </ul>	08
X'40E6..00'	Cover open	03
X'40E8..nn'	Supported but not installed media source ID	1A

**Equipment Check Exceptions**

Exception ID	Meaning	Action Code
X'10F1..00'	Permanent hardware exception: <ul style="list-style-type: none"> <li>• A permanent hardware failure exists.</li> <li>• The microcode detected either a logic exception from which the printer could not recover or a condition that should not have occurred.</li> <li>• Alternate Exception Action: none.</li> <li>• Page Continuation Action: none.</li> </ul>	22

## Data Check Exceptions

Exception ID	Meaning	Action Code
X'0821..00'	Undefined character	01
X'0860..00'	Numeric representation precision check	01
X'08C1..00'	Numeric representation precision check	01

## IO-Image Specification Exceptions

4

Exception ID	Meaning	Action Code
X'0500..01'	Invalid or unsupported IO Image SDF code	01
X'0500..03'	Invalid or unsupported IO Image SDF	01
X'0500..04'	Invalid IO Image SDF value	01
X'0570..0F'	IO Image Begin Segment out of sequence	01
X'0571..0F'	IO Image End Segment out of sequence	01
X'0591..0F'	IO Image Begin Image Content out of sequence	01
X'0592..0F'	IO Image Data SDF out of sequence	01
X'0593..0F'	IO Image End Image Content out of sequence	01
X'0594..01'	Inconsistent Image Size Parameter value and Image data	01
X'0594..0F'	IO Image Size Parameter missing or out of sequence	01

Exception ID	Meaning	Action Code
X'0594..11'	IO Image Size cannot be determined	01
X'0595..0F'	IO Image Encoding Parameter out of sequence	01
X'0595..10'	IO Image Encoding Parameter unsupported Value	01
X'0595..11'	IO Image Decompression error	01
X'0596..0F'	IO Image Data Element Size Parameter out of Sequence	01
X'0596..10'	IO Image Data Element Size Parameter unsupported value	01
X'0596..11'	IO Image Data Element Size Parameter and Image Encoding Parameter inconsistent	01
X'0597..0F'	IO Image Look Up Table ID Parameter out of sequence	01
X'0597..10'	IO Image Look Up Table ID Parameter unsupported Value	01
X'05A9..02'	IO Image data outside the Image Presentation Space	01

### Bar Code Specification Exceptions

Exception ID	Meaning	Action Code
X'0403..00'	Invalid or unsupported bar code type	01
X'0404..00'	Unsupported local-font ID or font not available	01
X'0405..00'	Invalid or unsupported bar code color	01

Exception ID	Meaning	Action Code
X'0406..00'	Invalid or unsupported module width	01
X'0407..00'	Invalid or unsupported element height	01
X'0408..00'	Invalid or unsupported height multiplier	01
X'0409..00'	Invalid or unsupported wide-to-narrow ratio	01
X'040A..00'	Invalid or unsupported symbol origin	01
X'040B..00'	Invalid or unsupported bar code modifier	01
X'040C..00'	Invalid or unsupported bar code data length	01
X'040E..00'	Check-digit calculation exception	01
X'040F..00'	Unsupported 2D bar code size	01
X'040F..01'	Invalid structured append sequence indicator	01
X'040F..02'	Structured append sequence indicator too large	01
X'040F..03'	Mismatched structured append information	01
X'040F..04'	Invalid number of structured append symbols	01
X'040F..05'	Invalid symbol mode value	01
X'040F..06'	Invalid data symbol characters per row value	01
X'040F..07'	Invalid desired number of row values	01

Exception ID	Meaning	Action Code
X'040F..08'	Too much data for a PDF417 bar code	01
X'040F..09'	Invalid security level value	01
X'040F..0A'	Incompatible combination of Data Matrix parameters	01
X'040F..0B'	Invalid structured append file identification value	01
X'040F..0C'	Invalid Macro PDF417 Control Block length value	01
X'040F..0D'	Invalid Macro PDF417 Control Block data	01
X'040F..0E'	Invalid QR Code EBCDIC Code Page value	01
X'040F..0F'	Invalid QR Code Version value	01
X'040F..10'	Invalid QR Code Error Correction-level value	01
X'040F..11'	Incompatible combination of QR Code Special-function flags	01
X'0410..00'	Invalid or unsupported human-readable interpretation location	01
X'0411..00'	Attempt to print portion of symbol outside block or VPA	01

### Graphics Specification Exceptions

Exception ID	Meaning	Action Code
X'0300..01'	Unallocated or unsupported graphics order or command code	01
X'0300..02'	Reserved byte exception or invalid attribute set	01

Exception ID	Meaning	Action Code
X'0300..03'	Incorrect drawing order length	01
X'0300..04'	Invalid attribute value	01
X'0300..08'	Truncated order exception	01
X'0300..0C'	Segment prolog exception	01
X'0300..0E'	Unsupported attribute value	01
X'0300..21'	Invalid or unsupported default	01
X'0334..00'	Character angle value not supported	01
X'033E..00'	Invalid End Prolog	01
X'0360..00'	Area bracket exception	01
X'0368..00'	Begin Area received incorrectly	01
X'0368..01'	Area truncated exception	01
X'0368..02'	Supported order invalid in area	01
X'0368..03'	Pattern Symbol Set not supported	01
X'0368..04'	Undefined pattern symbol	01
X'0370..01'	Unsupported Begin Segment Introducer segment flag	01
X'0370..82'	Invalid Begin Segment Introducer segment flag	01
X'0370..C1'	Invalid Begin Segment Introducer length	01
X'0370..C5'	Insufficient Segment Data	01
X'0392..00'	Graphics image order sequence exception	01
X'0392..01'	Image data discrepancy	01

Exception ID	Meaning	Action Code
X'0393..00'	Graphics image bracket exception	01
X'0393..01'	Incorrect number of Image Data drawing orders	01
X'03C2..00'	Marker Symbol Set not supported	01
X'03C2..01'	Undefined marker code	01
X'03C3..00'	Font not available	01
X'03C3..01'	Undefined graphics character code	01
X'03C6..01'	Arc drawing check	01
X'03D1..00'	Truncated graphics image exception	01
X'03D1..01'	Invalid order in graphics image	01
X'03D1..02'	Graphics image format not supported	01
X'03D1..03'	Image width greater than maximum supported	01
X'03D1..04'	Image height greater than maximum supported	01
X'03E1..00'	Relative line outside coordinate space	01

### General Specification Exceptions

Exception ID	Meaning	Action Code
X'0200..01'	Embedded Control Sequence Code Exception	01
X'0202..01'	End Suppression (ESU) text-control exception	01



Exception ID	Meaning	Action Code
X'0202..02'	Invalid or unsupported IPDS command length	01
X'0202..05'	Invalid data self-defining-field length	01
X'0203..02'	IPDS Command Header Length too small	01
X'0203..05'	Invalid or unsupported block orientation	01
X'0204..01'	EP command encountered	01
X'0204..02'	Invalid use of Acknowledgement Continuation Bit	01
X'0204..05'	Invalid or unsupported area-position reference system	01
X'0205..01'	Invalid spanning sequence	01
X'0205..05'	Invalid or unsupported self-defining-field unit base	01
X'0206..01'	Invalid Begin Suppression (BSU)	01
X'0206..05'	Invalid or unsupported self-defining field L-units	01
X'0207..05'	Invalid or unsupported self-defining-field extents or Graphic Window values inconsistent	01
X'0208..05'	Invalid or unsupported mapping option	01
X'0209..05'	Invalid or unsupported axis offsets	01
X'020B..05'	Invalid self-defining-field identifier	01

Exception ID	Meaning	Action Code
X'020E..02'	Invalid or unsupported Color Space	01
X'020E..03'	Invalid or unsupported Color value	01
X'020E..05'	Invalid or unsupported number of bits for a color component	01
X'020F..01'	Invalid or unsupported Set Text Orientation (STO)	01
X'0210..01'	Invalid or unsupported Set Inline Margin (SIM)	01
X'0211..01'	Invalid or unsupported Set Baseline increment (SBI)	01
X'0212..01'	Invalid or unsupported inter-character adjustment	01
X'0213..01'	Invalid or unsupported Absolute Move Baseline (AMB)	01
X'0214..01'	Invalid or unsupported Absolute Move Inline (AMI)	01
X'0214..02'	The font resource to be deactivated is not found	01
X'0215..01'	Invalid or unsupported Relative Move Inline (RMI)	01
X'0215..02'	Invalid or unsupported DF command font or font-section ID	01
X'0216..01'	Invalid or unsupported Relative Move Baseline (RMB)	01
X'0217..01'	Invalid or unsupported Set Variable-Space Increment (SVI)	01
X'0217..02'	Invalid or unsupported DF command deletion type	01

Exception ID	Meaning	Action Code
X'0218..02'	Invalid, unsupported, or unavailable font ID	01
X'0219..01'	Invalid or Unsupported value for Repeat String (RPS) repeat length	01
X'0219..02'	Multiple occurrences of the same LFE font-equivalence number	01
X'021A..01'	Repeat String (RPS) or Transparent Data (TRN) exception	01
X'021B..01'	Repeat String (RPS) target-string length exception	01
X'021B..02'	Invalid or unsupported Load Font Control unit base for L-units	01
X'021C..01'	Invalid escape sequence	01
X'021C..02'	Invalid LFC command byte-count value	01
X'021D..02'	Invalid or unsupported the Load Font Equivalence global font ID	01
X'021E..01'	Invalid WT text-control length	01
X'021F..01'	Repeat String (RPS) length exception	01
X'021F..02'	Mismatch of LFE command font Host-Assigned IDs	01
X'0220..02'	Invalid Load Font Control (Byte 36 value)	01
X'0221..02'	Invalid or unsupported Load Font Control font-index format	01
X'0222..02'	Invalid or unsupported Load Font Control data pattern format	01

Exception ID	Meaning	Action Code
X'0223..02'	Invalid or unsupported Load Font Control font-type bits	01
X'0226..02'	Invalid or unsupported LSS or LFC X-box size	01
X'0227..02'	Invalid or unsupported LSS or LFC Y-box size	01
X'022A..02'	Invalid or unsupported Load Font Control L-Units per unit base in the X-direction	01
X'022B..02'	Invalid or unsupported Load Font Control L-Units per unit base in the Y-direction	01
X'022D..02'	Invalid or unsupported Load Font Control character-data alignment	01
X'022E..02'	Insufficient font data received	01
X'0231..01'	Invalid or unsupported Load Copy Control number of copies	01
X'0232..01'	Invalid or unsupported Load Copy Control Keyword in copy-group entry	01
X'0232..02'	Excess font data received	01
X'0234..01'	Invalid or unsupported Load Copy Control entry-byte count	01
X'0236..01'	Invalid or unsupported Load Copy Control simplex/duplex parameter	01
X'0237..01'	Invalid or Unsupported LCC N-up Parameter	01
X'0237..03'	Invalid or Unsupported LCC Media Destination Parameter	01

Exception ID	Meaning	Action Code
X'0237..04'	Incompatible Media Source and Media Destination	01
X'0237..05'	Mixture of Media Source or Destination IDs in a duplex copy-subgroup pair	01
X'0238..01'	Maximum supported number of Overlays per LCC copy-group exceeded	01
X'0239..01'	Maximum supported number of Suppressions per LCC copy-group exceeded	01
X'0239..02'	Load Font Control font Host-Assigned ID already assigned	01
X'023A..02'	Maximum number of Fonts allowed by printer exceeded	01
X'023C..02'	Invalid or unsupported value within Load Font Index command	01
X'023E..02'	Invalid Load Font Control character-pattern address	01
X'023F..02'	STO-SCFL-LFE mismatch	01
X'0240..02'	Invalid or unsupported value for Font Inline Sequence	01
X'0242..01'	WIC pixel count is less than the minimum required	01
X'0243..01'	WIC command pixel count is greater than the maximum supported value	01
X'0243..02'	Invalid double-byte font-section identifier	01
X'0244..01'	WIC command scan count is less than the minimum required	01

Exception ID	Meaning	Action Code
X'0245..01'	WIC command scan count is greater than the maximum supported value	01
X'0246..01'	Invalid WIC source image format	01
X'0246..02'	Invalid parameter for the Load Font Index command	01
X'0247..01'	Invalid or unsupported Write Image Control magnification factor	01
X'0247..02'	Invalid or unsupported Load Font Equivalence font-inline sequence	01
X'0248..01'	Invalid or unsupported Write Image Control scan-line direction	01
X'0249..01'	Invalid scan-line-sequence direction in the WIC command	01
X'024A..01'	Invalid or unsupported Write Image Control image block location	01
X'0253..01'	Invalid or unsupported Write Image Control image color	01
X'0254..41'	Invalid Finishing Fidelity Triplet Length	01
X'0254..42'	Invalid Finishing Fidelity Triplet Continue value	01
X'0254..43'	Invalid Finishing Fidelity Triplet Report value	01
X'0254..51'	Invalid Text Fidelity Triplet Length	01

Exception ID	Meaning	Action Code
X'0254..52'	Invalid Text Fidelity Triplet Continue value	01
X'0254..53'	Invalid Text Fidelity Triplet Report value	01
X'0258..03'	Invalid or unsupported text color	01
X'0260..02'	Invalid or unsupported Load Page Descriptor Xp and I L-units per unit base	01
X'0261..02'	Invalid L-Units (Yp) Value in the LPD command	01
X'0262..02'	Invalid or unsupported Load Page Descriptor Xp-extent	01
X'0263..02'	Invalid or unsupported Load Page Descriptor Yp-extent	01
X'0264..02'	Invalid or unsupported Load Page Descriptor unit base	01
X'0268..02'	Invalid or unsupported Load page Descriptor	01
X'0269..02'	Invalid baseline-sequence direction in the LPD command	01
X'026A..01'	Insufficient source image data	01
X'026A..02'	Invalid or unsupported LPD initial I print coordinate	01
X'026B..01'	Excess source image data received	01
X'026B..02'	Invalid or unsupported LPD initial B print coordinate	01
X'026F..02'	Invalid XOH-SMO Media Origin	01

Exception ID	Meaning	Action Code
X'0270..02'	Invalid or unsupported XOH Set Media Size L-units per unit base	01
X'0272..02'	Invalid or unsupported XOH Set Media Size Xm-extent	01
X'0273..02'	Invalid or unsupported XOH Set Media Size Ym-extent	01
X'0274..02'	Invalid or unsupported XOH Set Media Size unit base	01
X'0277..01'	Group Termination Exception	01
X'027A..01'	Invalid triplet length value in a group triplet	01
X'027B..01'	Incorrect number of triplet data bytes in a group triplet	01
X'027C..01'	Incompatible finishing operations	01
X'027C..02'	Too many or too few sheets for a finishing operation	01
X'027C..03'	Invalid or unsupported finishing operation type	01
X'027C..04'	Invalid or unsupported finishing operation reference corner and edge	01
X'027C..05'	Unsupported finishing operation count	01
X'027C..06'	Invalid or unsupported finishing operation axis offset	01
X'027C..07'	Invalid or unsupported number of finishing positions	01
X'027C..09'	Finishing operation incompatible with physical media or media destination	06



Exception ID	Meaning	Action Code
X'027C..0A'	Incompatible media destination change in a group to be finished	06
X'0280..02'	Invalid or unsupported rule width	06
X'0282..02'	Invalid or unsupported rule length	01
X'0285..01'	Invalid or unsupported Delete Overlay command overlay ID	01
X'0287..02'	Invalid or unsupported Load Font Control unit base for Pixel-units	01
X'0288..02'	Invalid or unsupported Load Font Control Pixel-units per unit base in the X-direction	01
X'0289..02'	Invalid or unsupported Load Font Control Pixel-units per unit base in the Y-direction	01
X'028A..01'	Invalid or unsupported Delete Page Segment command page segment Host-Assigned ID	01
X'028A..02'	Invalid or unsupported Load Font Control Relative-Metric Multiplying Factor	01
X'028F..01'	Invalid or unsupported AR command parameter values	01
X'028F..02'	AR activation command failed	01
X'028F..03'	Invalid Resource ID triplet length	01
X'028F..04'	Invalid or unsupported resolution or metric-technology value	01

Exception ID	Meaning	Action Code
X'028F..10'	Invalid or unsupported value in a Metric Adjustment triplet	01
X'028F..11'	Baseline adjustment value too large or too small	01
X'0290..01'	Invalid or unsupported Overlay ID	01
X'0291..01'	BO overlay ID already loaded	01
X'0291..02'	Invalid or unsupported XOA Request Resource list entry	01
X'0292..01'	Overlay ID not loaded	01
X'0293..01'	Recursive overlay invocation	01
X'0294..01'	Invalid or unsupported page segment Host-Assigned ID	01
X'0295..01'	Page segment Host-Assigned ID already loaded	01
X'0295..02'	Invalid or unsupported XOH Page Counters Control page-counter update	01
X'0296..01'	Page segment Host-Assigned ID not loaded	01
X'0297..01'	Overlay nesting limit exceeded	01
X'0298..01'	Invalid or unsupported suppression number	01
X'0298..03'	Invalid or unsupported Temporary Baseline Move text control	01
X'029A..01'	Invalid overstrike character increment	01
X'02A4..01'	Page boundary in the X-direction cannot be presented by the printer	01

Exception ID	Meaning	Action Code
X'02A5..01'	Page boundary in the Y-direction cannot be presented by the printer	01
X'02AC..01'	Insufficient Main Storage to print the Sheet	09
X'02AD..01'	Invalid or unsupported Load Page Position command	01
X'02AE..01'	Invalid or unsupported parameter in an IO command	01
X'02AF..01'	Insufficient storage to print the sheet	0C
X'02AF..01'	Asynchronous Insufficient storage to print the sheet	1E
X'02B0..00'	LCPC Code Page HAID already in use	01
X'02B0..01'	Invalid LCPC Code Page HAID	01
X'02B0..02'	Invalid or Unsupported LCPC Encoding Scheme	01
X'02B0..04'	Too much or too little code page data	01
X'02B0..05'	Invalid or Unsupported LCPC Byte count	01
X'02B0..07'	Code points out of order in LCP command	01
X'02B0..0A'	LFCSC HAID already assigned	01
X'02B0..0B'	Invalid LFCSC HAID	01
X'02B0..0C'	Invalid or Unsupported LFCSC pattern technology ID	01
X'02B0..0E'	Invalid or Unsupported LFCSC Byte count	01

Exception ID	Meaning	Action Code
X'02B0..0F'	Invalid or Unsupported LFCSC Map size	01
X'02B1..01'	Invalid or Unsupported LF Character ID format	01
X'02B1..02'	Invalid LF technology specific ID offset	01
X'02B1..03'	Invalid LF technology specific ID length	01
X'02B1..04'	GCGIDs out of order in a Font Character Set	01
X'02B1..08'	Invalid LF technology specific object length	01
X'02B1..09'	LF checksum mismatch	01
X'02B1..0A'	Invalid Name Length in LF3 technology specific object	01
X'02B1..0B'	Invalid data within a LF3 technology specific object	01
X'02B2..01'	Parent character set not activated	01
X'02B2..02'	Font character set extension not valid with pattern technology	01
X'02B2..03'	Mismatched character ID format in a LF command	01
X'02B2..04'	Mismatched MICR printing flag in a LFCSC command	01
X'02C0..01'	Mixture of Xm-axis duplex and Ym-axis duplex copy groups	01
X'02C0..02'	Mixture of N-up copy subgroups in a LCC command	01
X'02C0..03'	More than one N-up keyword specified in a copy subgroup	01

Exception ID	Meaning	Action Code
X'02C0..04'	Duplexing and N-up not supported together	01
X'02C0..05'	N-up partitioning not supported with envelope media	01
X'02C1..01'	Maximum number of simplex or duplex keywords in an LCC command	01
X'02C1..02'	Internal value not unique in an LE command	01
X'02C2..01'	Odd number of duplex copy groups in an LCC command	01
X'02C2..02'	More than one Media Source or Destination Keyword specified in a copy subgroup	01
X'02C3..01'	Mixture of simplex and duplex parameters in an LCC command	01
X'02C4..01'	Unequal copy counts in an LCC command	01
X'02C5..01	Unable to delete resource (needed on duplex side)	01
X'02C5..02'	Physical media not compatible with duplex printing	01
X'02C6..01'	Unable to deactivate a component of an activated coded font	01
X'02C6..02'	Invalid mapping type in an LE command	01
X'02C8..01'	An unsupported Input Media Source ID was specified	01
X'02C8..02'	Invalid or unsupported internal value or external value in an Load Equivalence command	01

Exception ID	Meaning	Action Code
X'02FF..02'	Exceptions detected but not queued	01

### Host Notification Exceptions

Exception ID	Meaning	Action Code
X'0100..00'	Normal Printer Restart (Printer IMLed or IPDS Dialog Resources Deleted)	0D
X'0101..00'	Media Size or Input Media Source ID Changed	1D
X'0180..00'	Request to end IPDS Dialog	05
X'018F..00'	Error Printer Restart (Printer IMLed)	0D
X'01E4..00'	Cancel Key Pressed	15

### Page Counter Adjustments

To identify which page or pages to send to the printer after an exception occurs, the host program must determine the position of the sheets in the paper path.

Count fields in the ACK command identify the state of a virtual paper path that includes a count of the number of pages received, the number of pages past the jam-recovery point, and the number of pages stacked.

The printer tracks the following:

- Received Page Counter
- Committed Page Counter
- Committed Copy Counter
- Stacked Page Counter
- Stacked Copy Counter

All other counters are mapped to the Stacked Page Counter (for pages) and the Stacked Copy Counter (for copies).

The following rules define how the counters are updated:

- After power is switched on, all counter values equal X'0000'.
- When a counter containing X'FFFF' increments, the counter wraps to X'0000'.
- The counters are updated as shown in the following table as each condition is detected.
- The Copy Counters are incremented when more than one copy of a page is printed. When all copies have passed a station, the Copy Counter is then reset to zero and the Page Counter is incremented.

The Copy Counters are not reset to zero during exception recovery.

Condition (in hex)	Counters	Counter Adjustments
Action Codes 08 22	Received Page Counter	Set to Jam Recovery Page Counter
	Committed Page Counter	Set to Jam Recovery Page Counter
	Committed Copy Counter	Set to Jam Recovery Page Counter
	Operator Viewing Page Counter	Set to Jam Recovery Page Counter
	Operator Viewing Copy Counter	Set to Jam Recovery Page Counter
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	Set to Jam Recovery Page Counter
	Stacked Copy Counter	Set to Jam Recovery Copy Counter
Action Codes 15 1A 1D	Received Page Counter	Set to Committed Page Counter
	Committed Page Counter	No change
	Committed Copy Counter	No change
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change

Condition (in hex)	Counters	Counter Adjustments
Action Code 0C	Received Page Counter	No change
	Committed Page Counter	No change
	Committed Copy Counter	No change
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change
Action Code 01	Received Page Counter	No change
	Committed Page Counter	No change
	Committed Copy Counter	No change
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change



Condition (in hex)	Counters	Counter Adjustments
Action Code 1E	Received Page Counter	Set to Committed Page Counter
	Committed Page Counter	No change
	Committed Copy Counter	No change
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change
All other action codes	Received Page Counter	No change
	Committed Page Counter	No change
	Committed Copy Counter	No change
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change

Condition (in hex)	Counters	Counter Adjustments
Command XOA - Discard Buffered Data	Received Page Counter	Set to Committed Page Counter
	Committed Page Counter	No change
	Committed Copy Counter	No change
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change
Normal Counter Wrap (on a Per-Counter Basis)	Received Page Counter	Reset to 0
	Committed Page Counter	Reset to 0
	Committed Copy Counter	Reset to 0
	Operator Viewing Page Counter	Reset to 0
	Operator Viewing Copy Counter	Reset to 0
	Jam Recovery Page Counter	Reset to 0
	Jam Recovery Copy Counter	Reset to 0
	Stacked Page Counter	Reset to 0
	Stacked Copy Counter	Reset to 0

Condition (in hex)	Counters	Counter Adjustments
Command XOH - Page Counters Control	Received Page Counter	For details about XOH PCC command, see "Device Control Command Set", IPDS Technical Reference 2.
	Committed Page Counter	
	Committed Copy Counter	
	Operator Viewing Page Counter	
	Operator Viewing Copy Counter	
	Jam Recovery Page Counter	
	Jam Recovery Copy Counter	
	Stacked Page Counter	
	Stacked Copy Counter	

#### ↓ Note

- Should not be incremented for page in error (that is, any partial page is discarded).
- The Received Page Counter should be incremented if a partial or complete page is printed.
- For Action Code X'1E', the host should issue an XOH Print Buffered Data command with the ARQ bit on and a unique correlation ID (to ensure that the Acknowledge Reply matches the Print Buffer Data [PBD] command) to cause the Committed Page/Copy Counter to reflect the page in error.

## Page and Copy Counter Adjustments for Data-Stream Exceptions

The following are counter adjustments for simplex copy groups.

Condition (in hex)	Counters	Counter Adjustments
Action Code 01 and the page is printed	Received Page Counter	Does not reflect the page in which the error occurs.
	Committed Page Counter	No change
	Committed Copy Counter	Reflects any committed copies resulting from prior error-free copy groups.
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change
Action Code 01 and the page is not printed	Received Page Counter	Reflects the page in which the error occurs, only if the error occurred on the last copy group.
	Committed Page Counter	No change
	Committed Copy Counter	Reflects any committed copies resulting from prior error-free copy groups or from the copy group in error.
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change

The following are counter adjustments for duplex copy groups.

Condition (in hex)	Counters	Counter Adjustments
Action Code 01 on the front side and the page is printed	Received Page Counter	Reflects the page in which the error occurs (the front side) only if the error occurred on the other in a copy group other than the first copy group.
	Committed Page Counter	No change
	Committed Copy Counter	Reflects any committed copies resulting from prior error-free copy group pairs.
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change
Action Code 01 on back side and the page is not printed	Received Page Counter	Does not reflect the page in the error occurs (the back side) it does reflect the front side.
	Committed Page Counter	No change
	Committed Copy Counter	Reflects any committed copies resulting from prior error-free copy group pairs.
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change

Condition (in hex)	Counters	Counter Adjustments
Action Code 01 on the front side and the page is not printed	Received Page Counter	Reflects the page in which the error occurs (front side).
	Committed Page Counter	No change
	Committed Copy Counter	Reflects any committed copies resulting from prior error-free copy group pairs.
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change
Action Code 01 on the back side and the page is printed	Received Page Counter	Reflects the page in which the error occurs (back side) only if the error occurred on the last copy group. Reflects front side.
	Committed Page Counter	No change
	Committed Copy Counter	Reflects any committed copies resulting from prior error-free copy group pairs or from the copy group in error.
	Operator Viewing Page Counter	No change
	Operator Viewing Copy Counter	No change
	Jam Recovery Page Counter	No change
	Jam Recovery Copy Counter	No change
	Stacked Page Counter	No change
	Stacked Copy Counter	No change

# 5. Code Page and Font Identification

## About Code Page and Font Identification

The machine supports both raster and outline technology fonts: Single and Double byte. The resident single-byte LF1 "raster" fonts are generated using outline font technology (IBM AFP Font Collection): the IBM Core Interchange Font Set, the IBM Coordinated Font Set and the 4028 Compatibility Font Set.

The valid combinations of GCSGID/CPGID, GCSGID/FGID/FW, or GCSGID/ CPGID/FGID/FW are too numerous to list here. They can be obtained by the host using the Any state command "XOA Request Resource List", IPDS Technical Reference 2 with the appropriate Resource Type and RIDF.

They can also be determined by using the information under p.95 "Resident IPDS Fonts" with the criteria described in the following sections:

### ↓ Note

- The machine supports Download and Capture of Font Resources. There is Date/Time stamp information to help identify versions of font resources. p.89 "Coded Font" includes the Date/Time stamps for the resident fonts.
- The machine will report DBCS raster font (and any captured raster fonts) using the RRL command when the IPDS Resolution (op panel) setting is Independence Mode. If the IPDS Resolution (op panel) setting is an Acceptance Mode, only those raster fonts with resolutions that match the current Acceptance mode resolution setting (240 or 300 or 600 DPI), will be reported via RRL.

### RRL RT'06' Code Page (CPGID)

Values are listed in p.93 "Font Terms", p.95 "Resident IPDS Fonts", and p.97 "XOA-RRL Replies for Font Character Sets", and will be reported via XOA-RRL RT 06 RIDF 03.

### RRL RT'12' Specific Code Pages (GCSGID/CPGID)

Valid combinations are listed in p.93 "Font Terms", p.97 "XOA-RRL Replies for Font Character Sets", and p.97 "XOA-RRL Replies for Font Character Sets", and will be reported via XOA-RRL RT 12 RIDF 03.

### RRL RT'11' Graphic Character Sets (GCSGID SUB/SUPERSETS)

Valid combinations are listed in p.97 "XOA-RRL Replies for Font Character Sets" (GCSGID Subsets for the Strategic Font Set 2) and will be reported via XOA-RRL RT 11 RIDF 03.

## RRL RT'07' Font Character Sets (GCSGID/FGID/FW)

- Valid combinations for the IBM Core Interchange Set are listed in p.90 "Code Page" (IBM Core Interchange Resident Scalable Font Set), and will be reported via XOARRL RT 07 RIDF 03.
  - Scalable Font Width (FW) will be reported as 0 to the host PSF. This indicates that any width/scale-factor is valid.
  - p.92 "Operating System/400 Terms" (GCSGID Subsets for IBM Core Interchange Fonts) shows the subset GCSGIDs for each of the listed superset GCSGIDs in p.90 "Code Page" (IBM Core Interchange Resident Scalable Font Set). These subset GCSGIDs are valid combinations for the associated superset GCSGIDs in the GCSGID/ FGID/FW, but will not be added to the RRL 0703 response unless required by the host PSF's.
- Valid combinations for the IBM Coordinated Set are listed in p.97 "XOA-RRL Replies for Font Character Sets" (Resident PSC Strategic Scalable Font Set 2) and will be reported via XOA-RRL RT 07 RIDF 03.
  - Scalable Font Width (FW) will be reported as 0 to the host PSF. This indicates that any width/scale-factor is valid.
  - p.97 "XOA-RRL Replies for Font Character Sets" (GCSGID Subsets for the Strategic Font Set 2) shows the subset GCSGIDs for each of the listed superset GCSGIDs in p.96 "IBM Core Interchange Resident Scalable Font Set (IPDS only)" (Resident PSC Strategic Scalable Font Set 2). These subset GCSGIDs are valid combination entries for the associated superset GCSGIDs in the GCSGID/FGID/FW, but will not be added to the RRL 0703 response unless required by the host PSF's.
- Valid combinations for the 4028 Compatibility Set require p.94 "Font and Code Page Selection" (FGID/FW) and p.95 "Resident IPDS Fonts" (GCSGID), and will be reported via XOA-RRL RT 07 RIDF 03.
  - The FW's for these fonts are non-zero, because they represent fixed-width fonts.
  - The Alternate FGIDs are valid values for GCSGID/FGID/FW combinations.
  - Native Mode - These fonts (which are representing 4028 raster fonts) don't have a GCSGID of their own, so the GCSGID used is from the associated Code Pages (CPGIDs).The GCSGIDs are obtained by finding the Code Page(s) in p.95 "Resident IPDS Fonts" that matches the Code Page(s) listed for a given FGID/FW entry in p.94 "Font and Code Page Selection". The GCSGID for each of the Code Pages listed with an FGID is a valid combination entry. Since these fonts don't have a superset GCSGID, there is no subset condition. So each of these unique GCSGID/FGID/FW combinations will be added to the XOA-RRL 0703 report to the host PSF.
  - 4028 Emulation Mode - These fonts (which are representing 4028 raster fonts) don't have a GCSGID of their own, so the GCSGID used is 0.



## RRL RT'01'/'03'/'10' RIDF'03' (GCSGID/CPGID/FGID/FW = GRID)

- Valid combinations for the IBM Core Interchange Set require p.90 "Code Page" (IBM Core Interchange Resident Scalable Font Set) (superset GCSGID/FGID/FW), p.92 "Operating System/400 Terms" (GCSGID Subsets for IBM Core Interchange Fonts) (GCSGID subsets) and p. 93 "Font Terms" (GCSGID/ CPGID), and will be reported via XOA-RRL RT 01 RIDF 03 (also RT 10 RIDF 03). In all GRIDs, the GCSGID chosen will belong to the Code Page, as this is almost always the subset of the outline font GCSGID.
  - Scalable Font Width (FW) will be reported as 0 to the host PSF. This indicates that any width/scale-factor is valid.
  - CPGIDs and GCSGIDs are listed in p.93 "Font Terms". For each pair, determine which FGIDs in p.90 "Code Page" (IBM Core Interchange Resident Scalable Font Set) which contains the p.93 "Font Terms" GCSGID as a subset. An example is that there would be 51 GRID combinations for the Times New Roman Medium font...FGID is always 2308, FW is always 0, and there are 51 unique CPGID/GCSGID pairs in Table p.93 "Font Terms" which are subsets of the superset GCSGID 1269.
- Valid combinations for the IBM Coordinated Set require p.119 "IBM Coordinated Font Set (IPDS)" (Resident PSC Strategic Scalable Font Set 2) (superset GCSGID/FGID/FW), p.121 "IBM Coordinated Font Set Code Page Set" (GCSGID Subsets for the Strategic Font Set 2) (GCSGID subsets) and p.106 "IBM Core Interchange Resident Code Page Set" and p.121 "IBM Coordinated Font Set Code Page Set" (GCSGID/CPGID), and will be reported via XOA-RRL RT 01 RIDF 03 (also RT 10 RIDF 03). In all GRIDs, the GCSGID chosen will belong to the Code Page, as this is almost always the subset of the outline font GCSGID.
  - Scalable Font Width (FW) will be reported as 0 to the host PSF. This indicates that any width/scale-factor is valid.
  - CPGIDs and GCSGIDs are listed in p.93 "Font Terms" and p.97 "XOA-RRL Replies for Font Character Sets". For each pair, determine which FGIDs in p.96 "IBM Core Interchange Resident Scalable Font Set (IPDS only)" (Resident PSC Strategic Scalable Font Set 2) can combine with them. This is done by finding the superset GCSGID in p.97 "XOA-RRL Replies for Font Character Sets" (GCSGID Subsets for the Strategic Font Set 2) which contains the p. 93 "Font Terms" GCSGID as a subset. An example is that there would be 41 GRID combinations for the Letter Gothic font...FGID is always 400, FW is always 0, and there are 41 unique CPGID/GCSGID pairs in p.93 "Font Terms" and p.97 "XOA-RRL Replies for Font Character Sets". which are subsets of the superset GCSGID 2039.
- Valid combinations for the 4028 Compatibility Set require p.94 "Font and Code Page Selection" (FGID/FW) and p.95 "Resident IPDS Fonts" (GCSGID/CPGID), and will be reported via XOA-RRL RT 01 RIDF 03. In all GRIDs, the GCSGID chosen will belong to the Code Page, as this is almost always the subset of the outline font GCSGID.
  - The FW's for these fonts are non-zero, because they represent fixed-width fonts.
  - The Alternate FGIDs are valid values for FGID/FW combinations.

- The GCSGID/CPGID pairs for each font are obtained by finding the Code Page(s) in p.95 "Resident IPDS Fonts" that match the Code Page(s) listed for a given FGID/FW pair in p.94 "Font and Code Page Selection".


# 6. Fonts

---

## IBM Font Structure

In IBM AFP terminology, a font has three components. They are:

- Coded font
- Character set
- Code page

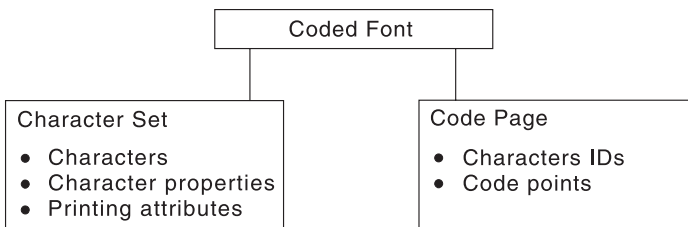

### ↓ Note

- These terms have different meanings in Operating System/400 (OS/400). See p.92 "Operating System/400 Terms" for what these terms mean in OS/400.

---

## Coded Font

---

In IBM font structure, a coded font translates your request for type (for example, text you previously entered at a computer terminal) into characters for printing.

A coded font consists of two parts:

- References to specific character sets
- References to specific code pages

A character must be included in the specified character set and listed on the specified code page before it can be printed.


A coded font associates a specific code page with a specific character set. A coded font contains one code-page and one character-set pair.

---

## Character Set

---

In IBM font structure, a character set corresponds to the definition of a font; it contains the characters of a single type family, typeface, and type size. In addition, a character set specifies character properties and printing attributes.

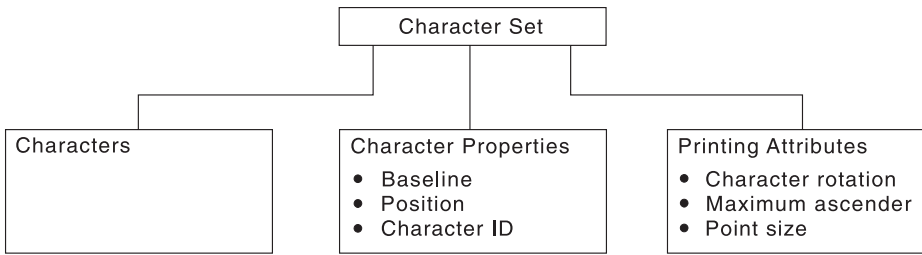

## Characters

Characters are the letters, numerals, punctuation marks, or other symbols of a font.

## Character properties

Character properties detail how a character is positioned relative to the characters around it. Some character properties include the following:

- The baseline of a character, showing its general alignment
- The dimensions of space in which the character is printed
- The position of the character within that space
- The identifier of the character (the character ID)

One of the character properties is the character ID (or graphic character ID). Each character is assigned a character ID; for example, the character A (uppercase A) is assigned the character ID LA020000.

The purpose of a character ID is to distinguish the character from similar characters. For example, the following characters look similar; however, they are different and are assigned different character IDs:

Minus sign (-): Character ID SA000000

Hyphen (-): Character ID SP100000

Em dash (—): Character ID SM900000

For a list of character IDs and the graphic character each represents, refer to "ABOUT TYPE: IBM's Technical Reference for Core Interchange Digitized Type".

## Printing attributes

The printing attributes define how the character set will be printed. Some printing attributes include rotation of characters, maximum ascender, and point size.

---

## Code Page


---

A code page is a set of symbols that can be printed by your printer. These symbols can be letters, numbers, or graphic elements such as lines or patterns. The symbols may be grouped to be specific to a country, language, or special symbol set. By supporting different code pages, the printer can support different language requirements.

No particular typeface is assumed for any particular code page. The typeface is defined as a font by the assignment of size, weight, and posture.

## Character IDs and Code Points

In IBM font structure, a code page maps each character of text to the characters in a character set. The following figure shows how a code page maps text to the characters in a character set. As you enter your text at a computer terminal, each keyboard character is translated into a code point. When the text is printed, each code point is matched to a character ID on the code page you specified. The character ID then is matched to the image (raster pattern) of the character in the character set you specified. The image in the character set is the image that is printed in your text. To be a valid code page for a particular character set, all character IDs in the code page must be included in that character set.

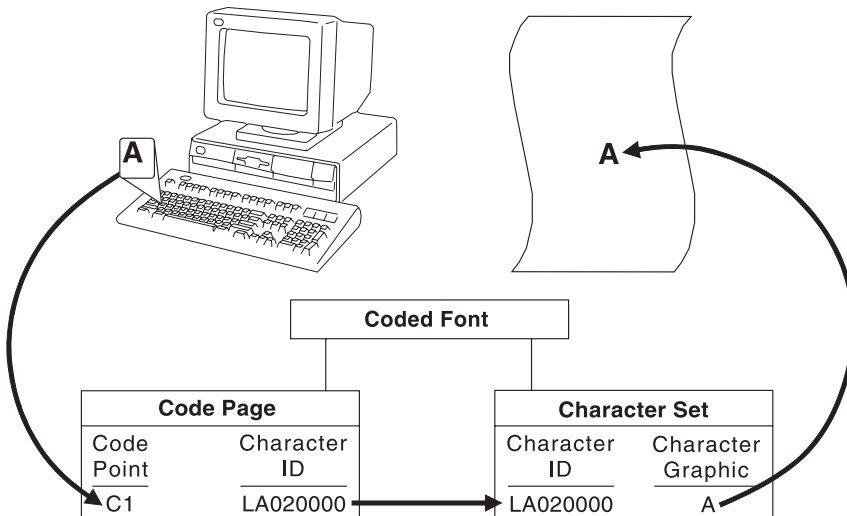

Every code page has 256 positions, or code points, that represent potential characters. Each of the code points is normally identified by its bit configuration in hexadecimal, with two hex characters per byte. The range of values is hex 00 through hex FF, or 256 values. The code page determines which character prints for each of the printable code points.

A character ID is an 8-byte standard identifier for a character regardless of its type family. For example, all uppercase "A" have the same character ID (LA020000). Character IDs also are called graphic character identifiers (GCIDs).

Binary: 11000001

Decimal: 193

Hexadecimal: C1

The following figure shows an example of a part of a code page. When the printer receives hexadecimal code point C1 for the code page shown (code page 00037 Version 1), it prints an uppercase A (character ID LA020000). Baselines for each character on the example code page show the general alignment of characters.

CPGD: 37  
CCSGID: 637

Hex Codes 1st → 2nd ↓	4-	5-	6-	7-	8-	9-	A-	B-	C-	D-	E-	F-
-0	SP0000	SP0000	SP0000	SP0000	SP0000	SP0000	SP0000	SP0000	SP0000	SP0000	SP0000	SP0000
-1	SP0000	LE10000	SP0000	LE10000	SP0000	LE10000	SP0000	LE10000	SP0000	LE10000	SP0000	LE10000
-2	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000
-3	LA7000	LE7000	LA7000	LE7000	LA7000	LE7000	LA7000	LE7000	LA7000	LE7000	LA7000	LE7000
-4	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000
-5	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000	LA10000	LE10000
-6	LA9000	LE9000	LA9000	LE9000	LA9000	LE9000	LA9000	LE9000	LA9000	LE9000	LA9000	LE9000
-7	LA7000	LE7000	LA7000	LE7000	LA7000	LE7000	LA7000	LE7000	LA7000	LE7000	LA7000	LE7000
-8	LC4000	LE3000	LC4000	LE3000	LC4000	LE3000	LC4000	LE3000	LC4000	LE3000	LC4000	LE3000

### Different Code Pages

Code pages accommodate various national languages by using characters and special symbols appropriate to the language. Code pages can have identical character IDs assigned to different code points.

6

For example, the character é (lowercase e accent acute, character ID LE1 10000) has the following code point assignment in two different code pages:

- Hexadecimal code point 51 in code page 00037 Version 1
- Hexadecimal code point 5A in code page 00280 Version 1

### Operating System/400 Terms

Table 158 lists the IBM AFP font terminology and describes how it is used with the OS/400 printing interfaces.

AFP Term	OS/400 AFP Implementation	OS/400 Print File Term
Coded font	*FNTRSC object with CDEFNT attribute	Coded font
Character set	*FNTRSC object with FNTCHRSET attribute	Font
Code page	*FNTRSC object with CDEPAG attribute	Character ID (CHRID)

**Note**

- This is not the character ID that identifies individual characters within an AFP character set. This is a control object that identifies a code page by two numbers representing a character set ID and a code page ID.

---

## Font Terms

---

A font is a complete set of characters in a particular typeface, type size, and code page.

The following terms help define a font:

### Character Set

A set of numeric, alphabetic, or graphic characters with their assigned code points.

### Code Page

A table of alphanumeric characters and graphic characters each of which is assigned a 1-byte value (a code point). These values define which characters will print.

### Code Page Global ID (CPGID)

Identifies a specific set of code points assigned to a specific list of graphic character IDs.

### Font Global ID (FGID)

Specifies a value for selecting a font. IBM fonts have a preassigned FGID value.

### Graphic Character Set Global ID (GCSGID)

Identifies the list of graphic character IDs included in the code page.

### Spacing

Also called font width or escapement. Spacing is the distance from the start of a character to the start of the next character. Font spacing can be defined by spacing type:

- Fixed-pitch fonts – All characters in a fixed-pitch font have the same spacing, which is specified as the number of characters per inch.
- Typographic fonts – Typographic fonts are identified as Typo.

Most documents are easier to read if the widths of the characters vary, that is, if a W is printed wider than an I. Typographic fonts have this variability. These fonts are sized by height, not width.

Seventy-two points equals approximately one inch. Therefore, a 10-point font is 10/72 inch high.

Type height includes some white space above and below the printed character for adequate minimum spacing between the lines of type.

Text is most readable when character spacing ranges from 8 to 12 points. For example, the text in this document is 10 point.

#### Note

- For typographic fonts, it is recommended that the first and last print positions on each line be left blank.
  - Proportionally spaced machine (PSM) fonts – Proportionally spaced machine fonts are identified by PSM or PS. PSM fonts are a compromise between the variability of typographic sizes and the simple uniformity of fixed pitch. With PSM fonts, the widths of the characters vary. For example, a lowercase "i" has a different width than an uppercase W. However, a specific character in one font will be the same width in another font. For example, a W in one

PSM font is the same width as the W in every other PSM font. Therefore, it is possible to have only one character-width table that applies to every PSM font.

### Posture

Refers to a character's incline, or tilt. Roman posture is upright. Italic posture is inclined to the right.

### Type Size

Also called point size. Specifies the overall height of the font, measured in printer's points. A point is 1/72 inch. For example, a 12-point font is 1/6 inch high.

### Typeface

Also called type style. Specifies the shape and design of each letter of the alphabet. A complete alphabet of letter designs makes up one typeface.

### Weight

Refers to the thickness of the strokes that make up the characters of a font, as in a bold font weight.

---

## Font and Code Page Selection

---

### 6

Printers with an IPDS feature receive IPDS commands to specify fonts. The IPDS command set can select any font or code page supported by the printer. See the printer User's Guide for a list of the IPDS fonts supported. However, host software may restrict the actual fonts or code pages that can be selected. This includes typographic and nontypographic fonts in all pitches, point sizes, and widths. The information provided to the printer to select a font is called a GRID (Global Resource Identifier). The GRID consists of the following (See p.93 "Font Terms" for a description of these terms):

- FGID (Font Global Identifier)
- GCSGID (Graphic Character Set Global Identifier)
- CPGID (Code Page Global Identifier)
- Font Width

For typographic fonts with the same FGID, specify the FONT WIDTH parameter to the printer. The printer needs the font width parameter to identify the font in order to specify the point size. The FONT WIDTH parameter is described in detail in the IPDS section.

You can select the code page and code page version from a configuration setting. Refer to your printer's User's Guide for instructions on changing code page and code page version configuration settings. Some system software does not allow you to change code pages by software and uses the printer default code page for printing. The printer factory default character set is 0697 and the code page is 00037 version 1.

This may require you to change the printer code page to match the system software.

### Note

- When using an application that does not allow selection of font width, use the alternate FGID when available to access typographic fonts.



## Resident IPDS Fonts

Printer will support outline fonts from both the IBM Core Interchange Font Set and the IBM Coordinated Font Set as resident fonts. In addition, selections of these fonts are grouped into the 4028 Compatibility Font set. This set is used to represent the 4028 base internal raster fonts for limited compatibility. The font technologies used in the printer are:

IBM Core Interchange - Type 1 Outlines

IBM Coordinated - Type 1 Outlines

4028 Compatibility - Type 1 Outlines

3820 ROM Font Compatibility - Raster

### Resident Font Activation Methods

Fonts resident within the Printer may be activated using the following IPDS commands. Note that some fonts have restrictions on allowable font activation methods.

#### Load Font Equivalence

The Load Font Equivalence (LFE) command maps font local identifiers, specified within text, graphics or bar code data, to font Host Assigned IDs (HAIDs) and Global Resource IDs (GRIDs).

If the GRID specified in the LFE command matches a GRID contained in the printer, the font is activated.

#### Activate Resource (Load Resource Equivalence)

The Activate Resource (AR) command (previously known as Load Resource Equivalence) maps Host Assigned IDs to global names of another format. The format for the global name is identified by a resource type and resource ID combination.

If the Printer has a resource that matches the global name in the AR command, that resource is activated.

The following combinations of Resource Type and Resource ID Format are supported by the Printer.

Resource Type	RT Hex	Resource ID Format	RIDF Hex
Single Byte Coded Raster Font	X'01'	IBM GRID	X'03'
Single Byte Coded Raster Font	X'01'	MVS Host Unalterable	X'06'
Double Byte Coded Font Section	X'03'	IBM GRID	X'03'
Double Byte Coded Font Section	X'03'	MVS Host Unalterable	X'06'

Resource Type	RT Hex	Resource ID Format	RIDF Hex
Code Page	X'06'	IBM GRID	X'03'
Font Character Set	X'07'	IBM GRID	X'03'
Single Byte Coded Font Index	X'08'	IBM GRID	X'03'
Single Byte Coded Font Index	X'08'	MVS Host Unalterable	X'06'
Double Byte Coded Font Index	X'09'	IBM GRID	X'03'
Double Byte Coded Font Index	X'09'	MVS Host Unalterable	X'06'
Coded Font	X'10'	IBM GRID	X'03'
Coded Font	X'10'	Coded Font Format	X'07'

## IBM Core Interchange Resident Scalable Font Set (IPDS only)

### 6

The IBM Core Interchange fonts as shown in Table 159 will be supported as resident fonts in the following language groups:

- Latin 1/2/3/4/5
- Symbols
- Arabic
- Cyrillic Greek
- Hebrew
- Thai
- Lao
- Katakana

p.97 "XOA-RRL Replies for Font Character Sets" (IBM Core Interchange Resident Scalable Font Set) lists the typefaces resident in the Printer and includes the valid FGID and code pages for each font. The Date Stamp on the character sets with GCSGIDs of 1269, 1275, 1300, 1264, and 1265 is 94350, and the Time Stamp used is 00:00:00.00. The Date Stamp on the character sets with a GCSGID of 1355 is 98152 and the Time Stamp used is 00:00:00.00. The Date Stamp used on the remaining character sets is 02185, and the Time Stamp used is 00:00:01.00.

p.105 "GCSGID Subsets" provides a mapping of the valid subsets of the GCSGIDs listed for the IBM Core Interchange fonts.

## XOA-RRL Replies for Font Character Sets

The resident set as shown in Table 159 will support a font character set of any valid font width when queried as an individual font character set.

When queried for a list of font character sets, the resident character sets will be reported with a font width of zero. A font width of zero indicates that the font is scalable.

Valid combinations of the CPGIDs, GCSGIDs, FGIDs and Font Widths for the resident fonts are defined in p.85 "About Code Page and Font Identification".

### IBM Core Interchange Resident Scalable Font Set

Typeface	FGID	GCSGID	Font Width	Code Pages
Latin 1/2/3/4/5 with Euro and Vietnamese				
Times New Roman Medium	2308	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Times New Roman Bold	2309	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Times New Roman Italic Medium	2310	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Times New Roman Italic Bold	2311	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Roman Medium	2304	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Roman Bold	2305	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Italic Medium	2306	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Italic Bold	2307	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".

Typeface	FGID	GCSGID	Font Width	Code Pages
Courier Roman Medium	416	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Roman Bold	420	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Italic Medium	424	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Italic Bold	428	1503	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Symbols with Euro				
Times New Roman Medium	2308	1191	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Times New Roman Bold	2309	1191	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Roman Medium	2304	1191	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Roman Bold	2305	1191	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Roman Medium	416	1191	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Roman Bold	420	1191	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
APL2				
APL2	307	1364	Scalable	293, 310, 910

Typeface	FGID	GCSGID	Font Width	Code Pages
APL2 Bold	322	1364	Scalable	293, 310, 910
Cyrillic Greek with Euro				
Times New Roman Medium	2308	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Times New Roman Bold	2309	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Times New Roman Italic Medium	2310	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Times New Roman Italic Bold	2311	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Roman Medium	2304	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Roman Bold	2305	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Italic Medium	2306	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Helvetica Italic Bold	2307	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Roman Medium	416	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Roman Bold	420	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".

Typeface	FGID	GCSGID	Font Width	Code Pages
Courier Italic Medium	424	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Italic Bold	428	1504	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Arabic with Euro				
ITC Boutros Setting Medium	2308	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
ITC Boutros Setting Bold	2309	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
ITC Boutros Setting Italic Medium	2310	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
ITC Boutros Setting Italic Bold	2311	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
ITC Boutros Modern Rokaa Medium	2304	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
ITC Boutros Modern Rokaa Bold	2305	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
ITC Boutros Modern Rokaa Italic Medium	2306	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
ITC Boutros Modern Rokaa Italic Bold	2307	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".

Typeface	FGID	GCSGID	Font Width	Code Pages
Boutros Typing Medium	416	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Boutros Typing Bold	420	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Boutros Typing Italic Medium	424	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Boutros Typing Italic Bold	428	1506	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Hebrew with Euro				
Narkissim Medium	2308	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Narkissim Bold	2309	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Narkissim Italic Medium	2310	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Narkissim Italic Bold	2311	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Narkiss Tam Medium	2304	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Narkiss Tam Bold	2305	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".

Typeface	FGID	GCSGID	Font Width	Code Pages
Narkiss Tam Italic Medium	2306	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Narkiss Tam Italic Bold	2307	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Shalom Medium	416	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Shalom Bold	420	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Shalom Italic Medium	424	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Shalom Italic Bold	428	1362	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Thai				
Burirum Medium	2308	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Burirum Bold	2309	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Burirum Italic Medium	2310	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Burirum Italic Bold	2311	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".



Typeface	FGID	GCSGID	Font Width	Code Pages
Thonburi Medium	2304	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Thonburi Bold	2305	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Thonburi Italic Medium	2306	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Thonburi Italic Bold	2307	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Thai Medium	416	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Thai Bold	420	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Thai Italic Medium	424	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Thai Italic Bold	428	1505	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Lao				
Kaewfah Medium	2308	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Kaewfah Bold	2309	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".

Typeface	FGID	GCSGID	Font Width	Code Pages
Kaewfah Italic Medium	2310	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Kaewfah Italic Bold	2311	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Pusuwan Medium	2304	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Pusuwan Bold	2305	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Pusuwan Italic Medium	2306	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Pusuwan Italic Bold	2307	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Lao Medium	416	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Lao Bold	420	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Lao Italic Medium	424	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Courier Lao Italic Bold	428	1341	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Katakana				
Katakana Gothic	304	1306	Scalable	290, 897, 1027, 1041, 1139

## GCSGID Subsets

The following table provides a mapping of the valid subsets of the GCSGIDs listed for the IBM Core Interchange fonts.

### GCSGID Subsets for IBM Core Interchange Fonts

GCSGID	Valid GCSGID Subsets
1269	0101, 0103, 0119, 0251, 0265, 0269, 0273, 0277, 0281, 0285, 0288, 0289, 0293, 0297, 0301, 0305, 0309, 0313, 0317, 0321, 0325, 0329, 0337, 0341, 0611, 0697, 0919, 0959, 0965, 0980, 0982, 0983, 0987, 0990, 0991, 0993, 0995, 1111, 1132, 1133, 1145, 1146, 1149, 1152, 1166, 1167, 1174, 1188, 1189, 1198, 1220, 1232, 1233, 1237, 1256, 1258, 1259, 1260, 1261, 1268, 1286, 1301, 1302, 2039
1355	1269, 2041
2041	0695, 0988, 1243, 1353, 1412, 2039
1275	0340, 0630, 0909, 1191, 1257
1264	0235, 0994, 1154, 1162, 1177, 1244
1265	0941, 0687, 0986, 0992, 1147, 1199, 1217, 1218
1300	0218, 0925, 0960, 0981, 0985, 0996, 0998, 1150, 1190, 1231, 1235, 1249, 1251, 1276, 1401
1279	1102, 1395, 1396
1304	380, 963, 1113
1306	332, 1122, 1164, 1172, 1187
1364	1304, 1330, 1340
1362	1265, 1356, 1357, 1358, 1360
1502	969
1503	1305, 1336, 1346, 1347, 1355, 1375, 1377, 1378, 1380, 1391, 1392, 1393, 1394, 1397, 1410, 1414, 1418, 1421
1504	1300, 1331, 1338, 1371, 1373, 1381, 1383, 1385, 1387, 1388, 1390, 1411, 1413, 1441

GCSGID	Valid GCSGID Subsets
1505	1279
1506	1264, 1461, 1463, 1464, 1465

## IBM Core Interchange Resident Code Page Set

The following lists the code pages used with the IBM Core Interchange Resident Fonts. Not all code Pages apply to each font; this is determined by the character set. Please correlate the GCSGIDs found in the following lists with the correct IBM Core Interchange Font GCSGID superset in p.105 "GCSGID Subsets" to determine which code pages apply to a particular font family.

### IBM Core Interchange Resident Code Page Set

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
Latin 1 Country Extended Code Pages		
37	697	US English, Canadian English, Canadian French, Dutch, Brazilian Portuguese, Portuguese
273	697	Austrian, German
274	697	Belgian
275	697	Brazilian
277	697	Danish, Norwegian
278	697	Finnish, Swedish
280	697	Italian
281	697	Japanese
282	697	Portuguese
284	697	Castilian Spanish, Latin American, Spanish
285	697	UK English
297	697	French, Catalan

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
500	697	Multinational, Belgium French, Belgium, Dutch, Swiss French, Swiss, German, Swiss Italian
871	697	Icelandic
1140	695	US English, Canadian English, Canadian French, Dutch, Brazilian Portuguese, Portuguese ECECP
1141	695	Austrian, German ECECP
1142	695	Danish, Norwegian ECECP
1143	695	Finnish, Swedish ECECP
1144	695	Italian ECECP
1145	695	Castilian Spanish, Latin American, Spanish ECECP
1146	695	UK English ECECP
1147	695	French, Catalan ECECP
1148	695	Multinational ECECP, Belgium, French, Belgium Dutch, Swiss, French, Swiss German, Swiss Italian
1149	695	Icelandic ECECP
Latin 1 EBCDIC Publishing Code Pages		
361	1145	Multinational, Belgium French, Belgium, Dutch, Swiss French, Swiss, German, Swiss Italian
382	1145	German
383	1145	Belgian
384	1145	Brazilian Portuguese
385	1145	Canadian French
386	1145	Danish, Norwegian

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
387	1145	Finnish, Swedish
388	1145	French, Catalan
389	1145	Italian
390	1145	Japanese
391	1145	Portuguese
392	1145	Castilian Spanish
393	1145	Latin American Spanish
394	1145	UK English
395	1145	US English, Canadian English
Latin 1 ASCII Code Pages		
437	919	Multinational, US English, UK English, Dutch, German, Finnish, French, Italian, Spanish, Swedish
850	980	Multinational PC
858	988	Multinational PC with Euro
860	990	Portuguese (Primary = 850)
861	991	Icelandic (Primary = 850)
863	993	Canadian French (Primary = 850)
865	995	Nordic (Primary = 850)
1004	1146	IBM PC Desktop Publishing
819	697	ISO Latin 1
1252	1412	Windows Latin 1
1112	1305	Baltic, Multi EBCDIC
1257	1421	Windows, Baltic Rim
Latin 2/3/4/5 EBCDIC and ASCII Code Pages		

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
852	982	Croatian, Czech, East German, Hungarian, Polish, Romanian, Slovak, Slovenian
852	1377	Croatian, Czech, East German, Hungarian, Polish, Romanian, Slovak, Slovenian with Euro
870	959	Latin 2 Multilingual
912	959	Latin 2 ISO/ ANSI 8 Bit
1153	1375	Latin 2 Multilingual with Euro
1250	1410	Windows Latin 2
853	983	Latin 3 Multilingual PC
905	1286	Latin 3 Multilingual
913	1286	Latin 3 Multilingual
1069	1256	Latin 4 EBCDIC
914	1256	Latin 4 ISO/ASCII
857	987	Latin 5 Turkey PC
857	1380	Latin 5 Turkey PC with Euro
1155	1378	EBCDIC Turkey with Euro
857	987	Latin 5 PC
920	1152	Latin 5 ISO/ANSI 8 Bit
1026	1152	Latin 5
1254	1414	Windows, Turkish
1157	1391	EBCDIC Estonia with Euro
922	1347	Estonia, PC
902	1392	8-bit Estonia with Euro
1156	1393	EBCDIC Baltic Multilingual with Euro

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
921	1346	PC Baltic Multilingual
901	1394	PC Baltic Multilingual with Euro
Latin 9 EBCDIC and ASCII Code Pages		
923	1353	Latin 9
924	1353	Latin 9 EBCDIC
Vietnamese		
1130	1336	Vietnamese EBCDIC
1164	1397	Vietnamese EBCDIC with Euro
1129	1336	Vietnamese ISO-8
1163	1397	Vietnamese ISO-8 with Euro
1258	1418	Windows Vietnamese
Thailand		
838	1279	Thailand
889	1102	Thailand
874	1279	Thailand, PC
1160	1395	Thailand, EBCDIC with Euro
1161	1395	Thailand, PC with Euro
1162	1396	Windows Thailand
Lao		
1132	1341	Lao EBCDIC
1133	1341	Lao ISO-8
Latin EBCDIC DCF Code Pages		
1002	1132	DCF Release 2 Compatibility
1003	1133	US Text Subset



Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
1068	1259	Text with Numeric Spacing
1039	1258	GML List Symbols
Cyrillic and Greek EBCDIC and ASCII Code Pages		
880	960	Cyrillic Multilingual (Primary = 1025)
915	1150	Cyrillic ISO/ASCII 8 Bit
855	985	Cyrillic PC
866	996	Cyrillic #2 PC
1025	1150	Cyrillic Multilingual
1251	1411	Windows, Cyrillic
423	218	Greek 183 (Primary = 875)
813	925	Greek ISO/ASCII 8 Bit
813	1371	Greek ISO/ASCII 8 Bit with Euro
851	981	Greek PC (Primary = 869)
869	998	Greek PC
869	1373	Greek PC with Euro
875	925	Greek
875	1371	Greek with Euro
1039	1258	GML List Symbols
1253	1413	Windows, Greek
1253	1381	EBCDIC Cyrillic Multi. with Euro
808	1385	PC, Cyrillic, Russian with Euro
1131	1338	PC, Cyrillic, Belo Russian
849	1387	PC, Cyrillic, Belo Russian with Euro

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
808	1385	PC, Cyrillic, Russian with Euro
1158	1388	EBCDIC Cyrillic, Ukraine with Euro
1125	1331	PC, Cyrillic, Ukrainian
848	1390	PC, Cyrillic, Ukrainian with Euro
872	1383	Cyrillic PC with Euro
1166	1441	EBCDIC Cyrillic Multi. with Euro
Arabic EBCDIC and ASCII Code Pages		
420	235	Arabic Bilingual
420	1461	Arabic Bilingual with Euro
864	994	Arabic PC
864	1463	Arabic PC with Euro
1008	1162	Arabic ISO/ASCII 8 Bit
1008	1464	Arabic ISO/ASCII 8 Bit with Euro
1029	1154	Arabic Extended ISO/ASCII 8 Bit
1046	1177	Arabic Extended ISO/ASCII 8 Bit
1046	1465	Arabic Extended ISO/ASCII 8 Bit with Euro
1039	1258	GML List Symbols
Hebrew EBCDIC and ASCII Code Pages		
916	941	Hebrew ISO/ASCII 8 Bit
1028	941	Hebrew Publishing
424	941	Hebrew
424	1356	Hebrew with Euro
803	1147	Hebrew Character Set A (Primary = 424)

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
803	1357	Hebrew Character Set A (Primary = 424) with Euro
856	986	Hebrew PC (Primary = 862)
856	1358	Hebrew PC (Primary = 862) with Euro
862	992	Hebrew PC
867	1360	Israel with Euro
1039	1258	GML List Symbols
Symbols		
259	340	Symbols, Set 7
899	340	Symbols, Set 7 ASCII
1087	1257	Symbols, Adobe
1038	1257	Symbols, Adobe ASCII
1091	1191	Symbols, Modified Set 7
1092	1191	Symbols, Modified Set 7 ASCII
363	630	Symbols, Set 8
829	909	Math Symbols
1039	1258	GML List Symbols
Katakana		
1027	1172	Japanese Latin Extended
290	332	Japan Katakana
290	1172	Host/PC Japanese Katakana Extended
897	1164	Japan PC #1
1041	1187	Japanese Extended PC

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)	Language Supported
1139	1122	Japan Alphanumeric Katakana
APL2		
293	1340	APL USA
310	963	Graphic Escape APL/TN
910	1330	APL ASCII

# 4028 Compatibility Resident Font Set

The following lists the typefaces resident in the Printer and includes the valid FGID and code pages for each font. The Date Stamp on most of these character sets is 94350, and the Time Stamp used is 00000000.

The Date Stamp on FGIDs 76 and 159(20224) is 96036. The Date Stamp on FGID 164 is 96039 with a Time Stamp 08225100 for all GCSGIDs except 695, where the Data Stamp is 98124 and the Time Stamp is 13491500. The Date Stamp on FGID 701 is 96309 with a Time Stamp of 08230800 for all GCSGIDs except 695, where the Date Stamp is 98124 and the Time Stamp is 13492000. Fonts listed with an "Alt FGID", are used as a substitute for the requested "Alt FGID".

The Printer will substitute Times New Roman (from the IBM Core Interchange Set) for the Times Roman fonts listed in Table 162. The Courier fonts will also come from the IBM Core Interchange Set. All the remaining listed fonts will be from the IBM Coordinated Font Set (See p. 119 "IBM Coordinated Font Set (IPDS)" (Resident PSC Strategic Scalable Font Set 2)).

See p. 117 "4028 Compatibility Resident Code Page Set" for an explanation of the groups used in the "Code Pages" column.

## ↓ Note

- Prestige fonts used with code pages with a CPGID of 259 are mapped to the Courier Roman Medium Symbols font (FGID 416 GCSGID 1275) as shown in Table 159. When the printer is in Box-Draw mode, any font which does not indicate CPGID 259 support will print with the Roman Medium Symbols font in a point size of 10 (12 pitch) when used with Code Page 259. This emulates 4028 behavior.
- Courier FGIDs 11 and 85 and Prestige FGIDs 12 and 86 now support Code Page 259 (when Box-Draw mode is on) to the extent these were supported in the 4028. In this mode, CPGID 1091 is substituted for CPGID 259 in order to print box-draw characters that line up with each other. The registered CPGID 259 does not have such characters, and is used when not in Box-Draw mode.
- To match the 4028 and 3116 printed font sizes, the FGIDs 254, 256, 281, and 290 are scaled anamorphically (internal to the Printer) as follows:

FGID	Vertical × Horizontal Scale Factors (points)
254	7.8 vpt × 7.0 hpt
256	7.8 vpt × 7.0 hpt
281	7.0 vpt × 6.0 hpt
290	5.0 vpt × 4.5 hpt

## 4028 Compatibility Resident Font Set

Typeface	FGID	Alt FGID	Pitch	Point Size	Font width	Code Pages
Boldface	159		Proportional	12	120	A, B
Prestige PSM Roman Medium	164		Proportional	12	120	A, B
Courier	11		10	12	144	259, A, B
Courier	85		12	10	120	259, A, B
Courier	223		15	8	96	A, B
Courier.17ss	254		17.1	7.8	84	A, B
Courier Bold	46		10	12	144	A, B
Courier Bold	108		12	10	120	A, B
Courier Italic	92		12	10	120	A, B
Letter Gothic	281		20	7	72	A, B
OCR A	19		10	12	144	892
OCR B	3		10	12	144	893
Prestige Pica	12		10	12	144	259, A, B
Prestige Elite	86		12	10	120	259, A, B
Prestige	221		15	7.8	96	A, B
Prestige	256		17.1	8.5	84	A, B
Prestige PSM	164		Proportional	12	120	A, B
Prestige Elite Bold	111		12	10	120	A, B
Prestige Elite Italic	112		12	10	120	A, B
Times Roman	5687	760	Typo	6	40	A
Times Roman	5687	751	Typo	8	53	A

Typeface	FGID	Alt FGID	Pitch	Point Size	Font width	Code Pages
Times Roman	5687	1051	Typo	10	67	A
Times Roman	5687	1351	Typo	12	80	A
Times Roman Bold	5707	1053	Typo	10	67	A
Times Roman Bold	5707	761	Typo	12	80	A
Times Roman Bold	5707	762	Typo	14	93	A
Times Roman Bold	5707	1803	Typo	18	120	A
Times Roman Bold	5707	2103	Typo	24	160	A
Times Roman Italic	5815	1056	Typo	10	67	A
Times Roman Italic	5815	763	Typo	12	80	A
Times Roman Bold Italic	5835	764	Typo	10	67	A
Times Roman Bold Italic	5835	765	Typo	12	80	A
Gothic Text (311x)	203		13.3	9	108	A, B
Gothic Text (311x)	283		20	6	72	A, B
Gothic Text (311x)	290		26.7	5	54	A, B

## 4028 Compatibility Resident Code Page Set

The following lists provides an explanation of the groups as used in the Code Pages column of p.115 "4028 Compatibility Resident Font Set".

### 4028 Compatibility Resident Code Page Set

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)
Group A	
037, 273, 274, 277, 278, 280, 281, 284, 285, 297, 500, 871	697

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)
1140, 1141, 1142, 1143, 1144, 1145, 1146, 1147, 1148, 1149	695
038, 367	103
260	341
276	277
286	317
287	321
288	325
1002	1132
437	919
850	980
858	988
1003 (Addition to 4028 font support. Not supported by 4028.)	1133
Group B	
256 (Replaced by 500)	337
289 (Replaced by 500, but missing obsolete "Peseta" character)	329
Miscellaneous	
310	963
259	340
892	968
893	969
1303 (Used internally for resident Code 128 barcode font and postal bar code font support)	n/a



## IBM Coordinated Font Set (IPDS)

"Resident PSC Strategic Scalable Font Set 2" lists the scalable IBM Coordinated font set typefaces resident in the Printer and includes the valid FGID and code pages for each font.

Where the IBM Core Interchange code pages are referenced in p.106 "IBM Core Interchange Resident Code Page Set", only the Latin 1 Country Extended, Latin 1 EBCDIC Publishing, Latin 1 ASCII and Latin EBCDIC DCF code pages are supported.

### GCSGID Subsets

The following lists provides an a mapping of the valid subsets of the GCSGIDs listed for the PSC Strategic Font Set 2.

#### Resident PSC Strategic Scalable Font Set 2

Typeface	FGID	GCSGID	Font Width	Code Pages
APL	307	1304	Scalable	293, 310, 910
APL Bold	322	1304	Scalable	293, 310, 910
Boldface	20224	2039	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Boldface (Euro)	20224	2041	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Gothic Text	304	2039	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Gothic Text (Euro)	304	2041	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Letter Gothic	400	2039	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Letter Gothic (Euro)	400	2041	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".

Typeface	FGID	GCSGID	Font Width	Code Pages
Letter Gothic Bold	404	2039	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Letter Gothic Bold (Euro)	404	2041	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
OCR A	305	968	Scalable	876, 892
OCR B	306	969	Scalable	877, 893
OCR B (Euro)	306	1502	Scalable	877, 893
Prestige	432	2039	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Prestige (Euro)	432	2041	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Prestige Bold	318	2039	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Prestige Bold (Euro)	318	2041	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Prestige Italic	319	2039	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Prestige Italic (Euro)	319	2041	Scalable	See p.106 "IBM Core Interchange Resident Code Page Set".
Katakana Gothic	304	1306	Scalable	290, 897, 1027, 1041

## IBM Coordinated Font Set Code Page Set

The following lists provides the GCSGIDs and CPGIDs for the individual Code Pages listed in the Code Pages column of p.119 "IBM Coordinated Font Set (IPDS)" (Resident PSC Strategic Scalable Font Set 2).

### IBM Coordinated Font Set Code Page Set

Code Page Global ID (CPGID)	Graphic Character Set ID (GCSGID)
293	380
310	963
910	1113
876, 892	968
877, 893	969
877, 893	1502
290, 1027	1172
897	1164
1041	1187

### GCSGID Subsets for the Strategic Font Set 2

GCSGID	Valid GCSGID Subsets
1304	0380, 0963, 1113
2039	0101, 0103, 0119, 0251, 0265, 0269, 0273, 0277, 0281, 0285, 0288, 0289, 0293, 0297, 0301, 0305, 0309, 0313, 0317, 0321, 0325, 0329, 0337, 0341, 0611, 0697, 0919, 0980, 0990, 0991, 0993, 0995, 1132, 1133, 1145, 1146, 1149, 1198, 1220, 1258, 1259, 1260
1306	0332, 1164, 1172, 1187
2041	0695, 0988, 1243, 1353, 1412, 2039

# IPDS Default Font

---

## Factory Setting

---

The factory setting for the default font is Courier Roman Medium 10 pitch (12 point) using code page 037, version 1. The GRID for the default font is: FGID=416, GCSGID=697, CPGID=037, FontWidth=144 (CPI setting is 10.0). The default font may be changed by the operator using the printer's control panel. It will reset to the Factory Setting upon each IML. It can be reset to the Factory Setting by doing a Cold Reset to the printer.

The default font can be set for Single Byte fonts. It does not contain Double Byte Font Character Sets or Code Pages.

# Selectable IPDS Default Font

To change the default font requires the use of the printer's control panel. The printer's control panel will present menu choices for selecting the various parts of the font.

The operator may select the default font using any or all of the Code Page (CPGID), Font (FGID), and Characters Per Inch (CPI) parameters. The available parameters will be listed in Groups to help identify valid/invalid combinations. An invalid combination will be resolved inside the printer because the printer must have a valid default font. However, the parameter adjustment will not be visible at the printer's control panel display. Detailed information listing the valid combinations and how to select them will be available with the printer.

The selection is based upon a hierarchy: Code Page is highest, Font is next, and Font Width (CPI) is the lowest. Should an invalid combination be selected, the Code Page will override Font and CPI, and Font will override CPI.

There are 5 Groups, A-E, into which all the fonts, code pages, and widths fall. All combinations defined within a Group are valid. When internal modification is necessary, the following rules apply:

- An invalid/unsupported CPGID becomes Code Page 037 (Group A).
- An invalid/unsupported Font Width (CPI) becomes 10.0 CPI (which will translate to 12 points).
- For a Group A CPGID, an invalid/unsupported FGID becomes 416 Courier Roman Medium.
- For a Group B CPGID, the FGID is automatically 304 Gothic Katakana.
- For a Group C CPGID, the FGID is automatically 305 OCR A. Font Width is 10.0 CPI.
- For a Group D CPGID, the FGID is automatically 306 OCR B. Font Width is 10.0 CPI.
- For a Group E CPGID, an invalid/unsupported FGID becomes 416 Courier Roman Medium.

## Note

- The 4028 compatibility fonts are a new addition to the printer's control panel selection. This is necessary because some of these FGIDs are anamorphically scaled, and therefore cannot be correctly reproduced with just an AFP FGID and a CPI value.

These fonts are handled specially in that all of these FGIDs (except 5687, 5707, 5815, 5835) ignore the printer's control panel CPI value, because the FGID fully describes the font. In the case of the 4 typographic FGIDs, there are valid discreet sizes associated with them. If the correct CPI values are not used, the printer will default to the nearest discrete size value. Tie goes to the smaller value.

## Selectable Code Pages

The following code pages are selectable by the operator:

Code-Page/Group	Code Page Description
500 A	Belgium, Switzerland / International

Code-Page/Group	Code Page Description
037 A	US, Canada, Netherlands, Portugal
038 A	US English ASCII
260 A	Canadian French
273 A	Austrian / German
274 A	Belgium
276 A	Canadian French (94 character set)
277 A	Danish / Norwegian
278 A	Finnish / Swedish
280 A	Italian
281 A	Japanese
284 A	Spanish
285 A	UK English
286 A	Austrian / German (Alternate)
287 A	Danish / Norwegian (Alternate)
288 A	Finnish / Swedish (Alternate)
297 A	French
871 A	Icelandic
1140 A	US, Canada, Netherlands, Portugal (Euro)
1141 A	Austrian, German (Euro)
1142 A	Danish Norwegian (Euro)
1143 A	Finnish, Swedish (Euro)
1144 A	Italian (Euro)
1145 A	Spanish (Euro)
1146 A	UK English (Euro)
1147 A	Catalan French (Euro)

Code-Page/Group	Code Page Description
1148 A	Multinational (Euro)
1149 A	Icelandic (Euro)
290 B	Japanese / Katakana
892 C	OCR - A
893 D	OCR - B
420 E	Arabic
423 E	Greek
424 E	Hebrew
870 E	Latin 2 Multilingual
875 E	Greek
880 E	Cyrillic
905 E	Turkish
1025 E	Cyrillic (primary)
1026 E	Turkish (primary)

## Selectable Fonts

The following fonts (FGID) are selectable by the operator:

FGID/Group	FGID Description
2304 A, E	Helvetica Roman/ITC Boutros Modern Rokaa/Narkiss Tam - Medium
2305 A, E	Helvetica Roman/ITC Boutros Modern Rokaa/Narkiss Tam - Bold
2306 A, E	Helvetica Roman/ITC Boutros Modern Rokaa/Narkiss Tam - Italic Medium
2307 A, E	Helvetica Roman/ITC Boutros Modern Rokaa/Narkiss Tam - Italic Bold

FGID/Group	FGID Description
2308 A, E	Times New Roman/ITC Boutros Setting Rokaa/Narkissim - Medium
2309 A, E	Times New Roman/ITC Boutros Setting Rokaa/Narkissim - Bold
2310 A, E	Times New Roman/ITC Boutros Setting Rokaa/Narkissim - Italic Medium
2311 A, E	Times New Roman/ITC Boutros Setting Rokaa/Narkissim - Italic Bold
416 A, E	Courier Roman/Boutros Typing/Shalom - Medium
420 A, E	Courier Roman/Boutros Typing/Shalom - Bold
424 A, E	Courier Roman/Boutros Typing/Shalom - Italic Medium
428 A, E	Courier Roman/Boutros Typing/Shalom - Italic Bold
20224 A	Boldface
304 A	Gothic Text
400 A	Letter Gothic
404 A	Letter Gothic Bold
432 A	Prestige
318 A	Prestige Bold
319 A	Prestige Italic
304 B	Katakana Gothic
305 C	OCR A
306 D	OCR B

## 4028 Selectable Fonts

The following 4028 fonts (FGID) are also selectable by the operator:

FGID/Group	FGID Description
159 A	Boldface (Proportional Space 12 pt., based on 10 CPI)



FGID/Group	FGID Description
11 A	Courier 10.0 CPI
85 A	Courier 12.0 CPI
223 A	Courier 15.0 CPI
254 A	Courier 17.1 CPI
46 A	Courier Bold 10.0 CPI
18 A	Courier Italic 10.0 CPI
92 A	Courier Italic 12.0 CPI
203 A	Gothic Text 13.3 CPI
283 A	Gothic Text 20.0 CPI
290 A	Gothic Text 26.7 CPI
281 A	Letter Gothic 20 CPI
19 C	OCR A
03 D	OCR B
12 A	Prestige Pica 10.0 CPI
86 A	Prestige Elite 12.0 CPI
221 A	Prestige Elite 15.0 CPI
256 A	Prestige Elite 17.1 CPI
111 A	Prestige Elite Bold 12.0 CPI
112 A	Prestige Elite Italic 12.0 CPI
5687 A	Times Roman Typographic 6, 8, 10, 12 pt
5707 A	Times Roman Typographic Bold 10, 12, 14, 18, 24 pt
5815 A	Times Roman Typographic Italic 10, 12 pt
5835 A	Times Roman Typographic Bold Italic 10, 12 pt

## Selectable Font Widths

The following Font Widths (CPI) are selectable by the operator:

Group	Range in characters per inch
A, B, E	5.0 CPI - 30.0 CPI, in increments of 0.1 CPI.
C, D	10.0 CPI.

4028 Fixed Width	Ignored. Handled internally because the FGID defines the size.
5687 6 pt	20.0 CPI
5687 8 pt	15.1 CPI
5687 10 pt	11.9 CPI
5687 12 pt	10.0 CPI
5707 10 pt	11.9 CPI
5707 12 pt	10.0 CPI
5707 14 pt	8.6 CPI
5707 18 pt	6.7 CPI
5707 24 pt	5.0 CPI
5815 10 pt	11.9 CPI
5815 12 pt	10.0 CPI
5835 10 pt	11.9 CPI
5835 12 pt	10.0 CPI

Normally, IPDS Font Width is in terms of 1440ths of an inch (for example, 144, 120). However, printer's control panel Font Width selection is more easily understood (and more universally used) as Characters Per Inch. So the values will range from 5.0 cpi (Font Width 288) to 30.0 cpi (Font Width 48) in increments of 0.1 cpi.

The resulting cpi will be translated internally to the nearest integer font width value. Since CPI is inherently a reciprocal, 0.1 cpi increments will be a non-linear font width progression. This should not prove a serious problem since default fonts for IPDS are not the primary selection path.

An extra note is that font widths for fixed width fonts are calculated differently than for typographic fonts.

The vertical point size is the real common ground. So to get a 12 point size, a fixed width font will use a font width of 144; 10 cpi. A typographic font will use a font width of 80. To keep compatible sizes this is also translated from 10 cpi. The FGID defines which range to use. For further details, refer to the LFE and/or AR command sections of the IPDS architecture spec.

---

## IPDS Bar Code Printing

---

To support the BCOCA tower for printing of bar codes, the OCR-A and OCR-B fonts and their corresponding code pages (892 and 893) must be resident in the printer. These are supported as shown in p.115 "4028 Compatibility Resident Font Set".

Code page 1303 is also resident to be used for printing code 128 bar codes.

---

## IPDS Font Bolding

---

The Printer will accept the IPDS Load Font Equivalence command and support the bold and double strike bits for both resident Type 1 and loaded raster fonts. No other bits within the LFE flags byte are supported.

The bold/double strike attributes are handled the same way within the printer. The function is provided by printing a text block multiple times, each time shifted an appropriate amount. Since the attributes are tied to the font LID and not the font resource, the font resource is not affected.



# 7. Appendix

---

## Trademarks

Adobe, Acrobat, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

AFP/ADVANCED FUNCTION PRINTING, InfoPrint, IPDS and Intelligent Printer Data Stream are trademarks of Ricoh Co., Ltd.

IBM<sup>®</sup> is a trademark of International Business Machines Corporation in the United States, other countries, or both.

AIX<sup>®</sup>, Application System/400<sup>®</sup>, AS/400<sup>®</sup>, IBM<sup>®</sup>, OS/400<sup>®</sup>, Print Services Facility, PS/2<sup>®</sup>, and PSF are trademarks of International Business Machines Corporation in the United States, other countries, or both.

PCL<sup>®</sup> is a registered trademark of Hewlett-Packard Company.

Monotype is a registered trademark of Monotype Imaging, Inc.

Windows<sup>®</sup> is either registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.



# INDEX

---

4028 Compatibility Resident Code Page Set. . . . .	117
4028 Compatibility Resident Font Set.....	115
4028 Selectable Fonts.....	126

## A

---

Action Codes in Sense Byte 2.....	48
Activate Resource.....	95
Audience.....	7

## B

---

Bar Code.....	15, 26
Bar Code Specification Exceptions.....	58

## C

---

Capabilities.....	9
Character Set.....	89
Classes of Data Stream Exceptions.....	47
Code Page.....	85, 90
Coded Font.....	89
Color Simulation.....	30
Color Simulation Processes and Algorithms.....	30
Color Specification.....	33
Command Reject Exceptions.....	53
Coordinate System.....	27
Correlation ID.....	22

## D

---

Data Check Exceptions.....	57
Data Types.....	25
Data-Stream Exceptions.....	81
Duplex Mode.....	16

## E

---

EHC.....	46
Equipment Check Exceptions.....	56
Equipment Check with Intervention Required.....	54
Error Processing.....	23
Exception Classes.....	51
Exception Reporting.....	45, 46
Exception-Handling Control.....	46
Exception-Reporting Codes.....	51

## F

---

Factory Setting.....	122
Flag Byte.....	22
Font and Code Page Selection.....	94
Font Identification.....	85
Font State.....	18
Font Terms.....	93
Formats 0, 1, and 2 for Sense Bytes 4-18 and 20-23.....	49

## G

---

GCSGID Subsets.....	105, 119
GCSGID Subsets for the Strategic Font Set 2... ..	121
General Specification Exceptions.....	62
Graphics.....	14, 26
Graphics Specification Exceptions.....	60

## H

---

Home State.....	18
Host Notification Exceptions.....	76

## I

---

IBM Coordinated Font Set (IPDS).....	119
IBM Coordinated Font Set Code Page Set.....	121
IBM Core Interchange Resident Code Page Set.....	106
IBM Core Interchange Resident Scalable Font Set.....	96
IBM Font Structure.....	89
IM Images.....	14
Image.....	25
Images.....	14
Intervention Required Exceptions.....	54
Intervention Required Sense Data.....	53
IO Images.....	14
IO-Image Specification Exceptions.....	57
IPDS Bar Code Printing.....	129
IPDS Command Format.....	19
IPDS Default Font.....	122, 123
IPDS Exceptions Reported.....	53
IPDS Font Bolding.....	129
IPDS Initialization Defaults.....	39
IPDS Operating States.....	18

---

## L

Load Font Equivalence.....95

## N

Notation Conventions.....29

Notice.....5

## O

Operating System 400 Terms.....92

Overlay State.....18

Overlays.....12

## P

Page and Copy Counters.....24

Page Counter Adjustments.....76

Page Printer Initialization Sequence.....42

Page Segments.....13

Presentation Space Reset Mixing.....37

Printing a Letter.....10

Printing Baseline.....28

## R

Recovery.....45

Reserved Bytes.....22

Resident Font Activation Methods.....95

Resident IPDS Fonts.....95

Resident PSC Strategic Scalable Font Set 2..... 119

## S

Selectable Code Pages.....123

Selectable Font Widths.....128

Selectable Fonts.....125

Selectable IPDS Default Font.....123

Sense Byte Information.....47

Sense Data.....45

Symbols.....6

## T

Tables of Printer Exception Codes.....52

TCP/IP Sense Data.....53

Terminology.....7

Text.....25

Text Orientation.....28

Trademarks.....131

## X

XOA-RRL Replies for Font Character Sets.....97



---

MEMO

---

MEMO







## IPDS Technical Reference 2





# TABLE OF CONTENTS

---

- Manuals for the IPDS card.....4
- Notice.....5
  - Important.....5
- How to Read This Manual.....6
  - Symbols.....6
- About This Book.....7
  - Audience.....7
  - Terminology.....7
- 1. Device Control Command Set**

---
- About Device Control Command Set.....9
- Acknowledgement Reply.....10
- Activate Resource.....13
  - Resource ID example with RIDF = GRID.....16
  - Resource ID example with RIDF = MVS Host Unalterable Remote Font Environment.....17
  - Resource ID example with RIDF = Coded Font.....18
  - Resource ID example with RIDF = Object-OID.....20
  - Resource ID example with RIDF = Data-object font.....20
- Begin Page.....22
- Deactivate Font.....23
- End.....26
- End Page.....27
- Load Copy Control.....28
  - Media Source and Destination Support Matrices.....30
- Load Font Equivalence.....41
- Logical Page Descriptor.....45
- Logical Page Position.....50
- Presentation Fidelity Control.....52
  - Text Fidelity Control.....52
  - Finishing Fidelity Control.....53
- Sense Type and Model.....54
- Execute Order Any State (XOA).....67
  - XOA Mark Form.....67
  - XOA Exception Handling Control.....67

---

XOA Request Resource List.....	69
XOA Alternate Offset Stacker (AOS).....	73
Execute Order Home State (XOH).....	77
XOH Obtain Printer Characteristics.....	77
Printable Area Self-Defining Field.....	77
XOH Select Input Media Source.....	107
XOH Set Media Origin.....	108
XOH Set Media Size.....	109
XOH Page Counter Control.....	110
XOH Define Group Boundary.....	110
XOH Specify Group Operation.....	119

## **2. Presentation Text Command Set**

---

Presentation Text Commands.....	121
Load Equivalence.....	121
Write Text.....	121
Temporary Baseline Move.....	138

## **3. IM Image Command Set**

---

IM Image Commands.....	143
Write Image Control.....	144
Write Image.....	148

## **4. IO Image Command Set**

---

IO Image Commands.....	149
Write Image Control 2.....	150
Image Output Control.....	151
Image Data Descriptor.....	153
Write Image 2.....	156

## **5. Graphics Command Set**

---

Graphics Commands.....	161
Write Graphics Control.....	161
Write Graphics.....	169
Write Graphics Defaults.....	169
Begin Segment Introducer.....	170
Set Process Color.....	179



---

Drawing Order Summary.....	182
<b>6. Bar Code Command Set</b>	
Bar Code Commands.....	185
Write Bar Code Control.....	186
Bar Code Area Position.....	186
Bar Code Output Control.....	187
Bar Code Data Descriptor.....	188
Write Bar Code.....	202
<b>7. Overlay Command Set</b>	
Overlay Function Set Commands.....	205
<b>8. Page Segment Command Set</b>	
Page Segment Function Set Commands.....	207
<b>9. Object Container Command Set</b>	
Object Container Function Set Commands.....	209
<b>10. Loaded Font Command Set</b>	
Loaded Font Function Set Commands.....	211
Load Code Page.....	211
Load Code Page Control.....	212
Load Font.....	214
Load Font Character Set Control.....	216
Load Font Control.....	217
Load Font Index.....	222
<b>11. Appendix</b>	
Trademarks.....	225
<b>INDEX</b> .....	227

---

# Manuals for the IPDS card

Refer to the manuals that are relevant to what you want to do with the IPDS card.

## ★ Important

- Adobe® Acrobat® Reader®/Adobe Reader must be installed in order to view the manuals as PDF files.

### IPDS Supplement (IPDS.pdf)

Explains how to configure the IPDS card for the machine. It also explains about items selectable from the Web browser.

### IPDS Printing Configuration Guide (IPDS\_CONF.pdf) \*English Only

Explains about the environment necessary for connecting the mainframe to the machine and performing IPDS printing.

### IPDS Technical Reference 1 (IPDS\_TEC1.pdf) \*English Only

Explains about commands and functions for IPDS printing.

### IPDS Technical Reference 2 (IPDS\_TEC2.pdf) \*English Only

Explains about IPDS commands.

## ↓ Note

- For details about the necessary environment and how to install the IPDS card and machine, consult your sales or service representative. For details about the necessary environments and operation of the mainframe, contact IBM.

---

# Notice

---

## Important

---

Contents of this manual are subject to change without prior notice.

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

---

# How to Read This Manual

---

## Symbols

---

This manual uses the following symbols:

 **Important**

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

 **Note**

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

[ ]

Indicates the names of keys on the machine's display or control panels.

---

# About This Book

This book provides technical reference information about how printers support the IPDS data stream.

---

## Audience

---

This publication is intended for the system programmers, application programmers, and systems engineers who are familiar with data streams and are writing or modifying programs to operate your printer with the IPDS data stream.

---

## Terminology

---

### Paper Input and Output Receptacles

---

Input receptacles are called trays. Output receptacles are called stackers or bins.

---

## Related Publications

---

This book refers to the following:

- PostScript Language Reference Manual, second edition, by Adobe Systems, Inc.
- PCL 5 Printer Language Technical Reference Manual by Hewlett-Packard Company
- PCL 5 Comparison Guide by Hewlett-Packard Company
- Printer Job Language Technical Reference Manual by Hewlett-Packard Company

### Note

- For details on the IPDS Architecture, see the Intelligent Printer Data Stream Reference, S544-3417.



# 1. Device Control Command Set

## About Device Control Command Set

Device Control commands control basic device operations, error reporting and recovery, and the construction of logical pages on the physical medium.

Before the host program sends the Begin Page command to begin defining a page to be printed, it should establish the printing environment in which the page is to be printed.

The following Device Control commands are described in this section:

- p.10 "Acknowledgement Reply"
- p.13 "Activate Resource"
- p.22 "Begin Page"
- p.23 "Deactivate Font"
- p.26 "End"
- p.27 "End Page"
- p.28 "Load Copy Control"
- p.41 "Load Font Equivalence"
- p.45 "Logical Page Descriptor"
- p.50 "Logical Page Position"
- p.52 "Presentation Fidelity Control"
- p.54 "Sense Type and Model"
- p.67 "Execute Order Any State (XOA)"
- p.67 "XOA Mark Form"
- p.67 "XOA Exception Handling Control"
- p.77 "Execute Order Home State (XOH)"
- p.77 "XOH Obtain Printer Characteristics"
- p.107 "XOH Select Input Media Source"
- p.108 "XOH Set Media Origin"
- p.109 "XOH Set Media Size"
- p.110 "XOH Page Counter Control"
- p.110 "XOH Define Group Boundary"
- p.119 "XOH Specify Group Operation"
- "XOA-RRL Replies for Font Character Sets", IPDS Technical Reference 1

# Acknowledgement Reply

The Acknowledge Reply returns device status, sense data, and other information the host program requests. The printer sends an acknowledgement when it finds either of the following:

- A data stream or device error that requires the printer to return a negative acknowledgement (NACK).
- The Acknowledgement Required (ARQ) flag bit in the command the printer receives is set to 1.

The Acknowledge Reply is returned to the host in the standard IPDS command format although it goes from the printer to the host. See Intelligent Printer Data Stream Reference for details.

The following table lists Bit Codes for IPDS command stream flags for Acknowledge Reply.

Bit Code	Meaning
Bit 0	Reserved
Bit 1	Correlation Number Present
Bit 2	Acknowledgement Continuation
Bits 3-6	Reserved
Bit 7	The Persistent NACK bit is for Non-SNA DSC Mode NACKs only.  This bit has no meaning in other attachment environments.

## ↓ Note

- When a command is received with Bit 1 set, the Acknowledge Reply will be returned with this bit set, indicating that a two byte "Correlation Number" follows.
- The Correlation Number, a two byte identifier, is returned if available for:
  - Synchronous NACKs
  - Response to information request commands
  - Acknowledgement requested (Flag byte bit 0 = 1)
- The Special Data area of the Acknowledgement Reply contains:
  - Error sense bytes when reporting an exception
  - Response to the following information request commands:
    - Sense Type and Model
    - XOH Obtain Printer Characteristics
    - XOA Request Resource List



Offset	Range	Meaning	Error Code
0		ACKNOWLEDGEMENT TYPE: A one byte field that identifies the type of acknowledgement record and contents (if any) of the Special Data area.	
	X'40'	None	
	X'41'	Sense Type and Model	
	X'44'	Request Resource List	
	X'46'	Obtain Printer Characteristics	
	X'C0'	Sense Bytes	
1-2	X'0000' - X'FFFF'	Received Page Counter* * Incremented when the End Page processing is completed.	
3-4	X'0000'- X'FFFF'	Committed Page Counter* * Incremented by the number of pages on a sheet when the last copy of the sheet is stacked.	
5-6	X'0000'- X'FFFF'	Committed Copy Counter* * Incremented by the number of pages on a sheet when the sheet is stacked.	
7-8	X'0000'- X'FFFF'	Operator Viewing Page Counter* * Incremented by the number of pages on a sheet when the last copy of the sheet is stacked.	
9-10	X'0000'- X'FFFF'	Operator Viewing Copy Counter* * Incremented by the number of pages on a sheet when the sheet is stacked.	
11-12	X'0000'- X'FFFF'	Jam Recovery Page Counter* * Incremented by the number of pages on a sheet when the last copy of the sheet is stacked.	
13-14	X'0000'- X'FFFF'	Jam Recovery Copy Counter* * Incremented by the number of pages on a sheet when the sheet is stacked.	

Offset	Range	Meaning	Error Code
15-16	X'0000'- X'FFFF'	Stacked Page Counter * * Incremented by the number of pages on a sheet when the last copy of the sheet is stacked.	
17-18	X'0000'- X'FFFF'	Stacked Copy Counter * * Incremented by the number of pages on a sheet when the sheet is stacked.	
19-n		SPECIAL DATA AREA: This area contains zero or more bytes of additional data as requested by the host program defined by the Acknowledgement Type.	

# Activate Resource

This command maps a 6-byte Host Assigned Resource ID (HAID/FIS/Section) to a resident Resource ID of the format specified in the Resource ID Format parameter (Byte 6). The Resource ID formats which are supported may be determined using the XOH OPC command (See p.77 "XOH Obtain Printer Characteristics").

An AR mapping (HAID to Resource ID mapping) remains in effect until:

- an XOH Erase Residual Font Data command or Deactivate Font (See p.23 "Deactivate Font") command is received (the mapping is removed and font deactivated)
- the printer performs an IML (the mapping is removed)

If a Deactivate Font command is received for a single byte font, the font identified by the HAID is deactivated (made unavailable for use by the host), but all other current font mappings remain in effect until one of the actions described in the preceding paragraph occurs. If a Deactivate Font command is received which specifies all single byte fonts, all font mappings are removed as those fonts are deactivated.

The maximum of Activate Resource ID mappings that may be received is limited only by the available memory.

## Note

- IPDS architecture describes the mapping and activation of resident resources as two conceptually separate processes. The printer, however, implements mapping and activation as one inseparable process. Un-map and de-activate are also inseparable operations. Thus, a Deactivate Font command directed at a mapped and activated resident font, both un-maps and de-activates the specified font(s).

Offset	Range	Meaning	Error Code
0-1		ENTRY LENGTH	X'028F..01'
	X'0002'	Null entry	
	X'000C'	Specifying without an equivalence	
	X'000E'	Valid for RT=X'06' with RIDF=X'03'	
	X'000E'-008D'	Valid for RT=X'42' with RIDF=X'09'	
	X'0010'	Valid for RT=X'06' or X'07' with RIDF=X'03'	
	X'0012'	Valid for RT=X'41' with RIDF=X'0A'	
	X'0014'	Valid for RT=X'01', X'08', X'09', X'10' with RIDF=X'03'	
	X'001E'	Valid for RT=X'01', X'08', X'09', X'10' with RIDF=X'07'	
	X'00B8'	Valid for RT=X'01' or X'08' with RIDF=X'06'	
2		RESOURCE TYPE (RT)	X'028F..01'
	X'01'	Single byte LF1 coded font	
	X'03'	Double-byte LF1 -type coded font sections	
	X'06'	Code Page	
	X'07'	Font Character Set	
	X'08'	Single byte font index	
	X'09'	Double-byte LF1 -type coded font section indexes	
	X'10'	Coded Font	
	X'40'	Data object resource	
	X'41'	Data-object font	
	X'42'	Data-object font component	
3-4	X'0001'-X'7EFF'	HOST ASSIGNED ID	X'028F..01'
5	X'41'-X'FE'	Ignored for RT=X'01', X'06', X'07', X'08' and X'10'	

Offset	Range	Meaning	Error Code
6		RESOURCE ID FORMAT (RIDF)	X'028F..01'
	X'03'	IBM Registered Global Resource ID parts	
	X'06'	MVS host unalterable remote font environment	
	X'07'	Coded font	
	X'09'	Object-OID	
	X'0A'	Data-object font	
7-8		FONT INLINE SEQUENCE	X'028F..01'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees  That the Font Inline Sequence is ignored for RT=X'06' and X'07'.  For outline fonts with RT=X'10', FIS is used to select the character metrics for a specific writing mode.	
9-10	X'0000'	Reserved	
11		RESOURCE CLASS FLAGS	
	Bit 0 0/1	Public/Private (Resource Capture)	
	Bit 1 0	Retired	
	Bit 2 0/1	Ignored (Reset)	
	Bit 3 0/1	AR NACK Enabled	
	Bit 4 0/1	Outline Font Substitution	
	Bits 5-7 0	Reserved	
Bytes 12-n		RESOURCE ID and triplets	X'028F..01'

 **Note**

- Zero or more additional entries, analogous to bytes 0 - n above.

1

### Resource ID example with RIDF = GRID

Offset	Range	Meaning	Error Code
12-13		GRAPHIC CHARACTER SET GLOBAL ID	X'028F..02'
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	GCSGID	
	X'FFFF'	All characters with assigned code points in the associated code page	
14-15		CODE PAGE GLOBAL ID	X'028F..02'
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	CPGID	
	X'FFFF'	Default Code Page (Configuration Settings)	
16-17		FONT GLOBAL ID	X'028F..02'
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	FGID	
	X'FFFF'	Default FGID (Configuration Settings)	
18-19		FONT WIDTH	X'028F..02'
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	FW	
	X'FFFF'	Default FW (Configuration Settings)	

## Resource ID example with RIDF = MVS Host Unalterable Remote Font Environment

Offset	Range	Meaning	Error Code
12-13		CRC	
14-21		Ignored (MVS Host System ID)	
22-27		Ignored (VOLSER of Host library)	
28-71		Ignored (DSNAME of Host library)	
72-77		Date Stamp	
78-85		Time Stamp	
94-95		GRAPHIC CHARACTER SET GLOBAL ID	X'028F..02'
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	GCSGID	
	X'FFFF'	All characters with assigned code points in the associated code page	
96-97		CODE PAGE GLOBAL ID	X'028F..02'
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	CPGID	
	X'FFFF'	Default Code Page (Configuration Settings)	
98-99		CRC	
100-107		Ignored (MVS Host System ID)	
108-113		Ignored (VOLSER of Host library)	
114-157		Ignored (DSNAME of Host library)	

Offset	Range	Meaning	Error Code
158-163		Date Stamp	
164-171		Time Stamp	
172-179		Ignored (Host Library Member Name)	
180-181		FONT GLOBAL ID	X'028F..02'
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	FGID	
	X'FFFF'	Default FGID (Configuration Settings)	
182-183		FONT WIDTH	X'028F..02'
	X'0000'	X'0000' No value supplied	
	X'0001' - X'FFFE'	FW	
	X'FFFF'	Default FW (Configuration Settings)	

**Resource ID example with RIDF = Coded Font**

Offset	Range	Meaning	Error Code
12-13		FONT CHARACTER SET HAID	
	X'0000'	No value supplied	
	X'0001' - X'7FFF'	FCS HAID	
14-15		CODE PAGE HAID	
	X'0000'	No value supplied	
	X'0001' - X'7FFF'	CP HAID	



Offset	Range	Meaning	Error Code
16-17		GRAPHIC CHARACTER SET GLOBAL ID	
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	GCSGID	
	X'FFFF'	All characters with assigned code points	
18-19		CODE PAGE GLOBAL ID	
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	CPGID	
	X'FFFF'	Default Code Page (Configuration Settings)	
20-21		FONT GLOBAL ID	
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	FGID	
	X'FFFF'	Default FGID (Configuration Settings)	
22-23		FONT WIDTH	
	X'0000'	No value supplied	
	X'0001' - X'FFFE'	FW	
	X'FFFF'	Default FW (Configuration Settings)	
24		PATTERN TECHNOLOGY ID	
	X'00'	No value supplied	
	X'1E'	Composite technology	
	X'1F'	Adobe Type-1 PFB	
25		Reserved	

Offset	Range	Meaning	Error Code
26-27		VERTICAL SCALE FACTOR	
	X'0000'	No value supplied	
	X'0001' - X'7FFF'	VSF in 1440th of an inch	
28-29		HORIZONTAL SCALE FACTOR	
	X'0000'	No value supplied	
	X'0001' - X'7FFF'	HSF in 1440th of an inch	

**Resource ID example with RIDF = Object-OID**

Offset	Range	Meaning	Error Code
12		IDENTIFIER	
	X'06'	Short Form OID	
13		OID LENGTH	
	X'00' - X'7F'		
2 to end		Unique OID	
	Any Value		

**Resource ID example with RIDF = Data-object font**

Offset	Range	Meaning	Error Code
12-13		Base Font HAID	
	X'0001' - X'7EFF'	TrueType/OpenType font or TrueType/OpenType collection	

Offset	Range	Meaning	Error Code
14-15		CODE PAGE HAID	
	X'0000'	No Value supplied	
	X'0001' - X'7EFF'	CP HAID	
16-17		TTC Font Index	
	X'0000' - X'FFFF'	Font Identifier	
2 to end		Triplets (One or more of the following triplets)	
	X'02'	Fully Qualified Name triplet	
	X'50'	Encoded Scheme ID triplet	
	X'8B'	Data-Object Font Descriptor triplet	
	X'8D'	Linked Font triplet	

## Begin Page

1

This command is only valid in home state and causes the printer to enter page state. See the Intelligent Printer Data Stream Reference for details.

### Note

- At Begin Page processing time a test for media source and destination compatibility will be performed. If it is determined that the processing of this page with the media source and media destination specified is incompatible an exception X'0237..04' will be reported.

# Deactivate Font

The Deactivate Font command carries one to six bytes of data used by the host to deactivate one or more coded fonts, coded font indexes, font character sets, or code pages.

Offset	Range	Meaning	Error Code
0		DEACTIVATION TYPE	X'0217..0 2'
	X'11'	Deactivate one single-byte LF1 Coded Font and related indexes	X'02C5..0 1'
	X'12'	Deactivate one single-byte font index	X'02C6..0 1'
	X'1E'	Deactivate all single-byte LF1 Coded Fonts and all indexes	
	X'1F'	Deactivate all single-byte LF1 Coded Fonts and all indexes (same as above)	
	X'20'	Deactivate double-byte LF1 Coded Font section and related indexes	
	X'21'	Deactivate double-byte LF1 Coded Font section, all higher sections and all related indexes	
	X'22'	Deactivate a font index for a doublebyte Coded Font section	
	X'2F'	Deactivate all double-byte LF1 Coded Fonts and all related indexes	
	X'30'	Deactivate one Code Page	
	X'3F'	Deactivate all Code Pages	
	X'40'	Deactivate one Font Character Set	
	X'4F'	Deactivate all Font Character Sets	
	X'50'	Deactivate one LF1 or LF3 Coded Font	
	X'51'	Deactivate one LF1 or LF3 Coded Font and all associated components	
	X'5D'	Deactivate all resident Coded Fonts and all associated components	
	X'5E'	Deactivate all Coded Fonts	
	X'5F'	Deactivate all Coded Fonts and all associated components	
	X'60'	Deactivate a data-object font	
X'6E'	Deactivate all data-object fonts		

Offset	Range	Meaning	Error Code
1-2	X'0001' - X'7EFF'	HOST ASSIGNED ID (Deactivation Types X'11', X'12', X'20', X'21', X'22', X'30', X'40', X'50' and X'51')	X'0214..0 2' X'0215..0 2' X'02C5..0 1' X'02C6..0 1'
3		SECTION ID	
	X'00'	Single-byte font	
	X'41' - X'FD'	Double-byte font (Deactivation types X'20', X'21' and X'22')	
4-5		FONT INLINE SEQUENCE (Deactivation Type X'12' and X'22')	X'0240..0 2'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	

# End

1

The End command is the ending control for a series of Write Image, Write Image 2, Write Graphics, Write Bar Code, Load Code Page, or Load Font commands. This command marks either the end of an image object, a graphics object, a bar code object, or the end of a downloaded font sequence. See the Intelligent Printer Data Stream Reference, S544-3417, for more details.



## End Page

The End Page (EP) command causes the printer to return to home state from page state, page segment state, or overlay state and thus marks the end of a page, a page segment, or an overlay. The EP command is an implicit command to schedule that page for printing if the command is being used to exit page state; all data for that page is available to the printer. Zero or more data bytes can be transmitted but are ignored. See the Intelligent Printer Data Stream Reference, S544-3417, for more details.

# Load Copy Control

A copy control record 2 to 32760 bytes long specifies how the printer is to modify and print logical pages in one or more copy subgroup definitions. Each copy subgroup definition can be from 2 to 254 bytes long (divisible by 2). The maximum number of key-words that the host program can specify in a copy subgroup definition is:

- X'80nn' specify 1 time
- X'90nn' specify 1 time
- X'91nn' specify 1 time
- X'C1nn' specify 1 time
- X'C2nn' specify 1 time
- X'D1nn' specify 1 to 126 times
- X'E1nn' specify 1 to 126 times
- X'E4nn' specify 1 to 63 times
- X'E5nn' specify 1 to 63 times

## Note

- Actual tray capacity is determined by media weight.
- The machine supports media source tray numbering. Media source values in the LCC support tables represent the default settings when the printer is initially installed. The printer's control panel menu mode is provided to allow customers to specify the source tray numbers to meet requirements of legacy applications. Example: customer might want to address the Manual Tray as tray 4 instead of the tray 100 (default).
- For the tray in which "envelope" has been specified as the paper type, the tray values of the tray ID are (in ascending for each respective tray that is installed) as follows: X'8040', X'8041', etc. If a different paper type is specified for the tray, the tray values of the tray ID are (in ascending for each respective tray that is installed) as follows: X'8000', X'8001', etc. In regards to the bypass tray and default tray, even if you specify "envelope" as the paper type, the tray value will not be changed.
- To ascertain which machine type your model corresponds to, see "Machine Types", Read This First.

Offset	Range	Meaning	Error Code
0	X'02' - X'FE'	COPY SUBGROUP DEFINITION LENGTH	
1	X'01' - X'FF'	NUMBER OF IDENTICAL COPIES	X'0231..01'

Offset	Range	Meaning	Error Code
2-n		COPY MODIFICATION KEYWORDS	X'0232..0 1'
		Media Source (Reference Notes)	
	X'8000'	Tray 1	X'02C2..0 2'
	X'8001'	Tray 2	X'02C8..0 1'
	X'8002'	Tray 3	
	X'8003'	Large capacity tray (LCT)	
	X'8004'	Interposer	
	X'8063'	Bypass tray	
	X'80FF'	Default tray	
		Media Destination (Byte Pairs)	
	X'9101'	Copy tray	
	X'9101'	Finisher shift tray	
	X'9102'	Finisher upper tray	
	X'9103'	Finisher booklet tray	

Offset	Range	Meaning	Error Code
2-n		Mailbox output tray (Mailbox Tray + Finisher SR4060)*	
	X'9103'	Mailbox output tray 1	
	X'9104'	Mailbox output tray 2	
	X'9105'	Mailbox output tray 3	
	X'9106'	Mailbox output tray 4	
	X'9107'	Mailbox output tray 5	
	X'9108'	Mailbox output tray 6	
	X'9109'	Mailbox output tray 7	
	X'910A'	Mailbox output tray 8	
	X'910B'	Mailbox output tray 9	
		Mailbox output tray (Mailbox Tray + Booklet Finisher SR4070)*	
	X'9104'	Mailbox output tray 1	
	X'9105'	Mailbox output tray 2	
	X'9106'	Mailbox output tray 3	
	X'9107'	Mailbox output tray 4	
	X'9108'	Mailbox output tray 5	
	X'9109'	Mailbox output tray 6	
	X'910A'	Mailbox output tray 7	
	X'910B'	Mailbox output tray 8	
	X'910C'	Mailbox output tray 9	

## Media Source and Destination Support Matrices

The following tables are provided to document Media Source and Destination support. This information is provided to ensure better overall understanding of the media handling characteristics. For more details on the actual X and Y media extents see p.77 "Printable Area Self-Defining Field".

**Media Source and Destination Support Matrices**

A= Tray 1 Capacity: 1550 + 1550

B= Tray 1 + A3/11 × 17 tray unit Capacity: 1000

C= Tray 2 Capacity: 550

D= Tray 3 Capacity: 550

E= Large capacity tray (LCT) Capacity: 4000

F= Large capacity tray (LCT) + Extension unit Capacity: 2500

G= Interposer Capacity: 200

H= Bypass Tray Capacity: 100

○ = Duplex SEF / △ = Duplex LEF / ● = SEF / ▲ = LEF

	A	B	C	D	E	F	G	H
A3 (297 × 420 mm)	○	○	○	○			○	○
A4 (210 × 297 mm)	○ △	○ △	○ △	○ △	△	○ △	○ △	○ △
A5 (210 × 148 mm)			○ △	○			○*1 △*1	○ △
A6 (105 × 148 mm)								●
B4 (257 × 364 mm)	○	○	○	○		○	○*1	○
B5 (182 × 257 mm)			○ △	○ △	△	△	○*1 △*1	○ △
B6 (128 × 182 mm)								●

	A	B	C	D	E	F	G	H
DLT (11 × 17 in.)	○	○	○	○			○	○
Legal (8.5 × 14 in.)	○	○	○	○		○	○*1	○
Foolscap (8.5 × 13 in.)			○	○			○	○
Letter (8.5 × 11 in.)	○ △	○ △	○ △	○ △	△	○ △	○ △	○ △
GovernmentLG (8.25 × 14 in.)			○	○				○
Folio (8.25 × 13 in.)			○	○			○*1	○
F/GL (8 × 13 in.)			○	○			○*1	○
G LT (8 × 10.5 in.)			○	○				○ ▲
Eng Quatro (8 × 10 in.)							●*1	● ▲
Executive (7.25 × 10.5 in.)			○ △	○ △			○*1 △*1	○ △
HalfLetter (5.5 × 8.5 in.)			○ △	○			○*1 △*1	○ △
8kai (267 × 390 mm)			○	○			○*1	

	A	B	C	D	E	F	G	H
16kai (195 × 267 mm)			○ △	○ △			○ <sup>*1</sup> △ <sup>*1</sup>	
11 × 15 in.			○	○				○
11 × 14 in.			○	○				○
10 × 15 in.			○	○				○
10 × 14 in.							● <sup>*1</sup>	●
Custom Sizes			*2	*3				*4

\*1 This size is not available depending on the machine that you use.

\*2 139.7 × 139.7 mm to 297.0 × 432.0 mm

\*3 139.7 × 180.0 mm to 297.0 × 432.0 mm

\*4 100.0 × 139.7 mm to 305.0 × 600.0 mm

A= Copy tray Capacity: 500

B= Mailbox output tray Capacity: 100

C= Finisher SR4060 Capacity: 250 (Finisher upper tray) / 3000 (Finisher shift tray)

D= Finisher SR4080 Capacity: 500 (Finisher upper tray) / 3000 (Finisher shift tray)

E= Booklet Finisher SR4070 Capacity: 250 (Finisher upper tray) / 2000 (Finisher shift tray) / 10 (Finisher booklet tray)

Y = Yes / N = No

	A	B	C	D	E
A3 (297 × 420mm) SEF	Y	Y	Y	Y	Y

	A	B	C	D	E
A4 (210 × 297mm) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: Y (SEF) / N (LEF)</li> </ul>
A5 (210 × 148mm) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
A6 (105 × 148mm) SEF	Y	N	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: N</li> </ul>	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
B4 (257 × 364 mm) SEF	Y	Y	Y	Y	Y



	A	B	C	D	E
B5 (182 × 257mm) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: Y (SEF) / N (LEF)</li> </ul>
B6 (128 × 182mm) SEF	Y	N	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: N</li> </ul>	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
DLT (11 × 17 in.) SEF	Y	Y	Y	Y	Y
Legal (8.5 × 14 in.) SEF	Y	Y	Y	Y	Y
Foolscap (8.5 × 13 in.) SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>

	A	B	C	D	E
Letter (8.5 × 11in.) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: Y (SEF) / N (LEF)</li> </ul>
Government LG (8.25 × 14 in.) SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
Folio (8.25 × 13in.) SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>

	A	B	C	D	E
F/GL (8 × 13in.) SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
G LT (8 × 13in.) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
Eng Quatro (8 × 10 in.) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
Executive (7.25 × 10.5in.) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>

	A	B	C	D	E
HalfLetter (5.5 × 8.5in.) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
8kai (267 × 390 mm) SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
16kai (195 × 267mm) SEF / LEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
11 × 15 in. SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>

	A	B	C	D	E
11 × 14 in. SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
10 × 15 in. SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
10 × 14 in. SEF	Y	Y	Y	Y	<ul style="list-style-type: none"> <li>• Finisher upper tray: Y</li> <li>• Finisher shift tray: Y</li> <li>• Finisher booklet tray: N</li> </ul>
Custom Sizes	*1		*2	<ul style="list-style-type: none"> <li>• Finisher upper tray: *3</li> <li>• Finisher shift tray: *4</li> </ul>	<ul style="list-style-type: none"> <li>• Finisher upper tray: *2</li> <li>• Finisher shift tray: *2</li> <li>• Finisher booklet tray: N</li> </ul>

\*1 100.0 × 139.7 mm to 305.0 × 600.0 mm

\*2 100.0 × 139.7 mm to 305.0 × 487.6 mm

\*3 100.0 × 139.0 mm to 305.0 × 458.0 mm

\*4 139.7 × 139.0 mm to 305.0 × 458.0 mm

# Load Font Equivalence

The font equivalence record is a list of 0 to 254 font equivalence entries (each entry is 16 bytes). The font equivalence record permits the host program to equate a Local-Font ID (specified in text control p. 129 "Set Coded Font Local", p. 188 "Bar Code Data Descriptor", p. 186 "Write Bar Code Control", or graphics order "Character Set", IPDS Technical Reference 1) with:

- Font Host Assigned ID (HAID)
- The Font Inline Sequence or character rotation table to be used when processing characters
- Global Resource ID (GRID) for resident fonts. The GRID is made up of the following components:
  - GCSGID Graphic Character Set Global ID
  - CPGID Code Page Global ID
  - FGID Font Global ID
  - FW Font width in 1/1440 inch units

If a GRID is specified in bytes 5-12, the entry is requesting the activation of a coded font and assigning a HAID to it. The printer uses the information provided in the GRID to locate the component parts of the coded font. First, the GCSGID and FGID values are used to find the font character set, and GCSGID and CPGID are used to find the code page. In some cases, the printer will locate the code page using just the CPGID value. If the character set and code page are not found in the above manner, information in the GRID will be used together with the Font Inline Sequence value (Bytes 3-4) to locate a single-byte fully described font and font index.

The set of supported GCSGID/CPGID/FGID/FW (GRID) combinations (described in "Code Page and Font Identification", IPDS Technical Reference 1) is available to the host PSF by means of the XOA-RRL command. For typographic and scalable fonts, a Font Width (FW) must be specified in order to uniquely select a point size, unless FW=0 or X'FFFF', in which case the printer's control panel [Characters Per Inch] setting is used ([Characters Per Inch] on the IPDS Menu).

Exception X'021D..02' is reported back if a non-zero GRID is requested with parts that are not supported in the printer, except in the case of GCSGID subset substitution or LFE Bold Attribute substitution.

For outline coded fonts, the FW value is used to derive a scale factor as follows:

- For typographic and proportionally spaced fonts, both horizontal and vertical scale factors are 3 (FW).
- For fixed pitch, uniform character increment fonts, both horizontal and vertical scale factors are derived using the following algorithm (fractions are truncated):

$$V\_Scale = H\_Scale = 1000 *1 FW/SPACE$$

In this case SPACE is the value of the Space Character increment in relative units.

\*1 4028-type font substitution is provided as the printer's control panel feature. It is independent of the device emulation mode setting (native or 4028). Default is No Font Substitution.

Offset	Range	Meaning	Error Code
0	X'00' - X'FE'	LOCAL-FONT ID	X'0219..02'
	X'FF'	Reserved	X'0218..02'
1-2	X'0001' - X'7EFF'	FONT HOST ASSIGNED ID	X'0218..02' X'021F..02'
3-4		FONT INLINE SEQUENCE	X'0247..02'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	
5-6		GCSGID	
	X'0000'	No value assigned (Note 2)	
	X'0001' - X'FFFE'	Graphic Character Set Global ID	
	X'FFFF'	All characters with assigned code points in the associated code page	
7-8		CPGID	X'021D..02'
	X'0000'	No value assigned (Note 2)	
	X'0001' - X'FFFE'	Code Page Global ID	
	X'FFFF'	Printer Default (Configuration Setting)	



Offset	Range	Meaning	Error Code
9-10		FGID	X'021D.. 02'
	X'0000'	No value assigned (Note 2)	
	X'0001' - X'FFFE'	Font Global ID	
	X'FFFF'	Printer Default (Configuration Setting)	
11-12		FW	
	X'0000'	No value assigned (Note 2)	
	X'0001' - X'7FFF'	Font Width (Ignored for Fixed Pitch Fonts)	
	X'FFFF'	Printer Default as specified by Configuration Settings	
13	X'00'	Reserved	
14		FONT ATTRIBUTES (Note 3)	
	Bit 0 0/1	Ignored (Symbol Sets)	
	Bits 1-2 00	Reserved	
	Bit 3 0/1	Ignored (Double High)	
	Bit 4 0/1	Ignored (Italics)	
	Bit 5 0/1	Ignored (Double Strike)	
	Bit 6 0/1	Bold = 1	
	Bit 7 0/1	Ignored (Double Wide)	
15	X'00'	Reserved	
16-n		Additional LFE ENTRIES	X'023A.. 02'

**Note**

- For LF1 coded fonts, FIS specifies the font index table for character rotation. For LF3 coded fonts, FIS is used to select the metrics for a specific writing mode.
- Global Resource IDs (bytes 5-12) apply to printer resident fonts only. If these fields are all X'0000', then an activation is not done. If GCSGID and/or FW are 0 or X'FFFF':

- CPGID (non-zero) defines the CPGID/GCSGID
- FGID (non-zero) defines the FGID/FW (Non-Typographic)
- FGID (non-zero) and the printer's control panel CPI defines the FGID/FW (Typographic)
- When the chosen font and attribute combination is restricted by a licensing agreement the font attributes may be executed by substitution or other means. If an appropriate font is not available, the attribute may not occur. Also, with font substitution, the available characteristics may change. Combinations of attributes may not be available. Font attributes will not be applied to host downloaded fonts.

# Logical Page Descriptor

Before the printer can present a page of data it must know the following:

- The units in which distances have been measured
- The boundaries of the logical page
- Initialization values for control parameters (Margins, Line spacing...)

The controls established in a Logical Page Descriptor command remain in effect until the next Logical Page Descriptor is received unless superseded by explicit controls in other commands (See p.121 "Write Text"). In any case, the latest LPD control values are restored with each Begin Page or Begin Overlay command.

The LPD command is valid with 24, 28, 34, 36, 38, 40, 41 or 43 bytes. The printer accepts the LPD command using any of these valid lengths.

Offset	Range	Meaning	Error Code
0		UNIT-BASE (Measurement Units)	X'0264..0 2'
	X'00'	10 in.	
	X'01'	10 centimeters	
1		Reserved	
2-3		Xp AND I L-units PER UNIT-BASE	X'0260..0 2'
	X'3840'	14400 L-units per 10 in.	
	X'1626'	5670 L-units per 10 centimeters	
	X'0960'	2400 L-units per 10 in.	
	X'03B1'	945 L-units per 10 centimeters	
4-5		Yp AND B L-units PER UNIT-BASE	X'0261..0 2'
	X'3840'	14400 L-units per 10 in.	
	X'1626'	5670 L-units per 10 centimeters	
	X'0960'	2400 L-units per 10 in.	
	X'03B1'	945 L-Units per 10 centimeters	
6		Reserved	

Offset	Range	Meaning	Error Code
7-9	X'000001' - X'007FFF'	Xp-EXTENT OF LOGICAL PAGE (Width) See "Notation Conventions", IPDS Technical Reference 1.	X'0262..0 2'
10		Reserved	
11-13	X'000001' - X'007FFF'	Yp-EXTENT OF LOGICAL PAGE (Height) See "Notation Conventions", IPDS Technical Reference 1.	X'0263..0 2'
14		Reserved	
15		Ignored (Ordered Data)	
16-23		Reserved	
24-25		I-AXIS ORIENTATION	X'0268..0 2'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	
	X'FFFF'	Printer Default	
26-27		B-AXIS ORIENTATION	X'0269..0 2'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	
	X'FFFF'	Printer Default See p.137 "Set Text Orientation" for valid combinations of I-axis and B-axis orientations.	
28-29	X'0000' - X'7FFF'	INITIAL I PRINT COORDINATE See "Notation Conventions", IPDS Technical Reference 1.	X'026A.. 02'

Offset	Range	Meaning	Error Code
30-31	X'0000' - X'7FFF'	INITIAL B PRINT COORDINATE See "Notation Conventions", IPDS Technical Reference 1.	X'026B.. 02'
32-33	X'0000' - X'7FFF'	INLINE MARGIN See "Notation Conventions", IPDS Technical Reference 1.	X'0210..0 1'
	X'FFFF'	Printer Default	
34-35	X'0000' - X'7FFF'	INTERCHARACTER ADJUSTMENT (+) See "Notation Conventions", IPDS Technical Reference 1.	X'0212..0 1'
	X'FFFF'	Printer Default	
36-37		Reserved	
38-39	X'0000' - X'7FFF'	BASELINE INCREMENT See "Notation Conventions", IPDS Technical Reference 1.	X'0211..0 1'
	X'FFFF'	Printer Default	
40	X'00' - X'FE'	LOCAL FONT ID	
	X'FF'	Printer Default	

Offset	Range	Meaning	Error Code
41-42		TEXT COLOR	X'0258..03'
	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue - Limited Simulated Color Support	
	X'0002' or X'FF02'	Red - Limited Simulated Color Support	
	X'0003' or X'FF03'	Pink - Limited Simulated Color Support	
	X'0004' or X'FF04'	Green - Limited Simulated Color Support	
	X'0005' or X'FF05'	Turquoise - Limited Simulated Color Support	
	X'0006' or X'FF06'	Yellow - Limited Simulated Color Support	
	X'0008'	Black	
	X'0010'	Brown - Limited Simulated Color Support	
	X'FF07'	Printer Default (Black)	
	X'FF08'	Color of Medium (Reset)	
	X'FFFF'	Printer Default (Black)	

Offset	Range	Meaning	Error Code
43-end		<p data-bbox="422 309 543 339">LPD Triplets</p> <ul data-bbox="445 360 1064 1011" style="list-style-type: none"> <li data-bbox="445 360 1064 668">• Color Specification Triplet. This optional triplet can be placed at the end of the LPD command to specify the foreground color of the object area, before any object data is placed on the object area. Any number of LPD triplets can be received, they are processed in the order received and the resulting color of the object area depends on the last instance of the triplet received. For details, see "Color Simulation", IPDS Technical Reference 1.</li> <li data-bbox="445 693 1064 1011">• Presentation Space Reset Mixing Triplet. This optional triplet can be placed at the end of the LPD command to specify whether or not an object area is reset to the color of medium before any object data is placed on the object area. Any number of LPD triplets can be received, they are processed in the order received and the resulting color of the object area depends on the last instance of the triplet received. For details, see "Presentation Space Reset Mixing", IDPS Technical Reference 1.</li> </ul>	

## Logical Page Position

This command defines the position on the physical sheet of paper where the logical page is to be placed.

1

Offset	Range	Meaning	Error Code
0	X'00'	RESERVED	
1-3	X'FF8000' - X'007FFF'	Xm OFFSET of the LOGICAL PAGE ORIGIN in L-Units See "Notation Conventions", IPDS Technical Reference 1.	X'02A4..0 1' X'02AD.. 01'
4		PAGE PLACEMENT	
	X'00'	Default placement	
	X'10'	Partition 1, front side	
	X'11'	Partition 1, back side	
	X'20'	Partition 2, front side	
	X'21'	Partition 2, back side	
	X'30'	Partition 3, front side	
	X'31'	Partition 3, back side	
	X'40'	Partition 4, front side	
	X'41'	Partition 4, back side	
5-7	X'FF8000' - X'007FFF'	Ym OFFSET of the LOGICAL PAGE ORIGIN in L-Units See "Notation Conventions", IPDS Technical Reference 1.	X'02A5..0 1' X'02AD.. 01'



Offset	Range	Meaning	Error Code
8-9		PAGE ORIENTATION	
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees Explicit placement is supported.	

# Presentation Fidelity Control

The Presentation Fidelity Control (PFC) command is only valid in home state and specifies the fidelity requirements for certain presentation functions. The desired fidelity for each supported presentation function can be specified with a triplet on the PFC command. The activate flag can be used to reset all fidelity controls to their default settings before activating the settings specified in the PFC triplets. A PFC command with no triplets and with the activate flag set to B'0' resets all fidelity controls to their default settings.

Offset	Range	Meaning	Error Code
0	X'00'	RESERVED	
1		FLAGS	
	Bit 0	ACTIVATE	
	0	Reset to default fidelity controls and activate PFC triplets	
	1		
	Bits 1-7	Reserved	
	0000000 0000000		
2-3	X'0000'	Reserved	
4-n		Triplets (Zero or more optional PFC triplets)	X'0254..0 5'
		X'86' Text Fidelity Control	
		X'88' Finishing Fidelity Control	

## Text Fidelity Control

The Text Fidelity triplet specifies the exception continuation and reporting rules when an unrecognized or unsupported text control sequence is encountered.

Offset	Range	Meaning	Error Code
0	X'07'	LENGTH	X'0254..5 1'
1	X'86'	Text Fidelity Triplet ID	

Offset	Range	Meaning	Error Code
2		CONTINUE	X'0254..5 2'
	X'01'	Stop on Exception ID X'0200..01'	
	X'02'	Continue Processing Write Text Data	
3	X'00'	Reserved	
4		REPORT	X'0254..5 3'
	X'01'	Report X'0200..01' Exception	
	X'02'	Do Not Report X'0200..01' Exception	
5-6	X'0000'	Reserved	

## Finishing Fidelity Control

The Finishing Fidelity triplet specifies the exception continuation and reporting rules for finishing exceptions. This fidelity control applies when a request for a specific finishing operation cannot be satisfied.

Offset	Range	Meaning	Error Code
0	X'07'	LENGTH	X'0254..5 1'
1	X'86'	Text Fidelity Triplet ID	
2		CONTINUE	X'0254..5 2'
	X'01'	Stop at first finishing exception	
	X'02'	Continue without the finishing operation	
3	X'00'	Reserved	
4		REPORT	X'0254..5 3'
	X'01'	Report Finishing Exceptions	
	X'02'	Do Not Report Finishing Exceptions	
5-6	X'0000'	Reserved	

# Sense Type and Model

Causes the printer to place into the Special Data Area of the Acknowledge Reply (See p.10 "Acknowledgement Reply") a record containing type and model information and the functions the printer supports.

This command is effectively a NOP if the ARQ bit is NOT ON in the command header.

## Sense Type and Model

Offset	Range	Meaning
0	X'FF'	Convention
1-2		Product Code
	X'2707'	Type 1 / Type 2 / Type 3
	X'4028'	4028 Emulation (4028)
3		Model
	X'01'	Type 1
	X'02'	Type 2
	X'03'	Type 3
	X'00'	4028 Emulation (Simplex)
	X'12'	4028 Emulation (Duplex)
4-5	X'0000'	Reserved

### Note

- To check which model you are using, see "Machine Types", Read This First.

## Device-Control Command Set

Offset	Range	Meaning
0-1	X'hnnn'	VECTOR LENGTH
2-3	X'C4C3'	DEVICE CONTROL Command-Set ID
4-5	X'FF10'	DC1 Subset ID
6-7	X'6001'	MULTIPLE COPY and COPY-SUBGROUP support in LCC

Offset	Range	Meaning
8-9	X'6002'	Media-source-selection support in LCC
10-11	X'6003'	Media-destination-selection support in LCC
12-13	X'6101'	Explicit Page Placement and Orientation Support
14-15	X'6201'	LOGICAL PAGE AND OBJECT AREA COLORING support
16-17	X'7008'	Set Presentation Environment
18-19	X'702E'	ACTIVATE RESOURCE Command support
20-21	X'7034'	PRINT FIDELITY Command support
22-23	X'706B'	ICMR command support
24-25	X'8008'	XOA Order MARK FORM
26-27	X'800A'	XOA Order ALTERNATE OFFSET STACKER
28-29	X'80F2'	XOA Order DISCARD BUFFERED DATA
30-31	X'80F4'	XOA Order REQUEST RESOURCE LIST
32-33	X'80F6'	XOA Order EXCEPTION HANDLING CONTROL
34-35	X'80F8'	XOA Order PRINT QUALITY CONTROL
36-37	X'9001'	XOH Order PRINT BUFFERED DATA
38-39	X'9003'	XOH Order SPECIFY GROUP OPERATION
40-41	X'9004'	XOH Order DEFINE GROUP BOUNDARY
42-43	X'9005'	XOH Order ERASE RESIDUAL PRINT DATA
44-45	X'9007'	XOH Order ERASE RESIDUAL FONT DATA
46-47	X'900D'	XOH Order STACK RECEIVED PAGES
48-49	X'9013'	XOH Order EJECT to FRONT FACING
50-51	X'9015'	XOH Order SELECT INPUT MEDIA SOURCE
52-53	X'9016'	XOH Order SET MEDIA ORIGIN
54-55	X'9017'	XOH Order SET MEDIA SIZE
56-57	X'e000'	CMRs can be captured

Offset	Range	Meaning
58-59	X'e001'	Host-activated link color conversion CMRs supported
60-61	X'e004'	Host-activated indexed CMRs supported
62-63	X'e102'	Pass-thru audit color conversion CMRs supported
64-65	X'F001'	END PERSISTENT NACK Without Leaving IPDS
66-67	X'F200'	OBJECT DATE AND TIME STAMP TRIPLETS SUPPORTED
68-69	X'F201'	ACTIVATION (AR) FAILED NACK SUPPORTED
70-71	X'F202'	Font resolution and metric technology triplets supported
72-73	X'F203'	Metric adjustment triplets supported in AR commands
74-75	X'F204'	Data-object font support
76-77	X'F205'	Color Mgmt Triplet Support
78-79	X'F206'	Device Appearance Triplet support in SPE cmd
80-81	X'F601'	Position check highlighting support in XOA EHC
82-83	X'F602'	Independent exception page print in XOA-EHC Independent Exception Page Print is only present in Native mode, not 4028 Emulation mode.
84-85	X'F804'	SIMPLEX and DUPLEX 4-UP supported in LCC
86-87	X'FB00'	All architected units of measure
88-89	X'FC00'	All function listed for IS/3 is supported

### Presentation Text Command Set

Offset	Range	Meaning
0-1	X'000C'	VECTOR LENGTH
2-3	X'D7E3'	PRESENTATION TEXT Command Set - TX1 Subset
4-5	X'FF30'	PT3 Data
6-7	X'1001'	UNORDERED TEXT

Offset	Range	Meaning
8-9	X'4022'	COLOR of MEDIUM SUPPORTED LIMITED SIMULATED COLOR SUPPORTED  For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.
10-11	X'50FF'	8 TEXT ORIENTATIONS supported

### IM Image Command Set

Offset	Range	Meaning
0-1	X'000C'	VECTOR LENGTH
2-3	X'C9D4'	IM IMAGE Command Set - IM1 Subset
4-5	X'FF10'	IMD1 Data
6-7	X'1001'	UNORDERED IMAGE BLOCKS
8-9	X'4022'	COLOR of MEDIUM SUPPORTED LIMITED SIMULATED COLOR SUPPORTED  For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.
10-11	X'A004'	ALL 4 ORIENTATIONS Supported

### IO Image Command Set (IOCA FS10)

Offset	Range	Meaning
0-1	X'0022'	VECTOR LENGTH
2-3	X'C9D6'	IO Image Command Set
4-5	X'FF10'	IO/1 Level
6-7	X'1001'	Unordered Image Blocks
8-9	X'1202'	IO Image Objects Downloaded Resources in Home State

Offset	Range	Meaning
10-11	X'4022'	COLOR of MEDIUM SUPPORTED LIMITED SIMULATED COLOR SUPPORTED  For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.
12-13	X'5001'	MMR Compression algorithm supported
14-15	X'5003'	Uncompressed Image supported
16-17	X'5006'	RL4 Compression supported
18-19	X'5081'	G3 Facsimile Coding Scheme (CCITT G3MR)
20-21	X'5082'	G4 Facsimile Coding Scheme (CCITT G4MMR)
22-23	X'5101'	Bit ordering supported
24-25	X'5204'	Unpadded RIDIC Recording Algorithm supported
26-27	X'5505'	Multiple Image Content Supported
28-29	X'A004'	All four orientations supported
30-31	X'F300'	Replicate and Trim mapping supported
32-33	X'F301'	Scale-to-fill mapping supported

**Note**

- The Replicate and Trim Mapping Control Option is not supported when IPDS Print Mode = STD (Standard 300 dpi).

### IO Image Command Set (IOCA FS11)

Offset	Range	Meaning
0-1	X'0028'	VECTOR LENGTH
2-3	X'C9D6'	IO Image Command Set
4-5	X'FF11'	IO/1 Level
6-7	X'1001'	Unordered Image Blocks
8-9	X'1202'	IO Image Objects Downloaded Resources in Home State



Offset	Range	Meaning
10-11	X'4020'	LIMITED SIMULATED COLOR SUPPORTED
12-13	X'4022'	COLOR of MEDIUM SUPPORTED LIMITED SIMULATED COLOR SUPPORTED  For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.
14-15	X'4003'	COLOR of MEDIUM SUPPORTED MULTIPLE-COLOR SUPPORTED
16-17	X'4401'	Extended IOCA Bi-level Image Color supported
18-19	X'5001'	MMR Compression algorithm supported
20-21	X'5003'	Uncompressed Image supported
22-23	X'5008'	ABIC Compression supported
24-25	X'500A'	Concatenated ABIC
26-27	X'5082'	G4 Facsimile Coding Scheme (CCITT G4MMR)
28-29	X'5083'	ISO/ITU-TSS JPEG supported
30-31	X'5101'	Bit ordering supported
32-33	X'5204'	Unpadded RIDIC Recording Algorithm supported
34-35	X'5505'	Multiple Image Content supported
36-37	X'A004'	All four orientations supported
38-39	X'F301'	Scale-to-fill mapping supported

### IO Image Command Set (IOCA FS40)

Offset	Range	Meaning
0-1	X'0026'	VECTOR LENGTH
2-3	X'C9D6'	IO Image Command Set
4-5	X'FF40'	IO/1 Level
6-7	X'1001'	Unordered Image Blocks

Offset	Range	Meaning
8-9	X'1202'	IO Image Objects Downloaded Resources in Home State
10-11	X'4022'	COLOR of MEDIUM SUPPORTED LIMITED SIMULATED COLOR SUPPORTED  For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.
12-13	X'4401'	Extended IOCA Bi-level Image Color supported
14-15	X'4402'	Extended IOCA Tile-Set Color support
16-17	X'5001'	MMR Compression algorithm supported
18-19	X'5003'	Uncompressed Image supported
20-21	X'5008'	ABIC Compression supported
22-23	X'5080'	G3 Facsimile Coding Scheme (CCITT G3MH)
24-25	X'5081'	G3 Facsimile Coding Scheme (CCITT G3MR)
26-27	X'5082'	G4 Facsimile Coding Scheme (CCITT G4MMR)
28-29	X'5101'	Bit ordering supported
30-31	X'5204'	Unpadded RIDIC Recording Algorithm supported
32-33	X'5505'	Multiple image Content supported
34-35	X'A004'	All four orientations supported
36-37	X'F301'	Scale-to-fill mapping supported

### IO Image Command Set (IOCA FS42)

Offset	Range	Meaning
0-1	X'0024'	VECTOR LENGTH
2-3	X'C9D6'	IO Image Command Set
4-5	X'FF42'	IO/1 Level
6-7	X'1001'	Unordered Image Blocks
8-9	X'1202'	IO Image Objects Downloaded Resources in Home State

Offset	Range	Meaning
10-11	X'4022'	COLOR of MEDIUM SUPPORTED
12-13	X'4401'	Extended IOCA Bi-level Image Color SDF supported
14-15	X'4402'	Extended IOCA Tile-Set Color support
16-17	X'5001'	MMR Compression algorithm supported
18-19	X'5003'	Uncompressed Image supported
20-21	X'5008'	ABIC Compression supported
22-23	X'5020'	Solid Fill Rectangle
24-25	X'5082'	G4 Facsimile Coding Scheme (CCITT G4MMR)
26-27	X'5101'	Bit ordering supported
28-29	X'5204'	Unpadded RIDIC Recording Algorithm supported
30-31	X'5505'	Multiple image content supported
32-33	X'A004'	All four orientations supported
34-35	X'F301'	Scale-to-fill mapping supported

### IO Image Command Set (IOCA FS45)

Offset	Range	Meaning
0-1	X'001C'	VECTOR LENGTH
2-3	X'C9D6'	IO Image Command Set
4-5	X'FF45'	IO/1 Level
6-7	X'1001'	Unordered Image Blocks
8-9	X'1202'	IO Image Objects Downloaded Resources in Home State
10-11	X'4022'	COLOR of MEDIUM SUPPORTED LIMITED SIMULATED COLOR SUPPORTED For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.
12-13	X'4401'	Extended IOCA Bi-level Image Color supported

Offset	Range	Meaning
14-15	X'4402'	Extended IOCA Tile-Set Color support
16-17	X'5101'	Bit ordering supported
18-19	X'5204'	Unpadded RIDIC Recording Algorithm supported
20-21	X'5505'	Multiple image Content supported
22-23	X'A004'	All four orientations supported
24-25	X'F301'	Scale-to-fill mapping supported

### Graphics Command Set

Offset	Range	Meaning
0-1	X'001A'	VECTOR LENGTH
2-3	X'E5C7'	GRAPHICS Command Set - GR1 Subset
4-5	X'FF30'	GRS3 Data
6-7	X'1001'	UNORDERED GRAPHICS BLOCKS
8-9	X'4022'	COLOR of MEDIUM SUPPORTED LIMITED SIMULATED COLOR SUPPORTED  For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.
10-11	X'4100'	Set Process Color Supported
12-13	X'4101'	GOCA Box Drawing Supported
14-15	X'4102'	Partial Arc Drawing Supported
16-17	X'4106'	Set Fractional Line Width Supported
18-19	X'4108'	Normal line width default
20-21	X'4109'	Process Color default
22-23	X'4112'	Clockwise partial arc
24-25	X'A004'	All 4 orientations supported

**Page Segment Command Set**

Offset	Range	Meaning
0-1	X'0008'	VECTOR LENGTH
2-3	X'D7E2'	PAGE SEGMENT Command Set
4-5	X'FF10'	PS1 Subset
6-7	X'1101'	EXTENDED PAGE SEGMENT SUPPORT (32K)

1

**Overlay Command Set**

Offset	Range	Meaning
0-1	X'000C'	VECTOR LENGTH
2-3	X'D6D3'	OVERLAY Command Set
4-5	X'FF10'	OL1 Subset
6-7	X'1506'	OVERLAY NESTING = 6 Levels
8-9	X'1102'	EXTENDED OVERLAY SUPPORT (32K)
10-11	X'A004'	page-overlay-rotation support; all 4 orientations

**Loaded Font Command Set (LF1) - Single Byte**

Offset	Range	Meaning
0-1	X'0010'	VECTOR LENGTH
2-3	X'C3C6'	LOADED FONT Command Set
4-5	X'FF10'	LF1 subset - fully described font + font index
6-7	X'A004'	4 CHARACTER ROTATIONS (LFI command)
8-9	X'B002'	LFI UNDERSCORE Width and Position USED
10-11	X'C005'	BOUNDED BOX RASTER FONT TECHNOLOGY
12-13	X'C100'	FIXED METRICS
14-15	X'C101'	RELATIVE METRICS

**Loaded Font Command Set (LF1) - Double Byte**

Offset	Range	Meaning
0-1	X'0012'	VECTOR LENGTH
2-3	X'C3C6'	LOADED FONT Command Set
4-5	X'FF10'	LF1 subset - fully described font + font index
6-7	X'A004'	4 CHARACTER ROTATIONS (LFI command)
8-9	X'B001'	Double-Byte coded fonts supported
10-11	X'B002'	LFI UNDERSCORE Width and Position USED
12-13	X'C005'	BOUNDED BOX RASTER FONT TECHNOLOGY
14-15	X'C100'	FIXED METRICS
16-17	X'C101'	RELATIVE METRICS

**Loaded Font Command Set (LF3) - Single Byte**

Offset	Range	Meaning
0-1	X'0014'	VECTOR LENGTH
2-3	X'C3C6'	LOADED FONT Command Set
4-5	X'FF30'	LF3 subset - code page + font character set
6-7	X'A004'	4 CHARACTER ROTATIONS (LFI command)
8-9	X'B002'	LFI UNDERSCORE Width and Position USED
10-11	X'B003'	GRID PARTS REQUIRED IN LFC, LFCSC and LCPC COMMANDS
12-13	X'B004'	Default Character Parameters in LCPC Supported
14-15	X'B005'	Extended (Unicode mapping) code page support
16-17	X'C01F'	ADOBE TYPE-1 PFB OUTLINE FONT TECHNOLOGY
18-19	X'C101'	RELATIVE METRICS

**Loaded Font Command Set (LF3) - Double Byte**

Offset	Range	Meaning
0-1	X'0018'	VECTOR LENGTH
2-3	X'C3C6'	LOADED FONT Command Set
4-5	X'FF30'	LF3 subset - code page + font character set
6-7	X'A004'	4 CHARACTER ROTATIONS (LFI command)
8-9	X'B001'	Double-Byte coded fonts supported
10-11	X'B002'	LFI UNDERSCORE Width and Position USED
12-13	X'B003'	GRID PARTS REQUIRED IN LFC, LFCSC and LCPC COMMANDS
14-15	X'B004'	Default Character Parameters in LCPC Supported
16-17	X'B005'	Extended (Unicode mapping) code page support
18-19	X'C01E'	CID-keyed OUTLINE FONT TECHNOLOGY
20-21	X'C01F'	ADOBE TYPE-1 PFB OUTLINE FONT TECHNOLOGY
22-23	X'C101'	RELATIVE METRICS

**Bar Code Command Set**

Offset	Range	Meaning
0-1	X'000C'	VECTOR LENGTH
2-3	X'C2C3'	BAR CODE Command Set - BC1 Subset
4-5	X'FF20'	BCD2 Data
6-7	X'1001'	UNORDERED BAR CODE BLOCKS
8-9	X'4022'	COLOR of MEDIUM SUPPORTED LIMITED SIMULATED COLOR SUPPORTED  For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.
10-11	X'A004'	All four orientations supported

**Note**

- See p.193 "Bar Code Type and Modifier Description and Values" for a list of supported Bar Code Types.

1

### Object Container Command Set

Offset	Range	Meaning
0-1	X'000C'	VECTOR LENGTH
2-3	X'D6C3'	Object Container Command set - OC1 Subset
4-5	X'0000'	No levels defined
6-7	X'1201'	Data-object resource support
8-9	X'F301'	Scale-to-fill mapping supported
10-11	X'5800'	Image resolution triplet supported



## Execute Order Any State (XOA)

This command identifies a set of subcommands which take effect immediately, regardless of the current printer operating state.

Each Execute Order Any state command consists of a two-byte order code followed by zero or more bytes of parameters.

### XOA Mark Form

The MF order causes the printer to place two rectangular blocks of job separation marks on the current or the next sheet. One block is printed on the leading edge of the sheet and one block is printed on the trailing edge of the sheet.

If the MF order is included in a page that is part of a Load Copy Control copy group (See p.28 "Load Copy Control") all the copies of the page will have a job separator mark included.

Offset	Range	Meaning	Error Code
0-1	X'0800'	MARK FORM	

### XOA Exception Handling Control

The Exception-Handling Control command allows the host to control how the printer reports and processes exceptions. A data-stream exception exists when the printer detects an invalid or unsupported command, control, or parameter value.

Offset	Range	Meaning	Error Code
0-1	X'F600'	EXCEPTION HANDLING CONTROL (EHC)	

Offset	Range	Meaning	Error Code
2		EXCEPTION REPORTING	
	Bit 0: 0	Do not Report Undefined Character Check	
	Bit 0: 1	Report Undefined Character Check	
	Bit 1: 0	Do not Report Page Position Check	
	Bit 1: 1	Report Page Position Check	
	Bits 2-5: 00	Reserved	
	Bit 6: 0	Do not Highlight Position Checks	
	Bit 6: 1	Highlight Position Checks (08C1..00 and 0411..00)	
	Bit 7: 0	Do not Report All other Exceptions with AEA's	
	Bit 7: 1	Report All other Exceptions with AEA's	
3		ALTERNATE EXCEPTION ACTIONS	
	Bits 0-6: 0	Reserved	
	Bit 7: 0	Take AEA (if defined)	
	Bit 7: 1	Don't take AEA	
4		EXCEPTION PRESENTATION PROCESSING	
	Bits 0-5: 0	Reserved	
	Bit 6: 0	No Page Continuation	
	Bit 6: 1	Page Continuation Action (Independent Exception Page Print Supported) Discard Page	
	Bit 7: 0	Print to point of Exception	
	Bit 7: 1	(Process limits may apply) Independent Exception Page Print is only present in Native mode, not 4028 Emulation mode.	

## XOA Request Resource List

This order causes the Resource List (See "Resource List Reply") to be placed in the Special Data Area of the Acknowledge Reply (See p.10 "Acknowledgement Reply") requested with this order. If the ARQ flag was not set for this XOA subcommand, it is treated as a NOP.

A Resource List Reply may consist of multiple entries. If the Resource List Reply contains an entry that does not fit in the space available in the Special Data Area of Acknowledge Reply, the printer will follow either the acknowledge continuation method or the RRL-continuation method, depending on the host, as described in Intelligent Printer Data Stream Reference.

Offset	Range	Meaning	Error Code
0-1	X'F400'	REQUEST RESOURCE LIST (RRL)	
2		QUERY TYPE	X'0291..0 2'
	X'05'	Resource Activation Status	
	X'00' or X'FF'	General Resource Status	
3-4	X'0000'- X'FFFF'	ENTRY CONTINUATION Indicator	
5	X'03'-X'xx'	ENTRY LENGTH Multiple-entry queries are not supported. Byte 5 indicates the length of the command.	X'0291..0 2'

Offset	Range	Meaning	Error Code
6		RESOURCE TYPE	X'0291..0 2'
	X'01'	Single Byte Coded Fonts	
	X'02'	Double-byte LF1-type Coded Fonts	
	X'03'	Double-byte LF1-type Coded Font Sections	
	X'04'	Page Segments	
	X'05'	Overlays	
	X'06'	Device Version Code Pages	
	X'07'	Font Character Sets	
	X'08'	Single-byte coded-font indexes	
	X'09'	Double-byte LF1-type Coded Font Section Indexes	
	X'10'	Coded Fonts (treated as RT 01)	
	X'11'	Graphic Character Sets supported in a font character set	
	X'12'	Specific Code Pages	
	X'41'	Data-object font	
	X'42'	Data-object font component	
	X'40'	Data Object Resource	
X'FF'	All Resources		
7		RESOURCE ID FORMAT	X'0291..0 2'
	X'00'	Host-Assigned Resource ID	
	X'03'	IBM Registered Global Resource ID parts	
	X'09'	Object-OID	
8-n		RESOURCE IDENTIFIER	

- Multiple-entry queries are not supported. Byte 5 indicates the length of the command.
- If the entire resource list does not fit in the Special Data area of the Acknowledge Reply, continuation is necessary. The printer indicates continuation using the acknowledgement

continuation bit in the flag byte of the Acknowledge Reply. If the host requests Acknowledgement continuation by sending a command with ARQ bit and the Continuation bit set, the printer will complete the RRL reply using Acknowledgement continuation. If the host requests RRL continuation (by sending an RRL command with non-zero value in bytes 3 and 4) the printer will use conventional RRL continuation to finish the reply. If the host requests both RRL and ACK continuation, the printer will default to RRL continuation.

- Bytes 8 and 9 are ignored when the resource type is ALL.
- Exception ID 0291..02 in bytes 6 and 7 are for invalid values. If either value is unsupported, then the query is not understood and the reply is a single entry that sets the resource type to zero, echoes other values, and sets the resource size to zero (not present).

### Resource List Reply

Offset	Range	Meaning	Error Code
0	X'FF	UNORDERED LIST	
1	X'01'	END of LIST	
	X'04' - X'nn'	LENGTH of this ENTRY	

Offset	Range	Meaning	Error Code
2		RESOURCE TYPE	
	X'00'	Resource Size=0. The queried Resource Type, ID Format, or ID is unknown, unsupported, or inconsistent	
	X'01'	Single Byte Coded Font	
	X'02'	Double Byte Coded Fonts	
	X'03'	Double Byte Coded-font Sections	
	X'04'	Page Segment	
	X'05'	Overlay	
	X'06'	Device Version Code Pages	
	X'07'	Font Character Sets	
	X'08'	Single Byte Coded Font Index	
	X'09'	Double Byte Coded-font Section Indexes	
	X'11'	Graphic Character Sets supported in a font character set	
	X'12'	Specific Code Pages	
	X'41'	Data-object font	
	X'42'	Data-object font component	
X'FF'	All Resources		
3		RESOURCE ID FORMAT	
	X'00'	Host-Assigned Resource ID	
	X'03'	IBM Registered Global Resource ID parts	
4		RESOURCE SIZE Indicator	
	X'00'	Resource not present	
	X'01'	Resource present	
5-6	X'xxxx'	Resource ID	

- Bytes 2-6 repeat for each resource type.
- A query for a HARID that maps to a GCSGID/CPGID/FGID/FW combination which is not supported in the current configuration will result in a negative response (Reply Byte 4 = 0).
- For details about a description of the supported GCSGID/CPGID/FGID/FW combinations, see "Code Page and Font Identification", IPDS Technical Reference 1.

## XOA Alternate Offset Stacker (AOS)

The AOS order command signals the printer to jog the current sheet. If copies of the current sheet are stacked in more than one media destination, the jogging will occur in each selected media destination, if the media destination supports offset stacking.

Offset	Range	Meaning	Error Code
0-1	X'0A00'	Alternate Offset Stacker	

### Media Jogging Support Matrices

Y = Yes / N = No

	Finisher SR4060: Finisher shift tray	Finisher SR4080: Finisher shift tray	Booklet Finisher SR4070: Finisher shift tray
A3 (297 × 420mm) SEF	Y	Y	Y
A4 (210 × 297mm) SEF / LEF	Y	Y	Y
A5 (210 × 148mm) SEF / LEF	Y	N (SEF) / Y (LEF)	N (SEF) / Y (LEF)
A6 (105 × 148mm) SEF	N	N	N

	Finisher SR4060: Finisher shift tray	Finisher SR4080: Finisher shift tray	Booklet Finisher SR4070: Finisher shift tray
B4 (257 × 364 mm) SEF	Y	Y	Y
B5 (182 × 257mm) SEF / LEF	Y	Y	Y
B6 (128 × 182mm) SEF	N	N	N
DLT (11 × 17 in.) SEF	Y	Y	Y
Legal (8.5 × 14in.) SEF	Y	Y	Y
Foolscap (8.5 × 13in.) SEF	Y	Y	Y
Letter (8.5 × 11in.) SEF / LEF	Y	Y	Y
GovernmentLG (8.25 × 14 in.) SEF	Y	Y	Y
Folio (8.25 × 13in.) SEF	Y	Y	Y



	Finisher SR4060: Finisher shift tray	Finisher SR4080: Finisher shift tray	Booklet Finisher SR4070: Finisher shift tray
F/GL (8 × 13in.) SEF	Y	Y	Y
G LT (8 × 13in.) SEF / LEF	Y	Y	Y
Eng Quatro (8 × 10 in.) SEF / LEF	Y	Y	Y
Executive (7.25 × 10.5in.) SEF / LEF	Y	Y	Y
HalfLetter (5.5 × 8.5in.) SEF / LEF	Y	N (SEF) / Y (LEF)	N (SEF) / Y (LEF)
8kai (267 × 390 mm) SEF	Y	Y	Y
16kai (195 × 267 mm) SEF / LEF	Y	Y	Y
11 × 15 in. SEF	Y	Y	Y
11 × 14 in. SEF	Y	Y	Y
10 × 15 in. SEF	Y	Y	Y

	Finisher SR4060: Finisher shift tray	Finisher SR4080: Finisher shift tray	Booklet Finisher SR4070: Finisher shift tray
10 × 14 in. SEF	Y	Y	Y
Custom Sizes	139.7 × 139.0 mm to 305.0 × 458.0 mm	182.0 × 139.7 mm to 305.0 × 487.6 mm	182.0 × 139.7 mm to 305.0 × 487.6 mm

# Execute Order Home State (XOH)

Each Execute Order Homestate command consists of a two-byte order code followed by zero or more bytes of parameters.

## XOH Obtain Printer Characteristics

This order causes a set of self-defined fields describing printer characteristics to be placed in the Special Data Area of the requested Acknowledge Reply and is identified with an acknowledgement type of X'46'. If the ARQ flag was not set on the XOH command containing this order, then this order is equivalent to a No Operation.

Offset	Range	Meaning	Error Code
0-1	X'F300'	OPC Order Code	

## Printable Area Self-Defining Field

- The printer provides two modes that determine the specification of the Xm Offset, Ym Offset, Xm Extent and Ym Extent of the Printable Area.
  - Restricted (No Print Border) (Guaranteed Print Legibility) (Default)
  - Unrestricted (Edge-to-Edge Addressability)
- The Xm Extent and Ym Extent of the Printable Area parameters documented in the following table are representative of the standard printer source media configuration. These extents can be modified as a result of receiving a XOHSMO command, as described in p.108 "XOH Set Media Origin".
- Actual tray capacities are determined media weight. The capacities in the following table are the maximum allowable.
- The machine supports media source tray numbering. Media source values in the printer's control panel OPC support tables represent the default settings when the printer is initially installed. An the menu mode is provided to allow customers to specify the source tray numbers to meet requirements of legacy applications. Example: customer might want to address the Manual Tray as tray 4 instead of the tray 100 (default).

### Note

- For the tray in which "envelope" has been specified as the paper type, the tray values of the tray ID are (in ascending for each respective tray that is installed) as follows: X'8040', X'8041', etc. If a different paper type is specified for the tray, the tray values of the tray ID are (in ascending for each respective tray that is installed) as follows: X'8000', X'8001', etc. In regards to the bypass

tray and default tray, even if you specify "envelope" as the paper type, the tray value will not be changed.

Offset	Range	Meaning
0-1		LENGTH of this Self-Defining Field
	X'0018' or	Machine with NO Media OID
	X'0024' or	Machine with Single Media OID
	X'0025' or	Machine with Double Media OID
	X'0026' or	Machine with Triple Media OID
	X'0027' or	Machine with Quadruple Media OID
	X'nnnn'	Machine with Media Name
2-3	X'0001'	PRINTABLE AREA Self-Defining Field ID
4		INPUT MEDIA SOURCE
	X'00'	Tray 1
	X'01'	Tray 2
	X'02'	Tray 3
	X'03'	Large capacity tray (LCT)
	X'04'	Interposer
	X'63'	Bypass tray
	X'FF'	Default tray
	X'00'	Reserved
6	X'00'	UNIT BASE 10 in.
7	X'00'	Reserved
8-9	X'3840'	L-units per UNIT BASE
10-11	X'0001' - X'xxxx'	WIDTH of the Medium Presentation Space in L-units (determined by configuration)
12-13	X'0001' - X'xxxx'	LENGTH of the Medium Presentation Space in L-units (determined by configuration)

Offset	Range	Meaning
14-15		Xm OFFSET of the Printable Area in L-Units
	X'00E3'	Restricted (4mm)
	X'0000'	Unrestricted (0mm)
16-17		Ym OFFSET of the Printable Area in L-units
	X'00E3'	Restricted (4mm)
	X'0000'	Unrestricted (0mm)  For A4 media there is special processing with respect to reporting the Xm OFFSET and subsequently the Xm EXTENT of the printable area. The 4028 printer used an offset of 3.386 mm for A4 paper (short edge) instead of 4 mm. This was done as a customer satisfaction issue to allow a printable area 8 in. wide.

Offset	Range	Meaning
18-19 (Restricted: No Print Border)		Xm EXTENT of the Printable Area in L-units
		Paper
	X'1D2A'	Statement (5.185 in.)
	X'2702'	Executive (6.935 in.)
	X'2B3A'	8in. × 10in. (7.685 in.)
	X'2E0A'	Letter (8.185 in.)
	X'30DA'	Letter Tabstock (8.685 in.)
	X'2B3A'	8in. × 13in. (7.685 in.)
	X'2CA2'	8.25in. × 13in. (7.935 in.)
	X'2E0A'	8.5 × 13 in. (8.185 in.)
	X'2E0A'	Legal (8.185 in.)
	X'367A'	10in. × 14in. (9.685 in.)
	X'367A'	10in. × 15in. (9.685 in.)
	X'3C1A'	11 in. × 14in. (10.685 in.)
	X'3C1A'	11 in. × 15in. (10.685 in.)
	X'3C1A'	Ledger (10.685 in.)
	X'41BA'	12in. × 18in. (11.685 in.)
	X'157B'	A6 (97 mm)
	X'1A93'	B6 (120 mm)
	X'1F1D'	A5 (140.5 mm)
	X'23E0'	170 × 210mm (162 mm)
	X'2689'	182 × 210mm (174 mm)
	X'2CBC'	210 × 340mm (202 mm)

Offset	Range	Meaning
18-19 (Restricted: No Print Border)	X'2688'	B5 (JIS) (174 mm)
	X'2CBC'	A4 (202 mm)
	X'2F86'	A4 Tabstock (214.6 mm)
	X'3724'	B4 (ISO) (249 mm)
	X'395C'	8 Kai (259 mm)
	X'296A'	16 Kai (187 mm)
	X'4000'	A3 (289 mm)
	X'145F' - X'474F'	Custom (92 mm to 322 mm)
		Transparencies/Labels
	X'2E0A'	Letter (8.185 in.)
	X'2CBC'	A4 (202 mm)

Offset	Range	Meaning
18-19 (Unrestricted: Edge-to-Edge Addressability)		Xm EXTENT of the Printable Area in L-units
		Paper
	X'1EFO'	Statement (5.5 in.)
	X'28C8'	Executive (7.25 in.)
	X'2D00'	8in. × 10in. (8 in.)
	X'2FDO'	Letter (8.5 in.)
	X'32A0'	Letter Tabstock (9 in.)
	X'2D00'	8in. × 13in. (8 in.)
	X'2E68'	8.25in. × 13in. (8.25 in.)
	X'2FDO'	8.5in. × 13in. (8.5 in.)
	X'2FDO'	Legal (8.5 in.)
	X'3840'	10in. × 14in. (10 in.)
	X'3840'	10in. × 15in. (10 in.)
	X'3DE0'	11 in. × 14in. (11 in.)
	X'3DE0'	11 in. × 15in. (11 in.)
	X'3DE0'	Ledger (11 in.)
	X'4380'	12in. × 18in. (12 in.)
	X'1741'	A6 (105 mm)
	X'1C59'	B6 (128 mm)
	X'20E3'	A5 (148.5 mm)
	X'25A6'	170 × 210mm (170 mm)
	X'284E'	182 × 210mm (182 mm)
	X'2E82'	210 × 340mm (210 mm)



Offset	Range	Meaning
18-19 (Unrestricted: Edge-to-Edge Addressability)	X'284E'	B5 (JIS) (182 mm)
	X'2E82'	A4 (210 mm)
	X'314C'	A4 Tabstock (222.6 mm)
	X'38EA'	B4 (ISO) (257 mm)
	X'3B21'	8 Kai (267 mm)
	X'2B30'	16 Kai (195 mm)
	X'41C6'	A3 (297 mm)
	X'1625' - X'4914'	Custom (100 mm to 330 mm)
		Transparencies/Labels
	X'2FD0'	Letter (8.5 in.)
	X'2E82'	A4 (210 mm)

Offset	Range	Meaning
20-21 (Restricted: No Print Border)		Ym EXTENT of the Printable Area in L-units
		Paper
	X'2EOA'	Statement (8.185 in.)
	X'394A'	Executive (10.185 in.)
	X'367A'	8in. × 10in. (9.685 in.)
	X'394A'	8in. × 10.5in. (10.185 in.)
	X'3C1A'	Letter (10.685 in.)
	X'3C1A'	Letter Tabstock (10.685 in.)
	X'475A'	8in. × 13in. (12.685 in.)
	X'475A'	8.25in. × 13in. (12.685 in.)
	X'475A'	8.5in. × 13in. (12.685 in.)
	X'4CFA'	Legal (13.685 in.)
	X'4CFA'	10in. × 14in. (13.685 in.)
	X'529A'	10in. × 15in. (14.685 in.)
	X'4CFA'	11in. × 14in. (13.685 in.)
	X'529A'	11in. × 15in. (14.685 in.)
	X'5DDA'	Ledger (16.685 in.)
	X'637A'	12in. × 18in. (17.685 in.)
	X'1F1D'	A6 (140.5 mm)
	X'2689'	B6 (174 mm)
	X'2CBC'	A5 (202 mm)
	X'2CBC'	170 × 210mm (202 mm)
	X'2CBC'	182 × 210mm (202 mm)
	X'4986'	210 × 340mm (332 mm)

Offset	Range	Meaning
20-21 (Restricted: No Print Border)	X'3724'	B5 (JIS) (249 mm)
	X'4000	A4 (289 mm)
	X'4000'	A4 Tabstock (289 mm)
	X'4ED6'	B4 (ISO) (356 mm)
	X'5499'	8 Kai (382 mm)
	X'395C'	16 Kai (259 mm)
	X'5B3D'	A3 (412 mm)
	X'1D02 - 63A8'	Custom (131 mm to 450 mm)
		Transparencies/Labels
	X'3C1A'	Letter (10.685 in.)
	X'4000'	A4 (289 mm)

Offset	Range	Meaning
20-21 (Unrestricted: Edge-to-Edge Addressability)		Ym EXTENT of the Printable Area in L-units
		Paper
	X'2FDO'	Statement (8.5 in.)
	X'3B10'	Executive (10.5 in.)
	X'3840'	8in. × 10in. (10 in.)
	X'3DE0'	Letter (11 in.)
	X'3DE0'	Letter Tabstock (11 in.)
	X'4920'	8in. × 13in. (13 in.)
	X'4920'	8.25in. × 13in. (13 in.)
	X'4920'	8.5in. × 13in. (13 in.)
	X'4ECO'	Legal (14 in.)
	X'4ECO'	10in. × 14in. (14 in.)
	X'5460'	10in. × 15in. (15 in.)
	X'4ECO'	11in. × 14in. (14 in.)
	X'5460'	11in. × 15in. (15 in.)
	X'5FA0'	Ledger (17 in.)
	X'20C7'	12in. × 18in. (18 in.)
	X'20E3'	A6 (148.5 mm)
	X'284E'	B6 (182 mm)
	X'2E82'	A5 (210 mm)
	X'2E82'	170 × 210mm (210 mm)
	X'2E82'	182 × 210mm (210 mm)
	X'4B4C'	210 × 340mm (340 mm)

Offset	Range	Meaning
20-21 (Unrestricted: Edge-to-Edge Addressability)	X'38EA'	B5 (JIS) (257 mm)
	X'41C6'	A4 (297 mm)
	X'41C6'	A4 Tabstock (297 mm)
	X'509C'	B4 (ISO) (364 mm)
	X'565F'	8 Kai (390 mm)
	X'3B21'	16 Kai (267 mm)
	X'5D03'	A3 (420 mm)
	X'1EC8 - 656D'	Custom (139 mm to 458 mm)
		Transparencies/Labels
	X'3DE0'	Letter (11 in.)
22-23		INPUT MEDIA SOURCE CHARACTERISTICS
	Bit 0: 0/1	0 = No Duplex; 1 = Duplex
	Bits 1-2: 10	10 = Cut Sheet Media
	Bit 3: 1	0 = Tray Not Available; 1 = Tray Available
	Bit 4: 0	0 = Reserved
	Bit 5: 0/1	0 = No Envelopes; 1 = Auto or Manual Envelope Feature
	Bit 6: 0/1	0 = Auto Media Feed; 1 = Manual Media Feed
	Bit 7: 0	0 = No Computer Output on Microfilm (COM)
	Bit 8: 0	0 = No Carrier Strips (Ignored for Cut Sheet Media)
	Bit 9: 0/1	0 = Not an Inserter Bin; 1 = Inserter Bin
	Bits 10-15: all 0	Reserved

Offset	Range	Meaning
24-25		Input Media ID LENGTH (Note 3)
	X'000C' or	Machine with Single OID byte
	X'000D' or	Machine with Double OID byte
	X'000E' or	Machine with Triple OID byte
	X'000F'	Machine with Quadruple OID byte
26		INPUT MEDIA ID Type
	X'10'	MO:DCA Input Media Type OID
27	X'06'	OID Encoding
28		OID LENGTH
	X'07' or	Machine with Single OID byte
	X'08' or	Machine with Double OID bytes
	X'09' or	Machine with Triple OID bytes
	X'0A'	Machine with Quadruple OID bytes
29-34	X'2B1200 040301'	Input Media ID (Common Part)

Offset	Range	Meaning
35-36		Input Media ID (Media Specific Part)
		Paper
	X'45'	Statement (69)
	X'41'	Executive (65)
	X'8120'	8in. × 10in. (160)
	X'32'	Letter (50)
	X'33'	Letter Colored (51)
	X'34'	Letter Transparent (52)
	X'8111'	Letter Tabstock (9×11) (145)
	No OID Returned	8in. × 13in.
	No OID Returned	8.25in. × 13in.
	X'3F'	8.5in. × 13in. (63)
	X'3C'	Legal (60)
	X'3D'	Legal Colored (61)
	No OID Returned	10in. × 14in.
	No OID Returned	10in. × 15in.
	No OID Returned	11in. × 14in.
	No OID Returned	11in. × 15in.
	X'43'	Ledger (67)

Offset	Range	Meaning
35-36	X'9B'	12in. × 18in. (155)
	No OID Returned	A6
	No OID Returned	B6
	X'14'	A5 (20)
	X'15'	A5 Colored (21)
	No OID Returned	170 × 210mm \
	No OID Returned	182 × 210mm
	No OID Returned	210 × 340mm
	X'2B'	B5 (JIS) (43)
	X'00'	A4 (0)
	X'01'	A4 Colored (1)
	X'02'	A4 Transparent (2)
	X'07'	A4 Tabstock (7)
	X'1E'	B4 (ISO) (30)
	X'1F'	B4 Colored (ISO) (31)
	No OID Returned	8 Kai
	No OID Returned	16 Kai
	X'0A'	A3 (10)
	X'0B'	A3 Colored (11)
	No OID Returned	Custom



Offset	Range	Meaning
37-38	X'0004' - X'0013'	Input Media ID LENGTH (Note 4)
Byte 39		Input Media ID TYPE
	X'00'	User Defined Name
40-end		Input Media ID (Form Name)
	X'4C6574 746572'(i e. Letter)	(1 to 16 Byte Form Name)

\*1 Available values vary depending on the installed option.

- In the OPC Acknowledge Reply, the Printable Area SDF repeats for every installed Media Source. Therefore, since printers are capable of supporting multiple installed input trays, multiple Printable Area SDF's may be returned in a single XOH-OPC Acknowledge Reply.
- The Input Media Source Characteristics (Bit 0), of the Printable Area SDF indicates the duplex ability of a given media source. See "Media Source and Destination Support Matrices", for specific details on media duplex ability.
- Input Media ID type X'06' - Media OID is only returned if a particular media has a registered MO:DCA Media Type OID.
- Input Media ID type X'00' - User Defined Name is only returned if the user defines a Form, assigns a Form Name to the Form and associates that Form with a given Input Media Source tray.

## Image and Coded Font Resolution Self-Defining Field

Offset	Range	Meaning
0-1	X'000A'	LENGTH of this Self-Defining Field
2-3	X'0003'	IMAGE and CODED FONT RESOLUTION Self-Defining Field
4	X'00'	UNIT BASE 10 inches
5		FONT RESOLUTIONS
	X'00'	Resolution Acceptance Mode (Only value in bytes 6-9)
	X'FF'	Resolution Independence Mode (Bytes 6-9 specify highest resolution) (240 DPI or 300 DPI or 600 DPI)

Offset	Range	Meaning
6-7		X PIXELS per Unit Base
	X'0960'	2400 pixels/10 inches
	X'0BB8'	3000 pixels/10 inches
	X'1770'	6000 pixels/10 inches
8-9		Y PIXELS per Unit Base
	X'0960'	2400 pixels/10 inches
	X'0BB8'	3000 pixels/10 inches
	X'1770'	6000 pixels/10 inches

- Value for byte 5 is controlled by the [Resolution] setting in the IPDS menu. Byte 5 will indicate Resolution Acceptance mode X'00' if the IPDS Resolution setting is 240, 300 or 600 DPI. Byte 5 will indicate Resolution Independence mode X'FF' if the IPDS Resolution setting is Auto.
- Values for bytes 6-9 are controlled by the setting of byte 5 (Font Resolutions). If byte 5 indicates Resolution Acceptance mode X'00', bytes 6-9 reflect the [Resolution] setting in the IPDS menu. If byte 5 indicates Resolution Independence mode X'FF', bytes 6-9 reflect the [Print Mode] setting in the IPDS menu. Note that the resolutions specified also apply to GOCA image if the image resolution specified in the GDD command is X'0000', indicating that no explicit GOCA image resolution was specified.
- If the [Print Mode] = STD (Standard 300 DPI), then the [Resolution] setting is ignored. Byte 5 will indicate Resolution Acceptance mode X'00' and bytes 6- 9 will reflect the IPDS Print Mode setting (300 DPI).
- For the printer to specify IPDS Resolution support of 240, 600, or AUTO, the IPDS Print Mode must be set to Enhanced (PRINT MODE = ENH on the IPDS Menu). In enhanced print mode, complex (full page) image jobs may not yield optimal print performance due to the increased print fidelity required to accurately render 240 and 600 DPI print objects.

### Storage Pools Self-Defining Field - Single Byte

Offset	Range	Meaning
0-1	X'0033'	VECTOR LENGTH
2-3	X'0004'	STORAGE POOLS Self-Defining Field
4	X'2F'	LENGTH of each Storage Pool Self-Defining Field

Offset	Range	Meaning
5	X'01'	Triplet ID
6	X'00'	STORAGE POOL ID
7-10	X'nnnnnn n'	Storage pool varies based on installed memory and features
11-14	X'000000 00'	Reserved
15-16	X'0011'	PAGE GRAPHICS Data
17-18	X'0012'	PAGE IMAGE Data
19-20	X'0013'	PAGE TEXT Data
21-22	X'0014'	PAGE BAR CODE Data
23-24	X'0021'	OVERLAY GRAPHICS Data
25-26	X'0022'	OVERLAY IMAGE Data
27-28	X'0023'	OVERLAY TEXT Data
29-30	X'0024'	OVERLAY BAR CODE Data
31-32	X'0031'	PAGE SEGMENT GRAPHICS Data
33-34	X'0032'	PAGE SEGMENT IMAGE Data
35-36	X'0033'	PAGE SEGMENT TEXT Data
37-38	X'0034'	PAGE SEGMENT BAR CODE Data
39-40	X'0040'	Single-Byte CODED FONT Index Tables
41-42	X'0041'	Single-Byte CODED FONT Descriptors
43-44	X'0042'	Single-Byte CODED FONT Patterns
45-46	X'0050'	CODE PAGES
47-48	X'0060'	FONT CHARACTER SETS
49-50	X'0070'	CODED FONTS

## Storage Pools Self-Defining Field - Double Byte

Offset	Range	Meaning
0-1	X'0039'	VECTOR LENGTH
2-3	X'0004'	STORAGE POOLS Self-Defining Field
4	X'35'	LENGTH of each Storage Pool Self-Defining Field
5	X'01'	Triplet ID
6	X'00'	STORAGE POOL ID
7-10	X'nnnnnn n'	Storage pool varies based on installed memory and features
11-14	X'000000 00'	Reserved
15-16	X'0011'	PAGE GRAPHICS Data
17-18	X'0012'	PAGE IMAGE Data
19-20	X'0013'	PAGE TEXT Data
21-22	X'0014'	PAGE BAR CODE Data
23-24	X'0021'	OVERLAY GRAPHICS Data
25-26	X'0022'	OVERLAY IMAGE Data
27-28	X'0023'	OVERLAY TEXT Data
29-30	X'0024'	OVERLAY BAR CODE Data
31-32	X'0031'	PAGE SEGMENT GRAPHICS Data
33-34	X'0032'	PAGE SEGMENT IMAGE Data
35-36	X'0033'	PAGE SEGMENT TEXT Data
37-38	X'0034'	PAGE SEGMENT BAR CODE Data
39-40	X'0040'	Single-Byte CODED FONT Index Tables
41-42	X'0041'	Single-Byte CODED FONT Descriptors
43-44	X'0042'	Single-Byte CODED FONT Patterns

Offset	Range	Meaning
45-46	X'0048'	Double-Byte CODED FONT Index Tables
47-48	X'0049'	Double-Byte CODED FONT Descriptors
49-50	X'004A'	Double-Byte CODED FONT Patterns
51-52	X'0050'	CODE PAGES
53-54	X'0060'	FONT CHARACTER SETS
55-56	X'0070'	CODED FONTS

### Color Support Self-Defining Field

Offset	Range	Meaning
0-1	X'0006'	LENGTH of this Self-Defining Field
2-3	X'0005'	COLOR SUPPORT Self-Defining Field
4-5	X'0008'	BLACK

### Installed Features Self-Defining Field

Since printers are capable of supporting multiple features, multiple configuration combinations are possible. All installable features are described below.

Offset	Range	Meaning
0-1	X'000C' or X'000E'	LENGTH of this Self Defining Field
2-3	X'0006'	INSTALLED FEATURES Self Defining Field
4-5	X'0100'	DUPLEX
6-7	X'0300'	CUT SHEET Output
8-9	X'0600'	OFFSET STACKER
10-11	X'0700'	Envelopes
12-13	X'0800'	MICR (If MICR Enabled)

## Available Features Self-Defining Field

Since printers are capable of supporting multiple features, multiple configuration combinations are possible. All available features are described below.

Offset	Range	Meaning
0-1	X'000C' or X'000E'	LENGTH of this Self Defining Field
2-3	X'0007'	AVAILABLE FEATURES Self Defining Field
4-5	X'0100'	DUPLEX
6-7	X'0300'	CUT SHEET Output
8-9	X'0600'	OFFSET STACKER
10-11	X'0700'	Envelope
12-13	X'0800'	MICR (If MICR Enabled)

## RRL Resource Type and ID Format Self-Defining Field - Single Byte

Offset	Range	Meaning
0-1	X'0022'	VECTOR LENGTH
2-3	X'000A'	RRL RESOURCE TYPE Self RRL query combinations that receive a non-zero Resource Type reply (See p.69 "XOA Request Resource List")
4-5	X'0100'	Single-Byte Coded Fonts as Host Assigned Resource ID
6-7	X'0103'	Single-Byte Coded Fonts as IBM Global Resource ID
8-9	X'0400'	Page Segments as Host Assigned Resource ID
10-11	X'0500'	Overlays as Host Assigned Resource ID
12-13	X'0600'	Device Version Code Pages as Host Assigned Resource ID
14-15	X'0603'	Device Version Code Pages as IBM Global Resource ID
16-17	X'0700'	Font Character Set as Host Assigned Resource ID
18-19	X'0703'	Font Character Set as IBM Global Resource ID

Offset	Range	Meaning
20-21	X'0800'	Single-Byte Coded Font Index as Host Assigned Resource ID
22-23	X'1000'	Coded Fonts as Host Assigned Resource ID
24-25	X'1003'	Coded Fonts as IBM Global Resource ID
26-27	X'1103'	Graphic Character Sets/Subsets as IBM Global Resource ID
28-29	X'1200'	Specific Code Pages as Host Assigned Resource ID
30-31	X'1203'	Specific Code Pages as IBM Global Resource ID
32-33	X'FF00'	All Resources as Host Assigned Resource ID

### RRL Resource Type and ID Format Self-Defining Field - Double Byte

Offset	Range	Meaning
0-1	X'0034'	VECTOR LENGTH
2-3	X'000A'	RRL RESOURCE TYPE Self RRL query combinations that receive a non-zero Resource Type reply (See p.69 "XOA Request Resource List")
4-5	X'0100'	Single-Byte Coded Fonts as Host Assigned Resource ID
6-7	X'0103'	Single-Byte Coded Fonts as IBM Global Resource ID
8-9	X'0200'	Double-Byte Coded LF1 Fonts as Host Assigned Resource ID
10-11	X'0203'	Double-Byte Coded LF1 Fonts as IBM Global Resource ID
12-13	X'0300'	Double-Byte Coded LF1 Font Sect as Host Assigned Resource ID
14-15	X'0400'	Page Segments as Host Assigned Resource ID
16-17	X'0500'	Overlays as Host Assigned Resource ID
18-19	X'0600	Device Version Code Pages as Host Assigned Resource ID
20-21	X'0603'	Device Version Code Pages as IBM Global Resource ID
22-23	X'0700'	Font Character Set as Host Assigned Resource ID
24-25	X'0703'	Font Character Set as IBM Global Resource ID

Offset	Range	Meaning
26-27	X'0800'	Single-Byte Coded Font Index as Host Assigned Resource ID
28-29	X'0900'	Double-Byte Coded Font Sect Index as Host Assigned Resource ID
30-31	X'1000'	Coded Fonts as Host Assigned Resource ID
32-33	X'1003'	Coded Fonts as IBM Global Resource ID
34-35	X'1103'	Graphic Character Sets/Subsets as IBM Global Resource ID
36-37	X'1200'	Specific Code Pages as Host Assigned Resource ID
38-39	X'1203'	Specific Code Pages as IBM Global Resource ID
40-41	X'4000'	Data object resource as Host Assigned Resource ID
42-43	X'4009'	Data object resource with Object-OID Format
44-45	X'4100'	Data-object Font as Host Assigned Resource ID
46-47	X'4200'	Data-object Font Components as Host Assigned Resource ID
48-49	X'4209'	Data-object Font Components with Object- OID Format
50-51	X'FF00'	All Resources as Host Assigned Resource ID

### Activate Resource RT and ID Format Self-Defining Field - Single Byte

Offset	Range	Meaning
0-1	X'0014'	VECTOR LENGTH
2-3	X'000B'	RRL RESOURCE TYPE Self RRL query combinations that receive a non-zero Resource Type reply (See p.69 "XOA Request Resource List")
4-5	X'0103'	Single-Byte Coded LF1 Fonts with IBM Global Resource IDs
6-7	X'0106'	Single-Byte Coded LF1 Fonts with MVS Host Unalterable Remote Font Environment
8-9	X'0603'	Code Pages with IBM Global Resource IDs
10-11	X'0703'	Font Character Sets with IBM Global Resource IDs



Offset	Range	Meaning
12-13	X'0803'	Single-Byte Coded LF1 Font Index as IBM Global Resource ID
14-15	X'0806'	Single-Byte Coded LF1 Fonts Index as MVS Host Unalterable
16-17	X'1003'	Single-Byte/Double-Byte Coded Fonts with IBM Global Resource IDs
18-19	X'1007'	Single-Byte/Double-Byte Coded Fonts with Coded Font Format

### Activate Resource RT and ID Format Self-Defining Field - Double Byte

Offset	Range	Meaning
0-1	X'0022'	VECTOR LENGTH
2-3	X'000B'	RRL RESOURCE TYPE Self RRL query combinations that receive a non-zero Resource Type reply (See p.69 "XOA Request Resource List")
4-5	X'0103'	Single-Byte Coded LF1 Fonts with IBM Global Resource IDs
6-7	X'0106'	Single-Byte Coded LF1 Fonts with MVS Host Unalterable Remote Font Environment
8-9	X'0303'	Double-Byte Coded LF1 Font Secs with IBM Global Resource IDs
10-11	X'0306'	Double-Byte Coded LF1 Font Secs with MVS Host Unalterable Remote Font Environment
12-13	X'0603'	Code Pages with IBM Global Resource IDs
14-15	X'0703'	Font Character Sets with IBM Global Resource IDs
16-17	X'0803'	Single-Byte Coded LF1 Fonts Index as IBM Global Resource ID
18-19	X'0806'	Single-Byte Coded LF1 Font Index as MVS Host Unalterable
20-21	X'0903'	Double-Byte Coded LF1 Font Secs Index with IBM Global Resource ID
22-23	X'0906'	Double-Byte Coded LF1 Font Secs with MVS Host Unalterable RMTFE
24-25	X'1003'	Single-Byte/Double-Byte Coded Fonts with IBM Global Resource IDs
26-27	X'1007'	Single-Byte/Double-Byte Coded Fonts with Coded Font Format
28-29	X'4009'	Data object resource with Object-OID Format

Offset	Range	Meaning
30-31	X'410A'	Data-object Font with Data-object Font Format
32-33	X'4209'	Data-object Font Components with Object- OID Format

### Bar Code Type Self-Defining Field ID

Offset	Range	Meaning
0-1	X'0013'	VECTOR LENGTH
2-3	X'000E'	BAR CODE TYPE Self Defining Field
4	X'0D'	CODABAR Modifier Byte Options X'01' and X'02'
5	X'11'	CODE 128 Modifier Byte Option X'02'
6	X'18'	POSTNET Modifier Byte Options X'00' - X'03'
7	X'1A'	RM4SCC Modifier Byte Option X'00'
8	X'1B'	Japan Postal Bar code Modifier Byte Options X'00' and '01'
9	X'1C'	Data Matrix 2D Bar Code Modifier Byte Option X'00'
10	X'1D'	MaxiCode 2D Bar Code Modifier Byte Option X'00'
11	X'1E'	PDF417 2D Bar Code Modifier Byte Options X'00' and X'01'
12	X'1F'	Australia Post Bar Code Modifier Byte Options X'01' - X'08'
13	X'9A'	Rm4scc Modifier byte option X'01'
14	X'20'	QR Code 2D Bar Code Modifier Byte Option X'02'
15	X'21'	Code 93 Modifier Byte Option X'00'
16	X'91'	Code 128 Modifier Byte Option X'03'
17	X'98'	POSTNET (PLANET) Modifier Byte Option X'04'
18	X'22'	USPS Four-State Bar Code Modifier Byte Options X'00' through X'03'

#### ↓ Note

- See p.193 "Bar Code Type and Modifier Description and Values" for all Bar Codes supported.

## Media-Destinations Self-Defining Field ID

Offset	Range	Meaning
0-1	X'001A'	LENGTH of this Self Defining Field
2-3	X'0010'	Media-Destinations self-defining ID
4-5	X'nnnn'	Default media-destination ID (Determined by Configuration)
6-7	X'0001'	First number in a range of available, contiguous media-destination IDs
8-9	X'nnnn'	Last number in a range of available, contiguous media-destination IDs; this ID must be greater than or equal to the value specified in bytes +0-1 for this set

## Supported Group Operations Self-Defining Field ID

Offset	Range	Meaning
0-1	X'0005'	LENGTH of this Self-Defining Field
2-3	X'0012'	SUPPORTED GROUP OPERATIONS Self-Defining Field
4	X'01'	Keep group together as a print unit

## Product Identifier Self-Defining Field ID

Offset	Range	Meaning
0-1	X'0053'	LENGTH of this Self Defining Field
2-3	X'0013'	PRODUCT IDENTIFIER Self Defining Field ID
4	X'38'	LENGTH of Self Defining Product ID Parameter
5-6	X'0001'	UNIQUE PRODUCT IDENTIFIER Parameter ID

Offset	Range	Meaning
7-12		DEVICE TYPE
	X'FOF0F6F 0F0F2'	Type 1
	X'FOF0F7F 5F0F2'	Type 2
	X'FOF0F9F 0F0F2'	Type 3
13-15		DEVICE MODEL
	X'FOF0F0'	Type 1/Type 2/Type 3
16-18	X'DCC9C 8' (RIH)	MANUFACTURER
19-20	X'0000'	PLANT
21-32		SEQUENCE NUMBER (Serial number)
	X'FOF0F0F 0F0F0F2F 9F6F5F3F 8' (ie. 296538)	(EBCDIC) (12 bytes)
33-34	X'0000'	TAG
35-43		IPDS CODE LEVEL
	X'FOF0F0F 0F44BF5F 3F0' (4.530)	(EBCDIC) (9 bytes)
44-59		CONTROLLER CODE LEVEL
	X'FOF0F0F 0F0F0F0F 0F0F0F0F 0F14BF2F 12' (1.21)	(EBCDIC) (16 bytes)
60	X'17'	LENGTH of Self Defining Product ID Parameter

Offset	Range	Meaning
61-62	X'0003'	PRINTER NAME Parameter ID
63-82	X'nnnnnnn nnnnnnnnn nnnnnnnnn nnnnnnnnn nnnnnn'	PRINTER NAME

#### ↓ Note

- To check which model you are using, see "Machine Types", Read This First.

### Object Container Type Support Self-Defining Field ID

Offset	Range	Meaning
0-1	X'0148'	LENGTH of this Self Defining Field
2-3	X'0014'	Object Container Type Support Self Defining Field
4	X'82'	length of the Type record
5	X'01'	Type - Page or Overlay State
6-21	X'06072b 1200040 1011600 0000000 00000'	Graphics Interchange Format (GIF)
22-37	X'06072b 1200040 1012F00 0000000 00000'	IOCA Tile Resource
38-53	X'06072b 1200040 1011700 0000000 00000'	JPEG File Interchange Format (JFIF)

Offset	Range	Meaning
54-69	X'06072b 1200040 1010E00 0000000 00000'	Tag Image File Format (TIFF)
70-85	X'06072b 1200040 1013C00 0000000 00000'	TIFF without transparency
86-101	X'06072b 1200040 1013D00 0000000 00000'	TIFF multi-image file with transparency
102-117	X'06072b 1200040 1013E00 0000000 00000'	TIFF multi-image file without transparency
118-133	X'06072b 1200040 1014200 0000000 00000'	AFPC TIFF
134	X'C2'	length of the Type record
135	X'02'	home state Type
136-151	X'06072b 1200040 1011600 0000000 00000'	Graphics Interchange Format (GIF)

Offset	Range	Meaning
152-167	X'06072b 1200040 1012F00 0000000 00000'	IOCA Tile Resource
168-183	X'06072b 1200040 1011700 0000000 00000'	JPEG File Interchange Format (JFIF)
184-199	X'06072b 1200040 1010E00 0000000 00000'	Tag Image File Format (TIFF)
200-215	X'06072b 1200040 1013C00 0000000 00000'	TIFF without transparency
216-231	X'06072b 1200040 1013D00 0000000 00000'	TIFF multi-image file with transparency
232-247	X'06072b 1200040 1013E00 0000000 00000'	TIFF multi-image file without transparency
248-263	X'06072b 1200040 1013500 0000000 00000'	TrueType/OpenType Collection

Offset	Range	Meaning
264-279	X'06072b 1200040 1013300 0000000 00000'	TrueType/OpenType Font
280-295	X'06072b 1200040 1013900 0000000 00000'	Color Management Resource
296-311	X'06072b 1200040 1011400 0000000 00000'	Color Mapping Table setup file
312-327	X'06072b 1200040 1014200 0000000 00000'	AFPC TIFF

### Device-Appearance Self-Defining Field ID

Offset	Range	Meaning
0-1	X'0006'	LENGTH of this Self Defining Field
2-3	X'0022'	Device appearance Self Defining Field
4-5	X'0001'	Device-default monochrome appearance

### Finishing Operations Self-Defining Field ID

Offset	Range	Meaning
0-1	X'0008'	LENGTH of this Self Defining Field
2-3	X'0018'	FINISHING OPERATIONS Self Defining Field



Offset	Range	Meaning
4	X'01'	Corner Staple
5	X'12'	Saddle Stitch (In)
6	X'03'	Edge Stitch
7	X'0A'	Punch

### PFC Triplets Supported Self Defining Field ID

Offset	Range	Meaning
0-1	X'0008'	LENGTH of this Self Defining Field
2-3	X'0016'	PFC Triplets Supported Self Defining Field
4	X'75'	Color Fidelity Triple
5	X'86'	Text Fidelity Triplet
6	X'88'	Finishing Fidelity Control Triplet
7	X'96'	CMR Tag Fidelity Triplet

### XOH Select Input Media Source

This order selects the input media source and, indirectly, the input media, for subsequent physical sheets.

The set of valid values differs according to which forms module configuration is installed and selected by the operator. Since printers are capable of supporting multiple installed input bins, multiple configuration combinations are possible. All input media sources are described below.

When the number of installed input bins changes, the printer is POR'd and initial machine settings are established. When the bin configuration changes exception X'0101..00' is reported to the host.

- Actual tray capacities are determined by media weight. The capacities indicated in the table are the maximum allowable.
- The machine supports media source tray numbering. Media source values in the SIMS support tables represent the default settings when the printer is initially installed. For this machine, the printer's control panel menu mode is provided to allow customers to specify the source tray numbers to meet requirements of legacy applications.

### ↓ Note

- For the tray in which "envelope" has been specified as the paper type, the tray values of the tray ID are (in ascending for each respective tray that is installed) as follows: X'8040', X'8041', etc. If a different paper type is specified for the tray, the tray values of the tray ID are (in ascending for each respective tray that is installed) as follows: X'8000', X'8001', etc. In regards to the bypass tray and default tray, even if you specify "envelope" as the paper type, the tray value will not be changed.
- To ascertain which machine type your model corresponds to, see "Machine Types", Read This First.

Offset	Range	Meaning	Error Code
0-1	X'1500'	SELECT INPUT MEDIA SOURCE	
2		INPUT MEDIA SOURCE	X'02C8..0 1'
	X'00'	Tray 1	
	X'01'	Tray 2	
	X'02'	Tray 3	
	X'03'	Large capacity tray (LCT)	
	X'04'	Interposer	
	X'63'	Bypass tray	
	X'FF'	Default tray	

## XOH Set Media Origin

The XOH Set Media Origin (SMO) command specifies the origin of the media.

This order takes effect on the next-received page. The media origin will not change until either another XOH-SMO command is processed or the printer is reinitialized.

Offset	Range	Meaning	Error Code
0-1	X'1600'	SET MEDIA ORIGIN	

Offset	Range	Meaning	Error Code
2		MEDIA ORIGIN	X'026F..02'
	X'00'	Top-left corner	
	X'01'	Top-right corner (Bottom-left corner if back side of duplex sheet)	
	X'02'	Bottom-right corner	
	X'03'	Bottom-left corner (Top-right corner if back side of duplex sheet)	

## XOH Set Media Size

This order specifies SIZE of the physical medium.

Offset	Range	Meaning	Error Code
0-1	X'1700'	Set Media Size (SMS) order code	
2		UNIT BASE (Measurement Units)	X'0274..02'
	X'00'	10 in.	
	X'01'	10 centimeters	
3-4		L-Units per UNIT BASE	X'0270..02'
	X'3840'	14400 L-Units/10 inches	
	X'1626'	5670 L-Units/10 centimeters	
	X'0960'	2400 L-Units/10 inches	
	X'03B1'	945 L-Units/10 centimeters	
5-6	X'0001' - X'7FFF'	Xm EXTENT of MEDIUM See "Notation Conventions", IPDS Technical Reference 1.	X'0272..02'
	X'FFFF'	Printer Default (Printer's control panel setting or Tray sensors)	

Offset	Range	Meaning	Error Code
7-8	X'0001' - X'7FFF'	Ym EXTENT of MEDIUM See "Notation Conventions", IPDS Technical Reference 1.	X'0273..0 2'
	X'FFFF'	Printer Default (Printer's control panel setting or Tray sensors)	

## XOH Page Counter Control

The XOH Page Counter Control (PCC) command provides a counter synchronization function that should only be used to recover from an exception or after a XOA Discard Buffer Data command.

Offset	Range	Meaning	Error Code
0-1	X'F500'	OPC Order Code	
2	X'00'	Do Nothing (default)	
	X'01'	Synchronize Counters	

## XOH Define Group Boundary

This order initiates or terminates a grouping of pages. When a grouping of pages is initiated the page that next increments the received page counter is the first sheet in the designated group.

Offset	Range	Meaning	Error Code
0-1	X'0400'	Define Group Boundary	X'018F.. 00' X'0277.. 01' X'0278.. 01' X'027A.. 01' X'027B.. 01'

Offset	Range	Meaning	Error Code
2	X'00'	Initiate Group	
	X'01'	Terminate Group	
3	X'00' - X'FF'	Group Level	
4-end of command	See specific triplet description	X'00' Group ID triplet	
		X'6E' Group information triplet	X'027C..01'
		X'85' Finishing Operation triplet	X'027C..02'

## Group ID Triplet

The Group ID triplet specifies host specific print-data formats for print job identification. The printer utilizes this information to provide IPDS print job identification on the printer console display.

Offset	Range	Meaning	Error Code
0	X'02'-X'FF'	LENGTH	X'027A..01' X'027B..02'
1	X'01'	Group ID Triplet	
2		HOST FORMAT	
	X'01'	MVS and VSE print-data	
	X'02'	VM print-data	
	X'03'	OS/400 print-data (4 char spool file #)	
	X'06'	AIX and NT print-data	
	X'13'	OS/400 print-data (6 char spool file #)	

Offset	Range	Meaning	Error Code
4-11		MVS and VSE ID DATA	
	X'C2E4C4 C7C5E3F 0F1' (i.e. BUDGET0 1)	Job Name (EBCDIC) (8 bytes)	
4-11		VM ID DATA	
	X'C2E4C4 C7C5E3F 0F1' (i.e. BUDGET0 1)	Filename (EBCDIC) (8 bytes)	
23-32		OS/400 ID DATA	
	X'C2E4C4 C7C5E3F 2F0F0F1'(i .e. BUDGET2 000)	Filename (EBCDIC) (10 bytes)	
3-End		AIX and NT ID DATA	
	X'444550 5442554 4474554 3230303 0' (i.e. DEPTBUD GET2000)	Name (ASCII) (1-251 bytes)	

### Group Information Triplet

The Group Information is accepted, although no specific processing will occur.

## Finishing Operation Triplet

The Finishing Operation triplet specifies a specific finishing operation to be applied to a collection of sheets.

Offset	Range	Meaning	Error Code
0	X'09'	LENGTH	X'027A.. 01' X'027B.. 01'
1	X'85'	Finishing Triplet ID	
2		OPERATION TYPE	X'027C.. 03' X'027C.. 09'
	X'01'	Corner Staple	
	X'03'	Edge Stitch	
	X'0A'	Punch	
X'12'	Saddle Stitch In		
3-4	X'0000'	Reserved	
5		REFERENCE CORNER	X'027C.. 04'
	X'01'	Top-right corner (SEF only)	
	X'02'	Top-left corner	
	X'03'	Bottom-left corner	
	X'FF'	Device default corner (top left corner)	
		REFERENCE EDGE	
	X'02'	Top edge (SEF only)	
	X'03'	Left edge (LEF only)	
X'FF'	Device default edge (top edge-SEF, left edge-LEF)		

Offset	Range	Meaning	Error Code
6		FINISHING OPERATION COUNT	X'027C.. 05' X'027C.. 07'
	X'00'	Device Default Number, Default Position	
	X'02'	Punch 2 Holes, Default Position or Edge Stitch 2 Staples, Default Position	
	X'03'	Punch 3 Holes, Default Position	
	X'04'	Punch 4 Holes, Default Position	
7-8		FINISHING OPERATION AXIS OFFSET	X'027C.. 06'
	X'FFFF'	Device Default Axis Offset	

### Paper Finishing (Staple, Punch, and Booklet) Support:

A= Finisher SR4060 Capacity: 250 (Finisher upper tray) / 3000 (Finisher shift tray)

C= Finisher SR4080 Capacity: 500 (Finisher upper tray) / 3000 (Finisher shift tray)

D= Booklet Finisher SR4070 Capacity: 250 (Finisher upper tray) / 2000 (Finisher shift tray) / 10 (Finisher booklet tray)

S = Staple

P = Punch

B = Booklet

Y = Yes / N = No

	A		C		D		
	S	P	S	P	S	B	P
A3 (297 × 420mm) SEF	Y	Y	Y	Y	Y	Y	Y
A4 (210 × 297mm) SEF	Y	Y*1	Y	Y*1	Y	Y	Y*1



	A		C		D		
	S	P	S	P	S	B	P
A4 (210 × 297mm) LEF	Y	Y	Y	Y	Y	N	Y
A5 (210 × 148mm) SEF	N	Y*1	N	Y*1	N	N	Y*1
A5 (210 × 148mm) LEF	N	Y*1	N	Y*1	N	N	Y*1
A6 (105 × 148mm) SEF	N	Y*2	N	Y*2	N	N	Y*2
B4 (257 × 364 mm) SEF	Y	Y	Y	Y	Y	Y	Y
B5 (182 × 257mm) SEF /	Y	Y*1	Y	Y*1	Y	Y	Y*1
B5 (182 × 257mm) LEF	Y	Y	Y	Y	Y	N	Y

	A		C		D		
	S	P	S	P	S	B	P
B6 (128 × 182mm) SEF	N	Y*1	N	Y*2	N	N	Y*1
DLT (11 × 17 in.) SEF	Y	Y	Y	Y	Y	Y	Y
Legal (8.5 × 14in.) SEF	Y	Y*1	Y	Y*1	Y	Y	Y*1
Foolscap (8.5 × 13in.) SEF	Y	Y*1	Y	Y*1	Y	N	Y*1
Letter (8.5 × 11in.) SEF	Y	Y*1	Y	Y*1	Y	Y	Y*1
Letter (8.5 × 11in.) LEF	Y	Y	Y	Y	Y	N	Y
GovernmentLG (8.25 × 14 in.) SEF	Y	Y*1	Y	Y*1	Y	N	Y*1
Folio (8.25 × 13in.) SEF	Y	Y*1	Y	Y*1	Y	N	Y*1
F/GL (8 × 13in.) SEF	Y	Y*1	Y	Y*1	Y	N	Y*1

	A		C		D		
	S	P	S	P	S	B	P
G LT (8 × 10.5in.) SEF	Y	Y*1	Y	Y*1	Y	N	Y*1
G LT (8 × 10.5in.) LEF	Y	Y	Y	Y	Y	N	Y
Eng Quatro (8 × 10 in.) SEF	Y	Y*1	Y	Y*1	Y	N	Y*1
Eng Quatro (8 × 10 in.) LEF	Y	Y*3	Y	Y*3	Y	N	Y*3
Executive (7.25 × 10.5in.) SEF	Y	Y*1	Y	Y*1	Y	N	Y*1
Executive (7.25 × 10.5in.) LEF	Y	Y	Y	Y	Y	N	Y
HalfLetter (5.5 × 8.5in.) SEF	N	Y*1	N	Y*1	N	N	Y*1
HalfLetter (5.5 × 8.5in.) LEF	N	Y*1	N	Y*1	N	N	Y*1

	A		C		D		
	S	P	S	P	S	B	P
8kai (267 × 390 mm) SEF	Y	Y	Y	Y	Y	N	Y
16kai (195 × 267mm) SEF	Y	Y*1	Y	Y*1	Y	N	Y*1
16kai (195 × 267mm) LEF	Y	Y	Y	Y	Y	N	Y
11 × 15 in. SEF	Y	Y	Y	Y	Y	N	Y
11 × 14 in. SEF	Y	Y	Y	Y	Y	N	Y
10 × 15 in. SEF	Y	Y*3	Y	Y*3	Y	N	Y*3
10 × 14 in. SEF	Y	Y*3	Y	Y*3	Y	N	Y*3

\*1 Not supported on 3 hole punch (inch version) or 4 hole punch (metric version) except for Northren Europe type (metric version) finisher.

\*2 Supported on 2 hole punch only.

\*3 Not supported on 4 hole punch (metric version) except for Northren Europe type (metric version) finisher.

#### ↓ Note

- The punch units in this manual are given in two units of measure: metric and inch. If your machine is a Region A model, refer to the metric units. If your machine is a Region B model, refer to the inch units. For details about the region of your machine, see "Model-Specific Information", Getting Started.

- The paper finishing functions are not supported on custom size paper.
- The printer must know about the finishing operation before the first page of a group is received. The printer will ignore finishing operation triplets on the XOH DGB command that terminates the group.
- The media jog and staple functions are mutually exclusive. If both are specified the staple request takes precedence.
- A single sheet cannot be stapled or stitched. If a job specifies only one sheet for stapling or stitching, it will not occur and a X'027C..02' Nack is reported to the host. Web Image Monitor menu parameter is provided to allow customers to inhibit the report of this Nack to meet requirements of legacy applications.
- The capacity of the finishers are determined by the physical finisher installed. If a job specifies more sheets for stapling or stitching than the installed finisher can accommodate, a X'027C..02' Nack is reported to the host. Web Image Monitor parameter is provided to allow customers to inhibit the report of this Nack to meet requirements of legacy applications.
- Stapled or stitched job groups may contain mixed media sizes in the following combinations only: Letter-SEF, Legal-SEF, Folio-SEF
- Mixing of simplex and duplex groups in the finisher accumulator is supported. Therefore, it is possible to staple or stitch mixed simplex/duplex groups in a print job.

## XOH Specify Group Operation

This order indicates to an attached printer, pre-processor, or post-processor that the specified processing option is to be performed upon subsequent boundary groups of the group level identified in this command.

Offset	Range	Meaning	Error Code
0-1	X'0300'	Define Group Boundary	
2	X'00'-X'FF'	Operation Identifier	
	X'01'	Keep group together as a print unit	
	X'04'	Finish	
3	X'00'-X'FF'	Group Level	

### ↓ Note

- For SGO Identifier (Byte 2), X'01' and X'04' are the only supported operations. All other identifiers are accepted, although no specific processing will occur.



# 2. Presentation Text Command Set

## Presentation Text Commands

Name	Command	Sub-command	Where to Look
Load Equivalence	X'D61D'		p.121 "Load Equivalence"
Write Text	X'D62D'		p.121 "Write Text"

### Load Equivalence

This command permits text-suppression values imbedded in text data stored within the printer to be referenced externally using different values. For example, the Internal Suppression value of X'02' may be referenced externally on a Load Copy Control as a X'06' provided that an appropriate Load Equivalence command was previously received.

If more than 127 LE entries are specified, exception X'0202..02' is reported.

Offset	Range	Meaning	Error Code
0-1		MAPPING TYPE	X'02C6..02'
	X'0100'	Suppression Mapping	
2-3	X'0001' - X'00FF'	INTERNAL VALUE from BS..ES Pair	X'02C1..02' X'02C8..02'
4-5	X'0001' - X'007F'	EXTERNAL VALUE from LCC	X'02C8..02'
6-509		Zero or more additional entries analogous to Bytes 2-5	

### Write Text

In this Write Text description, references made to pages also apply to overlays and page segments.

The print data is a string of 1-byte code points. To determine the character raster pattern, the printer uses the code point to identify the character metrics obtained from:

- Load Font Index (See p.222 "Load Font Index")
- Load Font Control (See p.217 "Load Font Control")
- Font Local ID (See p.41 "Load Font Equivalence")
- Resident Font Data

When the printer processes a Begin Page, it uses the values from the existing Logical Page Descriptor (See p.45 "Logical Page Descriptor") or Initialization Default (See "IPDS Initialization Defaults", IPDS Technical Reference 1) until it processes one of the following text control sequences:

- Draw B-Axis Rule
- Draw I-Axis Rule
- Set Baseline Increment
- Set Coded Font Local
- Set Extended Text Color
- Set Inline Margin
- Set Intercharacter Adjustment
- Set Text Color
- Set Text Orientation
- Set Variable Space Character Increment
- Temporary Baseline Move

The text control sequence value supersedes the Logical Page Descriptor or Initialization Default value and it remains in effect until it is changed by another text control sequence, or End Page is received.

For a complete description of the following text control sequences see the Presentation Text Object Content Architecture Reference and the Intelligent Printer Data Stream Reference.

### Absolute Move Baseline

Absolute Move Baseline Control Sequence moves the baseline coordinate relative to the I-axis of the Presentation Text Space.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'04'	LENGTH	X'021E..01'



Offset	Range	Meaning	Error Code
3		ABSOLUTE MOVE BASELINE	
	X'D2'	Unchained	
	X'D3'	Chained	
4-5	X'0000' - X'7FFF'	DISPLACEMENT (Bc) See "Notation Conventions", IPDS Technical Reference 1.	X'0213..01'

### Absolute Move Inline

Absolute Move Inline Control Sequence moves an inline coordinate position relative to the B-axis of the Presentation Text Space.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'04'	LENGTH	X'021E..01'
3		ABSOLUTE MOVE INLINE	
	X'C6'	Unchained	
	X'C7'	Chained	
4-5	X'0000' - X'7FFF'	DISPLACEMENT (Ic) See "Notation Conventions", IPDS Technical Reference 1.	X'0214..01'

### Begin Line

Begin Line Control Sequence begins a new line.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'02'	LENGTH	X'021E..01'

Offset	Range	Meaning	Error Code
3		BEGIN LINE	
	X'D8'	Unchained	
	X'D9'	Chained	

### Begin Suppression

Begin Suppression Control Sequence marks the beginning of a string of presentation text that may be suppressed from the visible output.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'03'	LENGTH	X'021E..01'
3		BEGIN SUPPRESSION	
	X'F2'	Unchained	
	X'F3'	Chained	
4	X'01' - X'FF'	SUPPRESSION ID	X'0298..01'

### Draw B-Axis Rule

Draw B-axis Rule Control Sequence draws a rule in the b-direction.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'04' or X'07'	LENGTH	X'021E..01'
3		DRAW B-AXIS RULE	
	X'E6'	Unchained	
	X'E7'	Chained	

Offset	Range	Meaning	Error Code
4-5	X'8000' - X'7FFF'	LENGTH (Bl) See "Notation Conventions", IPDS Technical Reference 1.	
6-7		WIDTH (Bw)	
	X'8000' - X'7FFF'	Printer Default 24/1440 inch	
	X'FFFF'		
8		IGNORED	

**Draw I-Axis Rule**

Draw I-axis Rule Control Sequence draws a rule in the i-direction.

Table 70. Draw I-Axis Rule

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'04' or X'07'	LENGTH	X'021E..01'
3		DRAW I-AXIS RULE	
	X'E4'	Unchained	
	X'E5'	Chained	
4-5	X'8000' - X'7FFF'	LENGTH (Il) See "Notation Conventions", IPDS Technical Reference 1.	
6-7		WIDTH (Iw)	
	X'8000' - X'7FFF'	Printer Default 24/1440 inch	
	X'FFFF'		
8		IGNORED	

## End Suppression

End Suppression Control Sequence marks the end of a string of presentation text that may be suppressed from the visible output.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'03'	LENGTH	X'021E..01'
3		END SUPPRESSION	
	X'F4'	Unchained	
	X'F5'	Chained	
4	X'01' - X'FF'	SUPPRESSION ID	X'0202..01' X'0204..01' X'0298..01'

## No Operation

No Operation Control Sequence has no effect on presentation.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'02' - X'FF'	LENGTH	X'021E..01'
3		NO OPERATION	
	X'F8'	Unchained	
	X'F9'	Chained	
4-255		DATA (Ignored)	

## Overstrike

The Overstrike control identifies text that is to be overstruck with a specified character.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'05'	LENGTH	X'021E..01'
3		OVERSTRIKE	
	X'72'	Unchained	
	X'73'	Chained	
4		BYPASS IDENTIFIERS	
	Bits 0-3	Reserved	
	Bit 4: 0	Overstrike white space from RMI	
	Bit 4: 1	Bypass white space from RMI	
	Bit 5: 0	Overstrike white space from AMI	
	Bit 5: 1	Bypass white space from AMI	
	Bit 6: 0	Overstrike white space from Space or Variable Space Character	
	Bit 6: 1	Bypass white space from Space or Variable Space Character	
	Bit 7: 0	BYPASS Treat Bits 0-6 according to their set values	
	Bit 7: 1	NO BYPASS Treat Bits 0-6 as if their values are set to zero	
5		IGNORED	
6	X'00' - X'FF'	OVERSTRIKE CHARACTER	

## Relative Move Baseline

Relative Move Baseline Control Sequence moves a baseline coordinate relative to the current baseline coordinate position.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Escape Sequence	
2	X'04'	LENGTH	X'021E..01'
3		RELATIVE MOVE BASELINE	
	X'D4'	Unchained	
	X'D5'	Chained	
4-5	X'8000' - X'7FFF'	INCREMENT (Br) See "Notation Conventions", IPDS Technical Reference 1.	

### Relative Move Inline

Relative Move Inline Control Sequence moves the inline coordinate of the presentation position relative to the current inline position.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'04'	LENGTH	X'021E..01'
3		RELATIVE MOVE INLINE	
	X'C8'	Unchained	
	X'C9'	Chained	
4-5	X'8000' - X'7FFF'	INCREMENT (Ir) See "Notation Conventions", IPDS Technical Reference 1.	

### Repeat String

Repeat String Control Sequence contains a string of coded graphic characters that is repeated on the current line.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	

Offset	Range	Meaning	Error Code
2	X'04' - X'FF'	LENGTH	X'021E..01'
3		REPEAT STRING	
	X'EE'	Unchained	
	X'EF'	Chained	
4-5	X'0000' - X'7FFF'	REPEAT LENGTH (RL)	X0219..01'
6-n		REPEAT DATA	X021F..01'

### Set Baseline Increment

Set Baseline Increment Control Sequence specifies the distance to be added to the current baseline coordinate when a Begin Line control sequence is executed.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'04'	LENGTH	X'021E..01'
3		SET BASELINE INCREMENT	
	X'D0'	Unchained	
	X'D1'	Chained	
4-5	X'8000' - X'7FFF'	INCREMENT (Bi) See "Notation Conventions", IPDS Technical Reference 1.	
	X'FFFF'	Use LPD value. If no LPD is received, use printer default	

### Set Coded Font Local

Set Coded Font Local Control Sequence specifies the character attributes to be used and invokes a coded font.

Offset	Range	Meaning	Error Code	
0-1	X'2BD3'	TEXT CONTROL Sequence		
2	X'03'	LENGTH	X'021E..01'	
3		SET CODED FONT LOCAL		
	X'F0'	Unchained		
	X'F1'	Chained		
4		LOCAL FONT ID		
	X'01' - X'FE'	Use LPD value. If no LPD is received, use printer default		X'0218..02'
	X'FF'			X'023F..02'

### Set Extended Text Color

The Set Extended Text Color control specifies the color value and defines the color space and encoding for that value. The specified color value is applied to foreground areas of the presentation text space. Foreground areas consist of the following:

- The stroked and filled areas of solid text characters, including overstrike characters. With hollow characters, only the stroked portion of the character is considered foreground.
- The stroked area of a rule.
- The stroked area of an underscore.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'14' - X'16'	LENGTH	X'021E..01'
3		SET EXTENDED TEXT COLOR	
	X'80'	Unchained	
	X'81'	Chained	
4	X'00'	RESERVED	



Offset	Range	Meaning	Error Code
5		COLOR SPACE	X'020E.. 02'
	X'01'	RGB - Limited Simulated Color Support	
	X'04'	CMYK - Limited Simulated Color Support	
	X'06'	HCS - Limited Simulated Color Support	
	X'08'	CIELAB - Limited Simulated Color Support	
	X'40'	Standard OCA - Limited Simulated Color Support	
6-9	X'000000 00'	RESERVED	
10		1ST COLOR COMPONENT BITS	X'020E.. 05'
	X'01' - X'08'	(RGB, CMYK, CIELAB)	
	X'10'	(Standard OCA, Highlight)	
11		2ND COLOR COMPONENT BITS	X'020E.. 06'
	X'00' - X'08'	(RGB, CMYK, Highlight, CIELAB)	
12		3RD COLOR COMPONENT BITS	X'020E.. 07'
	X'00' - X'08'	(RGB, CMYK, CIELAB)	
13		4TH COLOR COMPONENT BITS	X'020E.. 08'
	X'00' - X'08'	(CMYK)	

Offset	Range	Meaning	Error Code
14-17		COLOR VALUE	X'020E..03'
		RGB Color Space	
	X'nn'	Red Intensity	X'020E..04'
	X'nn'	Green Intensity	
	X'nn'	Blue Intensity	
		CMYK Color Space	
	X'nn'	Cyan Intensity	
	X'nn'	Magenta Intensity	
	X'nn'	Yellow Intensity	
	X'nn'	Black Intensity	
		Highlight Color Space	
	X'nnnn'	Highlight Color Number	
	X'nn'	Percent Coverage	
	X'nn'	Percent Shading	
		CIELAB Color Space	
	X'nn'	Luminance (L)	
	X'nn'	Chrominance Difference (a)	
	X'nn'	Chrominance Difference (b)	

Offset	Range	Meaning	Error Code
14-17		Standard OCA Color Space	
	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue	
	X'0002' or X'FF02'	Red	
	X'0003' or X'FF03'	Pink	
	X'0004' or X'FF04'	Green	
	X'0005' or X'FF05'	Turquoise	
	X'0006' or X'FF06'	Yellow	
	X'0007'	White - Color of Medium (Reset)	
	X'0008'	Black	
	X'0010'	Brown	
	X'FF07'	Printer Default (Black)	
	X'FF08'	Color of Medium (Reset)	

**Set Inline Margin**

Set Inline Margin Control Sequence specifies position of an inline margin.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'04'	LENGTH	X'021E..01'

Offset	Range	Meaning	Error Code
3		SET INLINE MARGIN	
	X'C0'	Unchained	
	X'C1'	Chained	
4-5	X'0000' - X'7FFF'	DISPLACEMENT (Ia) See "Notation Conventions", IPDS Technical Reference 1.	X'0210..01'
	X'FFFF'	Use LPD value. If no LPD is received, use printer default	

### Set Intercharacter Adjustment

Set Intercharacter Adjustment Control Sequence specifies additional increment or decrement between graphic characters.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'04' or X'05'	LENGTH	X'021E..01'
3		SET INTERCHARACTER ADJUSTMENT	
	X'C2'	Unchained	
	X'C3'	Chained	
4-5	X'0000' - X'7FFF'	ADJUSTMENT (ica) See "Notation Conventions", IPDS Technical Reference 1.	X'0212..01'
	X'FFFF'	Use LPD value. If no LPD is received, use printer default	
6		DIRECTION	X'0212..01'
	X'00'	Increment Direction	
	X'01'	Decrement Direction	
	X'FF'	Same as X'00'	

## Set Text Color

The Set Text Color control specifies the foreground color attribute that selects the color for subsequent text characters.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'04' or X'05'	LENGTH	X'021E..01'
3		SET TEXT COLOR	
	X'74'	Unchained	
	X'75'	Chained	

Offset	Range	Meaning	Error Code
4-5		COLOR	X'0258..0 3'
	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue - Limited Simulated Color Support	
	X'0002' or X'FF02'	Red - Limited Simulated Color Support	
	X'0003' or X'FF03'	Pink - Limited Simulated Color Support	
	X'0004' or X'FF04'	Green - Limited Simulated Color Support	
	X'0005' or X'FF05'	Turquoise - Limited Simulated Color Support	
	X'0006' or X'FF06'	Yellow - Limited Simulated Color Support	
	X'0007'	White - Color of Medium (Reset)	
	X'0008'	Black	
	X'0010'	Brown - Limited Simulated Color Support	
	X'FF07'	Printer Default (Black)	
	X'FF08'	Color of Medium (Reset)	
	X'FFFF'	Use LPD color value  For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.	
6	X'00' - X'01'	PRECISION	X'0258..0 3'
	X'FF'	Same as X'00'	

### Set Text Orientation

Set Text Orientation Control Sequence establishes i-direction and b-direction for the following presentation text.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'06'	LENGTH	X'021E..01'
3		SET TEXT ORIENTATION	
	X'F6'	Unchained	
	X'F7'	Chained	
4-5		I-AXIS ORIENTATION	X'020F..01'
	X'0000'	0 degrees (+X direction)	
	X'2D00'	90 degrees (+Y direction)	
	X'5A00'	180 degrees (-X direction)	
	X'8700'	270 degrees (-Y direction)	
	X'FFFF'	Use LPD value. If no LPD is received, use printer default	
6		B-AXIS ORIENTATION	X'020F..01'
	X'0000'	0 degrees (+X direction)	
	X'2D00'	90 degrees (+Y direction)	
	X'5A00'	180 degrees (-X direction)	
	X'8700'	270 degrees (-Y direction)	
	X'FFFF"	Use LPD value. If no LPD is received, use printer default	

The permitted combinations are those where the difference between the I-axis orientation and the B-axis orientation are 90 degrees.

INLINE-DIRECTION BASELINE-DIRECTION

0 deg. rotation 90 deg. rotation

0 deg. rotation 270 deg. rotation

90 deg. rotation 180 deg. rotation

90 deg. rotation 0 deg. rotation  
 180 deg. rotation 270 deg. rotation  
 180 deg. rotation 90 deg. rotation  
 270 deg. rotation 180 deg. rotation  
 270 deg. rotation 0 deg. rotation

### Set Variable Space Character Increment

Set Variable Space Character Increment Control Sequence specifies the increment of a Variable Space Character.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'04'	LENGTH	X'021E..01'
3		SET VARIABLE SPACE CHARACTER INCREMENT	
	X'C4'	Unchained	
	X'C5'	Chained	
4-5	X'0000' - X'7FFF'	INCREMENT (vsi) See "Notation Conventions", IPDS Technical Reference 1.	X'0217..01'
	X'FFFF'	Default Variable Space Increment for Current Font	

### Temporary Baseline Move

The Temporary Baseline Move Control Sequence is used to change the position of the sequential baseline without change to the established baseline.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'03' or X'06'	LENGTH	X'021E..01'



Offset	Range	Meaning	Error Code
3		TEMPORARY MOVE BASELINE	
	X'78'	Unchained	
	X'79'	Chained	
4		DIRECTION	X'0298..0 3'
	X'00'	Baseline is Unchanged	
	X'01'	Return to Established Baseline	
	X'02'	Shift Baseline away from l-axis (Subscript)	
	X'03'	Shift Baseline toward l-axis (Superscript)	
	X'FF'	Same as X'00'	
5		PRECISION	X'0298..0 3
	X'00'	Accurate placement and character representation is required using the current font.	
	X'01'	A substitute font with characteristics identical to the current font may be used to simulate baseline shift (superscript/ subscript). The printer accepts this value but treats it as X'00'.	
	X'FF'	Same as X'00'	
6-7	X'0000' - X'7FFF'	TEMPORARY BASELINE INCREMENT See "Notation Conventions", IPDS Technical Reference 1.	X'0298..0 3'
	X'FFFF'	Half the current baseline increment	

## Transparent Data

Transparent Data Control Sequence contains a sequence of coded characters that are presented without a scan for embedded control sequences.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'02' - X'FF'	LENGTH	X'021E.. 01'

Offset	Range	Meaning	Error Code
3		TRANSPARENT DATA	
	X'DA'	Unchained	
	X'DB'	Chained	
4-255		CHARACTER STRING	

### Underscore

The Underscore control sequence identifies text that is to be underscored.

Offset	Range	Meaning	Error Code
0-1	X'2BD3'	TEXT CONTROL Sequence	
2	X'03'	LENGTH	X'021E..01'
3		UNDERSCORE	
	X'76'	Unchained	
	X'77'	Chained	

Offset	Range	Meaning	Error Code
4		BYPASS IDENTIFIERS	
	Bits 0-3	Reserved	
	Bit 4: 0	Underscore white space from Relative Move Inline	
	Bit 4: 1	Bypass white space from Relative Move Inline	
	Bit 5: 0	Underscore white space from Absolute Move Inline	
	Bit 5: 1	Bypass white space from Absolute Move Inline	
	Bit 6: 0	Underscore white space from Space or Variable Space Character	
	Bit 6: 1	Bypass white space from Space or Variable Space Character	
	Bit 7: 0	BYPASS Treat Bits 0-6 according to their set values	
	Bit 7: 1	NO BYPASS Treat Bits 0-6 as if their values are set to zero	
	X'FF'	NO BYPASS in EFFECT	



# 3. IM Image Command Set

---

## IM Image Commands

Name	Command	Sub-command	Where to Look
Write Image Control	X'D63D'		p.144 "Write Image Control"
Write Image	X'D64D'		p.148 "Write Image"

## Write Image Control

The Write Image Control command is the first command in the sequence to send raster image data to the printer. The command contains fields to define the input, scale, and image placement parameters.

Several Write Image Control commands may be required to a complete raster image.

Offset	Range	Meaning	Error Code
0-1	X'0001' - X'7FFF'	Pixels per scan line in the output image	X'0242..0 1' X'0243..0 1'
2-3	X'0001' - X'7FFF'	Number of scan lines in the output Image	X'0244..0 1' X'0245..0 1'
4-5	X'0001' - X'7FFF'	Pixels per scan line in the input image	X'0242..0 1' X'0243..0 1'
6-7	X'0001' - X'7FFF'	Number of scan lines in the input image	X'0244..0 1' X'0245..0 1'
8	X'00'	Uncompressed input image	X'0246..0 1'
9	X'00'	One bit per pixel in the input image format	X'0246..0 1'
10		PIXEL MAGNIFICATION FACTOR	X'0247..0 1'
	X'01'	No Magnification Factor	
	X'02'	Magnification Factor of 2	
11		SCAN LINE MAGNIFICATION FACTOR	X'0247..0 1'
	X'01'	No Magnification Factor	
	X'02'	Magnification Factor of 2	

Offset	Range	Meaning	Error Code
12-13		SCAN LINE DIRECTION	X'0248..0 1'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	
14-15		SCAN LINE SEQUENCE DIRECTION	X'0249..0 1'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	
16		REFERENCE COORDINATE SYSTEM	X'024A.. 01'
	X'00'	Absolute I, Absolute B	
	X'20'	Absolute I, Relative B	
	X'40'	Relative I, Absolute B	
	X'60'	Relative I, Relative B	
	X'A0'	X <sub>p</sub> , Y <sub>p</sub>	
17-19	X'FF8000' - X'007FFF'	X <sub>p</sub> , I or I offset coordinate of the IM image block origin	X'024A.. 01'
20	X'00'	Reserved	
21-23	X'FF8000' - X'007FFF'	Y <sub>p</sub> , B or B offset coordinate of the IM image block origin	X'024A.. 01'

Offset	Range	Meaning	Error Code
24-25		IMAGE COLOR (Named Color)	X'0253..0 1'
	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue - Limited Simulated Color Support	
	X'0002' or X'FF02'	Red - Limited Simulated Color Support	
	X'0003' or X'FF03'	Pink - Limited Simulated Color Support	
	X'0004' or X'FF04'	Green - Limited Simulated Color Support	
	X'0005' or X'FF05'	Turquoise - Limited Simulated Color Support	
	X'0006' or X'FF06'	Yellow - Limited Simulated Color Support	
	X'0007'	White - Color of Medium (Reset)	
	X'0008'	Black	
	X'0009'	Dark Blue - Limited Simulated Color Support	
	X'000A'	Orange - Limited Simulated Color Support	
	X'000B'	Purple - Limited Simulated Color Support	
	X'000C'	Dark Green - Limited Simulated Color Support	
	X'000D'	Dark Turquoise - Limited Simulated Color Support	
	X'000E'	Mustard - Limited Simulated Color Support	



Offset	Range	Meaning	Error Code
24-25	X'000F'	Gray - Limited Simulated Color Support	
	X'0010'	X'0010' Brown - Limited Simulated Color Support	
	X'FF07'	Printer Default (Black)	
	X'FF08'	Color of Medium (Reset) For details about color simulation and product support specifics, see "Color Simulation", IPDS Technical Reference 1.	

## Write Image

The data is a binary representation of the raster image. In the binary data, a 1-bit represents a colored pixel and a 0-bit represents a pixel left unchanged in the page map. In other words, if a pixel is set black by another block on the page (for example, text), it will not be reset to white if it is written with a 0-bit in the image block. Several Write Image commands may be required to a complete raster image.

An error occurs if the host program sends the End command and the total number of bytes of image data is a different number than specified in the image control record.

3

Offset	Range	Meaning	Error Code
0-End		Binary RASTER IMAGE	X'026A..01' X'026B..01' X'0264..01'

# 4. IO Image Command Set

## IO Image Commands

Name	Command	Sub-command	Where to Look
Write Image Control 2	X'D63E'		p. 150 "Write Image Control 2"
Image Area Position		X'AC6B'	p. 150 "Image Area Position"
Image Output Control		X'A66B'	p. 151 "Image Output Control"
Image Data Descriptor		X'A6FB'	p. 153 "Image Data Descriptor"
Write Image 2	X'D64E'		p. 156 "Write Image 2"
Begin Segment		X'70'	p. 156 "Begin Segment"
Begin Image Content		X'91'	p. 156 "Begin Image Content"
Image Size Parameter		X'94'	p. 156 "Image Size Parameter"
Image Encoding Parameter		X'95'	p. 157 "Image Encoding Parameter"
Image Data Element Size Parameter		X'96'	p. 158 "Image Data Element Size Parameter"
Image Look -up Table ID Parameter		X'97'	p. 159 "Image Look-up Table ID Parameter"
Image Data		X'FE92'	p. 159 "Image Data"
End Image Content		X'93'	p. 160 "End Image Content"
End Segment		X'71'	p. 160 "End Segment"

## Write Image Control 2

The Write Image Control 2 data consists of three consecutive structured fields:

- Image Area Position Control (IAP)
- Image Output Control (IOC)
- Image Data Descriptor (IDD)

The Write Image Control 2 command and the command sequence that follows defines the image presentation block area on the current page. The parameters of this command define the size, placement and orientation of the image block and establish the parameters required to interpret the image segments.

4

Positive acknowledgement of image commands in Overlay State or Page Segment State means that the command or command sequence has been accepted for processing, but does not imply that its parameters have been checked in any way.

### Image Area Position

This data structured field specifies the position and orientation of the image output area relative to a reference coordinate system. It is a REQUIRED data field in the Write Image Control 2 command.

Offset	Range	Meaning	Error Code
0-1	X'000B' - X'xxxx'	LENGTH of Image Area Position	X'0202..05'
2-3	X'AC6B'	STRUCTURED FIELD ID	X'020B..05'
4-5	X'8000' - X'7FFF'	Image Object Area Origin Xp, I, or Ioffset Coordinate Position See "Notation Conventions", IPDS Technical Reference 1.	
6-7	X'8000' - X'7FFF'	Image Object Area Origin Yp, B, or B-offset Coordinate Position See "Notation Conventions", IPDS Technical Reference 1.	
8-9		ORIENTATION OF IMAGE BLOCK	X'0203..05'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	

Offset	Range	Meaning	Error Code
10		COORDINATE REFERENCE SYSTEM	X'0204..0 5'
	X'00'	Absolute I, absolute B	
	X'20'	Absolute I, relative B	
	X'40'	Relative I, absolute B	
	X'60'	Relative I, relative B	
	X'A0'	Page Xp, Yp	
11-n		Ignored	

## Image Output Control

This data structured field specifies the mapping option for the image object. It is an ELECTIVE data field in the Write Image Control 2 command. If this field is omitted, the printer will use the following default values:

Mapping option = X'30' (Position and Trim)

X, Y Offset = 0.

X, Y Extent = Image Presentation Space extent defined by the Image Data Descriptor structured field.

Offset	Range	Meaning	Error Code
0-1	X'0010' - X'xxxx'	LENGTH of Image Output Control	X'0202..0 5'
2-3	X'A66B'	Structured Field ID	X'020B.. 05'
4		UNIT BASE (Measurement Units)	X'0205..0 5'
	X'00'	10 Inches	
	X'01'	10 Centimeters	
5-6	X'0001'- X'7FFF'	L-units per UNIT BASE	X'0206..0 5'

Offset	Range	Meaning	Error Code
7-8	X'0001'- X'7FFF'	X extent of IO image block in L-units for Page, Overlay and Page Segment  See "Notation Conventions", IPDS Technical Reference 1.	X'0207..0 5'
	X'FFFF'	Use Load Page Descriptor Value	
9-10	X'0001'- X'7FFF'	Y extent of IO image block in L-units for Page, Overlay and Page  See "Notation Conventions", IPDS Technical Reference 1.	X'0207..0 5'
	X'FFFF'	Use Load Page Descriptor Value	
11		MAPPING CONTROL OPTION	X'0208..0 5'
	X'10'	Scale to fit	
	X'20'	Center and trim	
	X'30'	Position and trim	
	X'41'	Point to pixel	
	X'42'	Point to pixel with double dot	
	X'50'	Replicate and Trim	
12-13	X'8000'- X'7FFF'	X OFFSET L-units  See "Notation Conventions", IPDS Technical Reference 1.	X'0209..0 5'
14-15	X'8000'- X'7FFF'	Y OFFSET L-units  See "Notation Conventions", IPDS Technical Reference 1.	X'0209..0 5'

Offset	Range	Meaning	Error Code
16-n		<p>IOC Triplets</p> <ul style="list-style-type: none"> <li>• Color Specification Triplet. This optional triplet can be placed at the end of the IOC command to specify the foreground color of the object area, before any object data is placed on the object area. Any number of IOC triplets can be received, they are processed in the order received and the resulting color of the object area depends on the last instance of the triplet received. For details, see "Color Specification", IPDS Technical Reference 1.</li> <li>• Presentation Space Reset Mixing Triplet. This optional triplet can be placed at the end of the IOC command to specify whether or not an object area is reset to the color of medium before any object data is placed on the object area. Any number of IOC triplets can be received, they are processed in the order received and the resulting color of the object area depends on the last instance of the triplet received. For details, see "Presentation Space Reset Mixing", IPDS Technical Reference 1.</li> </ul>	

**Note**

- The Replicate and Trim Mapping Control option is supported only when the IPDS Menu PRINT MODE item is set to ENH (Enhanced 600 dpi).

## Image Data Descriptor

This is a REQUIRED data structured field in the Write Image Control 2 command. It specifies parameters that define the image presentation space size and resolution.

Offset	Range	Meaning	Error Code
0-1	X'000F' - X'xxxx'	LENGTH of Image Data Descriptor	X'0202..05'
2-3	X'A6FB'	STRUCTURED FIELD ID	X'020B..05'
4-5	X'0000'	Reserved	

Offset	Range	Meaning	Error Code
6		UNIT BASE (Measurement Units)	X'0205..0 5'
	X'00'	10 Inches	
	X'01'	10 Centimeters	
7-8	X'0001'- X'7FFF'	X image points per unit base	X'0206..0 5'
9-10	X'0001'- X'7FFF'	Y image points per unit base	X'0206..0 5'
11-12	X'0001'- X'7FFF'	X EXTENT of image presentation space (in image points) See "Notation Conventions", IPDS Technical Reference 1.	X'0207..0 5'
13-14	X'0001'- X'7FFF'	Y EXTENT of image presentation space (in image points) See "Notation Conventions", IPDS Technical Reference 1.	X'0207..0 5'
15-end of IDD		IOCA SDFs	
0	X'F4'	Set Extended Bilevel Image Color SDF	
	X'F6'	Set Bilevel Image Color SDF *1	
1	X'04'	LENGTH	
2	X'00'	AREA	
3	X'00'	Reserved	



Offset	Range	Meaning	Error Code
4-5		Named Color	
	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue - Limited Simulated Color Support	
	X'0002' or X'FF02'	Red - Limited Simulated Color Support	
	X'0003' or X'FF03'	Pink - Limited Simulated Color Support	
	X'0004' or X'FF04'	Green - Limited Simulated Color Support	
	X'0005' or X'FF05'	Turquoise - Limited Simulated Color Support	
	X'0006' or X'FF06'	Yellow - Limited Simulated Color Support	
	X'0007'	White - Color of Medium (Reset)	
	X'0008'	Black	
	X'0009'	Dark Blue - Limited Simulated Color Support	
	X'000A'	Orange - Limited Simulated Color Support	
	X'000B'	Purple - Limited Simulated Color Support	
	4-5	X'000C'	Dark Green - Limited Simulated Color Support
X'000D'		Dark Turquoise - Limited Simulated Color Support	
X'000E'		Mustard - Limited Simulated Color Support	
X'000F'		Gray - Limited Simulated Color Support	
X'0010'		Brown - Limited Simulated Color Support	
X'FF07'		Printer Default (Black)	
X'FF08'		Color of Medium (Reset)	

\* 1 Refer to the Intelligent Printer Data Stream Reference and the Image Object Content Architecture Reference for specifics on the Set Bilevel Image Color SDF format.

## Write Image 2

The image segment is processed as it is received by the printer and is not retained or stored as a named image segment.

Write Image 2 command carries the IO image data within a hierarchical sequence of self-defining fields. See the Intelligent Printer Data Stream Reference and the Image Object Content Architecture Reference.

### 4

#### Begin Segment

Offset	Range	Meaning	Error Code
0	X'70'	Begin Segment	X'0570..0 F'
1	X'00'-X'FF'	Length	

#### Begin Image Content

Offset	Range	Meaning	Error Code
0	X'91'	Begin Image Content	X'0591..0 F'
1	X'01'-X'FF'	Length	X'0500..0 3'
2	X'FF'	Format Specification	X'0500..0 4'

#### Image Size Parameter

The Image Size Parameter specifies the size of the image defined within the image segment. Mapping of the image into the image presentation space (See p. 153 "Image Data Descriptor") is on a 1 image point to 1 image point basis (one image point of an IO-Image segment is mapped to one image point of the image presentation space).

Offset	Range	Meaning	Error Code
0	X'94'	IMAGE SIZE	X'0594..0 F'
1	X'09'-X'FF'	LENGTH of the following bytes	X'0500..0 3'
2		UNIT BASE (Measurement Units)	
	X'00'	10 Inches	
	X'01'	10 Centimeters	
	X'02'	Logical (resolution ratio)	
3-4	X'0000' - X'7FFF'	X image points per unit base	
5-6	X'0000' - X'7FFF'	Y image points per unit base	
7-8	X'0000'- X'7FFF'	X extent of the image in image points	X'0500..0 4' X'0594..1 1' X'0595..1 1' X'05A9..0 2'
9-10	X'0000'- X'7FFF'	Y extent of the image in image points	X'0500..0 4' X'05A9..0 2'

### Image Encoding Parameter

Offset	Range	Meaning	Error Code
0	X'95'	IMAGE ENCODING	X'0595..0 F'

Offset	Range	Meaning	Error Code
1	X'02'-X'FF'	LENGTH of the following bytes	X'0500..03'
2		COMPRESSION ALGORITHM	X'0595..10' X'0595..11'
	X'01'	IBM MMR compression	
	X'03'	No compression	
	X'06'	RL4 compression	
	X'08'	ABIC (Bilevel Q-Coder)	
	X'80'	G3 MH (CCITT T.4 facsimile 1-D)	
	X'81'	G3 MR (CCITT T.4 G3 facsimile 2-D)	
	X'82'	G4 MMR (CCITT T.6 G4 facsimile 2-D)	
3		RECORDING ALGORITHM	X'0595..10'
	X'01'	RIDIC (Recording Image Data Inline Code) Unpadded RIDIC	
4		BIT ORDER within each image data byte	
	X'00'	Left-to-Right	
	X'01'	Right-to-Left	

**Image Data Element Size Parameter**

Offset	Range	Meaning	Error Code
0	X'96'	IMAGE DATA ELEMENT SIZE	X'0596..0F'
1	X'01'-X'FF'	LENGTH of the following bytes	X'0500..03'

Offset	Range	Meaning	Error Code
2		NUMBER of BITS per PIXEL	X'0596..1 0'
	X'01'	1 bit per pixel	X'0500..0 4'
	X'08'	8 bits per pixel	X'0596..1 1'

If 1 is specified, the image is binary, with 1-bit representing black pixels and 0-bit representing pixels unchanged in the page map. If the image is uncompressed, each raster scan in the image data must be padded so that it is an integral number of bytes.

If 8 is specified, the image is gray scale. Each image byte is considered to be a value 0 to 255, where 0 is maximum black, 255 is no black at all, and the values in between are shades of gray.

The printer implements 8 bit per pixel images by halftoning. Halftoning significantly degrades image detail. For that reason, resolutions of gray scale data greater than 120 pixels per inch are not recommended except for draft printing purposes.

If 8 is specified, the Image Compression, if specified with the Image Encoding command, must be uncompressed. This error is detected when the first Image Data command is received.

### Image Look-up Table ID Parameter

Offset	Range	Meaning	Error Code
0	X'97'	Image Look-up Table ID Parameter	X'0597..0 F'
1	X'01'-X'FF'	LENGTH of the following bytes	X'0500..0 3'
2	X'00'	Look up table ID	X'0597..1 0'

### Image Data

Offset	Range	Meaning	Error Code
0-1	X'FE92'	Image Data	X'0592..0 F'

Offset	Range	Meaning	Error Code
2-3	X'0001'- X'FFFF'	Length	X'0500..0 3" X'0594..0 1'
4-end	X'x...x'	Image Data	X'0597..1 0'

## 4

**End Image Content**

Offset	Range	Meaning	Error Code
0	X'93'	End Image Content	X'0593..0 F'
1	X'00'-X'FF'	Length	

**End Segment**

Offset	Range	Meaning	Error Code
0	X'71'	End Segment	X'0571..0 F'
1	X'00'-X'FF'	Length	

# 5. Graphics Command Set

## Graphics Commands

The base reference for graphic drawing orders is the Graphics Object Content Architecture Reference.

Name	Command	Sub-command	Where to Look
Write Graphics Control	X'D684'		p. 161 "Write Graphics Control"
Graphics Area Position		X'AC6B'	p. 161 "Graphics Area Position"
Graphics Output Control		X'A66B'	p. 162 "Graphics Output Control"
Graphics Data Descriptor		X'A6BB'	p. 164 "Graphics Data Descriptor"
Write Graphics	X'D685'		p. 169 "Write Graphics"
Begin Segment Introducer		X'70'	p. 170 "Begin Segment Introducer"

### Write Graphics Control

### Graphics Area Position

Offset	Range	Meaning	Error Code
0-1	X'000B'- X'xxxx'	LENGTH of Graphics Area Position	X'0202..0 5'
2-3	X'AC6B'	Structured Field ID.	X'020B.. 05'
4-5	X'8000'- X'7FFF'	GRAPHICS BLOCK ORIGIN Xp, l, or l-offset Coordinate Position.  See "Notation Conventions", IPDS Technical Reference 1.	

Offset	Range	Meaning	Error Code
6-7	X'8000'- X'7FFF'	GRAPHICS BLOCK ORIGIN Yp, B, or B-offset Coordinate Position.  See "Notation Conventions", IPDS Technical Reference 1.	
8-9		ORIENTATION of Graphic Block	X'0203..0 5'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	
10		COORDINATE REFERENCE SYSTEM	X'0204..0 5'
	X'00'	Absolute I, Absolute B	
	X'20'	Absolute I, Relative B	
	X'40'	Relative I, Absolute B	
	X'60'	Relative I, Relative B	
	X'A0'	Page Xp, Yp	
11-n		Ignored	

**Graphics Output Control**

Offset	Range	Meaning	Error Code
0-1	X'0010'- X'xxxx'	LENGTH of Graphics Output Control (GOC)	X'0202..0 5'
2-3	X'A66B'	STRUCTURED FIELD ID	X'020B.. 05'
4		UNIT BASE (Measurement Units)	X'0205..0 5'
	X'00'	10 Inches	
	X'01'	10 Centimeters	



Offset	Range	Meaning	Error Code
5-6	X'0001' - X'7FFF'	L-Units per UNIT BASE	X'0206..0 5'
7-8	X'0001' - X'7FFF'	X EXTENT of GRAPHICS BLOCK in L-units See "Notation Conventions", IPDS Technical Reference 1.	X'0207..0 5'
	X'FFFF'	Use Load Page Descriptor Value	
9-10	X'0001' - X'7FFF'	Y EXTENT of GRAPHICS BLOCK in L-units See "Notation Conventions", IPDS Technical Reference 1.	X'0207..0 5'
	X'FFFF'	Use Load Page Descriptor Value	
11		MAPPING Control Option	X'0208..0 5'
	X'10'	Scale to Fit	
	X'20'	Center and Trim	
	X'30'	Position and Trim	
12-13	X'8000' - X'7FFF'	X OFFSET L-units. See "Notation Conventions", IPDS Technical Reference 1.	X'0209..0 5'
14-15	X'8000' - X'7FFF'	Y OFFSET L-units. See "Notation Conventions", IPDS Technical Reference 1.	X'0209..0 5'

Offset	Range	Meaning	Error Code
16-n		<p>GOC Triplets</p> <ul style="list-style-type: none"> <li>• Color Specification Triplet. This optional triplet can be placed at the end of the GOC command to specify the foreground color of the object area, before any object data is placed on the object area. Any number of GOC triplets can be received, they are processed in the order received and the resulting color of the object area depends on the last instance of the triplet received. For details, see "Color Specification", IPDS Technical Reference.</li> <li>• Presentation Space Reset Mixing Triplet. This optional triplet can be placed at the end of the GOC command to specify whether or not an object area is reset to the color of medium before any object data is placed on the object area. Any number of GOC triplets can be received, they are processed in the order received and the resulting color of the object area depends on the last instance of the triplet received. For details, see "Presentation Space Reset Mixing", IPDS Technical Reference 1.</li> </ul>	

**Note**

- The Graphics Output Control Self Defining Field is optional and may be omitted from the WGC command. If the GOC is omitted, the printer uses the following:
  - Mapping Control Option X'30' (Position and Trim)
  - X Offset = 0
  - Y Offset = 0
  - Graphics Block size equals the Graphics Presentation Space Window size which is defined in the Graphics Data Descriptor (GDD) Self Defining Field (See p. 164 "Graphics Data Descriptor").

### Graphics Data Descriptor

Offset	Range	Meaning	Error Code
0-1	X'001C'- X'xxxx'	LENGTH of Graphics Data Descriptor (GDD)	X'0202..0 5'

Offset	Range	Meaning	Error Code
2-3	X'A6BB'	STRUCTURED FIELD ID	X'020B.. 05'
4		UNIT BASE (Measurement Units)	X'0205.. 5'
	X'00'	10 Inches	
	X'01'	10 Centimeters	
5	X'00'	Reserved	
6-7	X'0001' - X'7FFF'	Xg UNITS per UNIT BASE	X'0206.. 5'
8-9	X'0001' - X'7FFF'	Yg UNITS per UNIT BASE Yg = Xg	X'0206.. 5'
10-13	X'000000 00'	Reserved	
14-15	X'8000'- X'7FFF'	Xg LEFT LIMIT of Graphic Presentation Space Window. See "Notation Conventions", IPDS Technical Reference 1.	
16-17	X'8000'- X'7FFF'	Xg RIGHT LIMIT of Graphic Presentation Space Window. See "Notation Conventions", IPDS Technical Reference 1.	
18-19	X'8000'- X'7FFF'	Yg TOP LIMIT of Graphic Presentation Space Window. See "Notation Conventions", IPDS Technical Reference 1.	
20-21	X'8000'- X'7FFF'	Yg BOTTOM LIMIT of Graphic Presentation Space Window. See "Notation Conventions", IPDS Technical Reference 1.	
22-27	X'000000 000000'	Reserved	
28-n		INITIAL GRAPHICS DEFAULTS. See "GDD Initial Graphics Defaults Self Describing Instructions"	

If the image resolution specified in the GDD is X'0000' (indicating that no explicit resolution is specified), then the resolution used is the resolution specified in the OPC's Image and Coded Font Resolution Self-Defining Field.

## GDD Initial Graphics Defaults Self Describing Instructions

Offset	Range	Meaning	Error Code
0	X'21'	SET CURRENT DEFAULTS	X'0300..2 1'
1	X'04'-X'FF'	LENGTH of Data	X'0300..0 3'
2		SET Byte	X'0300..0 2'
	X'00'	Drawing Attributes	
	X'01'	Line Attributes	
	X'02'	Character Attributes	
	X'03'	Marker Attributes	
	X'04'	Pattern Attributes	
	X'0B'	Arc Parameters	
3-4		MASK Bytes. See "Graphics Drawing Order Defaults and Masks"	X'0300..0 3'
5		DEFAULT Byte	X'0300..0 2'
	X'0F'	Use Standard Default	
	X'8F'	Use the following Data Bytes	X'0300..0 3'
6-n		Data bytes	X'0300..2 1'

 **Note**

- See p. 170 "Begin Segment Introducer" (Drawing Orders) for valid drawing order defaults.

## Graphics Drawing Order Defaults and Masks

Set Byte	Mask Bit	Meaning
X'00'		DRAWING ATTRIBUTES
	0	Color (Named Color)
	1	Foreground Mix
	2	Background Mix
	3-15	Reserved
X'01'		LINE ATTRIBUTES
	0	Line Type
	1	Line Width
	2-15	Reserved
X'02'		CHARACTER ATTRIBUTES
	0	Angle X, Y
	1	Character Cell Size CW, CH
	2	Direction
	3	Precision
	4	Character Set
	5	Shear X, Y
	6-15	Reserved
X'03'		MARKER ATTRIBUTES
	0-2	Reserved
	3	Precision
	4	Marker Set
	5-6	Reserved
	7	Marker Symbol
	8-15	Reserved

Set Byte	Mask Bit	Meaning
X'04'		PATTERN ATTRIBUTES
	0-6	Reserved
	7	Pattern Symbol
	8-15	Reserved
X'0B'		ARC PARAMETERS
	0	P Value
	1	R Value
	2	Q Value
	3	S Value
	4-15	Reserved

# Write Graphics

## Write Graphics Defaults

The following defaults will be used if not previously defined by p.164 "Graphics Data Descriptor" (Graphics Drawing Order Defaults and Masks). The current value of an attribute is taken into account when the drawing order is received.

Meaning	Range
Color	Black
Line Type	Solid
Line Width	Normal (4 pixel)
Character Cell	10 CPI
Character Set	Courier 10
Character Angle	No Rotation
Character Direction	Left to Right
Marker Symbol	Cross
Pattern Symbol	Solid Shading
Current Position	X,Y = 0,0
Arc Parameters	P=Q=1; R=S=0
Foreground Mix	Overpaint
Background Mix	Leave Alone
Character Precision	Character Precision
Marker Precision	Character Precision
Marker Symbol Set	Resident Set in Printer

## Begin Segment Introducer

Offset	Range	Meaning	Error Code
0	X'70'	BEGIN SEGMENT code	
1	X'0C'	LENGTH of the following parameters	X'0370..C 1'
2-5		SEGMENT ID (Ignored)	
6	X'00'	Reserved	
7		FLAGS	X'0370..0 1' X'0370..8 2'
	Bits 0-2: 00	Reserved	
	Bit 3: 0/1	No Prolog (0); Prolog (1)	
	Bit 4: 0	Reserved	
	Bits 5-6: 00/11	New Segment (reinitialize graphics defaults)/Append Segment (do not reinitialize defaults)	
	Bit 7: 0	Reserved	
8-9	X'0000'- X'FFFF'	Length of this segment (SEGLen)	
10-13	X'000000 00'	Reserved	
14-n		See p. 170 "Begin Segment Introducer" (Drawing Orders).	

## Drawing Orders

The machine supports all DR2 Drawing Orders and valid data values as defined in the Intelligent Printer Data Stream Reference. The following are those Drawing Orders which define specific data values.

### Set Background Mix:

Offset	Range	Meaning	Error Code
0	X'0D'	Order code	



Offset	Range	Meaning	Error Code
1		BACKGROUND MIX ATTRIBUTE	X'0300..0 4' X'0300..0 E'
	X'00'	Drawing default	
	X'05'	Leave Alone	

**Set Character Angle:**

Offset	Range	Meaning	Error Code
0	X'34'	Order code	
1	X'04'	Length	X'0300..0 3'
2-3	X'8000' - X'7FFF'	Xg COORDINATE	X'0334..0 0'
4-5	X'8000' - X'7FFF'	Yg COORDINATE	X'0334..0 0'

- If  $X_g = 0$  and  $Y_g = 0$  then the character angle is 0 degrees (default)
- If  $X_g > 0$  and  $Y_g = 0$  then the character angle is 0 degrees
- If  $X_g = 0$  and  $Y_g > 0$  then the character angle is 90 degrees
- If  $X_g < 0$  and  $Y_g = 0$  then the character angle is 180 degrees
- If  $X_g = 0$  and  $Y_g < 0$  then the character angle is 270 degrees

 **Note**

- Exception X'0334..00' applies when both  $X_g$  and  $Y_g$  are non-zero values.

**Set Character Precision:**

Offset	Range	Meaning	Error Code
0	X'39'	Order code	

Offset	Range	Meaning	Error Code
1		PRECISION TYPE	X'0300..04' X'0300..0E'
	X'00'	Current default	
	X'01'	String Precision	
	X'02'	Character Precision	

**Set Character Set:**

Offset	Range	Meaning	Error Code
0	X'38'	Order code	
1		LOCAL CHARACTER SET ID	X'03C3..00'
	X'00'	Current default	
	X'01' - X'FE'	Local ID for Character Set	
	X'FF'	Printer Default	

**Set Color:**

Offset	Range	Meaning	Error Code
0	X'0A'	Order code	

Offset	Range	Meaning	Error Code
1		COLOR	X'0300..04'
	X'00'	Printer Default (Black)	
	X'01'	Blue - Limited Simulated Color Support	
	X'02'	Red - Limited Simulated Color Support	
	X'03'	Pink - Limited Simulated Color Support	
	X'04'	Green - Limited Simulated Color Support	
	X'05'	Turquoise - Limited Simulated Color Support	
	X'06'	Yellow - Limited Simulated Color Support	
	X'07'	Black	
	X'08'	Color of Medium (Reset) For details about color simulation and product support specifics, see "Color Simulation" IPDS Technical Reference 1.	

**Set Extended Color:**

Offset	Range	Meaning	Error Code
0	X'26'	Order code	
1	X'02'	Length	X'0300..03'

Offset	Range	Meaning	Error Code
2-3		EXTENDED COLOR	X'0300..04'
	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue - Limited Simulated Color Support	
	X'0002' or X'FF02'	Red - Limited Simulated Color Support	
	X'0003' or X'FF03'	Pink - Limited Simulated Color Support	
	X'0004' or X'FF04'	Green - Limited Simulated Color Support	
	X'0005' or X'FF05'	Turquoise - Limited Simulated Color Support	
	X'0006' or X'FF06'	Yellow - Limited Simulated Color Support	
	X'0007'	White - Color of Medium (Reset)	
	X'0008'	Black	
	X'0009'	Dark Blue - Limited Simulated Color Support\	
	X'000A'	Orange - Limited Simulated Color Support	
	X'000B'	Purple - Limited Simulated Color Support	
	X'000C'	Dark Green - Limited Simulated Color Support	

Offset	Range	Meaning	Error Code
2-3	X'000D'	Dark Turquoise - Limited Simulated Color Support	
	X'000E'	Mustard - Limited Simulated Color Support	
	X'000F'	Gray - Limited Simulated Color Support	
	X'0010'	Brown - Limited Simulated Color Support	
	X'FF07'	Printer Default (Black)	
	X'FF08'	Color of Medium (Reset) For details about color simulation and product support specifics, see "Color Simulation" IPDS Technical Reference 1.	

**Set Line Type:**

Offset	Range	Meaning	Error Code
0	X'18'	Order code	
1		LINE TYPE	X'0300..0 4' X'0300..0 E'
	X'00'	Current default	
	X'01'	Dotted Line	
	X'02'	Short Dashed Line	
	X'03'	Dashed and Dotted Line	
	X'04'	Double Dotted Line	
	X'05'	Long Dashed Line	
	X'06'	Dashed Double Dotted Line	
	X'07'	Solid Line	
X'08'	Invisible Line		

**Set Fractional Line Width (4028 Emulation Mode):**

Offset	Range	Meaning	Error Code
0	X'11'	Order code	
1	X'02'	Length	X'0300..03'
2-3		FRACTIONAL LINE WIDTH	X'0300..04' X'0300..0E'
	X'0000'	Current default	
	X'0001' - X'00FF'	2 Pixels Wide	
	X'0100' - X'017F'	4 Pixels Wide	
	X'0180' - X'01FF'	6 Pixels Wide	
	X'0200' - X'0F7F'	G8-60 Pixels Wide	
	X'0F80' - X'FFFF'	62 Pixels Wide	

**Set Fractional Line Width (Native Mode):**

Offset	Range	Meaning	Error Code
0	X'11'	Order code	
1	X'02'	Length	X'0300..03'

Offset	Range	Meaning	Error Code
2-3		FRACTIONAL LINE WIDTH	X'0300..0 4' X'0300..0 E'
	X'0000'	Current default	
	X'0001' - X'007F'	1 Pixel Wide	
	X'0080' - X'00BF'	2 Pixels Wide	
	X'00C0' - X'00FF'	3 Pixels Wide	
	X'0100' - X'013F'	4 Pixels Wide	
	X'013F' - X'017F'	5 Pixels Wide	
	X'0180' - X'01BF'	6 Pixels Wide	
	X'01C0' - X'01FF'	7 Pixels Wide	
	X'0200' - X'0F7F'	8-60 Pixels Wide	
	X'0F80' - X'FFFF'	62 Pixels Wide	

**Set Line Width:**

Offset	Range	Meaning	Error Code
0	X'19'	Order code	

Offset	Range	Meaning	Error Code
1		LINE WIDTH	X'0300..0 4' X'0300..0 E'
	X'00'	Current default	
	X'01' - X'0F'	2-58 Pixels Wide (4 pixels increments)	
	X'10' - X'FF'	62 Pixels Wide	

**Set Marker Precision:**

5

Offset	Range	Meaning	Error Code
0	X'3B'	Order code	
1		MARKER PRECISION	X'0300..0 4' X'0300..0 E'
	X'00'	Drawing default	
	X'01'	Character Precision	
	X'02'	Stroke Precision	

**Set Mix:**

Offset	Range	Meaning	Error Code
0	X'0C'	Order code	
1		MIX ATTRIBUTE	X'0300..0 4' X'0300..0 E'
	X'00'	Drawing default	
	X'02'	Overpaint	

**Set Pattern Set:**

Offset	Range	Meaning	Error Code
0	X'08'	Order code	



Offset	Range	Meaning	Error Code
1	X'00'	PATTERN SET ID	X'0368..03'

### Set Pattern Symbol:

Offset	Range	Meaning	Error Code
0	X'28'	Order code	
1		PATTERN SYMBOL ID	X'0368..04'
	X'00'	Use Current default	
	X'01' - X'08'	Decreasing Density	
	X'09'	Vertical Lines	
	X'0A'	Horizontal Lines	
	X'0B'	Diagonal Lines 1 (Bot L/Top R)	
	X'0C'	Diagonal Lines 2 (Bot L/Top R)	
	X'0D'	Diagonal Lines 1 (Top L/Bot R)	
	X'0E'	Diagonal Lines 2 (Top L/Bot R)	
	X'0F'	No Shading	
	X'10'	Solid Shading	
	X'40'	Blank	

### Set Process Color

The Set Process Color control specifies a process color, highlights color or named color that sets the following color attributes to the same value:

- Character color
- Image color
- Line color

- Marker color
- Pattern color

Offset	Range	Meaning	Error Code
0	X'B2'	Order Code	
1	X'12' - X'14'	LENGTH	X'0300..03'
2	X'00'	RESERVED	
3		COLOR SPACE	X'020E..02'
	X'01'	RGB - Limited Simulated Color Support	
	X'04'	CMYK - Limited Simulated Color Support	
	X'06'	HCS - Limited Simulated Color Support	
	X'08'	CIELAB - Limited Simulated Color Support	
	X'40'	Standard OCA - Limited Simulated Color Support	
4-7	X'00000000'	RESERVED	
8		1ST COLOR COMPONENT BITS	X'020E..05'
	X'01' - X'08'	(RGB, CMYK, CIELAB)	
	X'10'	Standard OCA Color Space	
9		2ND COLOR COMPONENT BITS	X'020E..05'
	X'00' - X'08'	(RGB, CMYK, Highlight, CIELAB)	
10		3RD COLOR COMPONENT BITS	X'020E..05'
	X'00' - X'08'	(RGB, CMYK, CIELAB)	
11		4TH COLOR COMPONENT BITS	X'020E..05'
	X'00' - X'08'	(CMYK)	

Offset	Range	Meaning	Error Code
12-15		COLOR VALUE	X'020E.. 03' X'020E.. 04'
		RGB Color Space	
	X'nn'	Red Intensity	
	X'nn'	Green Intensity	
	X'nn'	Blue Intensity	
		CMYK Color Space	
	X'nn'	Cyan Intensity	
	X'nn'	Magenta Intensity	
	X'nn'	Yellow Intensity	
	X'nn'	Black Intensity	
		Highlight Color Space	
	X'nnnn'	Highlight Color Number	
	X'nn'	Percent Coverage	
	X'nn'	Percent Shading	
		CIELAB Color Space	
	X'nn'	Luminance (L)	
	X'nn'	Chrominance Difference (a)	
	X'nn'	Chrominance Difference (b)	
		Standard OCA Color Space	

Offset	Range	Meaning	Error Code
12-15	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue	
	X'0002' or X'FF02'	Red	
	X'0003' or X'FF03'	Pink	
	X'0004' or X'FF04'	Green	
	X'0005' or X'FF05'	Turquoise	
	X'0006' or X'FF06'	Yellow	
	X'0007'	White - Color of Medium (Reset)	
	X'0008'	Black	
	X'0010'	Brown	
	X'FF07'	Printer Default (Black)	
	X'FF08'	Color of Medium (Reset)	

### Drawing Order Summary

Zero or more drawing orders follow each Begin Segment Introducer. These drawing orders either specify graphics to be printed or assign drawing attributes.

Given below is a list of the supported drawing orders. Please refer to the AFP GOCA Reference, S544-5498, for complete descriptions of all GOCA drawing orders.

Code	Drawing Order
X'68'	Begin Area
X'D1'	Begin Image

Code	Drawing Order
X'91'	Begin Image at Current Position
X'C0'	Box
X'80'	Box at Current Position
X'C3'	Character String
X'83'	Character String at Current Position
X'01'	Comment
X'60'	End Area
X'93'	End Image
X'3E'	End Prolog
X'71'	End Segment (treated like a No Operation command)
X'C5'	Fillet
X'85'	Fillet at Current Position
X'C7'	Full Arc
X'87'	Full Arc at Current Position
X'92'	Image Data
X'C1'	Line
X'81'	Line at Current Position
X'C2'	Marker
X'82'	Marker at Current Position
X'00'	No Operation
X'E1'	Relative Line
X'E3'	Partial Arc
X'A3'	Partial Arc at Current Position
X'A1'	Relative Line at Current Position
X'04'	Segment Characteristics (treated like a No Operation command)

Code	Drawing Order
X'22'	Set Arc Parameters
X'OD'	Set Background Mix
X'34'	Set Character Angle
X'33'	Set Character Cell
X'3A'	Set Character Direction
X'39'	Set Character Precision
X'38'	Set Character Set
X'35'	Set Character Shear
X'0A'	Set Color
X'21'	Set Current Position
X'26'	Set Extended Color
X'11'	Set Fractional Line Width
X'18'	Set Line Type
X'19'	Set Line Width
X'37'	Set Marker Cell
X'3B'	Set Marker Precision
X'3C'	Set Marker Set
X'29'	Set Marker Symbol
X'0C'	Set Mix
X'08'	Set Pattern Set
X'28'	Set Pattern Symbol
X'43'	Set Pick Identifier (treated like a No Operation command)
X'B2'	Set Process Color

# 6. Bar Code Command Set

The base reference for Bar Code commands is the Bar Code Object Content Architecture Reference.

## Bar Code Commands

Name	Command	Sub-command	Where to Look
Write Bar Code Control	X'D680'		p.186 "Write Bar Code Control"
Bar Code Area Position		X'AC6B'	p.186 "Bar Code Area Position"
Bar Code Output Control		X'A66B'	p.187 "Bar Code Output Control"
Bar Code Data Descriptor		X'A6EB'	p.188 "Bar Code Data Descriptor"
Write Bar Code	X'D681'		p.202 "Write Bar Code"

# Write Bar Code Control

## Bar Code Area Position

Offset	Range	Meaning	Error Code
0-1	X'000B'- X'xxxx'	LENGTH of Bar Code Area Position (BCAP)	X'0202..0 5'
2-3	X'AC6B'	STRUCTURED FIELD ID	X'020B.. 05'
4-5	X'8000'- X'7FFF'	Bar Code BLOCK ORIGIN Xp, I, or IOFFSET coordinate position (in 1440ths)	X'0411..0 0'
6-7	X'8000'- X'7FFF'	Bar Code BLOCK ORIGIN Yp, B, or B-OFFSET coordinate position (in 1440ths)	X'0411..0 0'
8-9		ORIENTATION OF Bar Code BLOCK	X'0203..0 5'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	
10		COORDINATE REFERENCE SYSTEM	X'0204..0 5'
	X'00'	Absolute I, Absolute B	
	X'20'	Absolute I, Relative B	
	X'40'	Relative I, Absolute B	
	X'60'	Relative I, Relative B	
	X'A0'	Page Xp, Yp	
11-n :c		Ignored	



## Bar Code Output Control

Offset	Range	Meaning	Error Code
0-1	X'0010' - X'xxxx'	LENGTH of Bar Code Output Control (BCOC)	X'0202..0 5'
2-3	X'A66B'	STRUCTURED FIELD ID	X'020B.. 05'
4		UNIT BASE (Measurement Units)	X'0205..0 5'
	X'00'	10 Inches	
	X'01'	10 Centimeters	
5-6	X'0001' - X'7FFF'	L-Units per UNIT BASE	X'0206..0 5'
7-8	X'0001' - X'7FFF'	X EXTENT of Bar Code BLOCK in L-units See "Notation Conventions", IPDS Technical Reference 1.	X'0207..0 5'
	X'FFFF'	Use Load Page Descriptor Value	
9-10	X'0001' - X'7FFF'	Y EXTENT of Bar Code BLOCK in L-units See "Notation Conventions", IPDS Technical Reference 1.	X'0207..0 5'
	X'FFFF'	Use Load Page Descriptor Value	
11	X'30'	MAPPING CONTROL OPTION (Position)	X'0208..0 5'
12-13	X'8000' - X'7FFF'	X OFFSET L-units See See "Notation Conventions", IPDS Technical Reference 1.	X'0209..0 5'
14-15	X'8000' - X'7FFF'	Y OFFSET L-units See "Notation Conventions", IPDS Technical Reference 1.	X'0209..0 5'

Offset	Range	Meaning	Error Code
16-n		<p>Triplets</p> <ul style="list-style-type: none"> <li>• Color Specification Triplet. This optional triplet can be placed at the end of the BCOC command to specify the foreground color of the object area, before any object data is placed on the object area. Any number of BCOC triplets can be received, they are processed in the order received and the resulting color of the object area depends on the last instance of the triplet received. For details, see "Color Specification", IPDS Technical Reference.</li> <li>• Presentation Space Reset Mixing Triplet. This optional triplet can be placed at the end of the BCOC command to specify whether or not an object area is reset to the color of medium before any object data is placed on the object area. Any number of BCOC triplets can be received, they are processed in the order received and the resulting color of the object area depends on the last instance of the triplet received. For details, see "Presentation Space Reset Mixing", IPDS Technical Reference 1.</li> </ul>	

## Bar Code Data Descriptor

Offset	Range	Meaning	Error Code
0-1	X'001B'- X'xxxx'	LENGTH of Bar Code Data Descriptor (BCDD)	X'0202..0 5'
2-3	X'A6EB'	STRUCTURED FIELD ID	X'020B.. 05'
4		UNIT BASE (Measurement Units)	X'0205..0 5'
	X'00'	10 Inches	
	X'01'	10 Centimeters	
5	X'00'	Reserved	

Offset	Range	Meaning	Error Code
6-7	X'0001' - X'7FFF'	Xbc Units per UNIT BASE	X'0206..05'
8-9	X'0001' - X'7FFF'	Ybc Units per UNIT BASE	X'0206..05'
10-11	X'0001' - X'7FFF'	X EXTENT of Bar Code Presentation Space in L-units. See "Notation Conventions", IPDS Technical Reference 1.	X'0207..05'
	X'FFFF'	Use BCOC X EXTENT	
12-13	X'0001' - X'7FFF'	Y EXTENT of Bar Code Presentation Space in L-units. See "Notation Conventions", IPDS Technical Reference 1.	X'0207..05'
	X'FFFF'	Use BCOC Y EXTENT	
14-15	X'0000'	Reserved	
16		BAR CODE TYPE See p. 193 "Bar Code Type and Modifier Description and Values"	X'0403..00'
17		BAR CODE MODIFIER See p. 193 "Bar Code Type and Modifier Description and Values"	X'040B..00'
18	X'01' - X'FE'	FONT LOCAL ID	X'0404..00'
	X'FF'	Default Font Local ID (Note 1)	

Offset	Range	Meaning	Error Code
19-20		COLOR (Named Color)	X'0405..00'
	X'0000' or X'FF00'	Printer Default (Black)	
	X'0001' or X'FF01'	Blue - Limited Simulated Color Support	
	X'0002' or X'FF02'	Red - Limited Simulated Color Support	
	X'0003' or X'FF03'	Pink - Limited Simulated Color Support	
	X'0004' or X'FF04'	Green - Limited Simulated Color Support	
	X'0005' or X'FF05'	Turquoise - Limited Simulated Color Support	
	X'0006' or X'FF06'	Yellow - Limited Simulated Color Support	
	X'0007'	White - Color of Medium (Reset) Black	
	X'0008'	Dark Blue - Limited Simulated Color Support	
	X'0009'	Orange - Limited Simulated Color Support	

Offset	Range	Meaning	Error Code
19-20	X'000A'	Purple - Limited Simulated Color Support	
	X'000B'	Dark Green - Limited Simulated Color Support	
	X'000C'	Dark Turquoise - Limited Simulated Color Support	
	X'000D'	Mustard - Limited Simulated Color Support	
	X'000E'	Gray - Limited Simulated Color Support	
	X'000F'	Brown - Limited Simulated Color Support	
	X'0010'	Printer Default (Black)	
	X'FF07'	Color of Medium (Reset)	
	X'FF08'	Printer Default (Black)	
	X'FFFF'		
21		UNIT MODULE WIDTH	X'0406..0 0'
	X'07' - X'36'	Printer Default	
	X'FF'	Range and Printer Default are specified by Bar Code Type in Byte 16 (especially 2D bar codes)	
22-23	X'0001' - X'7FFF'	ELEMENT HEIGHT in L-units See "Notation Conventions", IPDS Technical Reference 1.	X'0407..0 0'
	X'FFFF'	Printer Default as specified by Bar Code Type in Byte 16	
24	X'01'-X'FF'	Height multiplier	X'0408..0 0'

Offset	Range	Meaning	Error Code
25-26		WIDE-TO-NARROW RATIO (WE NE)	X'0409..00'
	X'0000'	Not Applicable Note 2	
	X'0002'	2: 1	
	X'0003'	3: 1	
	X'0014' to X'001E'	2.0: 1 - 3.0: 1	
	X'00C8' to X'012C'	2.00: 1 - 3.00: 1	
	X'FFFF'	Printer Default as specified by Bar Code Type (Byte 16)	
27-end		Ignored	

- The Font Local ID specified in BCDD Byte 18 should be OCR-A, OCR-B or Code 128 dependent on the Bar Code Type specified in BCDD Byte 16. The default Font Local ID and Bar Code Type relationships are as follows:

OCR-A	OCR-B
Code 128	UPC-A
Code 3 of 9	UPC-E
MSI	UPC 2-Digit Add-on
2 of 5 Industrial	UPC 5-Digit Add-on
2 of 5 Matrix	EAN-8
2 of 5	EAN-13
Interleaved	EAN 2-Digit Add-on
Codabar	EAN 5-Digit Add-on

- Wide-to-Narrow Ratio (BCDD Bytes 25-26) is only valid for the following Bar Code Types:
  - X'01' 3 of 9
  - X'02' MSI
  - X'0A' 2 of 5 Industrial
  - X'0B' 2 of 5 Matrix
  - X'0C' Interleaved 2 of 5

- X'0D' Codabar
- Default wide-to-narrow ratio for Codabar, Code 3 of 9, and the 2 of 5 types is dictated by the lowest unit module width that results in a readable bar code. The default wide-to-narrow ratio for MSI is 2:1 unless it can't be printed with the selected unit module width.

### Bar Code Type and Modifier Description and Values

Bar Code Type (Byte 16)	Bar Code Description	Unit Module Width Default (mils)	Unit Module Width Range (mils)	Element Height Default (mils)	Element Height Range (mils)	Wide-to-Narrow Ratio
X'01'	3 of 9 Code AIM USS-39	14	7-54	234	234-14000	7.3
X'02'	MSI	14	7-54	300	300-14000	
X'03'	UPC/ CGPC Version A	14	7-54	1020	250-14000	
X'05'	UPC/ CGPC Version E	14	7-54	1020	250-14000	
X'06'	UPC 2 Character Supplemental (Periodicals)	14	7-54	1020	250-14000	
X'07'	UPC 5 Character Supplemental (Paperbacks)	14	7-54	1020	250-14000	
X'08'	EAN-8 (JAN Short)	14	7-54	840	250-14000	

Bar Code Type (Byte 16)	Bar Code Description	Unit Module Width Default (mils)	Unit Module Width Range (mils)	Element Height Default (mils)	Element Height Range (mils)	Wide-to-Narrow Ratio
X'09'	EAN-13 (JAN Standard)	14	7-54	1020	250-14000	
X'0A'	Industrial 2 of 5	14	7-54	234	234-14000	8:02
X'0B'	Matrix 2 of 5	14	7-54	234	234-14000	4:02
X'0C'	Interleaved 2 of 5 AIM USS-I 2/5	14	7-54	234	234-14000	3:02
X'0D'	Codabar 2 of 7 Code AIM USSCodabar	14	7-54	234	234-14000	4:02
X'11'	Code 128 AIM USS-128	14	7-54	250	250-14000	
X'16'	EAN 2 Digit Add-on	14	7-54	1020	250-14000	
X'17'	EAN 5 Digit Add-on	14	7-54	1020	250-14000	
X'18'	POSTNET (Include PLANET)	14	7-54	1000	250-14000	
X'1A'	RM4SCC Royal Mail (Inc. Dutch KIX)	14	7-54	1000	250-14000	
X'1B'	Japan Postal	14	7-54	1000	250-14000	



Bar Code Type (Byte 16)	Bar Code Description	Unit Module Width Default (mils)	Unit Module Width Range (mils)	Element Height Default (mils)	Element Height Range (mils)	Wide-to-Narrow Ratio
X'1C'	Data Matrix 2D	21	12-254	21	12-254	
X'1D'	MaxiCode 2D					
X'1E'	PDF417 2D	14	7-254	15% of width or 0.2 in.	4*width - 524287	
X'1F'	Australia Post	14	7-54	1000	250-14000	
X'20'	QR Code 2D	14	7-254	21	12-254	
X'21'	Code 93	14	7-54	234	234-14000	7:03
X'22'	USPS Four-State	14	7-54	1000	250-14000	

### Bar Code Type and Modifier Description and Values

Byte 16 Value	Bar Code Type	Byte 17 Value	Meaning
X'01'	X'01' 3 of 9 Code, AIM USS-39	X'01'	Print Bar Code with no Printer-Generated Check Character.
		X'02'	Generate Check Character and Print with Bar Code.

Byte 16 Value	Bar Code Type	Byte 17 Value	Meaning
X'02'	MSI	X'01'	Print Bar Code with no Printer-Generated Check Character.
		X'02'	Print Bar Code with IBM Modulus 10 Check Digit Generated by Printer and Put at End of Data.
		X'03'	First check digit IBM Modulus 10.
		X'04'	First check digit NCR Modulus 11. Check digit equals remainder. Check digit of 10 equals error.
		X'05'	First check digit IBM Modulus 11. Check digit equals remainder. Check digit of 10 equals error.
		X'06'	First check digit NCR Modulus 11. Check digit equals 11 minus remainder. Check digit of 10 equals zero.
		X'07'	First check digit IBM Modulus 11. Check digit equals 11 minus remainder. Check digit of 10 equals error.
		X'08'	First check digit NCR Modulus 11. Check digit equals 11 minus remainder. Check digit of 10 equals error.
		X'09'	First check digit IBM Modulus 11. Check digit equals 11 minus remainder. Check digit of 10 equals error.
X'03'	UPC/CGPC Version A	X'00'	Generate check digit and Print standard symbol.
X'05'	UPC/CGPC Version E	X'00'	Print bar code. Six digits are encoded.
X'06'	UPC 2-Character Supplemental (Periodicals)	X'00'	Print the 2 supplemental digits (bar/space pattern and HRI).

Byte 16 Value	Bar Code Type	Byte 17 Value	Meaning
X'07'	UPC 5-Character Supplemental (Paperbacks)	X'00'	Print the 5 supplemental digits (bar/space pattern and HRI).
X'08'	EAN-8 (JAN Short)	X'00'	Print bar code symbol. Input variable data is 7 digits (2 flag and 5 article ID digits).
X'09'	EAN-13 (JAN Standard)	X'00'	Print bar code symbol. Input variable data is 12 digits (2 flag and 10 article ID digits).
X'0A'	2 of 5 Industrial	X'01'	Print bar code with no printer-generated check character.
		X'02'	Generate check character and print with bar code.
X'0B'	2 of 5 Matrix	X'01'	Print bar code with no printer-generated check character.
		X'02'	Generate check character and print with bar code.
X'0C'	Interleaved 2 of 5, AIM USS-I 2/5	X'01'	Print bar code with no printer-generated check character.
		X'02'	Generate check character and print with bar code.
X'0D'	Codabar, 2 of 7 Code, AIM USS-Codabar	X'01'	Print bar code with no printer-generated check character.
		X'02'	Generate check character and print with bar code (Check character appears in HRI).
X'11'	Code 128, AIM USS-128	X'02'	Generate check character and print with bar code.
		X'03'	Generate check character and print with bar code that supports UCC/EAN 128.
X'16	EAN 2 Digit Add-on	X'00'	Print the 2 digit add-on (bar/space pattern and HRI).
X'17'	EAN 5 Digit Add-on	X'00'	Print the 5 digit add-on (bar/space pattern and HRI).

Byte 16 Value	Bar Code Type	Byte 17 Value	Meaning
X'18'	POSTNET		USPS Specification
		X'00'	Print 5 digit POSTNET 'Zip Code' bar code with leading frame bar and trailing correction digit and frame.
		X'01'	Print 9 digit POSTNET 'Zip + 4' bar code with leading frame bar and trailing correction digit and frame.
		X'02'	Print 11 digit POSTNET 'ABC' bar code with leading frame bar and trailing correction digit and frame.
		X'03'	Print variable length data POSTNET bar code with leading frame bar and trailing correction digit and frame. Data length checking is not performed with modifier X'03'.
		X'04'	Print PLANET bar code symbology.
X'1A'	RM4SCC (Royal Mail 4 State Customer Code)	X'00'	Variable Length Data. Printer will generate Start bit, Checksum Character and Stop bit. Checksum algorithm is performed on the data characters only. User is responsible for 2 mm quiet zone (all around) and proper sequencing of the Postal Code data (including International Prefix, Outward Code, Inward Code and Delivery Point Suffix).
X'1A'	RM4SCC (Dutch KIX Postal Bar Code)	X'01'	Present a RM4SCC bar code symbol with NO Start bit, NO Checksum Character and NO Stop bit. Checksum algorithm is performed on the data characters only. User is responsible for 2 mm quiet zone (all around) and proper sequencing of the Postal Code data (including International Prefix, Outward Code, Inward Code and Delivery Point Suffix).

Byte 16 Value	Bar Code Type	Byte 17 Value	Meaning
X'1B'	Japan Postal Bar Code	X'00'	Present a Japan Postal Bar Code symbol with a generated start character, checksum character and stop character.
		X'01'	Present a Japan Postal Bar Code symbol directly from the bar code data.
X'1C'	Data Matrix 2D	X'00'	Present a Data Matrix Bar Code symbol.
X'1D'	MaxiCode 2D	X'00'	Present a MaxiCode Bar Code symbol.
X'1E'	PDF417 2D	X'00'	Present a "full" PDF417 Bar Code symbol.
		X'01'	Present a "truncated" PDF417 Bar Code symbol.

Byte 16 Value	Bar Code Type	Byte 17 Value	Meaning
X'1F'	Australia Post	X'01'	Standard Customer Bar Code (Format Code 11) - An 8 digit number representing the Sorting Code.
		X'02'	Customer Bar Code 2 using Table N (Format Code 59) An 8 digit number representing the Sorting Code, followed by up to 8 numeric digits representing the Customer Information.
		X'03'	Customer Bar Code 2 using Table C (Format Code 59) An 8 digit number representing the Sorting Code, followed by up to 5 characters (A-Z, az, 0-9, space, #) representing the Customer Information.
		X'04'	Customer Bar Code 2 using proprietary encoding (Format Code 59) - An 8 digit number representing the Sorting Code, followed by up to 16 numeric digits (0-3) representing the Customer Information. Each of the 16 digits specify one of the 4 types of bar code.
		X'05'	Customer Bar Code 3 using Table N (Format Code 62) An 8 digit number representing the Sorting Code, followed by up to 15 numeric digits representing the Customer Information.
		X'06'	Customer Bar Code 3 using Table C (Format Code 62) An 8 digit number representing the Sorting Code, followed by up to 10 characters (A-Z, a-z, 0-9, space, #) representing the Customer Information.
		X'07'	Customer Bar Code 3 using proprietary encoding (Format Code 62) - An 8 digit number representing the Sorting Code, followed by up to 31 numeric digits (0-3) representing the Customer Information. Each of the 31 digits specify one of the 4 types of bar code.
		X'08'	Reply Paid Bar Code (Format Code 45) - An 8 digit number representing the Sorting Code.

Byte 16 Value	Bar Code Type	Byte 17 Value	Meaning
X'20'	QR Code 2D	X'02'	Present a model 2 QR Code bar code symbol.
X'21'	Code 93	X'02'	Present a Code 93 bar code symbol.
X'22'	USPS Four State		USPS Specification
		X'00'	Present a USPS Four-State bar code symbol with no Routing ZIP Code. The input data for this bar code symbol must be 20 numeric digits.
		X'01'	Present a USPS Four-State bar code symbol with a 5-digit Routing ZIP Code. The input data for this bar code symbol must be 25 numeric digits. The valid values for the Routing Zip Code are 00000-99999.
		X'02'	Present a USPS Four-State bar code symbol with a 9-digit Routing ZIP Code. The input data for this bar code symbol must be 29 numeric digits. The valid values for the Routing Zip Code are 000000000- 999999999.
		X'03'	Present a USPS Four-State bar code symbol with an 11 digit Routing ZIP Code. The input data for this bar code symbol must be 31 numeric digits. The valid values for the Routing Zip Code are 00000000000- 99999999999.

## Write Bar Code

Offset	Range	Meaning	Error Code
0		FLAGS	
	Bit 0	HRI PRINTING (Not supported for postal bar code types)	
	0	Print HRI	X'0410..00'
	1	No HRI	
	Bits 1-2	HRI LOCATION	
	00	Printer Default (Below symbol)	
	01	Below symbol (Except UPC/EAN with 2 or 5 digit add-on)	
	10	Above symbol (UPC/EAN with 2 or 5 digit add-on only)	
	Bit 3	START/STOP HRI for 3 of 9 Code (Asterisk)	
	0	Do not print HRI for 3 of 9 Start/Stop pattern	
	1	Print HRI for 3 of 9 Start/Stop pattern	
	Bit 4	CODE PAGE TYPE (Ignore)	
	Bit 5	BAR CODE SUPPRESSION	
	0	Present the bar code symbol	
	1	Suppress presentation of the bar code symbol	
	Bit 6		
Bit 7			
1-2	X'0001' - X'7FFF'	X COORDINATE of the symbol ORIGIN See "Notation Conventions", IPDS Technical Reference 1.	X'040A..00'
3-4	X'0001' - X'7FFF'	Y COORDINATE of the symbol ORIGIN See "Notation Conventions", IPDS Technical Reference 1.	X'040A..00'



---

Offset	Range	Meaning	Error Code
5-End		DATA to be bar encoded	X'040C.. 00'



# 7. Overlay Command Set

---

## Overlay Function Set Commands

Name	Command	Sub-command	Where to Look
Begin Overlay	X'D6DF'		Intelligent Printer Data Stream Reference
Deactivate Overlay	X'D6EF'		Intelligent Printer Data Stream Reference
Include Overlay	X'D67D'		Intelligent Printer Data Stream Reference



# 8. Page Segment Command Set

## Page Segment Function Set Commands

Name	Command	Sub-command	Where to Look
Begin Page Segment	X'D65F'		Intelligent Printer Data Stream Reference
Deactivate Page Segment	X'D66F'		Intelligent Printer Data Stream Reference
Include Page Segment	X'D67F'		Intelligent Printer Data Stream Reference



# 9. Object Container Command Set

## Object Container Function Set Commands

Name	Command	Sub-command	Where to Look
Write Object Container Control	X'D63C'		Intelligent Printer Data Stream Reference
Write Object Container	X'D64C'		Intelligent Printer Data Stream Reference
Deactivate Data-Object-Font	X'D65B'		Intelligent Printer Data Stream Reference
Deactivate Data-Object-Resource	X'D65C'		Intelligent Printer Data Stream Reference
Data-Object-Resource Equivalence	X'D66C'		Intelligent Printer Data Stream Reference
Include Data-Object	X'D67C'		Intelligent Printer Data Stream Reference

**Note**

- For specific details on the Object Container Command Set, see the Intelligent Printer Data Stream Reference, S544-3417.





# 10. Loaded Font Command Set

## Loaded Font Function Set Commands

Name	Command	Sub-command	Where to Look
Load Code Page	X'D61B'		p.211 "Load Code Page"
Load Code Page Control	X'D61A'		p.212 "Load Code Page Control"
Load Font	X'D62F'		p.214 "Load Font"
Load Font Character Set Control	X'D619'		p.216 "Load Font Character Set Control"
Load Font Control	X'D61F'		p.217 "Load Font Control"
Load Font Index	X'D60F'		p.222 "Load Font Index"

### Load Code Page

This command assigns each code point of a code page to a specific Graphic Character Global ID (GCGID). One or more Load Code Page (LCP) commands follow the Load Code Page Control command.

A sequence of LCP commands are used to transmit the entire code page. This sequence is initiated by the first LCP command that contains data and terminates with an End command. Entries may be split across LCP commands on any byte boundary and are restricted in size by the standard IPDS 32767 byte command length limit.

Offset	Range	Meaning	Error Code
0-7	(8 Bytes)	GRAPHIC CHARACTER GLOBAL ID	

Offset	Range	Meaning	Error Code
8	Bit 0: 0/1	PROCESSING FLAGS	
	Bit 1: 0/1	Defined/Undefined	
	Bit 2: 0/1	Defined/Undefined	
	Bits 3-7	Incrementing/Nonincrementing Reserved	
9-n		CODE POINT	X'02B0..0 7'

## Load Code Page Control

This command describes a code page resource which will be used to carry code page data. The Load Code Page Control (LCPC) command is followed by one or more Load Code Page (LCP) commands that specify the code page data.

The LCPC command is valid only in Home State and causes a transition to Code Page State. Code Page State ends when the printer receives the End command following receipt of at least one LCP command.

Offset	Range	Meaning	Error Code
0-1	X'0001' - X'7EFF'	CODE PAGE HOST ASSIGNED ID	X'02B0..0 0' X'02B0..0 1'
2-3		ENCODING SCHEME	X'02B0..0 2'
	Bits 0-3: 0000	Reserved	
		Number of Bytes	
	Bits 4-7: 0001	Fixed Single-byte	
	Bits 4-7: 0010	Fixed Double-byte	
	Bits 8-15: 0000000 0	Reserved	

Offset	Range	Meaning	Error Code
4-7	X'000000 0A'- X'FFFFFFF'	BYTE COUNT for subsequent LCP commands	X'02B0..0 4' X'02B0..0 5'
8-9	X'0000'	Reserved	
10-n		VARIABLE SPACE CODE POINT	
	X'nn'	SBCS	
	X'nnnn'	DBCS	
n+1 to n +2		GCSGID	
	X'0000'	No Value Supplied	
	X'0001' - X'FFFE'	Specific GCSGID	
	X'FFFF'	Use Default	
n+3 to n +4	X'0001' - X'FFFE'	CPGID Specific CPGID	
n+5 to n +12		GCGID	
	X'nnnnnnn nnnnnnnnn '	Default GCGID	

Offset	Range	Meaning	Error Code
n+13		GCGID PROCESSING FLAGS	
	Bit 0: 0	Defined	
	Bit 0: 1	Undefined	
	Bit 1: 0	Printing	
	Bit 1: 1	Nonprinting	
	Bit 2: 0	Incrementing	
	Bit 2: 1	Nonincrementing	
	Bit 3: 0	Reserved	
	Bit 4: 0	Retired	
	Bit 4: 1	Retired	
	Bit 5 - 7: 0000	Reserved	

### ↓ Note

- If the code point specified in VARIABLE SPACE CODE POINT is not contained in the associated font character set, the printer will use a character increment of 333 relative units for typographic and proportionally spaced fonts and 600 relative units for fixed pitch, uniform character increment fonts.
- GCSGID/CPGID will be used for CMAP matching (DBCS), in all other instances they will be ignored.

## Load Font

### LF1 Format

When downloading a fully described font (LF1 format), the Load Font (LF) carries a series of character raster pattern bit strings. Consecutive Load Font commands are supported for downloading the LF1 font character patterns.

Offset	Range	Meaning	Error Code
0-n	Any Value in conformance with LFC Font Byte Count	FONT DATA in LF1 FORMAT (Character Patterns)	X'022E..02' X'0232..02'

### LF3 Format

When downloading a font character set (LF3 format), the LF consists of a character ID map followed by zero or more (technology specific) Adobe Type-1 PFB objects. Consecutive LF commands are supported for downloading the LF3 font data.

#### Character ID Map

Offset	Range	Meaning	Error Code
0	X'02'	IBM CHARACTER ID FORMAT (IBM Registered EBCDIC GCGID)	
1	X'03' X'04'	TECHNOLOGY SPECIFIC CHARACTER ID FORMAT Font-specific ASCII Character name used with Type-1 PFB fonts ASCII numeric Glyph ID (used with Adobe Composite fonts) ASCII numeric Glyph ID (used with Adobe Composite fonts)	
Zero or more entries in the following format			
+0-7		IBM CHARACTER ID (GCGID)	X'02B1..04'
+8-11		OFFSET into the following list of Adobe Type-1 Character ID entries (each GCGID maps to exactly one Adobe Type-1 Character ID)	
Zero or more Adobe Type-1 Character ID entries in the following			
++0	X'02'- X'80'	LENGTH of Adobe Type-1 Character ID entry (including this field)	X'02B1..03'
+1-n		ADOBE Type-1 CHARACTER ID	

### Technology Specific Font Objects

The technology specific LF3 font object supported is a form of Adobe Type-1 PFB file. Each PFB object contains the following information.

Offset	Range	Meaning	Error Code
0-3	X'0000000 A' - X'FFFFFFF'	LENGTH of Adobe Type-1 PFB file (including this field)	X'02B1..0 8'
4-7		CHECKSUM	X'02B1..0 9'
8-9	X'0002' - X'FFFF'	LENGTH of Adobe PFB object NAME	X'02B1..0 A
10-n		Adobe PFB Object NAME	
(n+1)-z		OBJECT DATA for Adobe Type-1 PFB fonts (PFB file)	

### Load Font Character Set Control

This command provides control information for each font character set that the host downloads to the printer. The command is only used for LF-3 type coded fonts. The LFCSC command is followed by one or more Load Font commands that contain the actual font character set information. This command is valid only in home state and causes a transition to font state. Font state ends when the printer receives the End command following receipt of at least one LF command.

10

Offset	Range	Meaning	Error Code
0-1	X'0001' - X'7EFF'	FONT CHARACTER SET HAID	X'02B0..0 A'  X'02B0..0 B'
2-3	X'0000'	Reserved	
4		PATTERN TECHNOLOGY ID	
	X'1F'	Type 1 PFB	
5	X'00'	Adobe PFB Object NAME	

Offset	Range	Meaning	Error Code
6		INTENDED USE FLAGS	X'02B2..04'
	Bit 0: 0/1	Not intended for MICR printing/Intended for MICR printing (If MICR Installed)	X'02B2..01'
	Bit 1: 0/1	This is NOT a FCS extension/This IS a FCS extension	X'02B2..02'
	Bits 2-7: 000000	Reserved	
7-10	X'00000002' - X'FFFFFFFF'	NUMBER of BYTES in the LOAD FONT COMMANDS	X'022E..02' X'0232..02' X'02B0..0E'
11-14	X'00000002' - X'FFFFFFFF'	NUMBER of BYTES in the CHARACTER ID MAP	X'02B0..0F'
15-16	X'hnnn'	NUMBER of GCGIDs in the CHARACTER ID MAP	
17-18		GCSGID	
	X'0000'	No Value Supplied	
	X'0001' - X'FFFE'	Specific GCSGID	
	X'FFFF'	Use Default	
19-20		FGID	
	X'0001' - X'FFFE'	Specific FGID	

12

## Load Font Control

This command is  $40 + (8 \times n)$  bytes long, where  $n$  (4090 max) is the number of font characters that have associated raster patterns. The command contains font id, overall font characteristics, and the

information needed to parse the font raster patterns. There is only one Load Font Control command for each font or font section. This command can only be issued in Home State and causes a transition to Font State.

Offset	Range	Meaning	Error Code
0-1	X'0001'- X'7EFF'	FONT HOST ASSIGNED ID	X'0218..0 2'  X'0239..0 2'
2		SECTION ID	X'0243..0 2'
	X'00'	Single-byte fonts	
	X'41'-X'FE'	Double-byte font sections	
3	X'00'	Reserved (Font-index Format)	X'0221..0 2'
4	X'05'	Pattern Data Format (bounded box)	X'0222..0 2'
5		FONT TYPE BITS	X'0223..0 2'
	Bits 0-1: 00	Reserved	
	Bits 2-3: 01/10	FONT TYPE: Single-byte/Double-byte	
	Bits 4-5: 00	Reserved	
	Bit 6: 1/0	CHARACTER BOX SIZE: Uniform size (see bytes 6-7)/ Individual size (see bytes 40-End)	
	Bit 7: 0	Reserved	
6-7	X'0001' - X'7FFF'	UNIFORM or MAXIMUM CHARACTER BOX X SIZE	X'0226..0 2'
8-9	X'0001' - X'7FFF'	UNIFORM or MAXIMUM CHARACTER BOX Y SIZE	X'0227..0 2'
10		UNIT BASE for L-units	X'021B.. 02'
	X'00'	Ten in. (fixed metric technology)	
	X'02'	Relative units (relative metric technology)	



Offset	Range	Meaning	Error Code
11	X'00'	Reserved	
12-13		L-units per UNIT BASE in the X direction Byte 10 = X'02'	X'022A.. 02'
	X'03E8'	1000 Byte 10 = X'00'	
	X'0960'	2400 (240 DPI)	
	X'0BB8'	3000 (300 DPI)	
	X'1770'	6000 (600 DPI)	
14-15		L-units per UNIT BASE in the Y direction Byte 10 = X'02'	X'022B.. 02'
	X'03E8'	1000 Byte 10 = X'00'	
	X'0960'	2400 (240 DPI)	
	X'0BB8'	3000 (300 DPI)	
	X'1770'	6000 (600 DPI)	
16-17	X'0000'	Reserved	
18-20	X'000001' - X'7FFFFFF'	FONT BYTE COUNT	X'021C.. 02'
21		CHARACTER DATA ALIGNMENT	X'022D.. 02'
	X'01'	Starting address 1 byte aligned	
	X'04'	Starting address 4 byte aligned	
	X'08'	Starting address 8 byte aligned	
22-23	X'nnnn'	GCSGID (ignored)	
24-25	X'nnnn'	CPGID (ignored)	
26	X'00'	UNIT BASE for PIXEL-Units Ten in.	X'0287..0 2'

Offset	Range	Meaning	Error Code
27	X'00'	Reserved	
28-29		PIXEL-Units per UNIT BASE in the X direction (only applicable if byte 10 = x'02')	X'0288..02'
	X'0960'	2400 Units per 10 in. (240 dpi)	
	X'0BB8'	3000 Units per 10 in. (300 dpi)	
	X'1770'	6000 Units per 10 in. (600 dpi)	
30-31		PIXEL-Units per UNIT BASE in the Y direction (only applicable if byte 10 = x'02')	X'0289..02'
	X'0960'	2400 Units per 10 in. (240 dpi)	
	X'0BB8'	3000 Units per 10 in. (300 dpi)	
	X'1770'	6000 Units per 10 in. (600 dpi)	
32-33	X'0001' - X'7FFF'	RELATIVE METRIC MULTIPLYING FACTOR	X'028A..02'
34-35	X'nnnn'	FGID (ignored)	
36		STAGEABILITY	X'0220..02'
	X'01'	Font is not stageable (retired)	
37	Bit 0: 0/1	INTENDED USE FLAGS: Not intended for MICR printing/ Intended for MICR printing (If MICR Installed)	
	Bits 1-7: 0000000	Reserved	
38-39	X'nnnn'	Font width (ignored)	
40-n		Zero or more CHARACTER PATTERN DESCRIPTORS in the following format	
+ 0-1 bytes	X'0000' - X'7FFF'	CHARACTER BOX X SIZE	X'0226..02'
+ 2-3 bytes	X'0000' - X'7FFF'	CHARACTER BOX Y SIZE	X'0227..02'

---

Offset	Range	Meaning	Error Code
+ 4-7 bytes	X'00000000' - X'007FFFFE'	CHARACTER PATTERN ADDRESS	X'023E.. 02'

## Load Font Index

This command is  $32 + (256 \times 16)$  (the  $(256 \times 16)$  byte field is not always required) bytes long. It contains general information needed to print the patterns and a description of the characteristics of each of the 256 possible code points. Each font can have from one to four associated font indices.

Each index is loaded by a separate Load Font Index command. This command can only be issued in Home State.

Offset	Range	Meaning	Error Code
0-1	X'0001'- X'7EFF'	FONT HOST ASSIGNED ID (HAID)	X'0218..0 2'
2		SECTION ID	X'0243..0 2'
	X'00'	Single byte	
	X'41'-X'FE'	Double-byte section	
3		FLAGS	
	Bit 0: 0/1	VARIABLE SPACE: Disabled/Enabled	
	Bits 1-7: 0000000	Reserved	
4-5		FONT INLINE SEQUENCE	X'0240..0 2' X'0246..0 2'
	X'0000'	0 degrees	
	X'2D00'	90 degrees	
	X'5A00'	180 degrees	
	X'8700'	270 degrees	
6-7	X'0000'	Reserved	
8-9	X'8000' - X'7FFF'	UNIFORM or MAXIMUM BASELINE OFFSET	X'023C.. 02'
10-11	X'8000' - X'7FFF'	UNIFORM or MAXIMUM CHARACTER INCREMENT	X'023C.. 02'
12-13	X'0000'	Reserved	

Offset	Range	Meaning	Error Code
14-15	X'0000' - X'7FFF'	MAXIMUM BASELINE EXTENT	
16		ORIENTATION FLAGS	
	Bits 0-4: 00000	Reserved	
	Bit 5: 1/0	UNIFORM A-SPACE: Bytes 18, 19 specify uniform value/ Bytes 18, 19 specify minimum value A-space for each character is in the character index entry	
	Bit 6: 1/0	UNIFORM BASELINE OFFSET: Bytes 8, 9 specify uniform baseline offset/Bytes 8, 9 specify minimum baseline offset (Baseline offset for each character is in the character index entry)	
	Bit 7: 1/0	UNIFORM CHARACTER INCREMENT: Bytes 10, 11 specify uniform character increment/Bytes 10, 11 specify minimum character increment (Character increment for each character is in the character index entry)	
17	X'00'	Reserved	
18-19	X'8000' - X'7FFF'	UNIFORM or MINIMUM A-SPACE	X'023C..02'
20-21	X'0000' - X'FFFF'		
22-23	X'8000' - X'7FFF'		
24-25	X'0000'	RECOMMENDED UNDERSCORE WIDTH	X'023C..02'
	X'0001' - X'7FFF'	No recommendation Underscore width in L-units	
26-27	X'8000' - X'7FFF'	RECOMMENDED UNDERSCORE POSITION (L-units)	
28-31	X'00000000'	Reserved	

Offset	Range	Meaning	Error Code
32-4127			
+ 0-1 bytes		CHARACTER FLAGS	
	X'0000'	Defined, printing, incrementing	
	X'2000'	Defined, printing, non-incrementing	
	X'4000'	Defined, non-printing, incrementing	
	X'6000'	Defined, non-printing, non-incrementing	
	X'8000'	Undefined, printing, incrementing	
	X'A000'	Undefined, printing, non-incrementing	
	X'C000'	Undefined, non-printing, incrementing	X'023C..02'
	X'E000'	Undefined, non-printing, non-incrementing	X'023C..02'
+ 2-3 bytes	X'0000' - X'xxxx'	PATTERN INDEX	
+ 4-5 bytes	X'8000' - X'7FFF'	CHARACTER INCREMENT	
+ 6-7 bytes	X'8000' - X'7FFF'	A-SPACE	X'023C..02'
+ 8-13 bytes	X'000000 - 000000'	Reserved	
+ 14-15 bytes	X'8000' - X'7FFF'	BASELINE OFFSET	

# 11. Appendix

---

## Trademarks

Adobe, Acrobat, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

AFP/ADVANCED FUNCTION PRINTING, InfoPrint, IPDS and Intelligent Printer Data Stream are trademarks of Ricoh Co., Ltd.

IBM® is a trademark of International Business Machines Corporation in the United States, other countries, or both.

AIX®, Application System/400®, AS/400®, IBM®, OS/400®, Print Services Facility, PS/2®, and PSF are trademarks of International Business Machines Corporation in the United States, other countries, or both.

PCL® is a registered trademark of Hewlett-Packard Company.

Monotype is a registered trademark of Monotype Imaging, Inc.

Windows® is either registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.





# INDEX

## A

Acknowledgement Reply.....	10
Activate Resource.....	13
Audience.....	7

## B

Bar Code Area Position.....	186
Bar Code Commands.....	185
Bar Code Data Descriptor.....	188
Bar Code Output Control.....	187
Begin Image Content.....	156
Begin Page.....	22
Begin Segment.....	156
Begin Segment Introducer.....	170

## D

Deactivate Font.....	23
Device Control Command Set.....	9
Drawing Order Summary.....	182
Drawing Orders.....	170

## E

End.....	26
End Image Content.....	160
End Page.....	27
End Segment.....	160
Execute Order Any State.....	67
Execute Order Home State.....	77

## F

Finishing Fidelity Control.....	53
---------------------------------	----

## G

Graphics Area Position.....	161
Graphics Commands.....	161
Graphics Data Descriptor.....	164
Graphics Output Control.....	162
Group ID Triplet.....	111, 113

## I

IM Image Commands.....	143
Image Area Position.....	150
Image Data.....	159
Image Data Descriptor.....	153

Image Data Element Size Parameter.....	157, 158
Image Look-up Table ID Parameter.....	159
Image Output Control.....	151
Image Size Parameter.....	156
IO Image Commands.....	149

## L

Load Code Page.....	211
Load Code Page Control.....	212
Load Copy Control.....	28
Load Equivalence.....	121
Load Font.....	214
Load Font Character Set Control.....	216
Load Font Control.....	217
Load Font Equivalence.....	41
Load Font Index.....	222
Loaded Font Function Set Commands.....	211
Logical Page Descriptor.....	45
Logical Page Position.....	50

## M

Media Source and Destination Support Matrices. . .	30
--	----

## N

Notice.....	5
-------------	---

## O

Overlay Function Set Commands.....	205
------------------------------------	-----

## P

Page Segment Function Set Commands.....	207
Presentation Fidelity Control.....	52
Presentation Text Commands.....	121
Printable Area Self-Defining Field.....	77

## S

Sense Type and Model.....	54
Set Process Color.....	179
Symbols.....	6

## T

Temporary Baseline Move.....	138
Terminology.....	7
Text Fidelity Control.....	52

---

Trademarks.....225

## W

---

Write Bar Code.....202

Write Bar Code Control.....186

Write Graphics.....169

Write Graphics Control.....161

Write Graphics Defaults.....169

Write Image.....148

Write Image 2.....156

Write Image Control.....144

Write Image Control 2.....150

Write Text.....121

## X

---

XOA.....67

XOA Exception Handling Control.....67

XOA Mark Form.....67

XOA Request Resource List.....69

XOH.....77

XOH Define Group Boundary.....110

XOH Obtain Printer Characteristics.....77

XOH Page Counter Control.....110

XOH Select Input Media Source.....107

XOH Set Media Origin.....108

XOH Set Media Size.....109

XOH Specify Group Operation.....119







# Operating Instructions

## Security Guide



# TABLE OF CONTENTS

---

Functions That Require Options.....	8
Main Software Products.....	9
<b>1. Getting Started</b>	
Before Configuring the Security Function Settings.....	11
Before Using This Machine.....	12
Administrators.....	14
Configuring Administrator Authentication.....	15
Specifying Administrator Privileges.....	16
Registering and Changing Administrators.....	18
Using Web Image Monitor to Configure Administrator Authentication.....	21
Administrator Login Method.....	22
Logging in Using the Control Panel.....	22
Logging in Using Web Image Monitor.....	23
Administrator Logout Method.....	24
Logging out Using the Control Panel.....	24
Logging out Using Web Image Monitor.....	24
Supervisor.....	25
Resetting the Administrator's Password.....	25
Changing the Supervisor.....	26
<b>2. Configuring User Authentication</b>	
Users.....	29
About User Authentication.....	30
Configuring User Authentication.....	31
User Code Authentication.....	33
Specifying User Code Authentication.....	33
Basic Authentication.....	36
Specifying Basic Authentication.....	36
Authentication Information Stored in the Address Book.....	38
Specifying Login User Names and Passwords.....	38
Specifying Login Details.....	40
Windows Authentication.....	42
Specifying Windows Authentication.....	44
Installing Internet Information Services (IIS) and Certificate Services.....	48

---

Creating the Server Certificate.....	49
If the Fax Number Cannot be Obtained.....	50
LDAP Authentication.....	51
Specifying LDAP Authentication.....	52
Integration Server Authentication.....	57
Specifying Integration Server Authentication.....	57
Printer Job Authentication.....	63
Printer Job Authentication Levels.....	63
Printer Job Types.....	63
"authfree" Command.....	66
Auto Registration to the Address Book.....	67
Data Carry-over Setting for Address Book Auto-program.....	67
User Lockout Function.....	69
Specifying the User Lockout Function.....	70
Canceling Password Lockout.....	70
Auto Logout.....	71
Authentication Using an External Device.....	73
<b>3. Restricting Machine Usage</b>	
Restricting Usage of the Destination List.....	75
Restrict Use of Destinations / Restrict Adding of User Destinations.....	75
Preventing Changes to Administrator Settings.....	77
Prohibiting Users from Making Changes to Settings.....	77
Menu Protect.....	78
Specifying Menu Protect.....	78
Limiting Available Functions.....	80
Specifying Which Functions are Available.....	80
Restricting Media Slot Access.....	82
Managing Print Volume per User.....	84
Specifying Limitations for Print Volume.....	85
Specifying the Default Maximum Use Count.....	87
Specifying the Maximum Use Count per User.....	88
Checking Print Volume per User.....	90
Printing a List of Print Volume Use Counters.....	91



---

Clearing Print Volume Use Counters.....	92
Configuring the Auto-Reset Function.....	94
<b>4. Preventing Leakage of Information from Machines</b>	
Protecting the Address Book.....	97
Specifying Address Book Access Permissions.....	97
Encrypting Data in the Address Book.....	99
Encrypting Data on the Hard Disk.....	101
Enabling the Encryption Settings.....	103
Backing Up the Encryption Key.....	105
Updating the Encryption Key.....	106
Canceling Data Encryption.....	107
Deleting Data on the Hard Disk.....	108
Conditions for Use.....	108
Instructions for Use.....	108
Auto Erase Memory.....	109
Erase All Memory.....	113
<b>5. Enhanced Network Security</b>	
Access Control.....	117
Enabling and Disabling Protocols.....	118
Enabling and Disabling Protocols Using the Control Panel.....	124
Enabling and Disabling Protocols Using Web Image Monitor.....	125
Specifying Network Security Level.....	126
Specifying Network Security Level Using the Control Panel.....	126
Specifying Network Security Level Using Web Image Monitor.....	127
Status of Functions under Each Network Security Level.....	128
Protecting the Communication Path via a Device Certificate.....	131
Creating and Installing a Device Certificate from the Control Panel (Self-Signed Certificate).....	131
Creating and Installing a Device Certificate from Web Image Monitor (Self-Signed Certificate).....	132
Creating the Device Certificate (Issued by a Certificate Authority).....	133
Installing the Device Certificate (Issued by a Certificate Authority).....	134
Installing an Intermediate Certificate (Issued by a Certificate Authority).....	135
Configuring SSL/TLS.....	136
Enabling SSL/TLS.....	137

---

User Setting for SSL/TLS.....	138
Setting the SSL/TLS Encryption Mode.....	139
Enabling SSL for SMTP Connections.....	140
Configuring S/MIME.....	142
E-mail Encryption.....	142
Attaching an Electronic Signature.....	144
Specifying Checking of the Certificate Valid Period.....	146
Configuring PDFs with Electronic Signatures.....	148
Selecting the Device Certificate.....	148
Configuring IPsec.....	149
Encryption and Authentication by IPsec.....	149
Encryption Key Auto Exchange Settings and Encryption Key Manual Settings.....	150
IPsec Settings.....	151
Encryption Key Auto Exchange Settings Configuration Flow.....	160
Encryption Key Manual Settings Configuration Flow.....	164
telnet Setting Commands.....	165
Configuring IEEE 802.1X Authentication.....	173
Installing a Site Certificate.....	173
Selecting the Device Certificate.....	174
Setting Items of IEEE 802.1X for Ethernet.....	174
Setting Items of IEEE 802.1X for Wireless LAN.....	176
SNMPv3 Encryption.....	178
Encrypting Transmitted Passwords.....	180
Specifying a Driver Encryption Key.....	180
Specifying an IPP Authentication Password.....	181
Kerberos Authentication Encryption Setting.....	183
<b>6. Preventing the Leaking of Documents</b>	
Configuring Access Permissions for Stored Files.....	185
Configuring Access Permission for Each Stored File.....	186
Changing the Owner of a Document.....	189
Configuring Access Permission for Each User for Stored Files.....	190
Specifying Passwords for Stored Files.....	192
Unlocking Stored Files.....	193

---

Unauthorized Copy Prevention / Data Security for Copying.....	195
Enabling Pattern Printing.....	195
Enabling Data Security for Copying.....	197
Printing User Information on Paper.....	198
Managing Locked Print Files.....	201
Deleting Locked Print Files.....	201
Changing the Password of a Locked Print File.....	203
Unlocking a Locked Print File.....	204
Enforced Storage of Documents to be Printed on a Printer.....	206

## 7. Managing the Machine

---

Managing Log Files.....	207
Managing Logs from the Machine.....	207
Managing Logs from the Log Collection Server.....	209
Using Web Image Monitor to Manage Log Files.....	209
Logs That Can Be Managed Using Web Image Monitor.....	216
Customizing the Control Panel.....	247
Configuring the Home Screen for Individual Users.....	247
Configuring the Browser Functions.....	249
Precautions for Using the Browser Function.....	249
Changing the Browser Settings.....	249
Restricting User Browser Functions.....	251
Checking the Usage Status of the Browser Functions.....	252
Troubleshooting.....	252
Managing Device Information.....	253
Exporting Device Information.....	254
Importing Device Information.....	255
Periodically Importing Device Information.....	256
Manually Importing the Device Setting Information File of a Server.....	258
Managing Eco-friendly Counter.....	259
Configuring the Display of Eco-friendly Counters.....	259
Clearing a Machine's Eco-friendly Counter.....	260
Clearing the Eco-friendly Counter by User.....	260
Specifying the Extended Security Functions.....	261

---

Extended Security Function Settings.....	261
Other Security Functions.....	269
Fax Function.....	269
Scanner Function.....	270
System Status.....	270
Confirming Firmware Validity.....	270
Limiting Machine Operations to Customers Only.....	271
Settings.....	271
Additional Information for Enhanced Security.....	273
Settings You Can Configure Using the Control Panel.....	273
Settings You Can Configure Using Web Image Monitor.....	275
Settings You Can Configure When IPsec Is Available/Unavailable.....	276

## 8. Troubleshooting

---

If Authentication Fails.....	279
If a Message is Displayed.....	279
If an Error Code is Displayed.....	281
If the Machine Cannot Be Operated.....	297

## 9. Checking Operation Privileges

---

List of Operation Privileges for Settings.....	305
System Settings.....	307
Edit Home.....	317
Maintenance.....	318
Copier / Document Server Features.....	319
Facsimile Features.....	325
Printer Functions.....	328
Printer Features.....	329
Scanner Features.....	333
Browser Features.....	335
Extended Feature Settings.....	336
Web Image Monitor: Display Eco-friendly Counter.....	337
Web Image Monitor: Job.....	338
Web Image Monitor: Device Settings.....	340
Web Image Monitor: Printer.....	349

---

Web Image Monitor: Fax.....	353
Web Image Monitor: Scanner.....	355
Web Image Monitor: Interface.....	358
Web Image Monitor: Network.....	360
Web Image Monitor: Security.....	364
Web Image Monitor: @Remote.....	365
Web Image Monitor: Webpage.....	366
Web Image Monitor: Extended Feature Settings.....	367
Web Image Monitor: Address Book.....	368
Web Image Monitor: Reset Printer Job.....	369
Web Image Monitor: Reset the Machine.....	370
Web Image Monitor: Device Home Management.....	371
Web Image Monitor: Customize Screen per User.....	372
Web Image Monitor: Document Server.....	373
Web Image Monitor: Fax Received File.....	374
Web Image Monitor: Printer: Print Jobs.....	375
List of Operation Privileges for Stored Files.....	376
List of Operation Privileges for Address Books.....	378
Trademarks.....	382
<b>INDEX</b> .....	385

---

# Functions That Require Options

The following functions require certain options and additional functions.

- Data security for copying function

Copy Data Security Unit

---

## Main Software Products

Product name	Names in the text
DeskTopBinder Lite and DeskTopBinder Professional <sup>*1</sup>	DeskTopBinder
ScanRouter EX Professional <sup>*1</sup> and ScanRouter EX Enterprise <sup>*1</sup>	the ScanRouter delivery software
Remote Communication Gate S Pro for @Remote Enterprise <sup>*2</sup> and Remote Communication Gate S <sup>*2</sup>	Remote Communication Gate S

\*1 This product is no longer sold.

\*2 Sold separately.





# 1. Getting Started

This chapter describes the precautions to take when using the machine's security features and how to configure the administrator settings.

## Before Configuring the Security Function Settings


### ★ Important

- **If the security settings are not configured, the data in the machine is vulnerable to attack.**
  1. To prevent this machine being stolen or willfully damaged, etc., install it in a secure location.
  2. Purchasers of this machine must make sure that people who use it do so appropriately, in accordance with operations determined by the machine administrator and supervisor. If the administrator or supervisor does not make the required security settings, there is a risk of security breaches by users.
  3. Before setting this machine's security features and to ensure appropriate operation by users, administrators must read the Security Guide completely and thoroughly, paying particular attention to the section entitled "Before Using the Security Functions".
  4. Administrators must inform users regarding proper usage of the security functions.
  5. Administrators should routinely examine the machine's logs to check for irregular and unusual events.
  6. If this machine is connected to a network, its environment must be protected by a firewall or similar.
  7. For protection of data during the communication stage, apply the machine's communication security functions and connect it to devices that support security functions such as encrypted communication.

# Before Using This Machine

This section explains how to enable encryption of transmitted data and configure the administrator account. If you want a high level of security, make the following setting before using the machine.

1. Turn the machine on.
2. Press the [User Tools/Counter] key.

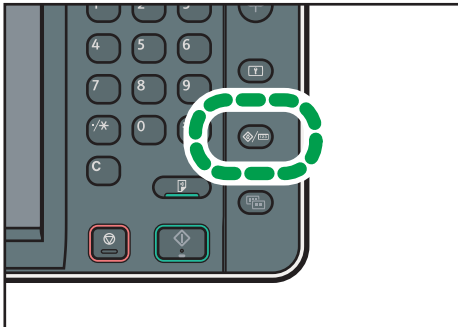

CJS039

3. Press [System Settings].
4. Press [Interface Settings].
5. Specify IPv4 Address.  
For details on how to specify the IPv4 address, see "Interface Settings", Connecting the Machine/System Settings.
6. Be sure to connect this machine to a network that only administrators can access.
7. Start Web Image Monitor, and then log in to the machine as the administrator.  
For details about logging in to Web Image Monitor as an administrator, see p.22 "Administrator Login Method".
8. Point to [Device Management], and then click [Configuration].
9. Click [E-mail] under "Device Settings".
10. Enter the e-mail address of the administrator of this machine in "Administrator E-mail Address" and click [OK].
11. Install the device certificate.

For information on how to install the device certificate, see p.131 "Protecting the Communication Path via a Device Certificate".

The settings for device certificate creation can be configured only if an administrator e-mail address is specified.

12. Enable SSL/TLS.

For details about enabling SSL/TLS, see p.136 "Configuring SSL/TLS".

**13. Change the administrator's user name and password.**

For details about specifying administrators' user names and passwords, see p.21 "Using Web Image Monitor to Configure Administrator Authentication".

**14. Log out and then close Web Image Monitor.****15. Disconnect this machine from the administrator-only access network, and then connect it to the general usage network environment.****↓ Note**

- To enable higher security, see p.273 "Additional Information for Enhanced Security"

# Administrators

1

Administrators manage user access to the machine and various other important functions and settings.

When an administrator controls limited access and settings, first select the machine's administrator and enable the authentication function before using the machine. When the authentication function is enabled, the login user name and login password are required in order to use the machine. The role of administrator for this machine is divided into four categories according to their function, user administrator, machine administrator, network administrator, and file administrator. Sharing administrator tasks eases the burden on individual administrators while at the same time limiting unauthorized operations by an administrator. Multiple administrator roles can be assigned to one administrator and one role can also be shared by more than one administrator. A supervisor can also be set up, who can then change the administrators' passwords.

Administrators cannot use functions such as copying and printing. To use these functions, the administrator must be authenticated as the user.

For instructions on registering the administrator, see p.18 "Registering and Changing Administrators", and for instructions on changing the administrator's password, see p.25 "Supervisor". For details on Users, see p.29 "Users".

## Important


- **If user authentication is not possible because of a problem with the hard disk or network, you can use the machine by accessing it using administrator authentication and disabling user authentication. Do this if, for instance, you need to use the machine urgently.**

# Configuring Administrator Authentication

Administrator authentication is a mechanism by which an administrator ID is confirmed via a login user name and password when an administrator starts to make the various settings of this machine or when accessing the machine from a network. When registering an administrator, you cannot use a login user name already registered in the Address Book. Administrators are handled differently from the users registered in the Address Book. Windows authentication, LDAP authentication and Integration Server Authentication are not performed for an administrator, so an administrator can log in even if the server is unreachable due to a network problem. Each administrator is identified by a login user name. One person can act as more than one type of administrator if multiple administrator privileges are granted to a single login user name. For instructions on registering the administrator, see p.18 "Registering and Changing Administrators".

You can specify the login user name, login password, and encryption password for each administrator. The encryption password is used for encrypting data transmitted via SNMPv3. It is also used by applications such as SmartDeviceMonitor for Admin that use SNMPv3. Administrators are limited to managing the machine's settings and controlling user access, so they cannot use functions such as copying and printing. To use these functions, the administrator must register as a user in the Address Book and then be authenticated as the user. Specify administrator authentication, and then specify user authentication. For details about specifying authentication, see p.31 "Configuring User Authentication".

### Roles of each administrator

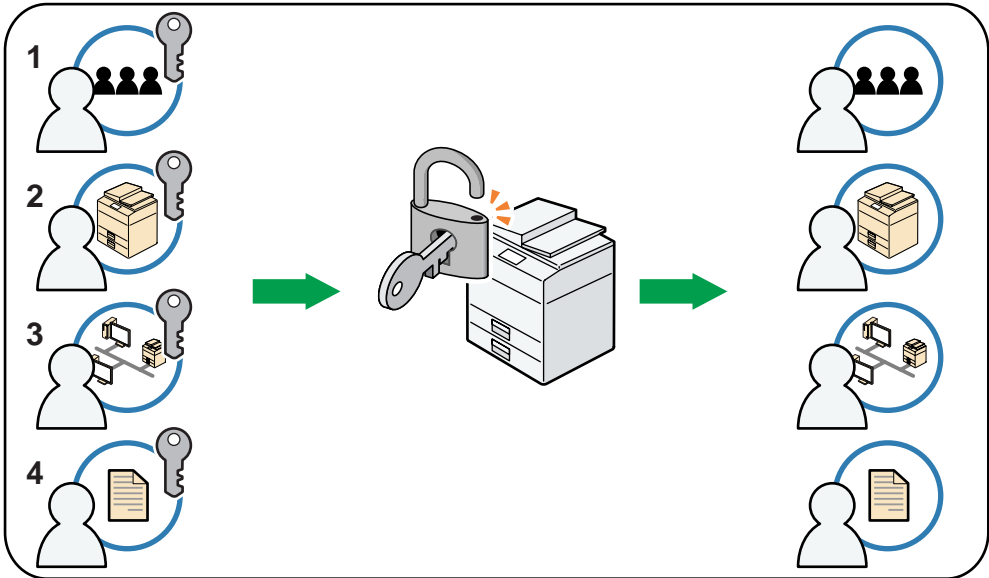

CJC009

#### 1. User administrator

This is the administrator who manages personal information in the Address Book.

A user administrator can register/delete users in the Address Book or change users' personal information.

Users registered in the Address Book can also change and delete their own information.

If any of the users forget their password, the user administrator can delete it and create a new one, allowing the user to access the machine again.

## 2. Machine administrator

This is the administrator who mainly manages the machine's default settings. You can set the machine so that the default for each function can only be specified by the machine administrator. By making this setting, you can prevent unauthorized people from changing the settings and allow the machine to be used securely by its many users.

## 3. Network administrator

This is the administrator who manages the network settings. You can set the machine so that network settings such as the IP address and settings for sending and receiving e-mail can only be specified by the network administrator.

By making this setting, you can prevent unauthorized users from changing the settings and disabling the machine, and thus ensure correct network operation.

## 4. File administrator

This is the administrator who manages permission to access stored files. You can specify passwords to allow only registered users with permission to view and edit files stored in Document Server. By making this setting, you can prevent data leaks and tampering due to unauthorized users viewing and using the registered data.

### Note

- Administrator authentication can also be specified via Web Image Monitor. For details, see Web Image Monitor Help.
- You can specify User Code Authentication without specifying administrator authentication.

---

## Specifying Administrator Privileges

---

To specify administrator authentication, set "Administrator Authentication Management" to [On]. Once settings are activated, the default setting items allocated to each administrator become controlled items.

To log in as an administrator, use the default login user name and login password.

The default login user name is "admin". No login password is configured.


For details about logging in and logging out with administrator authentication, see p.22 "Administrator Login Method" and p.24 "Administrator Logout Method".

### Important


- If you have enabled "Administrator Authentication Management", make sure not to forget the administrator login user name and login password. If an administrator login user name or login password is forgotten, a new password must be specified using the supervisor's privilege. For details on supervisor privileges, see p.25 "Supervisor".

- Be sure not to forget the supervisor login user name and login password. If you do forget them, a service representative will have to return the machine to its default state. This will result in all data in the machine being lost. Charges may also apply to the service call.

1. Press the [User Tools/Counter] key.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [Administrator Authentication Management].

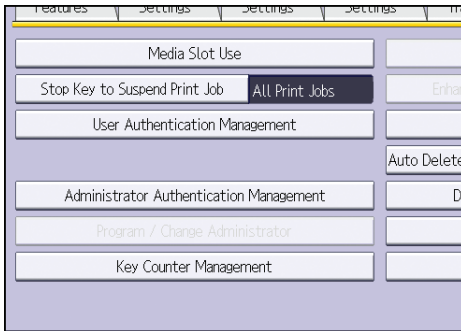


6. Press [User Management], [Machine Management], [Network Management], or [File Management] to select which settings to manage.

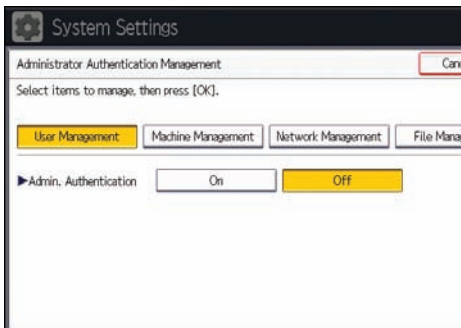

7. Set "Admin. Authentication" to [On].

"Available Settings" appears.

**8. Select the settings to manage from "Available Settings".**

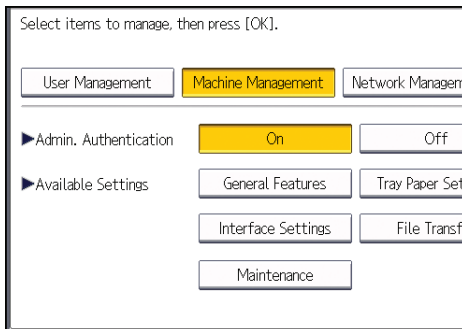

The selected settings will be unavailable to users.

"Available Settings" varies depending on the administrator.

To specify administrator authentication for more than one category, repeat steps 6 to 8.

**9. Press [OK].**

**10. Press the [User Tools/Counter] key.**

---

## Registering and Changing Administrators

---

If administrator authentication has been specified, we recommend only one person take each administrator role.


The sharing of administrator tasks eases the burden on individual administrators while also limiting unauthorized operation by a single administrator. You can register up to four login user names (Administrators 1-4) to which you can grant administrator privileges.

For details about logging in and logging out with administrator authentication, see p.22 "Administrator Login Method" and p.24 "Administrator Logout Method".

- 1. The administrator logs in from the control panel.**
- 2. Press [System Settings].**
- 3. Press [Administrator Tools].**
- 4. Press [▼Next].**




5. Press [Program / Change Administrator].

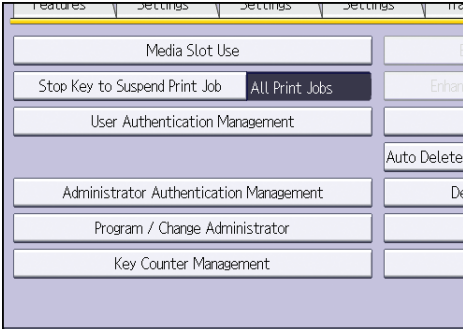


1

6. In the line for the administrator whose privilege you want to specify, press [Administrator 1], [Administrator 2], [Administrator 3] or [Administrator 4], and then press [Change].

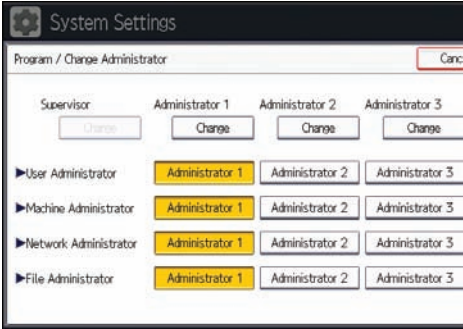


When allocating privileges for each administrators to one person each, select one administrator for each category as shown on the screens below.

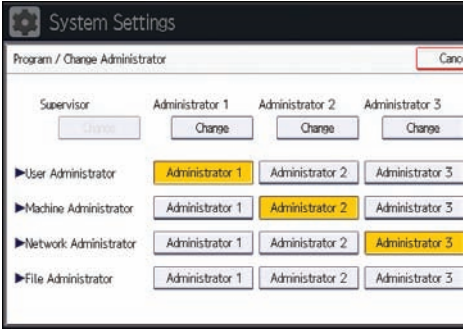

To combine the privileges of multiple administrators, assign multiple administrators to a single administrator.


For example, to assign machine administrator privilege and user administrator privilege to [Administrator 1], press [Administrator 1] in the lines for the machine administrator and the user administrator.

**7. Press [Change] for "Login User Name".**

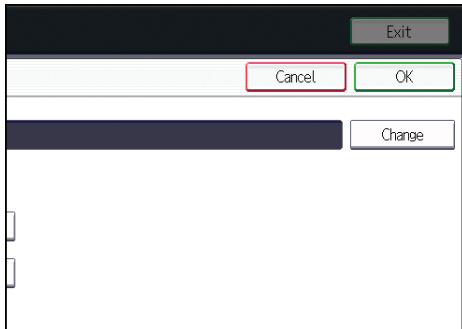

**8. Enter the login user name, and then press [OK].**

**9. Press [Change] for "Login Password".**

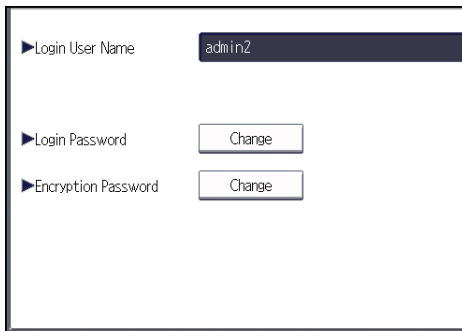

**10. Enter the login password, and then press [OK].**

Follow the password policy to make the login password more secure.

For details about the password policy and how to specify it, see p.261 "Specifying the Extended Security Functions".

**11. Re-enter the login password for confirmation, and then press [OK].**

**12. Press [Change] for "Encryption Password".**

**13. Enter the encryption password, and then press [OK].**

**14. Re-enter the encryption password for confirmation, and then press [OK].**

**15. Press [OK] twice.**

You will be automatically logged out.

**Note**

- For the characters that can be used for login user names and passwords, see p.21 "Usable characters for user names and passwords".
- An administrator's privileges can only be changed by an administrator with the relevant privileges.
- Administrator privileges cannot be revoked by any single administrator.

## Usable characters for user names and passwords

The following characters can be used for login user names and passwords. Names and passwords are case sensitive.

- Upper case letters: A to Z (26 characters)
- Lower case letters: a to z (26 characters)
- Numbers: 0 to 9 (10 characters)
- Symbols: (space) ! " # \$ % & ' ( ) \* + , - . / : ; < = > ? @ [ \ ] ^ \_ ` { | } ~ (33 characters)

### Login user name

- Spaces, colons, and quotation marks cannot be used.
- Cannot have blanks or only numbers.
- May be up to 32 characters long.

### Login password

- The maximum password length for administrators and supervisors is 32 characters; for users it is 128 characters.
- Make passwords using a combination of capitals, small letters, numbers, and symbols. The more characters, the harder it is for others to guess.
- A password can be set up if it fulfill the conditions for complexity and minimum length, as per [Password Policy] in [Extended Security]. For how to set up passwords according to the password policy, see "Password Policy" in p.261 "Specifying the Extended Security Functions".

## Using Web Image Monitor to Configure Administrator Authentication

Using Web Image Monitor, you can log in to the machine and change the administrator settings. For details about logging in and logging out with administrator authentication, see p.22 "Administrator Login Method" and p.24 "Administrator Logout Method".

1. Log in as an administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Administrator Authentication Management] or [Program/Change Administrator] under "Device Settings".
4. Change the settings as desired.
5. Log out.

### ↓ Note

- For details about Web Image Monitor, see Web Image Monitor Help.


# Administrator Login Method

If administrator authentication has been specified, log in using an administrator's user name and password. Supervisors log in the same way.

1

## Logging in Using the Control Panel


1. Press the [User Tools/Counter] key.
2. Press the [Login/Logout] key.

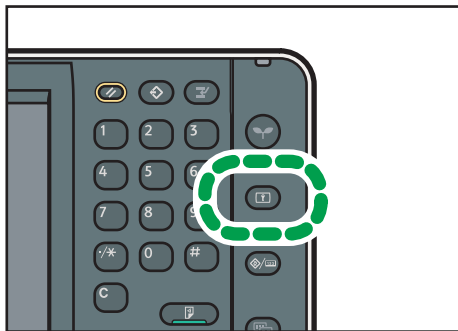


CJS040

The login screen appears.

The login screen can also be made to appear by pressing [Login] in the User Tools menu.

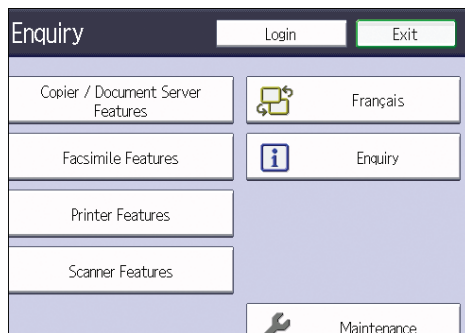

3. Press [Login].

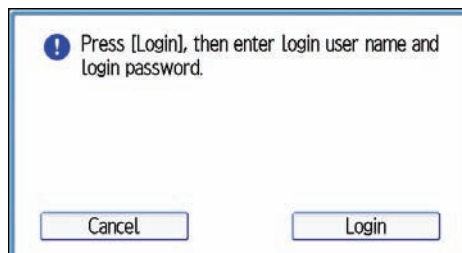

#### 4. Enter the login user name, and then press [OK].

The default login name for administrators is "admin" and "supervisor" for supervisors.

#### 5. Enter the login password, and then press [OK].

There is no preset default password for administrators or supervisors. Because of this, do not enter anything for the password and simply press [OK].

"Authenticating... Please wait." appears, followed by the screen for specifying the default.

#### Note

- If user authentication has already been specified, a screen for authentication appears. To log in as an administrator, enter the administrator's login user name and login password.
- If you log in using administrator privilege, the name of the administrator logging in appears. When you log in with a user name that has multiple administrator privileges, one of the administrator privileges associated with that name is displayed.
- If you try to log in from an operating screen, "You do not have the privileges to use this function. You can only change setting(s) as an administrator." appears. Press the [User Tools/Counter] key to change the default.

## Logging in Using Web Image Monitor

#### 1. Open a Web browser.

#### 2. Enter "http://(the machine's IP address or host name)/" in the address bar.

When entering an IPv4 address, do not begin segments with zeros. For example: If the address is "192.168.001.010", you must enter it as "192.168.1.10" to connect to the machine.

Enter the IPv6 address with brackets before and after, like this: [2001:db8::9abc].

#### 3. Click [Login].

#### 4. Enter the login name and password of an administrator, and then click [Login].

The default login name for administrators is "admin" and that for supervisors is "supervisor". No login password is set up.

#### Note

- The Web browser might be configured to auto complete login dialog boxes by retaining user names and passwords. This function reduces security. To prevent the browser retaining user names and passwords, disable the browser's auto complete function.

# Administrator Logout Method

1

If administrator authentication has been specified, be sure to log out after completing settings. Supervisors log out in the same way.

---

## Logging out Using the Control Panel

---

1. Press the [Login/Logout] key.
2. Press [Yes].

### ↓ Note

- You can log out using the following procedures also.
  - Press the [Energy Saver] key.

---

## Logging out Using Web Image Monitor

---

1. Click [Logout] to log out.

### ↓ Note

- Delete the cache memory in Web Image Monitor after logging out.
- If Web Image Monitor is inactive for 30 minutes, the user is logged out automatically.

# Supervisor

The supervisor can delete an administrator's password and specify a new one.

If any of the administrators forgets their password or if any of the administrators changes, the supervisor can assign a new password. If logged in using the supervisor's user name and password, you cannot use normal functions or specify defaults. The methods for logging in and out are the same as for administrators.

## ★ Important

- The default login user name is "supervisor". No login password is set up. We recommend changing the login user name and login password.
- For the characters that can be used for login user names and passwords, see p.21 "Usable characters for user names and passwords".
- Be sure not to forget the supervisor login user name and login password. If you do forget them, a service representative will have to return the machine to its default state. This will result in all data in the machine being lost and the service call may not be free of charge.

## ↓ Note

- You cannot specify the same login user name for the supervisor and the administrators.
- Using Web Image Monitor, you can log in as the supervisor and delete an administrator's password or specify a new one.

---

## Resetting the Administrator's Password

---

### 1. The supervisor logs in from the control panel.

For details on how to log in, see p.22 "Administrator Login Method".


### 2. Press [System Settings].

### 3. Press [Administrator Tools].


### 4. Press [▼Next].

### 5. Press [Program / Change Administrator].

6. Press [Change] for the administrator you wish to reset.

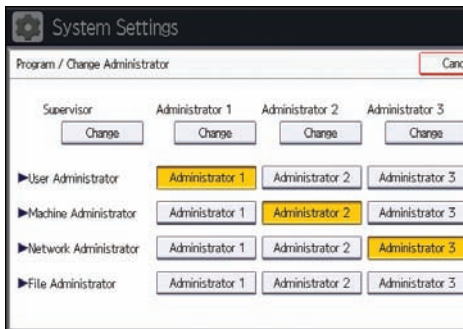

7. Press [Change] for "Login Password".

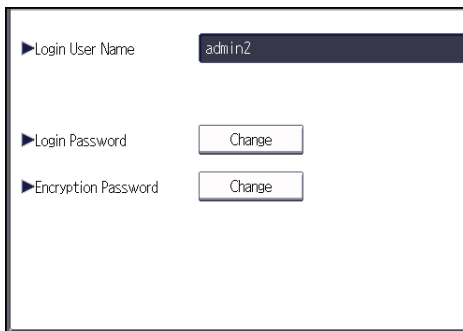

8. Enter the login password, and then press [OK].

9. Re-enter the login password for confirmation, and then press [OK].

10. Press [OK] twice.

You will be automatically logged out.

**Note**

- Log in as the supervisor only to change an administrator's password. Administrator's login names cannot be changed.

---

## Changing the Supervisor

---

This section describes how to change the supervisor's login name and password.

To do this, you must enable the user administrator's privileges through the settings under "Administrator Authentication Management". For details, see p.16 "Specifying Administrator Privileges".

1. The supervisor logs in from the control panel.

For details on how to log in, see p.22 "Administrator Login Method".

2. Press [System Settings].



3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [Program / Change Administrator].
6. Under "Supervisor", press [Change].
7. Press [Change] for "Login User Name".
8. Enter the login user name, and then press [OK].
9. Press [Change] for "Login Password".
10. Enter the login password, and then press [OK].
11. Re-enter the login password for confirmation, and then press [OK].
12. Press [OK] twice.

You will be automatically logged out.



# 2. Configuring User Authentication

This chapter describes how to specify user authentication and explains the functions that are enabled by user authentication.


## Users

A user performs normal operations on the machine, such as copying and printing. Users are managed using the personal information in the machine's Address Book, and can use only the functions they are permitted to access by administrators. By enabling user authentication, you can allow only people registered in the Address Book to use the machine. Users can be managed in the Address Book by the user administrator. For details about administrator, see p.14 "Administrators". For details about user registration, see "Registering User Information", Connecting the Machine/ System Settings or Web Image Monitor Help.

# About User Authentication

User authentication is a process by which the user's ID is confirmed via a login user name and password when the user starts to use this machine or when accessing the machine from a network.

2

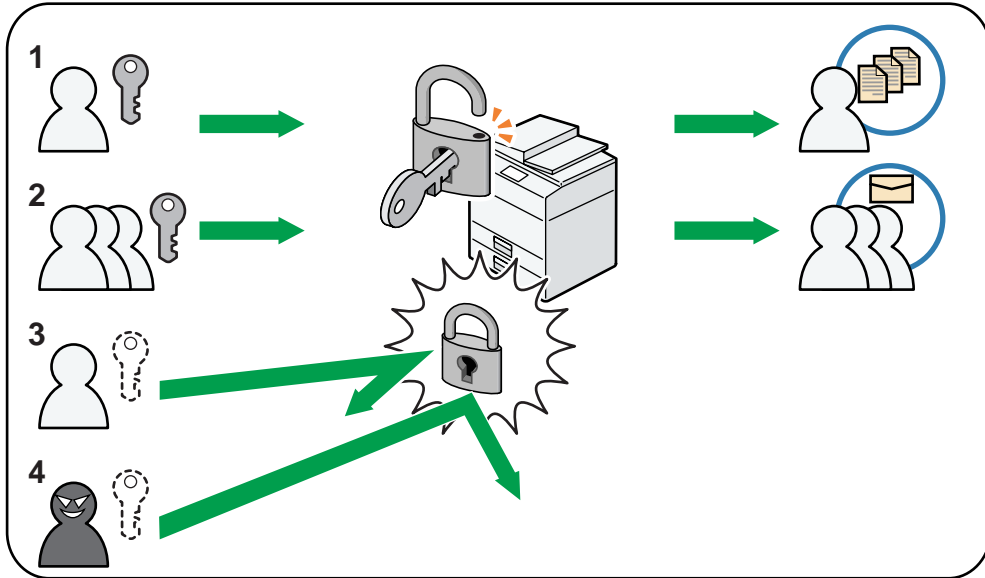

CJC010

**1. User**

A user performs normal operations on the machine, such as copying and printing.

**2. Group**

A group performs normal operations on the machine, such as copying and printing.

**3. Unauthorized user**

**4. Unauthorized access**

# Configuring User Authentication

To control users' access to the machine, perform user authentication using login user names and passwords. There are five types of user authentication methods: User Code authentication, Basic authentication, Windows authentication, LDAP authentication, and Integration Server authentication. To use user authentication, select an authentication method on the control panel, and then make the required settings for the authentication. The settings depend on the authentication method. Specify administrator authentication, and then specify user authentication.

## ★ Important

- **If user authentication is not possible because of a problem with the hard disk or network, you can use the machine by accessing it using administrator authentication and disabling user authentication. Do this if, for instance, you need to use the machine urgently.**

User authentication configuration flow

Configuration procedure	Details
Configuring administrator authentication	p.16 "Specifying Administrator Privileges" p.18 "Registering and Changing Administrators"
Configuring user authentication	Specify user authentication. Five types of user authentication are available: <ul style="list-style-type: none"> <li>• p.33 "User Code Authentication"</li> <li>• p.36 "Basic Authentication"</li> <li>• p.42 "Windows Authentication"</li> <li>• p.51 "LDAP Authentication"</li> <li>• p.57 "Integration Server Authentication"</li> </ul>

## ↓ Note

- To specify Basic authentication, Windows authentication, LDAP authentication, or Integration Server authentication, you must first enable user administrator privileges in "Administrator Authentication Management".
- You can specify User Code authentication without specifying administrator authentication.
- User Code authentication is used for authenticating on the basis of a user code, and Basic authentication, Windows authentication, LDAP authentication, and Integration Server authentication are used for authenticating individual users.
- A user code account, that has no more than eight digits and is used for User Code authentication, can be carried over and used as a login user name even after the authentication method has switched from User Code authentication to Basic authentication, Windows authentication, LDAP

authentication, or Integration Server authentication. In this case, since the User Code authentication does not have a password, the login password is set as blank.

- When authentication switches to an external authentication method (Windows authentication, LDAP authentication, or Integration Server authentication), authentication will not occur, unless the external authentication device has the carried over user code account previously registered. However, the user code account will remain in the Address Book of the machine despite an authentication failure.
- From a security perspective, when switching from User Code authentication to another authentication method, we recommend that you delete accounts you are not going to use, or set up a login password. For details about deleting accounts, see "Deleting a Registered Name", Connecting the Machine/ System Settings. For details about changing passwords, see p.38 "Specifying Login User Names and Passwords".
- You cannot use more than one authentication method at the same time.
- If a user's e-mail address has been obtained via Windows authentication, LDAP authentication or Integration Server authentication, when e-mail from the scanner is sent, or a received fax is forwarded by e-mail, the sender's address (From) is fixed, allowing ID fraud to be prevented.
- User authentication can also be specified via Web Image Monitor. For details, see Web Image Monitor Help.

# User Code Authentication

This is an authentication method for limiting access to functions according to a user code. The same user code can be used by more than one user. For details about specifying user codes, see "Authentication Information", Connecting the Machine/ System Settings.

For details about specifying the user code for the printer driver, see Print or the printer driver Help.

For details about specifying the LAN-Fax driver user code, see the LAN-Fax driver Help.


For details about specifying the TWAIN driver user code, see the TWAIN driver Help.

## ★ Important


- To control the use of DeskTopBinder for the delivery of files stored in the machine, select Basic authentication, Windows authentication, LDAP authentication, or Integration Server authentication.

## Specifying User Code Authentication

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [User Authentication Management].

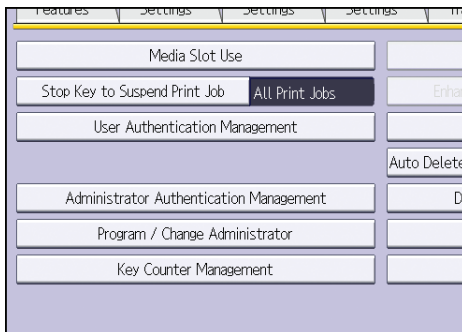


**6. Select [User Code Auth.].**

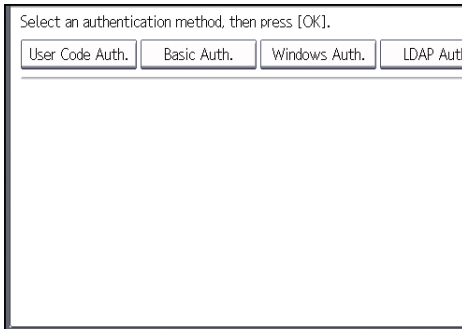

If you do not want to use user authentication management, select [Off].

**7. In "Functions to Restrict", select the functions that you want to restrict.**

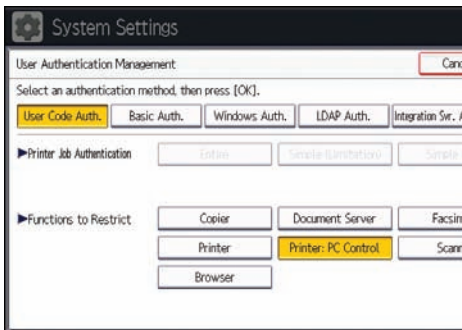

If the function you want to select is not displayed, press [▼Next].


The selected functions are subject to User Code authentication. User Code authentication is not applied to the functions not selected.

For details about limiting available functions for individuals or groups, see p.80 "Limiting Available Functions".

If you do not want to specify printer job authentication, proceed to step 13.

**8. Under "Functions to Restrict", either deselect [Printer: PC Control] or select [Printer].**

**9. Select the "Printer Job Authentication" level.**

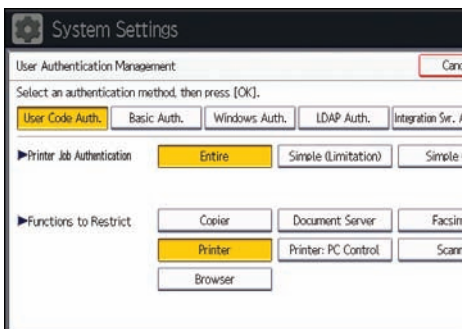




For a description of the printer job authentication levels, see p.63 "Printer Job Authentication".


If you select [Entire] or [Simple (All)], proceed to step 13.

If you select [Simple (Limitation)], proceed to step 10.

## 10. Press [Change].

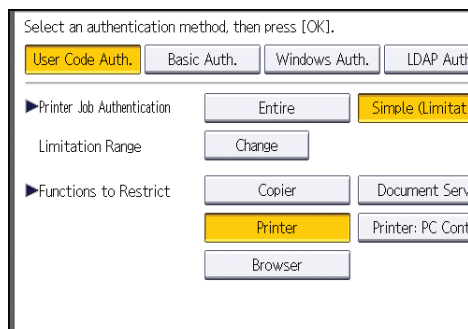

## 11. Specify the range in which [Simple (Limitation)] is applied to "Printer Job Authentication".

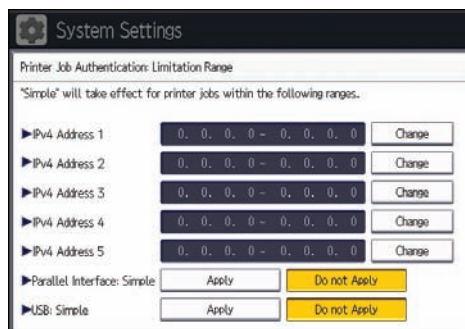

You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

## 12. Press [Exit].

## 13. Press [OK].

## 14. Press the [Login/Logout] key.

A confirmation message appears.

If you press [Yes], you will be automatically logged out.


## Basic Authentication

Specify this authentication method when using the machine's Address Book to authenticate each user. Using Basic authentication, you can not only manage the machine's available functions but also limit access to stored files and to the personal data in the Address Book. Under Basic authentication, the administrator must specify the functions available to each user registered in the Address Book. For details about limitation of functions, see p.38 "Authentication Information Stored in the Address Book".


### Specifying Basic Authentication

Before beginning to configure the machine, make sure that administrator authentication is properly configured under "Administrator Authentication Management".

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [User Authentication Management].

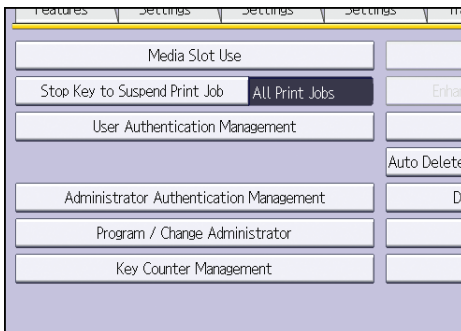


6. Select [Basic Auth.].

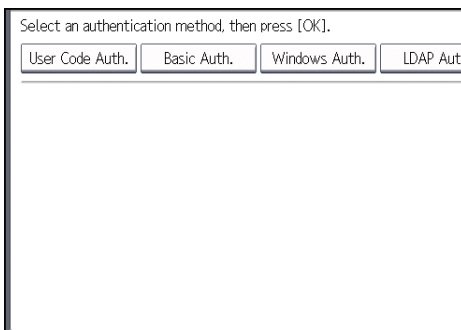

If you do not want to use user authentication management, select [Off].

## 7. Select the "Printer Job Authentication" level.

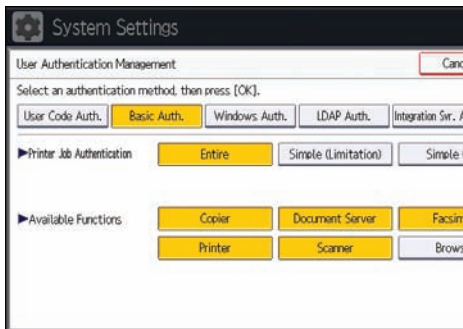


For a description of the printer job authentication levels, see p.63 "Printer Job Authentication".


If you select [Entire] or [Simple (All)], proceed to step 11.

If you select [Simple (Limitation)], proceed to step 8.

## 8. Press [Change].

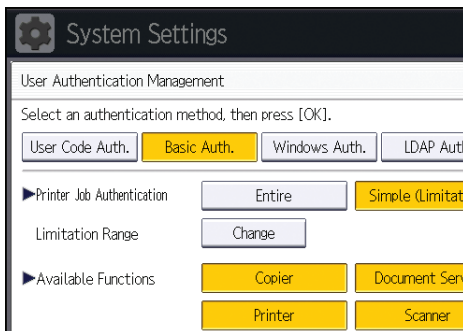


## 9. Specify the range in which [Simple (Limitation)] is applied to "Printer Job Authentication".

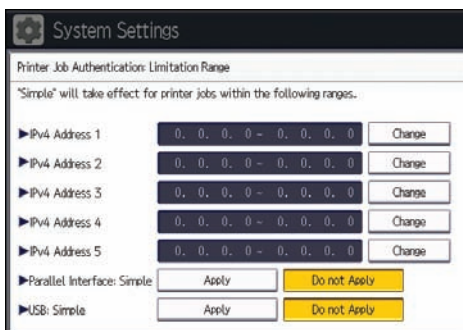

You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

## 10. Press [Exit].

**11. In "Available Functions", select which of the machine's functions you want to permit.**

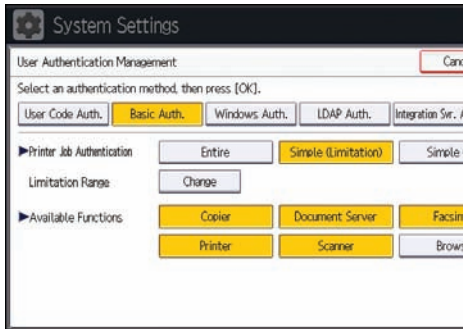

The functions you select here become the default Basic Authentication settings that will be assigned to all new users of the Address Book.

For details about specifying available functions for individuals or groups, see p.80 "Limiting Available Functions".

**12. Press [OK].**

**13. Press the [Login/Logout] key.**

A confirmation message appears.

If you press [Yes], you will be automatically logged out.

---

## Authentication Information Stored in the Address Book

---

If you have enabled user authentication, you can specify access limits and usage limits to the machine's functions for each user or group of users. Specify the necessary settings in the Address Book entry of each user. For details about limiting which functions of the machine are available, see p.80 "Limiting Available Functions".

Users must have a registered account in the Address Book in order to use the machine when user authentication is specified. For details about user registration, see "Registering Names", Connecting the Machine/ System Settings.

User authentication can also be specified via Web Image Monitor. For details, see Web Image Monitor Help.

---

## Specifying Login User Names and Passwords

---

In "Address Book Management", specify the login user name and login password to be used for "User Authentication Management".

For the characters that can be used for login user names and passwords, see p.21 "Usable characters for user names and passwords".

1. The user administrator logs in from the control panel.
2. Press [Address Book Mangmnt].
3. Select the user.

Press [New Program] to add new or select from list below to edit. Selection can be made.

Program / Change      Delete

\_\_\_\_\_

All Users      Fax      E-mail

Frequent	AB	CD	EF	GH	IJK	LMN	OPQ	RST	U
[00001] ABCD COMPAN	[00002] YOKOHAMA OFFICE	[00003] BERLIN OFFICE	[00004] LONDON OFFICE	[00005] NEW YORK OFFICE	[00006] TOKYO OFFICE	[00007] KYOTO OFFICE	[00008] BEIJING OFFICE	[00009] SHANGHAI OFFICE	[00010] HONG KONG OFFICE
[00011] Folder01	[00012] Folder02	[00013] Folder03	[00014] Folder04	[00015] Folder05	[00016] Folder06	[00017] Folder07	[00018] Folder08	[00019] Folder09	[00020] Folder10

4. Press [Auth. Info].

Names      Auth. Info      Protection      Fax Dest.      E-mail

▶ Name      ABCD COMPANY      Change

▶ Key Display      ABCD COMPANY      ▶ Register      Change

▶ Select Title

Title 1	Frequent	AB	CD	EF	GH	IJK
Title 2	Frequent	1	2	3	4	5
Title 3	Frequent	1	2			

5. Press [Change] for "Login User Name".

System Settings

Program / Change Address Book      Cancel

Names      Auth. Info      Protection      Fax Dest.      E-mail      Folder

▶ Auth. Info at Login


Login User Name      \_\_\_\_\_      Change

Login Password      \_\_\_\_\_      Change

▶ SMTP Authentication      Use Auth. Info at Login      Specify Other Auth. Info

6. Enter a login user name, and then press [OK].

7. Press [Change] for "Login Password".

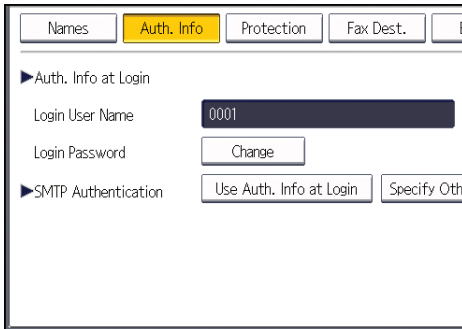

- 8. Enter a login password, and then press [OK].
- 9. Re-enter the login password for confirmation, and then press [OK].
- 10. Press [OK].
- 11. Press [Exit].
- 12. Log out.

---

## Specifying Login Details


---

The login user name and password specified in "Address Book Management" can be used as the login information for "SMTP Authentication", "Folder Authentication", and "LDAP Authentication".

If you do not want to use the login user name and password specified in "Address Book Management" for "SMTP Authentication", "Folder Authentication", or "LDAP Authentication", see "Registering Folders" and "Registering SMTP and LDAP Authentication", Connecting the Machine/ System Settings.

**★ Important**

- When using "Use Auth. Info at Login" for "SMTP Authentication", "Folder Authentication", or "LDAP Authentication", a user name other than "other", "admin", "supervisor" or "HIDE\*\*\*\*" must be specified. The symbol "\*\*\*\*" represents any character.
1. The user administrator logs in from the control panel.
  2. Press [Address Book Mangmnt].
  3. Select the user.
  4. Press [Auth. Info].

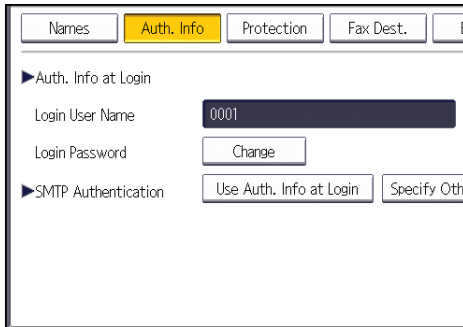**5. Select [Use Auth. Info at Login] in "SMTP Authentication".**

The screenshot shows a configuration window with several tabs: 'Names', 'Auth. Info' (highlighted in yellow), 'Protection', 'Fax Dest.', and 'E'. Under the 'Auth. Info' tab, there are two expandable sections: 'Auth. Info at Login' and 'SMTP Authentication'. The 'Auth. Info at Login' section contains a 'Login User Name' field with the value '0001' and a 'Login Password' field with a 'Change' button. The 'SMTP Authentication' section contains two buttons: 'Use Auth. Info at Login' and 'Specify Other'. The 'Use Auth. Info at Login' button is highlighted, indicating it is the selected option.

For folder authentication, select [Use Auth. Info at Login] in "Folder Authentication".

For LDAP authentication, select [Use Auth. Info at Login] in "LDAP Authentication".

If the function you want to select is not displayed, press [▼Next].

**6. Press [OK].**

**7. Press [Exit].**

**8. Log out.**

# Windows Authentication

Specify this authentication when using the Windows domain controller to authenticate users who have their accounts on the directory server. Users cannot be authenticated if they do not have their accounts in the directory server. Under Windows authentication, you can specify the access limit for each group registered in the directory server. The Address Book stored in the directory server can be registered to the machine, enabling user authentication without first using the machine to register individual settings in the Address Book. Obtaining user information can prevent the use of false identities because the sender's address (From:) is determined by the authentication system when scanned data is sent or a received fax message is transferred via e-mail.

Windows authentication can be performed using one of two authentication methods: NTLM or Kerberos authentication. The operational requirements for both methods are listed below.

## Operational requirements for NTLM authentication

To specify NTLM authentication, the following requirements must be met:

- This machine supports NTLMv1 authentication and NTLMv2 authentication.
- A domain controller has been set up in a designated domain.
- This function is supported by the operating systems listed below. To obtain user information when running Active Directory, use LDAP. If you are using LDAP, we recommend you use SSL to encrypt communication between the machine and the LDAP server. Encryption by SSL is possible only if the LDAP server supports TLSv1, SSLv2, or SSLv3.
  - Windows Server 2003/2003 R2
  - Windows Server 2008/2008 R2

## Operational requirements for Kerberos authentication

To specify Kerberos authentication, the following requirements must be met:

- A domain controller must be set up in a designated domain.
- The operating system must support KDC (Key Distribution Center). To obtain user information when running Active Directory, use LDAP. If you are using LDAP, we recommend you use SSL to encrypt communication between the machine and the LDAP server. Encryption by SSL is possible only if the LDAP server supports TLSv1, SSLv2, or SSLv3. Compatible operating systems are listed below.
  - Windows Server 2003/2003 R2
  - Windows Server 2008/2008 R2

To use Kerberos authentication under Windows Server 2008, Service Pack 2 or later must be installed.

- Transmission between the machine and the KDC server is encrypted if Kerberos authentication is enabled. For details about specifying encrypted transmission, see p.183 "Kerberos Authentication Encryption Setting".



**★ Important**

- During Windows Authentication, data registered in the directory server, such as the user's e-mail address, is automatically registered in the machine. If user information on the server is changed, information registered in the machine may be overwritten when authentication is performed.
- Users managed in other domains are subject to user authentication, but they cannot obtain items such as e-mail addresses.
- If Kerberos authentication and SSL encryption are set at the same time, e-mail addresses cannot be obtained.
- If you created a new user in the domain controller and selected "User must change password at next logon" at password configuration, first log on to the computer and change the password.
- If the authenticating server only supports NTLM when Kerberos authentication is selected on the machine, the authenticating method will automatically switch to NTLM.


**↓ Note**

- For the characters that can be used for login user names and passwords, see p.21 "Usable characters for user names and passwords".
- The first time you access the machine, you can use the functions available to your group. If you are not registered in a group, you can use the functions available under "\*Default Group". To limit which functions are available to which users, first make settings in advance in the Address Book.
- When accessing the machine subsequently, you can use all the functions available to your group and to you as an individual user.
- Users who are registered in multiple groups can use all the functions available to those groups.
- If the "Guest" account on the Windows server is enabled, even users not registered in the domain controller can be authenticated. When this account is enabled, users are registered in the Address Book and can use the functions available under "\*Default Group".
- Under Windows Authentication, you can select whether or not to use secure sockets layer (SSL) authentication.
- To automatically register user information such as fax numbers and e-mail addresses under Windows authentication, it is recommended that communication between the machine and domain controller be encrypted using SSL. To do this, you must create a server certificate for the domain controller. For details about creating a server certificate, see p.49 "Creating the Server Certificate".
- Under Windows Authentication, you do not have to create a server certificate unless you want to automatically register user information such as fax numbers and e-mail addresses using SSL.
- If you fail in obtaining fax information during authentication, see p.50 "If the Fax Number Cannot be Obtained".


## Specifying Windows Authentication

Before beginning to configure the machine, make sure that administrator authentication is properly configured under "Administrator Authentication Management".

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [User Authentication Management].

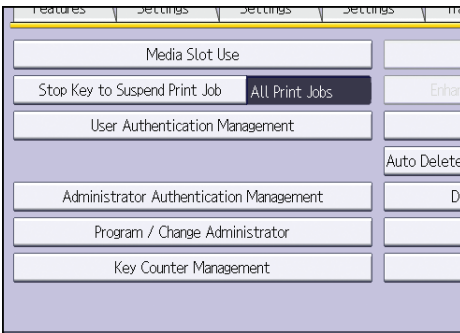


6. Select [Windows Auth.].

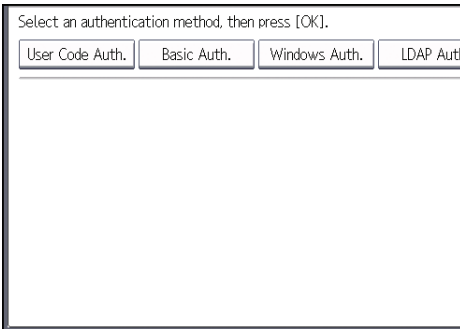


If you do not want to use user authentication management, select [Off].

7. If you want to use Kerberos authentication, press [On].

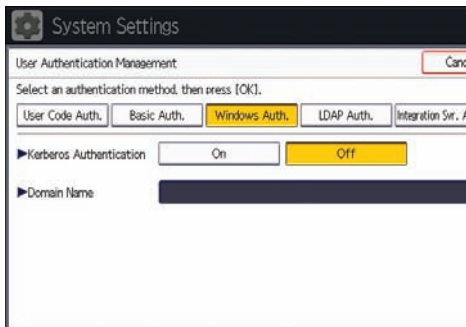

If you want to use NTLM authentication, press [Off] and proceed to step 9.


8. Select Kerberos authentication realm and proceed to step 10.

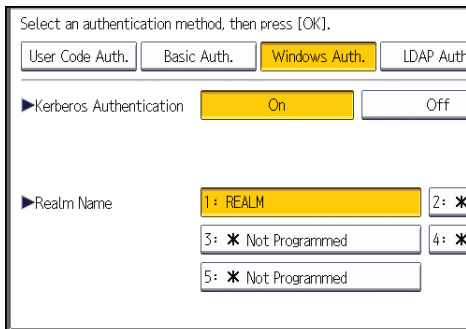

To enable Kerberos authentication, a realm must be registered beforehand. The realm name must be registered in capital letters. For details about registering a realm, see "Programming the Realm", Connecting the Machine/ System Settings.


Up to 5 realms can be registered.

9. Press [Change] for "Domain Name", enter the name of the domain controller to be authenticated, and then press [OK].

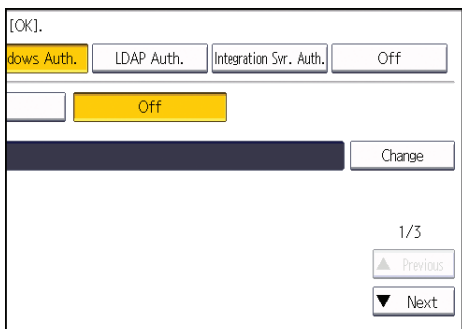

10. Press [▼Next].

11. Select the "Printer Job Authentication" level.

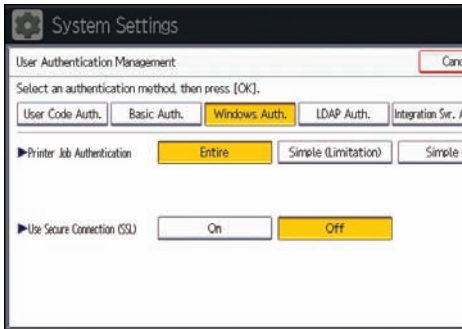


For a description of the printer job authentication levels, see p.63 "Printer Job Authentication".


If you select [Entire] or [Simple (All)], proceed to step 15.

If you select [Simple (Limitation)], proceed to step 12.

12. Press [Change].

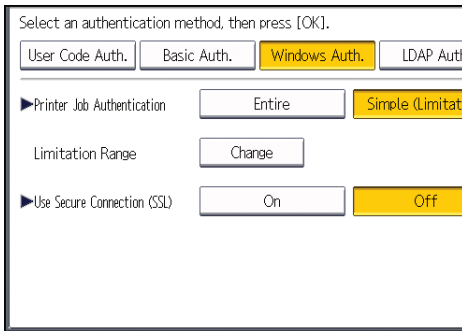


13. Specify the range in which [Simple (Limitation)] is applied to "Printer Job Authentication".

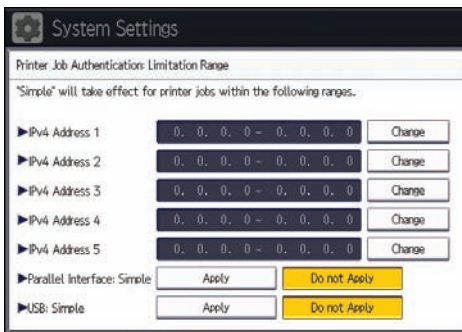

You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

14. Press [Exit].

### 15. Press [On] for "Use Secure Connection (SSL)".

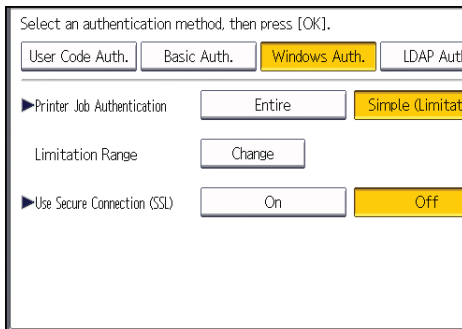

If you are not using secure sockets layer (SSL) for authentication, press [Off].

If you have not registered a global group, proceed to step 21.


If you have registered a global group, proceed to step 16.

If global groups have been registered under Windows server, you can limit the use of functions for each global group.

You need to create global groups in the Windows server in advance and register in each group the users to be authenticated. You also need to register in the machine the functions available to the global group members. Create global groups in the machine by entering the names of the global groups registered in the Windows Server. (Keep in mind that group names are case sensitive.) Then specify the machine functions available to each group.


If global groups are not specified, users can use the available functions specified in [\*Default Group]. If global groups are specified, users not registered in global groups can use the available functions specified in [\*Default Group]. By default, all functions are available to \*Default Group members. Specify the limitation on available functions according to user needs.

### 16. Under "Group", press [Program / Change], and then press [\* Not Programmed].

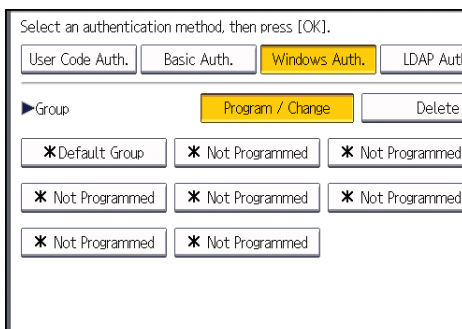


If you cannot see this item, press [▼Next] to display more settings.

17. Under "Group Name", press [Change], and then enter the group name.

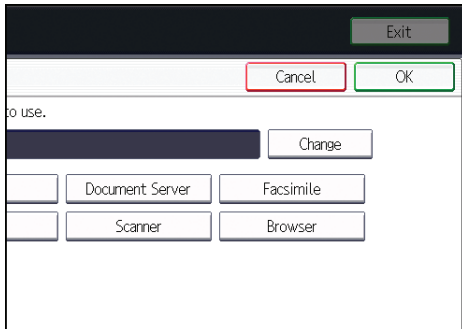

18. Press [OK].

19. In "Available Functions", select which of the machine's functions you want to permit.

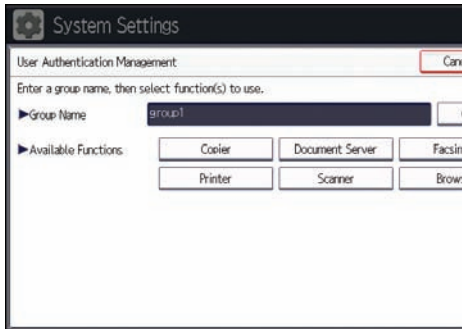

Windows Authentication will be applied to the selected functions.

Users can use the selected functions only.

For details about specifying available functions for individuals or groups, see p.80 "Limiting Available Functions".

20. Press [OK].

21. Press [OK].

22. Press the [Login/Logout] key.

A confirmation message appears.

If you press [Yes], you will be automatically logged out.

---

## Installing Internet Information Services (IIS) and Certificate Services

---

Specify this setting if you want the machine to automatically obtain e-mail addresses registered in Active Directory.

We recommend you install Internet Information Services (IIS) and Certificate services as the Windows components.

Install the components, and then create the server certificate.

If they are not installed, install them as follows:

Windows Server 2008 R2 is used to illustrate the procedure.

1. On the [Start] menu, point to [Administrator Tools], and then click [Server Manager].
2. Click [Roles] in the left column, click [Add Roles] from the [Action] menu.
3. Click [Next>].
4. Select the "Web Server (IIS)" and "Active Directory Certificate Services" check boxes, and then click [Next>].
5. Read the content information, and then click [Next>].
6. Confirm that [Certification Authority] is checked, and then click [Next>].
7. Select [Enterprise], and then click [Next>].
8. Select [Root CA], and then click [Next>].
9. Select [Create a new private key], and then click [Next>].
10. Select a cryptographic service provider, key length, and hash algorithm to create a new private key, and then click [Next>].
11. In "Common name for this CA:", enter the Certificate Authority name, and then click [Next>].
12. Select the validity period, and then click [Next>].
13. Leave the "Certificate database location:" and the "Certificate database log location:" settings set to their defaults, and then click [Next>].
14. Read the notes, and then click [Next>].
15. Select the role service you want to use, and then click [Next>].
16. Click [Install].
17. When the installation is complete, click [Close].
18. Close [Server Manager].

---

## Creating the Server Certificate

---

After installing Internet Information Services (IIS) and Certificate services Windows components, create the Server Certificate as follows:

Windows Server 2008 R2 is used to illustrate the procedure.

1. On the [Start] menu, point to [Administrator Tools], and then click [Internet Information Services (IIS) Manager].
2. In the left column, click the server name, and then double-click [Server Certificates].

3. In the right column, click [Create Certificate Request...].
4. Enter all the information, and then click [Next].
5. In "Cryptographic service provider:", select a provider, and then click [Next].
6. Click [...], and then specify a file name for the certificate request.
7. Specify a location in which to store the file, and then click [Open].
8. Close [Internet Information Services (IIS) Manager] by clicking [Finish].

---

## If the Fax Number Cannot be Obtained

---

If the fax number cannot be obtained during authentication, specify the setting as follows:

Windows Server 2008 R2 is used to illustrate the procedure.

1. Open the command prompt window, enter "regsvr32 schmmgmt.dll", and then press the [Enter] key.
2. Click [OK], and then close the command prompt window.
3. On the [Start] menu, click [Run...].
4. Enter "mmc", and then click [OK].
5. On the [File] menu, click [Add/Remove Snap-in...].
6. Select [Active Directory Scheme], and then click [Add>].
7. Click [OK].
8. Click [Active Directory Scheme] in the left column, and then open the [Attributes] folder.
9. Right-click [facsimileTelephoneNumber], and then click [Properties].
10. Select the "Replicate this attribute to the Global Catalog" check box, and then click [Apply].
11. Click [OK].
12. On the [File] menu, click [Save].
13. Specify a file name and a location in which to store the file, and then click [Save].
14. Close the console window.



# LDAP Authentication

Specify this authentication method when using the LDAP server to authenticate users who have their accounts on the LDAP server. Users cannot be authenticated if they do not have their accounts on the LDAP server. The Address Book stored in the LDAP server can be registered to the machine, enabling user authentication without first using the machine to register individual settings in the Address Book. When using LDAP authentication, to prevent the password information being sent over the network unencrypted, it is recommended that communication between the machine and LDAP server be encrypted using SSL. You can specify on the LDAP server whether or not to enable SSL. To do this, you must create a server certificate for the LDAP server. For details about creating a server certificate, see p.49 "Creating the Server Certificate". The setting for using SSL can be specified in the LDAP server setting.

Using Web Image Monitor, you can enable a function that checks whether the SSL server is trustworthy when you connect to the server. For details about specifying LDAP authentication using Web Image Monitor, see Web Image Monitor Help.

## ★ Important

- During LDAP authentication, the data registered in the LDAP server, such as the user's e-mail address, is automatically registered in the machine. If user information on the server is changed, information registered in the machine may be overwritten when authentication is performed.
- Under LDAP authentication, you cannot specify access limits for groups registered in the directory server.
- Do not use double-byte Japanese, Traditional Chinese, Simplified Chinese, or Hangul characters when entering the login user name or password. If you use double-byte characters, you cannot authenticate using Web Image Monitor.
- If using Active Directory in LDAP authentication when Kerberos authentication and SSL are set at the same time, e-mail addresses cannot be obtained.

## Operational requirements for LDAP authentication

To specify LDAP authentication, the following requirements must be met:

- The network configuration must allow the machine to detect the presence of the LDAP server.
- When SSL is being used, TLSv1, SSLv2, or SSLv3 can function on the LDAP server.
- The LDAP server must be registered in the machine.
- When registering the LDAP server, the following setting must be specified.
  - Server Name
  - Search Base
  - Port Number
  - SSL communication
  - Authentication

Select either Kerberos, DIGEST, or Cleartext authentication.

- User Name

You do not have to enter the user name if the LDAP server supports "Anonymous Authentication".

- Password

You do not have to enter the password if the LDAP server supports "Anonymous Authentication".

For details about registering an LDAP server, see "Programming the LDAP server", Connecting the Machine/ System Settings.

**Note**

- For the characters that can be used for login user names and passwords, see p.21 "Usable characters for user names and passwords".
- When you select Cleartext authentication, LDAP Simplified authentication is enabled. Simplified authentication can be performed with a user attribute (such as cn, or uid), instead of the DN.
- In LDAP simple authentication mode, authentication will fail if the password is left blank. To allow blank passwords, contact your service representative.
- Under LDAP authentication, if "Anonymous Authentication" in the LDAP server's settings is not set to Prohibit, users who do not have an LDAP server account might still be able to gain access.
- If the LDAP server is configured using Windows Active Directory, "Anonymous Authentication" might be available. If Windows authentication is available, we recommend you use it.
- The first time an unregistered user accesses the machine after LDAP authentication has been specified, the user is registered in the machine and can use the functions available under "Available Functions" during LDAP authentication. To limit the available functions for each user, register each user and corresponding "Available Functions" setting in the Address Book, or specify "Available Functions" for each registered user. The "Available Functions" setting becomes effective when the user accesses the machine subsequently.
- To enable Kerberos for LDAP authentication, a realm must be registered beforehand. The realm must be programmed in capital letters. For details about registering a realm, see "Programming the Realm", Connecting the Machine/ System Settings.
- Transmission between the machine and the KDC server is encrypted if Kerberos authentication is enabled. For details about specifying encrypted transmission, see p.183 "Kerberos Authentication Encryption Setting".


---

## Specifying LDAP Authentication


---

Before beginning to configure the machine, make sure that administrator authentication is properly configured under "Administrator Authentication Management".

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [User Authentication Management].

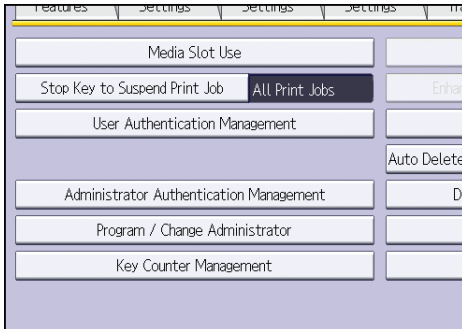


6. Select [LDAP Auth.].

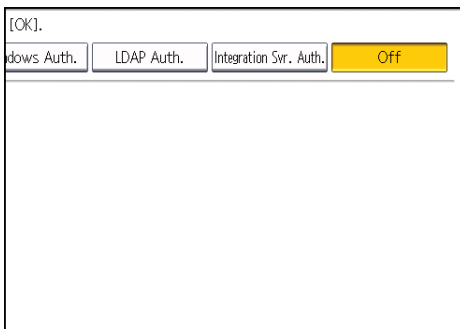


If you do not want to use user authentication management, select [Off].

7. Select the LDAP server to be used for LDAP authentication.

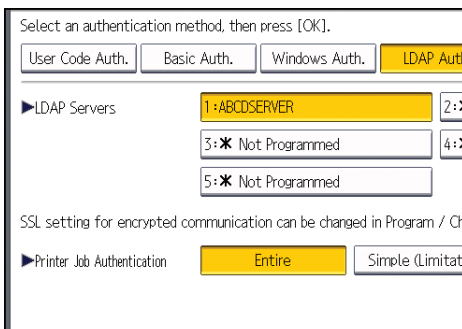

8. Select the "Printer Job Authentication" level.

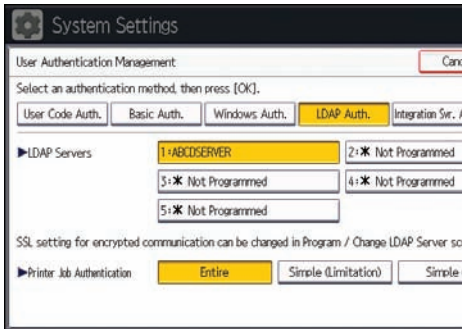


For a description of the printer job authentication levels, see p.63 "Printer Job Authentication".


If you select [Entire] or [Simple (All)], proceed to step 12.

If you select [Simple (Limitation)], proceed to step 9.

9. Press [Change].

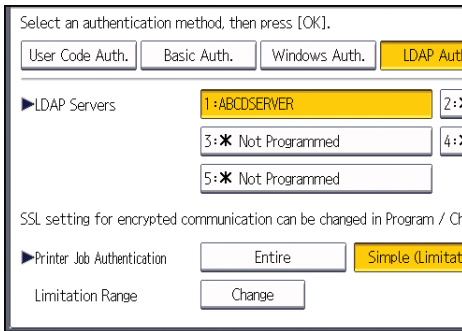

10. Specify the range in which [Simple (Limitation)] is applied to "Printer Job Authentication".

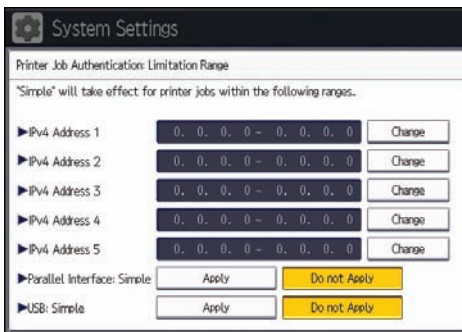

You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

11. Press [Exit].

12. Press [▼Next].

13. Press [Change] for "Login Name Attribute".

**14. Enter the login name attribute, and then press [OK].**

Use the login name attribute as a search criterion to obtain information about an authenticated user. You can create a search filter based on the login name attribute, select a user, and then retrieve the user information from the LDAP server so it is transferred to the machine's Address Book.

To specify multiple login attributes, place a comma (,) between them. The search will return hits for either or both attributes.


Also, if you place an equals sign (=) between two login attributes (for example: cn=abcde, uid=xyz), the search will return only hits that match the attributes. This search function can also be applied when Cleartext authentication is specified.

When authenticating using the DN format, login attributes do not need to be registered.

The method for selecting the user name depends on the server environment. Check the server environment and enter the user name accordingly.

**15. Press [Change] for "Unique Attribute".****16. Enter the unique attribute and then press [OK].**

Specify unique attribute on the machine to match the user information in the LDAP server with that in the machine. By doing this, if the unique attribute of a user registered in the LDAP server matches that of a user registered in the machine, the two instances are treated as referring to the same user. You can enter an attribute such as "serialNumber" or "uid". Additionally, you can enter "cn" or "employeeNumber", provided it is unique. If you do not specify the unique attribute, an account with the same user information but with a different login user name will be created in the machine.

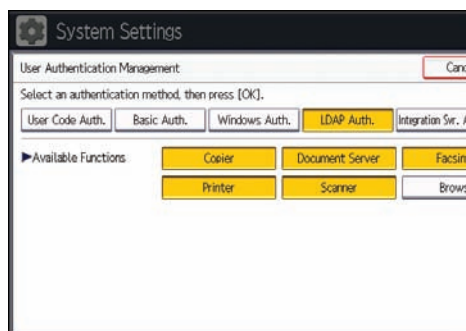**17. Press [▼Next].****18. In "Available Functions", select which of the machine's functions you want to permit.**

LDAP authentication will be applied to the selected functions.

Users can use the selected functions only.

For details about specifying available functions for individuals or groups, see p.80 "Limiting Available Functions".

**19. Press [OK].**

**20. Press the [Login/Logout] key.**

A confirmation message appears.

If you press [Yes], you will be automatically logged out.

# Integration Server Authentication

For external authentication, the Integration Server authentication collectively authenticates users accessing the server over the network, providing a server-independent, centralized user authentication system that is safe and convenient.

For example, if the delivery server and the machine share the same Integration Server authentication, single sign-on is possible using DeskTopBinder.

To use Integration Server authentication, access to a server on which ScanRouter System or Remote Communication Gate S and Authentication Manager are installed, other than the machine, is required. For details about the software, contact your sales representative.

Using Web Image Monitor, you can specify that the server reliability and site certificate are checked every time you access the SSL server. For details about specifying SSL using Web Image Monitor, see Web Image Monitor Help.

## ★ Important


- During Integration Server Authentication, the data registered in the server, such as the user's e-mail address, is automatically registered in the machine. If user information on the server is changed, information registered in the machine may be overwritten when authentication is performed.
- The default administrator name for ScanRouter System and Remote Communication Gate S is "Admin". This is different from the default administrator name for the machine, which is "admin".

## Specifying Integration Server Authentication


Before beginning to configure the machine, make sure that administrator authentication is properly configured under "Administrator Authentication Management".

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].

**5. Press [User Authentication Management].**

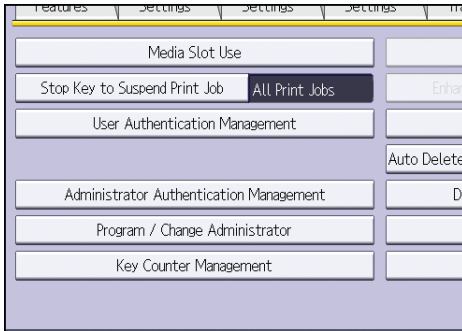


**6. Select [Integration Svr. Auth.].**

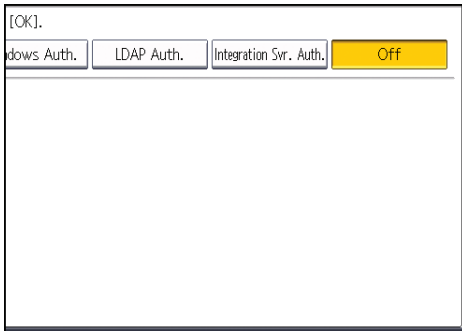

If you do not want to use user authentication management, select [Off].

**7. Press [Change] for "Server Name".**

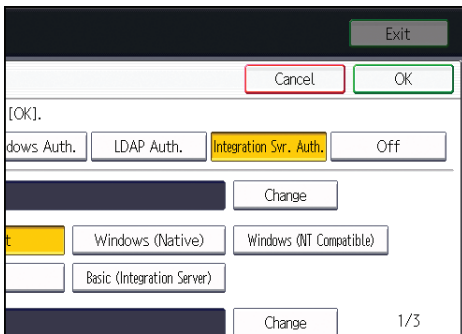


Specify the name of the server for external authentication.

**8. Enter the server name, and then press [OK].**

Enter the IPv4 address or host name.




9. In "Authentication Type", select the authentication system for external authentication.

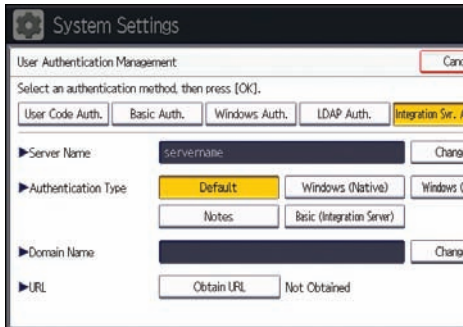

Select an available authentication system. For general usage, select [Default].


10. Press [Change] for "Domain Name".

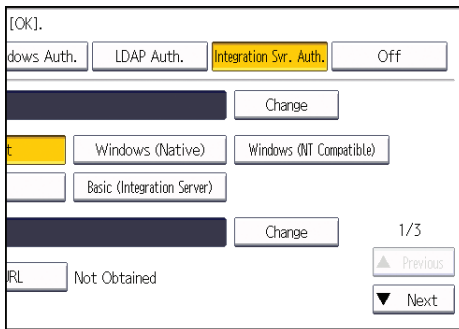

11. Enter the domain name, and then press [OK].

You cannot specify a domain name under an authentication system that does not support domain login.

12. Press [Obtain URL].

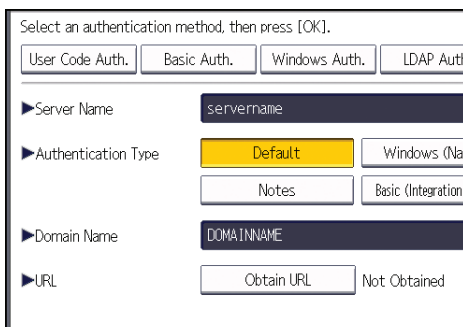

The machine obtains the URL of the server specified in "Server Name".

If "Server Name" or the setting for enabling SSL is changed after obtaining the URL, the URL is "Not Obtained".

**13. Press [Exit].**

In the "Authentication Type", if you have not registered a group, proceed to step 20.


If you have registered a group, proceed to step 14.

If you set "Authentication Type" to [Windows (Native)] or [Windows (NT Compatible)], you can use the global group.


If you set "Authentication Type" to [Notes], you can use the Notes group. If you set "Authentication Type" to [Basic (Integration Server)], you can use the groups created using the Authentication Manager.

**14. Press [▼Next].**

**15. Under "Group", press [Program / Change], and then press [\* Not Programmed].**

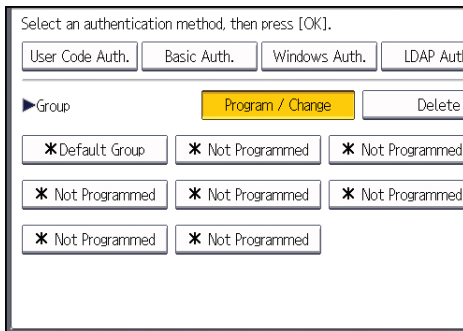


**16. Under "Group Name", press [Change], and then enter the group name.**

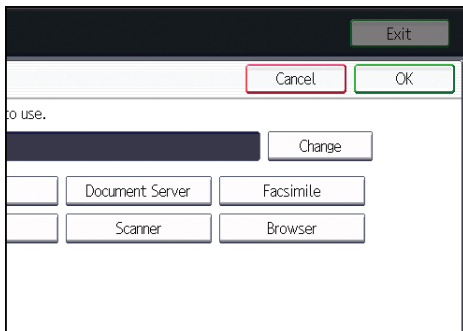

**17. Press [OK].**

18. In "Available Functions", select which of the machine's functions you want to permit.

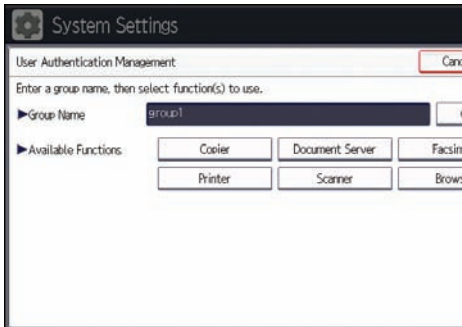


Authentication will be applied to the selected functions.

Users can use the selected functions only.

For details about specifying available functions for individuals or groups, see p.80 "Limiting Available Functions".

19. Press [OK].
20. Press [▼Next].
21. Select the "Printer Job Authentication" level.

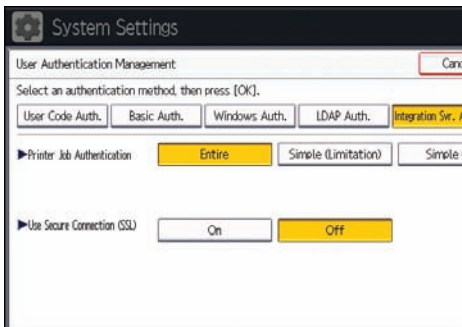


For a description of the printer job authentication levels, see p.63 "Printer Job Authentication".


If you select [Entire] or [Simple (All)], proceed to step 25.

If you select [Simple (Limitation)], proceed to step 22.

**22. Press [Change].**

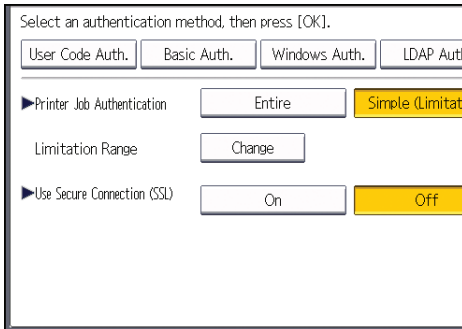


**23. Specify the range in which [Simple (Limitation)] is applied to "Printer Job Authentication".**

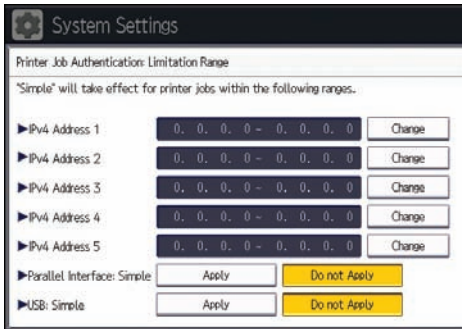

You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

**24. Press [Exit].**

**25. Press [On] for "Use Secure Connection (SSL)", and then press [OK].**

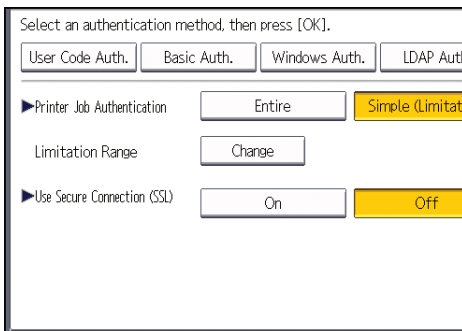

To not use secure sockets layer (SSL) for authentication, press [Off].

**26. Press [OK].**

**27. Press the [Login/Logout] key.**

A confirmation message appears.

If you press [Yes], you will be automatically logged out.

# Printer Job Authentication

Printer job authentication refers to the function of authenticating the user for printer jobs.

The drivers that handle user authentication are PCL or PostScript3. PostScript3 only handles User Code authentication.

---

## Printer Job Authentication Levels

---

- Entire

Select this setting when you want to authenticate all printer jobs and remote settings.

The machine authenticates all printer jobs and remote settings, and cancels jobs and settings that fail authentication.

To print in an environment that does not support authentication, select [Simple (All)] or [Simple (Limitation)].
- Simple (All)

Select this setting when you want to print with a printer driver or device that cannot be identified by the machine or when you do not require authentication for printing.

Printer jobs and settings without authentication information are performed without being authenticated.

The machine authenticates printer jobs and remote settings that have authentication information, and cancels the jobs and settings that fail authentication.

Unauthorized users may be able to use the machine since printing is allowed without user authentication.
- Simple (Limitation)

Select this setting when you want to restrict the range of [Simple (All)].

You can specify the range to apply [Simple (All)] by specifying a parallel connection or USB connection and the user's IPv4 address. Also note that the range of the IPv6 address can be configured from Web Image Monitor.

The specified range can be printed regardless of the authentication function. Any address outside this range must be specified using the authentication function.

---

## Printer Job Types

---

Depending on the combination of printer job authentication level and printer job type, the machine may not print properly. Set an appropriate combination according to the operating environment.

When user authentication is disabled, printing is possible for all job types.

**Printer job types: A printer job is specified when:**

1. The [User Authentication] check box is selected in the PCL printer driver or in the PCL universal driver.
2. The [User Authentication] and [With Encryption] check boxes are selected in the PCL mini-driver \*.
  - \* The authentication function cannot be used with IA-64 OS.
3. The [User Authentication] check box is selected in the PCL mini-driver.
4. The [User Authentication] check box is not selected in the PCL printer driver or in the PCL mini-driver \*.
  - \* The authentication function cannot be used with IA-64 OS.
5. When the User Code is entered using the PostScript 3 printer driver or PS3 universal driver. This also applies to recovery/parallel printing using a PCL printer driver that does not support authentication.
6. When the User Code is not entered using the PostScript 3 printer driver or PS3 universal driver. This also applies to recovery/parallel printing using a PCL printer driver that does not support authentication.
7. A printer job or PDF file is sent from a host computer without a printer driver and is printed via LPR. This can be also applied to Mail to Print. For details about Mail to Print, see "Receiving E-mail by Internet Fax/Mail to Print", Fax.
8. A PDF file is printed via ftp. Personal authentication is performed using the user ID and password used for logging in via ftp. However, the user ID and password are not encrypted.

**Printer job authentication levels and printer job types**

Printer Job Authentication	Simple (All)	Simple (All)	Simple (All)	Entire	Entire	Entire
Driver Encryption Key:Encryption Strength	Simple Encryption	DES	AES	Simple Encryption	DES	AES
Printer Job Type 1	C*1	C*1	C*1	C*1	C*1	C*1
Printer Job Type 2	C*1	C*1	X*1	C*1	C*1	X*1

Printer Job Authentication	Simple (All)	Simple (All)	Simple (All)	Entire	Entire	Entire
Driver Encryption Key:Encryption Strength	Simple Encryption	DES	AES	Simple Encryption	DES	AES
Printer Job Type 3	B	X*1	X*1	B	X*1	X*1
Printer Job Type 4	X	X	X	X	X	X
Printer Job Type 5	A	A	A	B	B	B
Printer Job Type 6	A	A	A	X	X	X
Printer Job Type 7	A	A	A	X	X	X
Printer Job Type 8	B	B	B	B	B	B

\*1 Printing with User Code authentication is classified as B.

A: Printing is possible regardless of user authentication.

B: Printing is possible if user authentication is successful. If user authentication fails, the print job is reset.

C: Printing is possible if user authentication is successful and "Driver Encryption Key" for the printer driver and machine match.

X: Printing is not possible regardless of user authentication, and the print job is reset.

#### Note

- For details about "Driver Encryption Key:Encryption Strength", see p.261 "Specifying the Extended Security Functions".

---

## "authfree" Command

---

When [Simple (Limitation)] is selected under printer job authentication, the telnet `authfree` command makes it possible to specify objects to be excluded from printer job authentication.

The default user name for logging in to telnet is "admin". No password is configured. For details on how to log in to and use telnet, see "Using telnet", Connecting the Machine/ System Settings.

### View settings

```
msh> authfree
```

If print job authentication exclusion is not specified, authentication exclusion control is not displayed.

### IPv4 address settings

```
msh> authfree "ID" range_addr1 range_addr2
```

### IPv6 address settings

```
msh> authfree "ID" range6_addr1 range6_addr2
```

### IPv6 address mask settings

```
msh> authfree "ID" mask6_addr1 masklen
```

### Parallel/USB settings

```
msh> authfree [parallel|usb] [on|off]
```

- To exclude parallel and USB connections from printer job authentication, set this to "on". The default setting is "off".
- Always specify either "parallel" or "USB".

"parallel" can be specified when an optional IEEE 1284 interface board is installed.

### Authentication exclusion control initialization

```
msh> authfree flush
```

#### Note

- In both IPv4 and IPv6 environments, up to five access ranges can be registered and selected.



# Auto Registration to the Address Book

If a user logs in via Windows, LDAP or Integration Server authentication, their personal information is automatically registered in the Address Book. Any other information may be specified by copying from other registered users.

## Automatically registered Address Book items

- Login User Name
- Login Password
- Registration No.
- Name <sup>\*1</sup>
- Key Display <sup>\*1</sup>
- E-mail Address <sup>\*2</sup>
- Protect File(s)  
Permissions for Users / Groups <sup>\*3</sup>

\*1 When information cannot be obtained, the login user name is registered.


\*2 When information cannot be obtained, auto registration does not work.

\*3 When [Carry-over Data] on [Data Carry-over Setting for Address Book Auto-program] is specified, it has priority.

## Data Carry-over Setting for Address Book Auto-program

Information that is not automatically registered in the Address Book can be copied from an already registered user and then registered.

1. The user administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [Data Carry-over Setting for Address Book Auto-program].

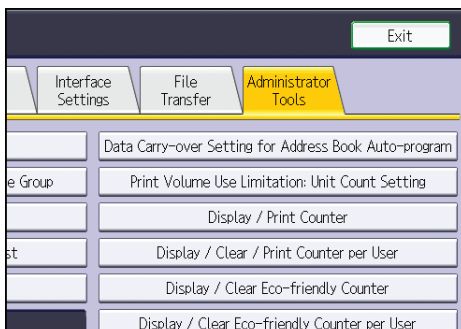

5. Press [Carry-over Data].
6. Use the number keys to enter the registration number of the Address Book that will use the setting content and press [#].
7. Press [OK].
8. Press the [Login/Logout] key.

A confirmation message appears.

If you press [Yes], you will be automatically logged out.

# User Lockout Function

If an incorrect password is entered several times, the User Lockout function prevents further login attempts under the same user name. Even if the locked out user enters the correct password later, authentication will fail and the machine cannot be used until the lockout period elapses or an administrator or supervisor disables the lockout.

To use the lockout function for user authentication, the authentication method must be set to Basic authentication. Under other authentication methods, the lockout function protects supervisor and administrator accounts only, not general user accounts.

## Lockout setting items

The lockout function settings can be made using Web Image Monitor.

Setting item	Description	Setting values	Default setting
Lockout	Specify whether or not to enable the lockout function.	<ul style="list-style-type: none"> <li>Active</li> <li>Inactive</li> </ul>	<ul style="list-style-type: none"> <li>Inactive</li> </ul>
Number of Attempts before Lockout	Specify the number of authentication attempts to allow before applying lockout.	1-10	5
Lockout Release Timer	Specify whether or not to cancel lockout after a specified period elapses.	<ul style="list-style-type: none"> <li>Active</li> <li>Inactive</li> </ul>	<ul style="list-style-type: none"> <li>Inactive</li> </ul>
Lock Out User for	Specify the number of minutes after which lockout is canceled.	1-9999 min.	60 min.

## Lockout release privileges

Administrators with unlocking privileges are as follows.

Locked out user	Unlocking administrator
general user	user administrator
user administrator, network administrator, file administrator, machine administrator	supervisor

Locked out user	Unlocking administrator
supervisor	machine administrator

---

## Specifying the User Lockout Function

---

2

1. Log in as the machine administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [User Lockout Policy] under "Security".
4. Set "Lockout" to [Active].
5. In the drop-down menu, select the number of login attempts to permit before applying lockout.
6. After lockout, if you want to cancel lockout after a specified time elapses, set "Lockout Release Timer" to [Active].
7. In the "Lock Out User for" field, enter the number of minutes until lockout is disabled.
8. Click [OK].  
User Lockout Policy is set.
9. Log out.

---

## Canceling Password Lockout

---

1. Log in as the user administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Address Book].
3. Select the locked out user's account.
4. Click [Manual Input], and then click [Change].
5. Set "Lockout" to [Inactive] under "Authentication Information".
6. Click [OK].
7. Log out.

**Note**


- You can cancel the administrator and supervisor password lockout by turning the main power off and then turning it back on again, or by canceling the setting in [Program/Change Administrator] under [Configuration] in Web Image Monitor.

# Auto Logout

When using Basic authentication, Windows authentication, LDAP authentication or Integration Server authentication, the machine automatically logs you off if you do not use the control panel within a given time. This feature is called "Auto Logout". Specify how long the machine is to wait before performing Auto Logout.

2


1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Timer Settings].
4. Press [Auto Logout Timer].

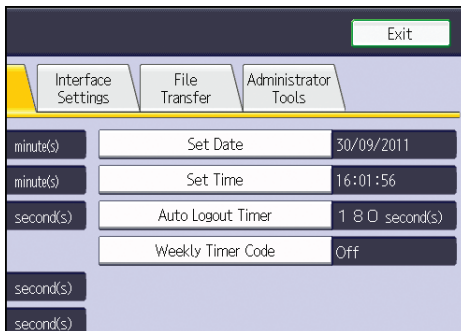

5. Select [On].

If you do not want to specify [Auto Logout Timer], select [Off].

6. Enter "60" to "999" (seconds) using the number keys, and then press [#].

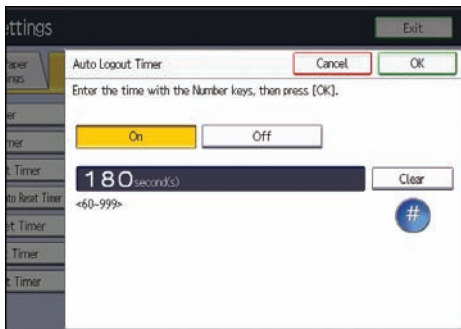

If you make a mistake, press [Clear].

7. Press the [Login/Logout] key.

A confirmation message appears.

If you press [Yes], you will be automatically logged out.

### Note

- If a paper jam occurs or toner runs out, the machine might not be able to perform the Auto Logout function.
- The auto logout time for Web Image Monitor is fixed at 30 minutes.

# Authentication Using an External Device

To authenticate using an external device, see the device manual.

For details, contact your sales representative.





# 3. Restricting Machine Usage

This chapter explains how to restrict use of the machine by the user.

## Restricting Usage of the Destination List

The destination of faxes and scanned documents can be restricted to addresses that are registered in the Address Book. Similarly, registering a destination in the Address Book is prohibited if the destination is input manually.

3

### Restrict Use of Destinations / Restrict Adding of User Destinations

The use of the destination list can be restricted separately under the scanner and fax functions.

#### Restrict Use of Destinations (Fax), Restrict Use of Destinations (Scanner)

Destinations for faxes or scanned documents are restricted to addresses registered in the Address Book.


When a user is sending a document, it becomes impossible to enter the other party's fax number, e-mail address or folder destination.

#### Restrict Adding of User Destinations (Fax), Restrict Adding of User Destinations (Scanner)

This setting prevents the registration of addresses into the Address Book using [Prg. Dest.] when a fax or scanned document is being sent if the address was input directly. Also note that with this setting, only the user administrator can register new users in the Address Book and change the passwords and other information of existing registered users. Also, note that even if you set these functions to [On], the user registered as destination can change their password. Only the user administrator can change items other than the password.


1. The user administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].

5. Press [Extended Security].

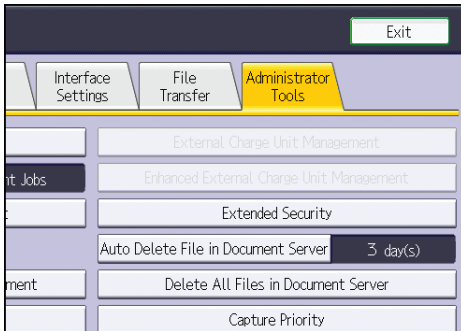

6. Press [▼Next].

7. Press [On] for "Restrict Use of Destinations (Fax)" and/or "Restrict Use of Destinations (Scanner)".

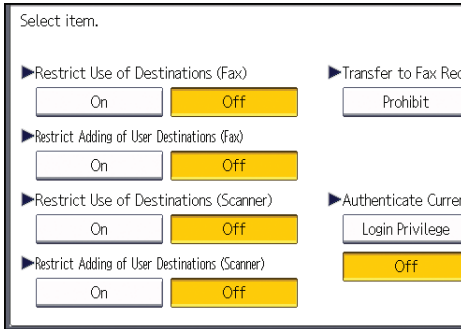

If you set "Restrict Use of Destinations (Fax)" to [On], "Restrict Adding of User Destinations (Fax)" will not appear. Similarly, if you set "Restrict Use of Destinations (Scanner)" to [On], "Restrict Adding of User Destinations (Scanner)" will not appear.

8. Press [OK].

9. Press the [Login/Logout] key.

A confirmation message appears.

If you press [Yes], you will be automatically logged out.

# Preventing Changes to Administrator Settings

The settings that can be made for this machine vary depending on the type of administrator, allowing the range of operations that can be made to be divided among the administrators.

The following administrators are defined for this machine.

- User administrator
- Machine administrator
- Network administrator
- File administrator

For details on the settings that can be made by each administrator, see p.305 "List of Operation Privileges for Settings".

Register the administrators before using the machine. For instructions on registering the administrator, see p.18 "Registering and Changing Administrators".

---

## Prohibiting Users from Making Changes to Settings

---

Makes it possible to prohibit users from changing administrator settings.

Select the item under "Available Settings" in "Administrator Authentication Management" to prevent such changes.

For details on selections in "Available Settings", see p.15 "Configuring Administrator Authentication".

## Menu Protect

In addition to the System Settings, Menu Protect limits user permission to access the initial settings menu for each function. This function is also effective when management is not based on user authentication. To change the menu protect setting, first enable administrator authentication. For details on how to set administrator authentication, see p.15 "Configuring Administrator Authentication". For a list of settings that users can specify according to the menu protect level, see p.305 "List of Operation Privileges for Settings".

### 3

---

### Specifying Menu Protect

---

If you want to enable "Menu Protect", specify it to [Level 1] or [Level 2]. Select [Level 2] to impose stricter restrictions on users' access permission to the machine settings.

If you want to disable "Menu Protect", specify it to [Off].

#### Note

- When menu protect is set to [Level 1] or [Level 2], it eliminates the ability of users to register programs.

### Copy Function

---

1. The machine administrator logs in from the control panel.
2. Press [Copier / Document Server Features].
3. Press [Administrator Tools].
4. Press [Menu Protect].
5. Select the menu protect level, and then press [OK].
6. Log out.

### Fax Function

---

1. The machine administrator logs in from the control panel.
2. Press [Facsimile Features].
3. Press [Initial Settings].
4. Press [Menu Protect].
5. Select the menu protect level, and then press [OK].
6. Log out.

## Printer Function

---

1. The machine administrator logs in from the control panel.
2. Press [Printer Features].
3. Press [Maintenance].
4. Press [Menu Protect].
5. Select the menu protect level, and then press [OK].
6. Log out.

## Scanner Function

---

1. The machine administrator logs in from the control panel.
2. Press [Scanner Features].
3. Press [Initial Settings].
4. Press [Menu Protect].
5. Select the menu protect level, and then press [OK].
6. Log out.

# Limiting Available Functions

To prevent unauthorized operation, you can specify who is allowed to access each of the machine's functions.

## Available Functions


Specify the available functions from the copier, Document Server, fax, scanner, printer, and browser functions.

3


## Specifying Which Functions are Available

Specify the functions available to registered users. By making this setting, you can limit the functions available to users.

1. The user administrator logs in from the control panel.
2. Press [Address Book Mangmnt].
3. Select the user.

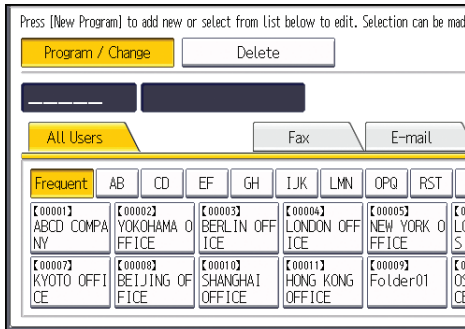


4. Press [Auth. Info].

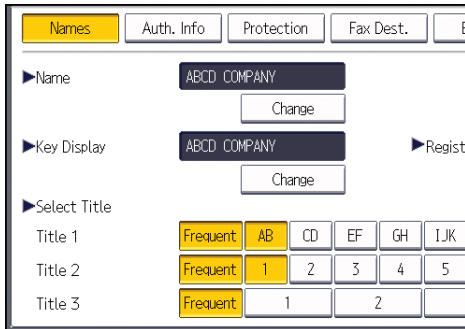

5. Press [▼Next] twice.

- In "Available Functions", select the functions you want to specify.

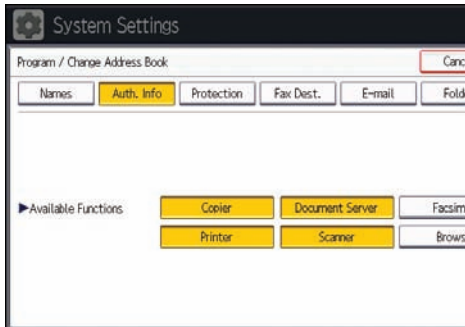


- Press [OK].
- Log out.


## Restricting Media Slot Access

Specify on the control panel whether or not to allow users to use the media slots. With this setting, you can restrict storing scanned files on a removable memory device, and also restrict printing of files stored on a removable memory device.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [Media Slot Use].

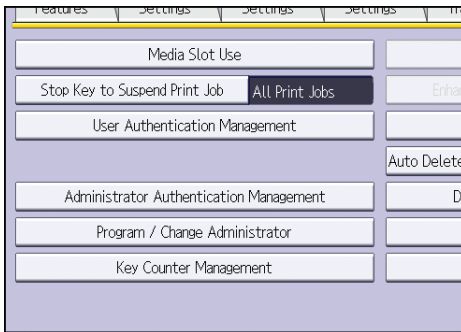

6. To restrict storing files on a removable memory device, press [Prohibit] under "Store to Memory Device".

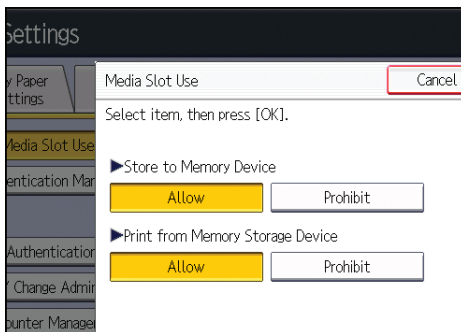

7. To restrict printing of files stored on a removable memory device, press [Prohibit] under "Print from Memory Storage Device".
8. Press [OK].
9. Log out.

### ↓ Note

- If you select [Prohibit] under "Store to Memory Device", the [Store to Memory Device] button is not displayed on the Store File screen of the scanner function.



- If you select [Prohibit] under "Print from Memory Storage Device", the [Print from Memory Storage Device] button is not displayed on the printer function's initial screen.

## Managing Print Volume per User

This function limits how much each user can print. When a user reaches their printing limit, their print job is canceled and/or a message indicating so is displayed.

Either the user administrator or the machine administrator can specify the print volume available to a user.

### Print volume

The print volume is calculated by multiplying the number of pages by a unit count.

The unit count can be weighted according to the printing conditions. For example, with a unit count weight of 10, if one page is printed, then the print volume would be 10.

The print volume is tracked for each user.

### Setting Items

Item	Explanation	Setting
Machine action when limit is reached	<p>Specify whether to limit print volume and the method for limiting prints.</p> <ul style="list-style-type: none"> <li>• Stop Job When the maximum print volume is reached, both the current job and waiting jobs are canceled.</li> <li>• Finish Job and Limit When the maximum print volume is reached, the current job is allowed to finish, but waiting jobs are canceled.</li> <li>• Allow Continue Use Print volume is not limited.</li> </ul>	<ul style="list-style-type: none"> <li>• Stop Job</li> <li>• Finish Job and Limit</li> <li>• <b>Allow Continue Use</b> (Default setting)</li> </ul>
Print Volume Use Limitation: Unit Count Setting	<p>For each of the four print conditions, specify a per-page unit count between 0 and 200.</p> <p>A print condition is a combination of paper size and function.</p> <p>The default per-page unit count for every print condition is 1.</p> <p>The paper size "Others" refers to paper sizes other than A3 and DLT (11 × 17 in).</p>	<ul style="list-style-type: none"> <li>• Copier:A3/DLT</li> <li>• Printer:A3/DLT</li> <li>• Copier:Others</li> <li>• Printer:Others</li> </ul>

## Things to note when limiting print volume

If the following occurs, the user will not be able to print:

- The login user name or user code registered in the Address Book is changed while the user is logged in and authenticated.

If the following occurs, print volume management will not function correctly:

- Under Windows or LDAP authentication, a user logs in to the same user account by using multiple login user names, and these multiple login names are registered in the Address Book as separate users.


The following operations are exempt from print volume limitation:

- Printing from an operating system that does not support the current authentication method
- Printing data using the Mail to Print function, received faxes, LAN-Fax data, and files stored using the fax function


3

## Specifying Limitations for Print Volume

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [Machine action when limit is reached].

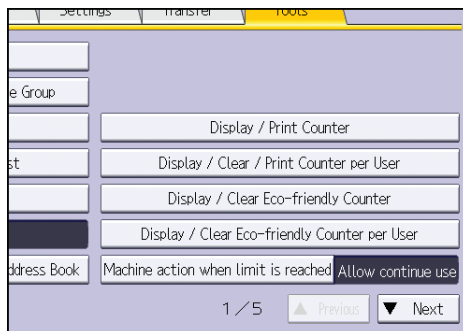


5. Select [Stop Job] or [Finish Job and Limit], and then press [OK].

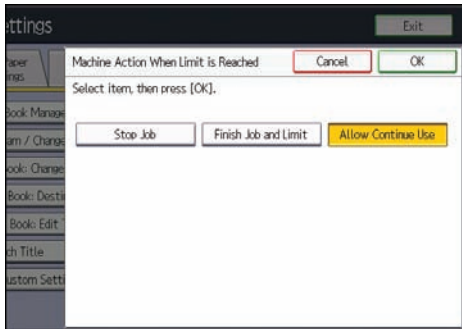


If you do not want to limit print volume, select [Allow Continue Use].

6. Press [Exit].
7. Press [System Settings].
8. Press [Administrator Tools].
9. Press [Print Volume Use Limitation: Unit Count Setting].

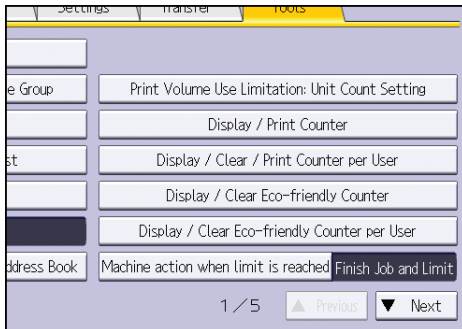

10. For each print condition, use the number keys to enter a per-page unit count between "0" and "200", and then press [#].

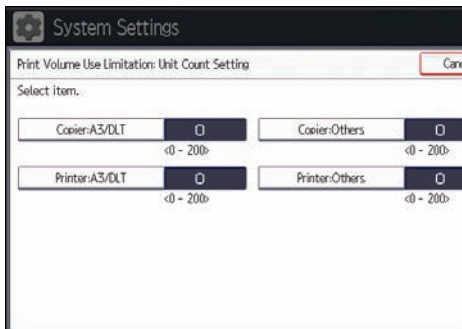

If you specify "0" for a print condition, no volume restriction is applied to jobs matching that condition.

11. Press [OK].

## 12. Log out.

### ↓ Note

- Limitations for print volume can also be specified in [Print Volume Use Limitation] under "Configuration" in Web Image Monitor.


## Restrictions When User Code Authentication is Enabled

When User Code authentication is enabled, the following restrictions apply to the print volume limitation settings:

- If [PC Control] is selected for the printer function, the values specified for print volume use units might not be applied to users' print counters. Do not select [PC Control] if you want to limit print volume when running User Code authentication.
- Under Basic, Windows, and LDAP authentication, figures displayed on the lower left of the control panel show users how many of the total prints allotted to them by the administrator they have used. Under User Code authentication, users cannot check the print volume they have made, using either the control panel or Web Image Monitor. Under User Code authentication, administrators can inform users of the print volume they have made.
- Log information related to print use limitations is not recorded in the Job Log or Access Log.
- Depending on the settings configured for User Code authentication, users might be able to make prints before logging in, regardless of the print volume limitation set by the administrator. Restrict all functions via "Functions to Restrict" in [User Code Auth.] in [User Authentication Management].


## Specifying the Default Maximum Use Count

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] twice.
5. Press [Print Volum. Use Limit.: Default Limit Value].

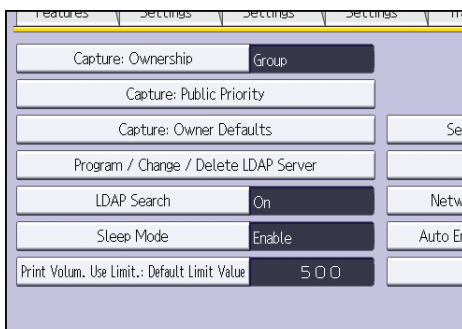

[Print Volum. Use Limit.: Default Limit Value] does not appear if you have selected [Allow Continue Use] in "Machine action when limit is reached".


6. Use the number keys to enter a value between "0" and "999,999" as the maximum available print volume, and then press [#].

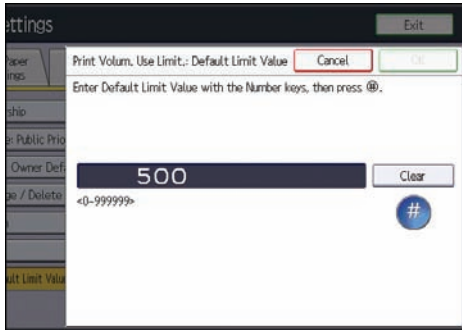


7. Press [OK].
8. Log out.

## Specifying the Maximum Use Count per User

1. The machine administrator logs in from the control panel.
2. Press [Address Book Mangmnt].
3. Select the user whose maximum available print volume you want to specify.

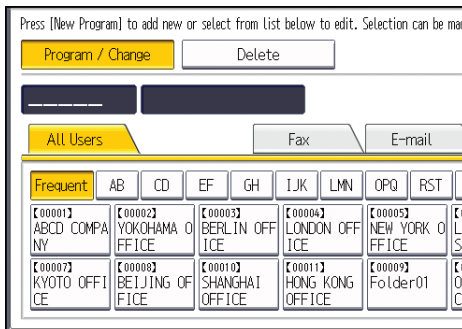


**4. Press [Auth. Info].**

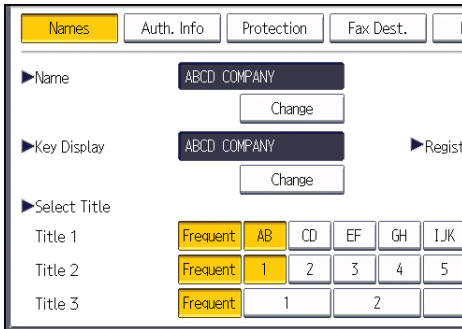

**5. Press [▼Next] twice.**


**6. Press [Limit] in "Print Volum. Use Limit."**

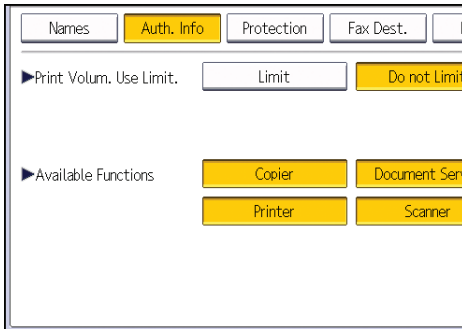

"Print Volum. Use Limit." does not appear if you have selected [Allow Continue Use] in "Machine action when limit is reached".

If you do not want to limit user's print volume, press [Do not Limit].

**7. Press [Change], and then use the number keys to enter a value between "0" and "999,999" as the maximum available print volume, and then press [#].**

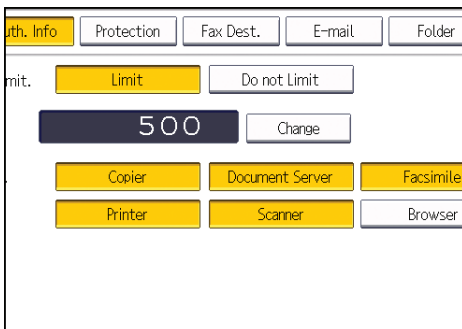

A user whose maximum print volume is set to "0" can only print jobs whose print conditions match those with a unit value of "0".

**8. Press [OK].**

9. Log out.


**Note**

- The maximum print volume for an individual user can also be specified in [Address Book] in Web Image Monitor.
- You can search for users by entering a name in the text box at the top of the control panel, and then pressing [Search].
- You can specify a maximum print volume for up to 500 users.


### Checking Print Volume per User

This procedure can be done by any administrator.

1. The administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [Display / Clear / Print Counter per User].

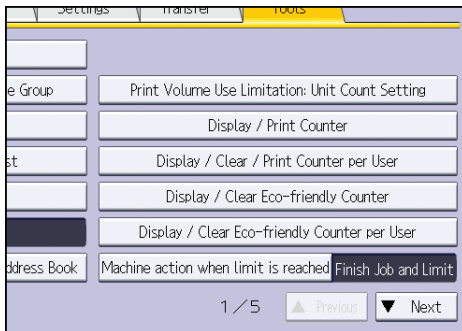

5. Press [Print Volume Use].

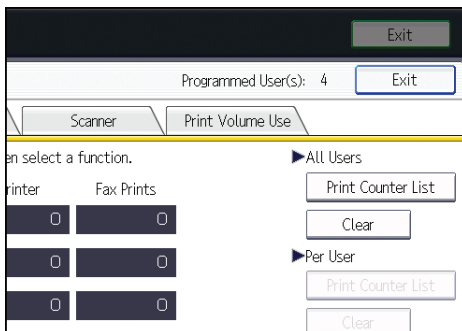

Each user's print volume limit and print volume used to date are displayed.

6. After confirming the settings, log out.




**Note**

- Authorized users and the user administrator can also use [Address Book] in Web Image Monitor to check users' print volume use counters.


## Printing a List of Print Volume Use Counters

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [Display / Clear / Print Counter per User].

3

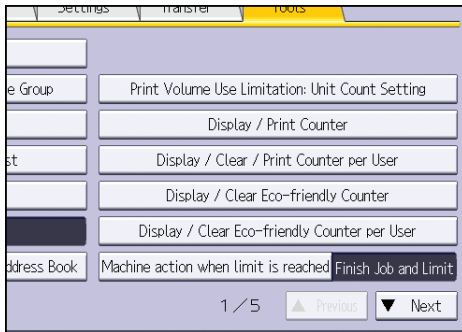


5. Press [Print Volume Use].

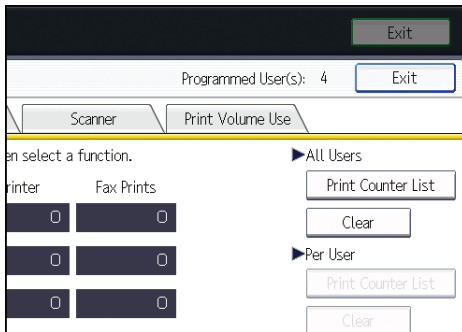


A list of users' print volume use counters is displayed.

To select all the users displayed on the page, press [Select All on the Page].

- To print a list of the volume use counters of every user, press [Print Counter List] under "All Users". To print a list of the volume use counters of selected users only, select the users whose counters you want to print, and then press [Print Counter List] under "Per User".

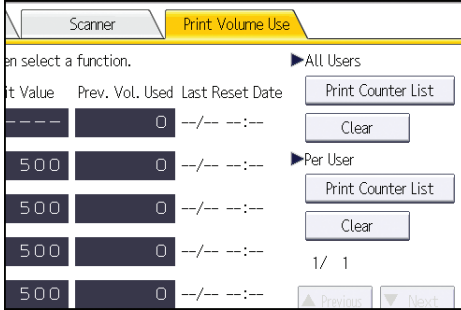

- Select the counter you want to print in the list, and then press [Print].

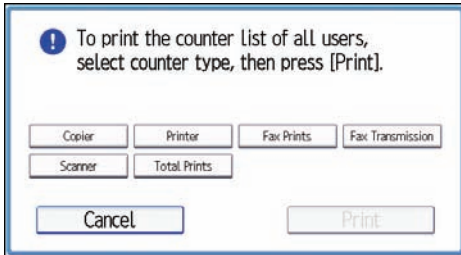

- Log out.

**Note**


- Print volume use counter lists can be printed only if the following paper sizes is loaded in the paper tray: A4, 8 1/2 × 11 in, B4, 8 1/2 × 14 in, A3, or 11 × 17 in.

## Clearing Print Volume Use Counters

Clearing a user's print volume counter or increasing a user's print volume limit allows the user to continue printing beyond his/her original print volume limit.


- The user administrator logs in from the control panel.
- Press [System Settings].
- Press [Administrator Tools].

**4. Press [Display / Clear / Print Counter per User].**

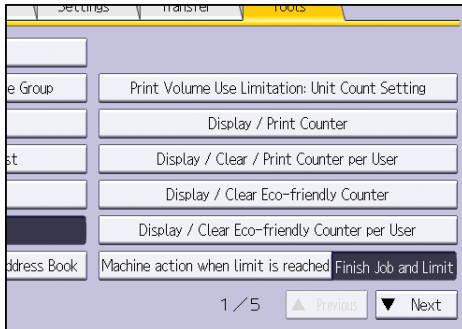


3

**5. Press [Print Volume Use].**

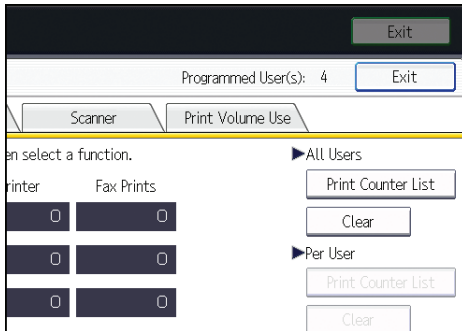


A list of users' print volume use counters is displayed.

**6. To clear the print volume use counters of every user, press [Clear] under "All Users". To clear the print volume use counters of selected users only, select the users whose counters you want to clear, and then press [Clear] under "Per User".**

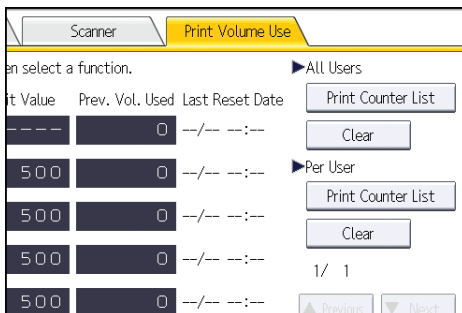

To select all the users displayed on the page, press [Select All on the Page].

**7. Select [Print Volume Use], and then press [OK].**

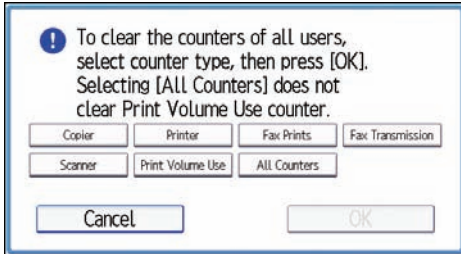

**8. Log out.**

**Note**

- You can also use [Address Book] in Web Image Monitor to clear the print volume use counters. However if you want to clear the print volume use counters of all users simultaneously, use the control panel.


## Configuring the Auto-Reset Function

The print volume counter can be reset at a specified time.


Options	Details
Every Month	Resets the print volume at the specified time/date each month.
Specify Date	Resets the volume at the specified time/date. Only resets one time.
Specify Cycle	Resets after the specified interval from a reference date, then resets thereafter after the same interval.

- 1. The machine administrator logs in from the control panel.**
- 2. Press [System Settings].**
- 3. Press [Administrator Tools].**
- 4. Press [▼Next] three times.**

5. Press [Volume Use Counter: Scheduled/Specified Reset Settings].

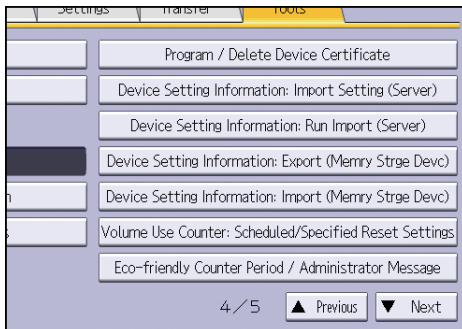

6. Select one of [Every Month], [Specify Date] and [Specify Cycle].

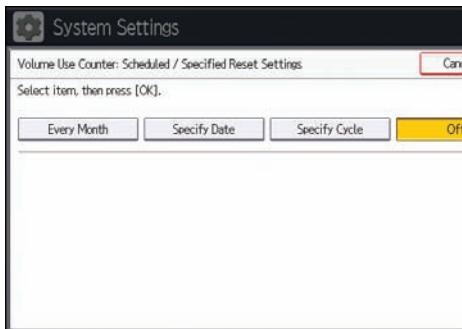

7. Configure the conditions.

8. Press [OK].

9. Log out.

**Note**

- If the machine is off at the specified time, the volume is reset when the power is turned on.
- If a date such as the 31st does not appear in the calendar under [Every Month], the volume is reset at 0:00 on 1st of the following month.



# 4. Preventing Leakage of Information from Machines

This chapter explains how to protect information if it is stored in the machine's memory or on the hard disk.


## Protecting the Address Book

You can specify who is allowed to access the data in the Address Book. To protect the data from unauthorized reading, you can also encrypt the data in the Address Book.


### Specifying Address Book Access Permissions

These access permissions can be specified by the users registered in the Address Book or with full control, or the user administrator.


1. The user administrator logs in from the control panel.
2. Press [Address Book Mangmnt].
3. Select the user.

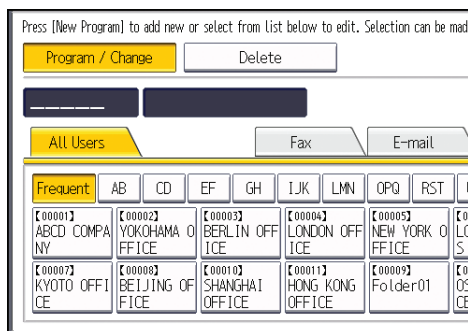

4. Press [Protection].

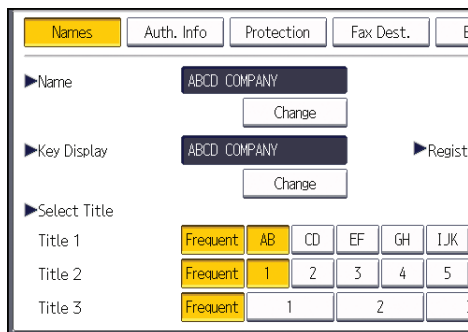


**5. Press [Program/Change/Delete] for "Permissions for Users / Groups", under "Protect Destination".**

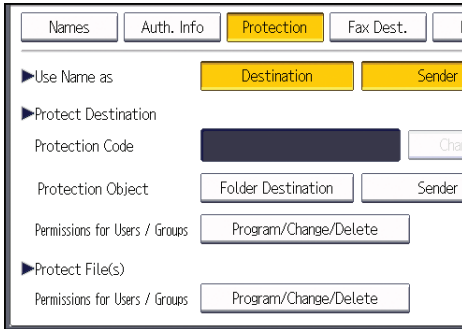

4

**6. Press [New Program].**

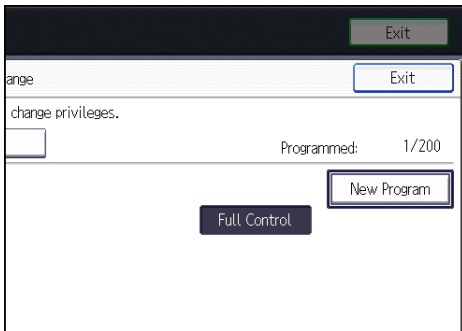

**7. Select the users or groups to register.**

You can select more than one user.

By pressing [All Users], you can select all the users.

**8. Press [Exit].**

**9. Select the user to whom you want to assign access permission, and then select the permission.**

Select the permission, from [Read-only], [Edit], [Edit / Delete], or [Full Control].

**10. Press [Exit].**

**11. Press [OK].**

**12. Log out.**


**↓ Note**

- The "Edit", "Edit / Delete", and "Full Control" access permissions allow a user to perform high level operations that could result in loss of or changes to sensitive information. We recommend you grant only the "Read-only" permission to general users.




## Encrypting Data in the Address Book


1. The user administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [Extended Security].

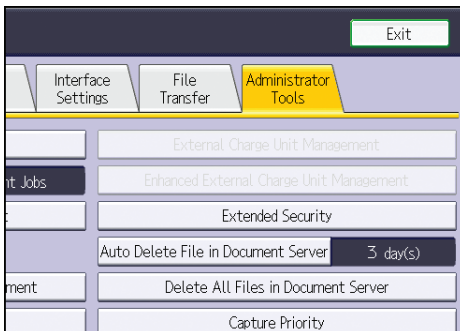

6. Press [On] for "Encrypt User Custom Settings & Address Book".

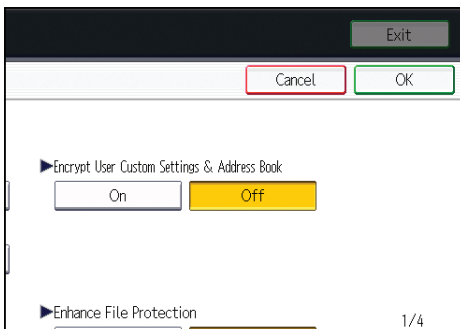

7. Press [Change] for "Encryption Key".

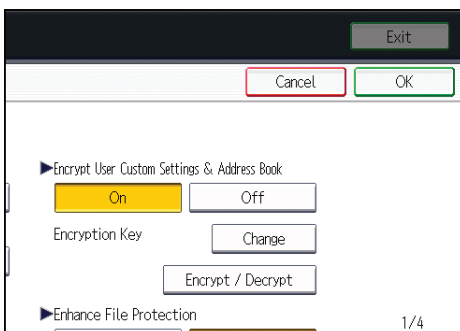


8. Enter the encryption key, and then press [OK].

Enter the encryption key using up to 32 alphanumeric characters.

9. Press [Encrypt / Decrypt].

10. Press [Yes].

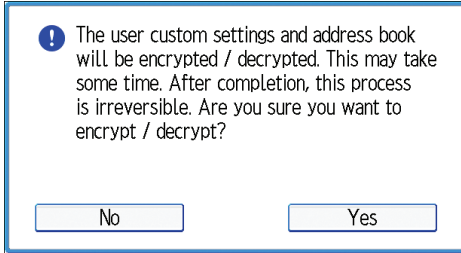

Do not switch the main power off during encryption, as doing so may corrupt the data.

Encrypting the data in the Address Book may take a long time.

The time it takes to encrypt the data in the Address Book depends on the number of registered users.

The machine cannot be used during encryption.

Normally, once encryption is complete, "Encryption / Decryption is successfully complete. Press [Exit]." appears.

If you press [Stop] during encryption, the data is not encrypted.

If you press [Stop] during decryption, the data stays encrypted.

11. Press [Exit].

12. Press [OK].

13. Log out.

**Note**

- If you register additional users after encrypting the data in the Address Book, those users are also encrypted.
- The backup copy of the address book data stored in the SD card is encrypted. For details about backing up and then restoring the address book using an SD card, see "Administrator Tools", Connecting the Machine/ System Settings.

# Encrypting Data on the Hard Disk

## CAUTION

- Keep SD cards out of reach of children. If a child accidentally swallows an SD card, consult a doctor immediately.

Prevent information leakage by encrypting the Address Book, authentication information, and stored documents as the data is written.

When the data encryption settings are enabled, an encryption key is generated and this is used to restore the data. This key can be changed at any time.

### Data that is encrypted

This function encrypts data that is stored in the machine's NVRAM (memory that remains even after the machine has been turned off) and on the hard disk.

The following data is encrypted:

- Address Book data
- User authentication information
- Data stored in Document Server
- Temporary stored documents
- Logs
- Network I/F setting information
- System settings information

### Note

- If the machine malfunctions or needs to be replaced, the existing data can be transferred to a new machine, even if the data is encrypted. To transfer data, contact your service representative.

### Time required for encryption

When setting up encryption, specify whether to start encryption after deleting data (initialize) or encrypt existing data and retain it. If data is retained, it may take some time to encrypt it.

The amount of time it takes set up encryption depends on the machine type being used. For information on machine types, see "Machine Types", Read This First.

Setting	Data to be kept	Data to be initialized	Required time
File System Data Only	<ul style="list-style-type: none"> <li>• Embedded Software Architecture applications' program/log</li> <li>• Address Book</li> <li>• Registered fonts</li> <li>• Job logs/access logs</li> <li>• Thumbnails of stored documents</li> <li>• Sent/received e-mail</li> <li>• Documents forwarded to the capture server</li> <li>• Files received via Mail to Print</li> <li>• Spooled jobs</li> </ul>	<ul style="list-style-type: none"> <li>• Stored documents (stored documents in Document Server, Locked Print files / Sample Print files / Stored Print files / Hold Print files, and received and stored fax documents)</li> <li>• Registered stamps</li> </ul>	Approximately 1 hours
All Data	All Data: Both the data to be kept and data not kept when [File System Data Only] is specified	None	Approx. 3 hours 45 minutes
Format All Data	None	All Data: Both the data to be kept and data not kept when [File System Data Only] is specified	Several minutes

**Things to note when enabling encryption settings**

- If you use Embedded Software Architecture application or App2Me, be sure to specify [File System Data Only] or [All Data].
- Note that the machine's settings will not be initialized to their system defaults even if [Format All Data], [File System Data Only], or [All Data] is specified.

---


## Enabling the Encryption Settings

---

### ★ Important


- The machine cannot be operated while data is being encrypted.
  - Once the encryption process begins, it cannot be stopped. Make sure that the machine's main power is not turned off while the encryption process is in progress. If the machine's main power is turned off while the encryption process is in progress, the hard disk will be damaged and all data on it will be unusable.
  - The encryption key is required for data recovery if the machine malfunctions. Be sure to store the encryption key safely for retrieving backup data.
  - Encryption begins after you have completed the control panel procedure and rebooted the machine by turning off and on the main power switch. If both the erase-by-overwrite function and the encryption function are specified, encryption begins after the data that is stored on the hard disk has been overwritten and the machine has been rebooted with the turning off and on of the main power switch.
  - If you use hard disk erase-by-overwrite and encryption simultaneously and you select overwrite three times for "Random Numbers", the maximum time to complete the operations will be 11 hours, 15 minutes. Re-encrypting from an already encrypted state takes same amount of time.
  - The "Erase All Memory" function also clears the machine's security settings, with the result that afterward, neither machine nor user administration will be effective. Ensure that users do not save any data on the machine after "Erase All Memory" has completed.
  - Rebooting will be faster if there is no data to carry over to the hard disk and if encryption is set to [Format All Data], even if all the data on the hard disk is formatted. Before you perform encryption, we recommend you back up important data such as the Address Book and all data stored in Document Server.
  - If the encryption key update was not completed, the printed encryption key will not be valid.
1. The machine administrator logs in from the control panel.
  2. Press [System Settings].
  3. Press [Administrator Tools].
  4. Press [▼Next] three times.

**5. Press [Machine Data Encryption Settings].**

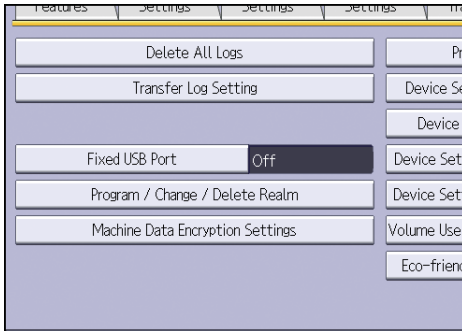


**6. Press [Encrypt].**

4

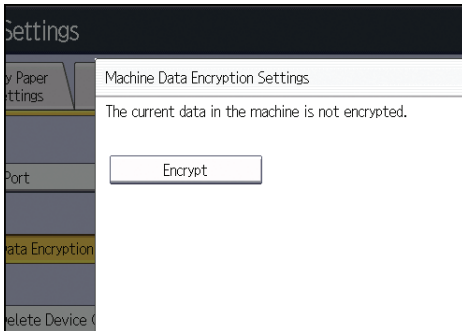

**7. Select the data to be carried over to the hard disk and not be reset.**

To carry all of the data over to the hard disk, select [All Data]. To carry over only the machine settings data, select [File System Data Only]. To reset all of the data, select [Format All Data].

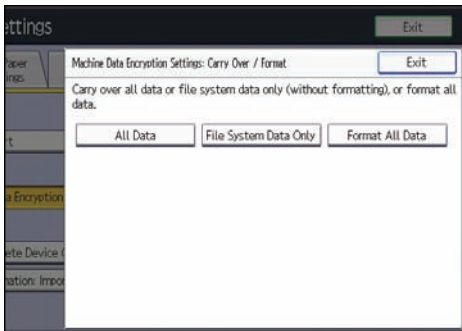

**8. Select the backup method.**

If you have selected [Save to SD Card], load an SD card into the media slot on the front of the control panel and press [OK] to back up the machine's data encryption key.

If you have selected [Print on Paper], press the [Start] key and print out the machine's data encryption key.

**9. Press [OK].**

10. Press [Exit].
11. Press [Exit].
12. Log out.
13. Turn off the main power switch, and then turn the main power switch back on.

The machine will start to convert the data on the memory after you turn on the machine. Wait until the message "Memory conversion complete. Turn the main power switch off." appears, and then turn the main power switches off again.

For details about turning off the power, see "Turning On/Off the Power", Getting Started.

## Backing Up the Encryption Key


4

The encryption key can be backed up. Select whether to save it to an SD card or to print it.

### ★ Important

- The encryption key is required for data recovery if the machine malfunctions. Be sure to store the encryption key safely for retrieving backup data.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.
5. Press [Machine Data Encryption Settings].
6. Press [Back Up Encryption Key].

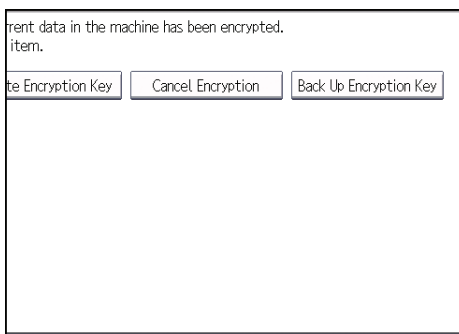

7. Select the backup method.

If you have selected [Save to SD Card], load an SD card into the media slot on the front of the control panel and press [OK]; once the machine's data encryption key is backed up, press [Exit].

If you have selected [Print on Paper], press the [Start] key and print out the machine's data encryption key.

8. Press [Exit].

## 9. Log out.


## Updating the Encryption Key

You can update the encryption key and create a new key. Updates are possible when the machine is functioning normally.

### ★ Important

- The encryption key is required for recovery if the machine malfunctions. Be sure to store the encryption key safely for retrieving backup data.
- When the encryption key is updated, encryption is performed using the new key. After completing the procedure on the machine's control panel, turn off the power and restart the machine to enable the new settings. Restarting can be slow when there is data to be carried over to the hard disk.
- If the encryption key update was not completed, the printed encryption key will not be valid.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.
5. Press [Machine Data Encryption Settings].
6. Press [Update Encryption Key].

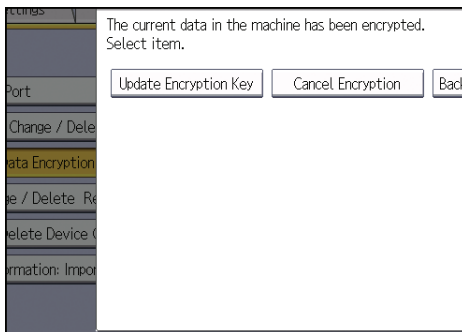

7. Select the data to be carried over to the hard disk and not be reset.

To carry all of the data over to the hard disk, select [All Data]. To carry over only the machine settings data, select [File System Data Only]. To reset all of the data, select [Format All Data].

8. Select the backup method.

If you have selected [Save to SD Card], load an SD card into the media slot on the front of the control panel and press [OK] to back up the machine's data encryption key.

If you have selected [Print on Paper], press the [Start] key and print out the machine's data encryption key.



9. Press [OK].
10. Press [Exit].
11. Press [Exit].
12. Log out.
13. Turn off the main power switch, and then turn the main power switch back on.

The machine will start to convert the data on the memory after you turn on the machine. Wait until the message "Memory conversion complete. Turn the main power switch off." appears, and then turn the main power switches off again.

For details about turning off the power, see "Turning On/Off the Power", Getting Started.

## Canceling Data Encryption

4

Use the following procedure to cancel the encryption settings when encryption is no longer necessary.

### ★ Important

- After completing this procedure on the machine's control panel, turn off the power and restart the machine to enable the new settings. Restarting can be slow when there is data to be carried over to the hard disk.
- When disposing of a machine, completely erase the memory. For details on erasing all of the memory, see p.108 "Deleting Data on the Hard Disk".

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.
5. Press [Machine Data Encryption Settings].
6. Press [Cancel Encryption].
7. Select the data to be carried over to the hard disk and not be reset.

To carry all of the data over to the hard disk, select [All Data]. To carry over only the machine settings data, select [File System Data Only]. To reset all of the data, select [Format All Data].

8. Press [OK].
9. Press [Exit].
10. Press [Exit].
11. Log out.
12. Turn off the main power switch, and then turn the main power switch back on.

For details about turning off the power, see "Turning On/Off the Power", Getting Started.

## Deleting Data on the Hard Disk

The machine's hard disk stores all document data from the copier, printer and scanner functions. It also stores the data of users' Document Server and code counters, and the Address Book.

To prevent data on the hard disk being leaked before disposing of the machine, you can overwrite all data stored on the hard disk. You can also automatically overwrite temporarily-stored data.

### ↓ Note

- Fax transmission data, fax numbers and network TWAIN scanner data are recorded in the memory installed on this machine. This information is not overwritten with the hard disk data.

## 4

---

### Conditions for Use

---

When you use the erase-by-overwrite function, make sure to use it under the following conditions:

- The machine is used in its normal state (i.e. it is neither damaged, modified nor are there missing components).
- The machine is managed by an administrator who has carefully read and understood this manual, and can ensure the safe and effective use of this machine by general users.

### ↓ Note

- Customer engineers dispatched from the manufacturer and its affiliated companies are trained in the maintenance of this machine.

---

### Instructions for Use

---

- Before turning off the main power of the machine, always make sure that the Data Overwrite icon has turned to "Clear".
- If the machine enters Energy Saver mode when overwriting is in progress, press the [Energy Saver] key to revive the display in order to check the icon.
- The machine will not enter Low Power mode or Off mode (Sleep mode) until overwriting has been completed.
- Should the Data Overwrite icon continue to be "Dirty" even after you have made sure that there is no data to be overwritten, turn off the main power of your machine. Turn it on again and see if the icon changes to "Clear". If it does not, contact your sales or service representative.

## Auto Erase Memory


A document scanned in copier, or scanner mode, or print data sent from a printer driver is temporarily stored on the machine's hard disk. Even after the job is completed, it remains in the hard disk as temporary data. Auto Erase Memory erases the temporary data on the hard disk by writing over it.



Overwriting starts automatically once the job is completed.

The copier, fax and printer functions take priority over the Auto Erase Memory function. If a copy, fax or print job is in progress, overwriting will only be done after the job is completed.

### Overwrite icon

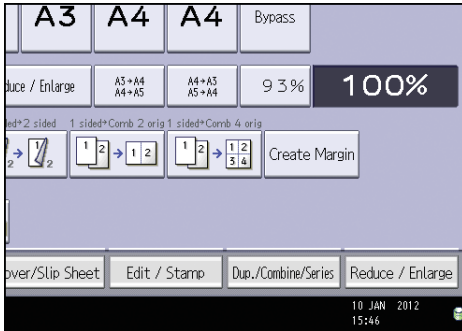When Auto Erase Memory is set to [On], the Data Overwrite icon will be indicated in the bottom right hand corner of the panel display of your machine.



Icon	Icon name	Explanation
	Dirty	This icon is lit when there is temporary data to be overwritten, and blinks during overwriting.
	Clear	This icon is lit when there is no temporary data to be overwritten.

#### ★ Important

- The Data Overwrite icon will indicate "Clear" when there is a Sample Print/Locked Print/Hold Print/Stored Print job.

#### ↓ Note

- If the Data Overwrite icon is not displayed, first check if Auto Erase Memory has been set to [Off]. If the icon is not displayed even though Auto Erase Memory is [On], contact your service representative.

## Methods of overwriting

---

You can select a method of overwriting from the following:

- NSA

Temporary data is overwritten twice with random numbers and once with zeros.

- DoD

Temporary data is overwritten with a fixed value, the fixed value's complement, and random numbers. When completed, the overwriting is then verified.

- Random Numbers

Temporary data is overwritten multiple times with random numbers. The number of overwrites can be selected from 1 to 9.

### ↓ Note

- The default method for overwriting is "Random Numbers", and the default number of overwrites is 3.
- NSA stands for "National Security Agency", U.S.A.
- DoD stands for "Department of Defense", U.S.A.

## Using Auto Erase Memory


---

### ★ Important

- When Auto Erase Memory is set to [On], temporary data that remained on the hard disk when Auto Erase Memory was set to [Off] might not be overwritten.
- If the main power switch is turned off before Auto Erase Memory is completed, overwriting will stop and data will be left on the hard disk.
- Do not stop the overwrite mid-process. Doing so will damage the hard disk.
- Should the main power switch be turned off before Auto Erase Memory is completed, overwriting will continue once the main power switch is turned back on.
- If an error occurs before overwriting is completed, turn off the main power. Turn it on, and then repeat from step 1.


1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] twice.

5. Press [Auto Erase Memory Setting].

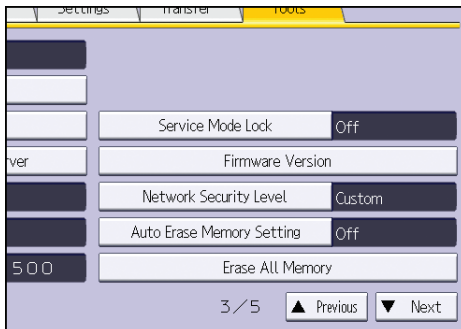

6. Press [On].

7. Select the method of overwriting.

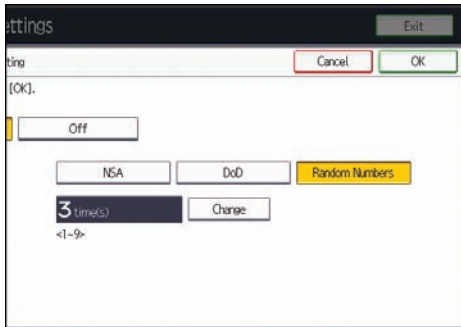

If you select [NSA] or [DoD], proceed to step 10.

If you select [Random Numbers], proceed to step 8.

8. Press [Change].

9. Enter the number of times that you want to overwrite using the number keys, and then press [#].

10. Press [OK].

Auto Erase Memory is set.

11. Log out.

**Note**

- If you specify to both overwrite and encrypt the data, the data will all be encrypted.

## Canceling Auto Erase Memory

1. Follow steps 1 to 5 in "Using Auto Erase Memory".

2. Press [Off].

### 3. Press [OK].

Auto Erase Memory is disabled.

#### Note

- To set Auto Erase Memory to [On] again, repeat the procedure in "Using Auto Erase Memory".

## Types of data that can or cannot be overwritten

---

The following are the types of data that can or cannot be overwritten by "Auto Erase Memory".

### Data overwritten by Auto Erase Memory

#### Copier

- Copy jobs

#### Printer

- Print jobs
- Sample Print/Locked Print/Hold Print/Stored Print jobs

A Sample Print/Locked Print/Hold Print job can only be overwritten after it has been executed. A Stored Print job is overwritten after it has been deleted.

- Spool printing jobs

#### Facsimile

- LAN-FAX print data
- Faxes sent/received using remote machines

Data sent or received directly by this machine via facsimile, as well as fax numbers, will not be overwritten by Auto Erase Memory.

#### Scanner

- Scanned files sent by e-mail
- Files sent by Scan to Folder
- Documents sent using DeskTopBinder, the ScanRouter delivery software or Web Image Monitor
- Network TWAIN scanner

Data scanned with network TWAIN scanner will not be overwritten by Auto Erase Memory.

However, if the "ADF(Read-ahead)" function is specified, data scanned with the network TWAIN scanner will be stored on the hard disk, so will be overwritten by Auto Erase Memory.

### Data Not overwritten by Auto Erase Memory

- Documents stored by the user in Document Server using the Copier, Printer, Facsimile or Scanner functions

A stored document can only be overwritten after it has been printed or deleted from Document Server.

- Information registered in the Address Book

Data stored in the Address Book can be encrypted for security. For details, see p.97 "Protecting the Address Book".

- Counters stored under each user code

---

## Erase All Memory

---

You can erase all the data on the hard disk by writing over it. This is useful if you relocate or dispose of your machine. The amount of time it takes to completely erase the memory depends on the machine type being used. For information on machine types, see "Machine Types", Read This First.

### ★ Important

- If you select "Erase All Memory", the following are also deleted: user codes, counters under each user code, user stamps, data stored in the Address Book, printer fonts downloaded by users, applications using Embedded Software Architecture, SSL server certificates, and the machine's network settings.
- If the main power switch is turned off before "Erase All Memory" is completed, overwriting will be stopped and data will be left on the hard disk.
- Do not stop the overwrite mid-process. Doing so will damage the hard disk.
- We recommend that before you erase the hard disk, you use SmartDeviceMonitor for Admin to back up the user codes, the counters for each user code, and the Address Book. The Address Book can also be backed up using Web Image Monitor. For details, see SmartDeviceMonitor for Admin Help or Web Image Monitor Help.
- Other than pausing, no operations are possible during the "Erase All Memory" process. When "Random Numbers" is selected and it is set to overwrite three times, take a maximum of 3 hours, 45 minutes.
- The "Erase All Memory" function also clears the machine's security settings, with the result that afterward, neither machine nor user administration will be effective. Ensure that users do not save any data on the machine after "Erase All Memory" has completed.


---

## Using Erase All Memory

---


1. Disconnect communication cables connected to the machine.
2. The machine administrator logs in from the control panel.
3. Press [System Settings].
4. Press [Administrator Tools].

- 5. Press [▼Next] twice.
- 6. Press [Erase All Memory].

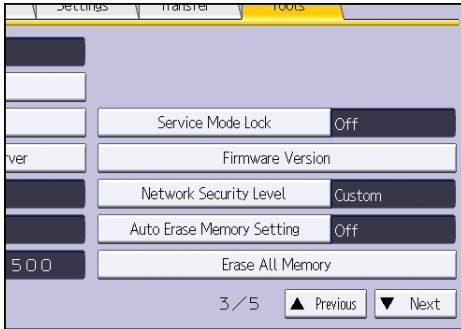

4


- 7. Select the method of overwriting.

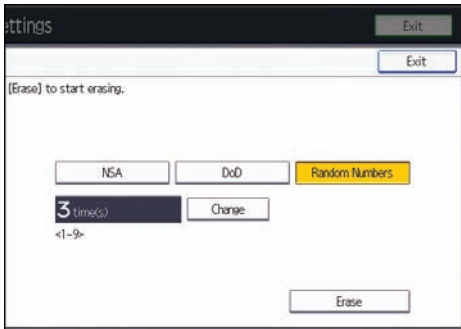

If you select [NSA] or [DoD], proceed to step 10.

If you select [Random Numbers], proceed to step 8.

- 8. Press [Change].
- 9. Enter the number of times that you want to overwrite using the number keys, and then press [#].
- 10. Press [Erase].
- 11. Press [Yes].

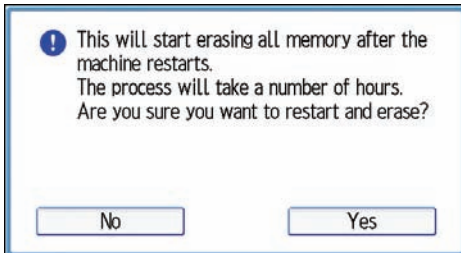

- 12. When overwriting is completed, press [Exit], and then turn off the main power.

Before turning the power off, see "Turning On/Off the Power", Getting Started.



**Note**

- Should the main power switch be turned off before "Erase All Memory" is completed, overwriting will continue once the main power switch is turned back on.
- If an error occurs before overwriting is completed, turn off the main power. Turn it on again, and then repeat from step 2.
- If you specify to both overwrite and encrypt the data, the data will all be encrypted.

## Suspending Erase All Memory

The overwriting process can be suspended temporarily.

**Important**

- **Erase All Memory cannot be canceled.**
1. **Press [Suspend] while Erase All Memory is in progress.**
  2. **Press [Yes].**  
Erase All Memory is suspended.
  3. **Turn off the main power.**

Before turning the power off, see "Turning On/Off the Power", Getting Started.

**Note**

- To resume overwriting, turn on the main power.



# 5. Enhanced Network Security

This chapter describes the functions for enhancing security when the machine is connected to the network.

## Access Control

The machine can control TCP/IP access.

Limit the IP addresses from which access is possible by specifying the access control range.

For example, if you specify the access control range as [192.168.15.16]-[192.168.15.20], the client PC addresses from which access is possible will be from [192.168.15.16] to [192.168.15.20].

### ★ Important

- Using access control, you can limit access involving LPR, RCP/RSH, FTP, ssh/sftp, Bonjour, SMB, WSD (Device), WSD (Printer), WSD (Scanner), IPP, DIPRINT, RHPP, Web Image Monitor, SmartDeviceMonitor for Client, or DeskTopBinder. You cannot limit the monitoring of SmartDeviceMonitor for Client. You cannot limit access involving telnet, or SmartDeviceMonitor for Admin, when using the SNMPv1 monitoring.

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Access Control] under "Security".
4. To specify the IPv4 address, enter an IP address that has access to the machine in "Access Control Range".

To specify the IPv6 address, enter an IP address that has access to the machine in "Range" under "Access Control Range", or enter an IP address in "Mask" and specify the "Mask Length".

5. Click [OK].
6. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
7. Log out.

## Enabling and Disabling Protocols

Specify whether to enable or disable the function for each protocol. By making this setting, you can specify which protocols are available and so prevent unauthorized access over the network. Network settings can be specified on the control panel, or using Web Image Monitor, telnet, SmartDeviceMonitor for Admin or Remote Communication Gate S. If you use SmartDeviceMonitor for Admin, start Web Image Monitor from SmartDeviceMonitor for Admin and configure the settings from there.

Protocol	Port	Setting method	When disabled
IPv4	-	<ul style="list-style-type: none"> <li>Control panel</li> <li>Web Image Monitor</li> <li>telnet</li> <li>SmartDeviceMonitor for Admin</li> <li>Remote Communication Gate S</li> </ul>	<p>All applications that operate over IPv4 cannot be used.</p> <p>IPv4 cannot be disabled from Web Image Monitor when using IPv4 transmission.</p>
IPv6	-	<ul style="list-style-type: none"> <li>Control panel</li> <li>Web Image Monitor</li> <li>telnet</li> <li>SmartDeviceMonitor for Admin</li> <li>Remote Communication Gate S</li> </ul>	<p>All applications that operate over IPv6 cannot be used.</p>
IPsec	-	<ul style="list-style-type: none"> <li>Control panel</li> <li>Web Image Monitor</li> <li>telnet</li> <li>SmartDeviceMonitor for Admin</li> </ul>	<p>Encrypted transmission using IPsec is disabled.</p>

Protocol	Port	Setting method	When disabled
FTP	TCP:21	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	<p>Functions that require FTP cannot be used.</p> <p>You can restrict personal information from being displayed by making settings on the control panel using "Restrict Display of User Information".</p>
ssh/sftp	TCP:22	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	<p>Functions that require sftp cannot be used.</p> <p>You can restrict personal information from being displayed by making settings on the control panel using "Restrict Display of User Information".</p>
telnet	TCP:23	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• SmartDeviceMonitor for Admin</li> </ul>	Commands using telnet are disabled.
SMTP	TCP:25 (variable)	<ul style="list-style-type: none"> <li>• Control panel</li> <li>• Web Image Monitor</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	Internet Fax or e-mail notification functions that require SMTP reception cannot be used.
HTTP	TCP:80	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> </ul>	<p>Functions that require HTTP cannot be used.</p> <p>Cannot print using IPP on port 80.</p>

Protocol	Port	Setting method	When disabled
HTTPS	TCP:443	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> </ul>	<p>Functions that require HTTPS cannot be used.</p> <p>@Remote cannot be used.</p> <p>You can also make settings to require SSL transmission using the control panel or Web Image Monitor.</p>
SMB	TCP:139	<ul style="list-style-type: none"> <li>• Control panel</li> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	SMB printing functions cannot be used.
NBT	UDP:137 UDP:138	<ul style="list-style-type: none"> <li>• telnet</li> </ul>	SMB printing functions via TCP/IP, as well as NetBIOS designated functions on the WINS server cannot be used.
SNMPv1,v2	UDP:161	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	<p>Functions that require SNMPv1, v2 cannot be used.</p> <p>Using the control panel, Web Image Monitor or telnet, you can specify that SNMPv1, v2 settings are read-only, and cannot be edited.</p>

Protocol	Port	Setting method	When disabled
SNMPv3	UDP:161	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	<p>Functions that require SNMPv3 cannot be used.</p> <p>You can also make settings to require SNMPv3 encrypted transmission and restrict the use of other transmission methods using the control panel, Web Image Monitor, or telnet.</p>
RSH/RCP	TCP:514	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	<p>Functions that require RSH and network TWAIN functions cannot be used.</p> <p>You can restrict personal information from being displayed by making settings on the control panel using "Restrict Display of User Information".</p>
LPR	TCP:515	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	<p>LPR functions cannot be used.</p> <p>You can restrict personal information from being displayed by making settings on the control panel using "Restrict Display of User Information".</p>

Protocol	Port	Setting method	When disabled
IPP	TCP:631	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	IPP functions cannot be used.
IP-Fax	TCP:1720 (H.323) UDP:1719 (Gatekeeper) TCP/UDP:5060 (SIP) TCP:5000 (H.245) UDP:5004, 5005 (Voice) TCP/UDP:49152 (T.38)	<ul style="list-style-type: none"> <li>• Control panel</li> <li>• Web Image Monitor</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	IP-Fax connecting functions using H.323, SIP and T.38 cannot be used.
SSDP	UDP:1900	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> </ul>	Device discovery using UPnP from Windows cannot be used.
Bonjour	UDP:5353	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	Bonjour functions cannot be used.
@Remote	TCP:7443 TCP:7444	<ul style="list-style-type: none"> <li>• Control panel</li> <li>• telnet</li> </ul>	@Remote cannot be used.



Protocol	Port	Setting method	When disabled
DIPRINT	TCP:9100	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	DIPRINT functions cannot be used.
RFU	TCP:10021	<ul style="list-style-type: none"> <li>• Control panel</li> <li>• telnet</li> </ul>	You can attempt to update firmware via FTP.
NetWare	(IPX/SPX)	<ul style="list-style-type: none"> <li>• Control panel</li> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	Cannot print with NetWare. SNMP over IPX cannot be used.
WSD (Device)	TCP:53000 (variable)	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	WSD (Device) functions cannot be used.
WSD (Printer)	TCP:53001 (variable)	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	WSD (Printer) functions cannot be used.

Protocol	Port	Setting method	When disabled
WSD (Scanner)	TCP-53002 (variable)	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> <li>• Remote Communication Gate S</li> </ul>	WSD (Scanner) functions cannot be used.
WS-Discovery	UDP/TCP:3702	<ul style="list-style-type: none"> <li>• telnet</li> <li>• Remote Communication Gate S</li> </ul>	WSD (Device, Printer, Scanner) search function cannot be used.
RHPP	TCP:59100	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> <li>• SmartDeviceMonitor for Admin</li> </ul>	Cannot print with RHPP.
LLTD	-	<ul style="list-style-type: none"> <li>• telnet</li> </ul>	Device search function using LLTD cannot be used.
LLMNR	UDP:5355	<ul style="list-style-type: none"> <li>• Web Image Monitor</li> <li>• telnet</li> </ul>	Name resolution requests using LLMNR cannot be respond.


**Note**

- "Restrict Display of User Information" is one of the Extended Security features. For details about making this setting, see p.261 "Specifying the Extended Security Functions".


## Enabling and Disabling Protocols Using the Control Panel

1. The network administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Interface Settings].

#### 4. Press [Effective Protocol].

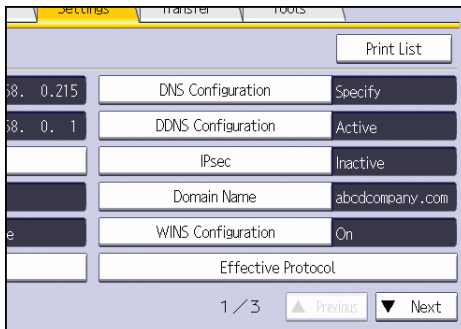

#### 5. Set the desired protocols to active/inactive.

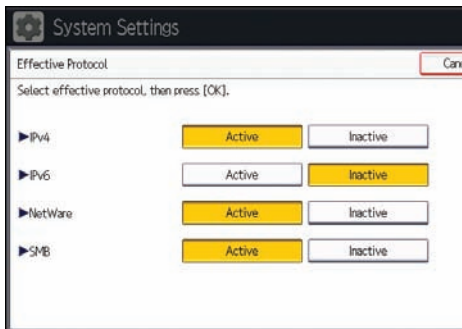

#### 6. Press [OK].

#### 7. Log out.

## Enabling and Disabling Protocols Using Web Image Monitor

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Network Security] under "Security".
4. Set the desired protocols to active/inactive (or open/close).
5. Click [OK].
6. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
7. Log out.

## Specifying Network Security Level

This setting lets you change the security level to limit unauthorized access. You can make network security level settings on the control panel, as well as Web Image Monitor. However, the protocols that can be specified differ.

### ★ Important

- With some utilities, communication or login may fail depending on the network security level.


### Network Security Levels

Security Level	Description
[Level 0]	Select [Level 0] to use all features. Use this setting when you have no information that needs to be protected from external threats.
[Level 1]	Select [Level 1] for moderate security to protect important information. Use this setting if the machine is connected to a local area network (LAN).
[FIPS140]	Has a security strength intermediate between [Level 1] and [Level 2]. It only uses a password as recommended by the U.S. government as its coding/authentication algorithm. Settings other than the algorithm are the same as [Level 2].
[Level 2]	Select [Level 2] for maximum security to protect confidential information. Use this setting when it is necessary to protect information from external threats.
[Custom]	For configurations other than the levels above. Configure using Web Image Monitor.


### Specifying Network Security Level Using the Control Panel

1. The network administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] twice.

### 5. Press [Network Security Level].

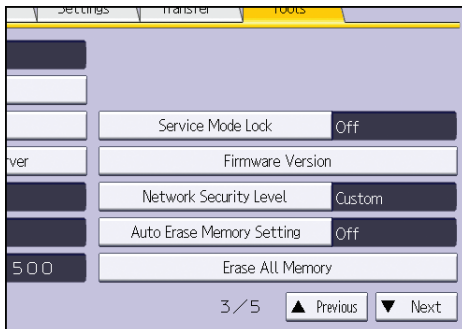

### 6. Select the network security level.

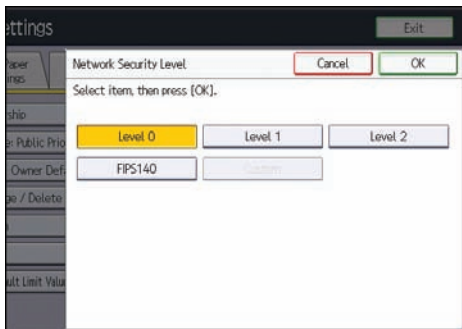

Select [Level 0], [Level 1], [Level 2], or [FIPS140].

### 7. Press [OK].

### 8. Log out.

## Specifying Network Security Level Using Web Image Monitor

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Network Security] under "Security".
4. Select the network security level in "Security Level".
5. Click [OK].
6. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
7. Log out.

## Status of Functions under Each Network Security Level

### TCP/IP

Function	Level 0	Level 1	FIPS 140	Level 2
TCP/IP	Active	Active	Active	Active
HTTP > Port 80	Open	Open	Open	Open
IPP > Port 80	Open	Open	Open	Open
IPP > Port 631	Open	Open	Close	Close
SSL/TLS > Port 443	Open	Open	Open	Open
SSL/TLS > Permit SSL/TLS Communication	Ciphertext Priority	Ciphertext Priority	Ciphertext Only	Ciphertext Only
SSL/TLS Version > TLS1.2	Active	Active	Active	Active
SSL/TLS Version > TLS1.1	Active	Active	Active	Active
SSL/TLS Version > TLS1.0	Active	Active	Active	Active
SSL/TLS Version > SSL3.0	Active	Active	Inactive	Inactive
Encryption Strength Setting > AES	128bit/ 256bit	128bit/ 256bit	128bit/ 256bit	128bit/ 256bit
Encryption Strength Setting > 3DES	168bit	168bit	168bit	-
Encryption Strength Setting > RC4	-	-	-	-
DIPRINT	Active	Active	Inactive	Inactive
LPR	Active	Active	Inactive	Inactive
FTP	Active	Active	Active	Active
sftp	Active	Active	Active	Active
ssh	Active	Active	Active	Active
RSH/RCP	Active	Active	Inactive	Inactive
TELNET	Active	Inactive	Inactive	Inactive
Bonjour	Active	Active	Inactive	Inactive

Function	Level 0	Level 1	FIPS 140	Level 2
SSDP	Active	Active	Inactive	Inactive
SMB	Active	Active	Inactive	Inactive
NetBIOS over TCP/IPv4	Active	Active	Inactive	Inactive
WSD (Device)	Active	Active	Active	Active
WSD (Printer)	Active	Active	Active	Active
WSD (Scanner)	Active	Active	Active	Active
WSD (Encrypted Communication of Device)	Inactive	Inactive	Active	Active
RHPP	Active	Active	Inactive	Inactive

The same settings are applied to IPv4 and IPv6.

TCP/IP setting is not governed by the security level. Manually specify whether to activate or inactivate this setting.

### NetWare

Function	Level 0	Level 1	FIPS 140	Level 2
NetWare	Active	Active	Inactive	Inactive

If NetWare is not used on your network, the above settings are not applicable.

### SNMP

Function	Level 0	Level 1	FIPS 140	Level 2
SNMP	Active	Active	Active	Active
Permit Settings by SNMPv1 and v2	On	Off	Off	Off
SNMPv1,v2 Function	Active	Active	Inactive	Inactive
SNMPv3 Function	Active	Active	Active	Active
Permit SNMPv3 Communication	Encryption/ Cleartext	Encryption/ Cleartext	Encryption Only	Encryption Only

## TCP/IP Encryption Strength Setting

Function	Level 0	Level 1	FIPS 140	Level 2
ssh > Encryption Algorithm	DES/ 3DES/ AES-128/ AES-192/ AES-256/ Blowfish/ Arcfour	3DES/ AES-128/ AES-192/ AES-256/ Arcfour	3DES/ AES-128/ AES-192/ AES-256	3DES/ AES-128/ AES-192/ AES-256
S/MIME > Encryption Algorithm	3DES-168 bit	3DES-168 bit	3DES-168 bit	AES-256 bit
S/MIME > Digest Algorithm	SHA1	SHA1	SHA1	SHA-256 bit
SNMPv3 > Authentication Algorithm	MD5	SHA1	SHA1	SHA1
SNMPv3 > Encryption Algorithm	DES	DES	AES-128	AES-128
Kerberos Authentication > Encryption Algorithm	AES256- CTS- HMAC- SHA1-96/ AES128- CTS- HMAC- SHA1-96/ DES3-CBC- SHA1/ RC4- HMAC/ DES-CBC- MD5	AES256- CTS- HMAC- SHA1-96/ AES128- CTS- HMAC- SHA1-96/ DES3-CBC- SHA1/ RC4- HMAC	AES256- CTS- HMAC- SHA1-96/ AES128- CTS- HMAC- SHA1-96/ DES3-CBC- SHA1	AES256- CTS- HMAC- SHA1-96/ AES128- CTS- HMAC- SHA1-96
Driver Encryption Key > Encryption Strength	Simple Encryption	DES	AES	AES



# Protecting the Communication Path via a Device Certificate

This machine can protect its communication path and establish encrypted communications using SSL/TLS, IPsec, S/MIME, or IEEE 802.1X.

To use these protocols, it is necessary to create and install a device certificate for the machine in advance.

The following two kinds of device certificates are possible.

- Create a self-signed certificate via the machine itself
- Request a certificate from a certificate authority

## ★ Important

- The administrator is required to manage the expiration of certificates and renew the certificates before they expire.
- The administrator is required to check that the issuer of the certificate is valid.
- When SHA256 or SHA512 is set for the "Algorithm Signature" on the device certificate, Windows XP SP3 or later is required to connect the device using Internet Explorer 6.0.

5


## Creating and Installing a Device Certificate from the Control Panel (Self-Signed Certificate)

Create and install the device certificate using control panel.


This section explains the use of a self-signed certificate as the device certificate.

1. The network administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.

**5. Press [Program / Delete Device Certificate].**

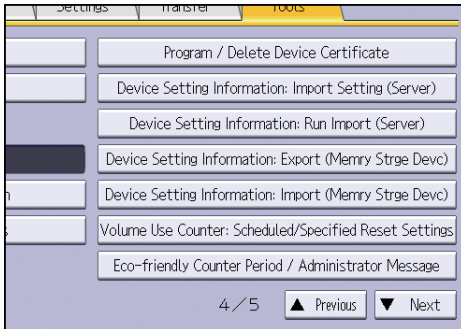

**6. Check that [Program] is selected.**

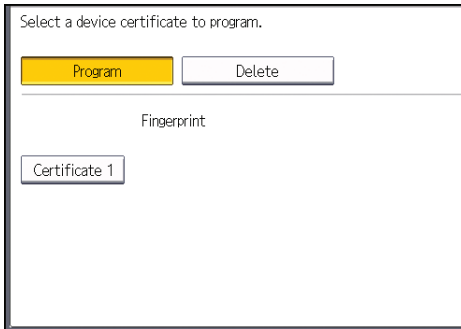

**7. Press [Certificate 1].**

Only [Certificate 1] can be created from the control panel.

**8. Make the necessary settings.**

To use the device certificate for S/MIME, PDF Digital Signature, or PDF/A Digital Signature, enter the machine's administrator's e-mail address in the e-mail address setting.

**9. Press [OK].**

"Installed" appears under "Certificate Status" to show that a device certificate for the machine has been installed.

**10. Log out.**

**Note**

- Select [Delete] to delete the device certificate from the machine.

---

## Creating and Installing a Device Certificate from Web Image Monitor (Self-Signed Certificate)

---

Create and install the device certificate using Web Image Monitor. For details about the displayed items and selectable items, see Web Image Monitor Help.

This section explains the use of a self-signed certificate as the device certificate.

**1. Log in as the network administrator from Web Image Monitor.**

**2. Point to [Device Management], and then click [Configuration].**

**3. Click [Device Certificate] under "Security".**

**4. Check the radio button next to the number of the certificate you want to create.**

To use SSL/TLS, select [Certificate 1]. To use any other protocol, select the certificate number desired.

**5. Click [Create].**

**6. Make the necessary settings.**

To use the device certificate for S/MIME, PDF Digital Signature, or PDF/A Digital Signature, enter the machine's administrator's e-mail address in the e-mail address setting.

**7. Click [OK].**

The setting is changed.

**8. Click [OK].**

A security warning dialog box appears.

**9. Check the details, and then click [OK].**

"Installed" appears under "Certificate Status" to show that a device certificate for the machine has been installed.

**10. Log out.**

#### Note

- Click [Delete] to delete the device certificate from the machine.

---

## Creating the Device Certificate (Issued by a Certificate Authority)

---

Create the device certificate using Web Image Monitor. For details about the displayed items and selectable items, see Web Image Monitor Help.

This section explains the use of a certificate issued by a certificate authority as the device certificate.

**1. Log in as the network administrator from Web Image Monitor.**

**2. Point to [Device Management], and then click [Configuration].**

**3. Click [Device Certificate] under "Security".**

**4. Check the radio button next to the number of the certificate you want to create.**

To use SSL/TLS, select [Certificate 1]. To use any other protocol, select the certificate number desired.

**5. Click [Request].**

**6. Make the necessary settings.**

**7. Click [OK].**

The setting is changed.

**8. Click [OK].**

"Requesting" appears for "Certificate Status".

**9. Log out.**

**10. Apply to the certificate authority for the device certificate.**

The application procedure depends on the certificate authority. For details, contact the certificate authority.

For the application, click Web Image Monitor Details icon and use the information that appears in "Certificate Details".

**Note**

- The issuing location may not be displayed if you request two certificates at the same time. When you install a certificate, be sure to check the certificate destination and installation procedure.
- Using Web Image Monitor, you can create the contents of the device certificate but you cannot send the certificate application.
- Click [Cancel Request] to cancel the request for the device certificate.

---

## Installing the Device Certificate (Issued by a Certificate Authority)

---

Install the device certificate using Web Image Monitor. For details about the displayed items and selectable items, see Web Image Monitor Help.

This section explains the use of a certificate issued by a certificate authority as the device certificate.

Enter the device certificate contents issued by the certificate authority.

**1. Log in as the network administrator from Web Image Monitor.**

**2. Point to [Device Management], and then click [Configuration].**

**3. Click [Device Certificate] under "Security".**

**4. Check the radio button next to the number of the certificate you want to install.**

To use SSL/TLS, select [Certificate 1]. To use any other protocol, select the certificate number desired.

**5. Click [Install].**

**6. Enter the contents of the device certificate.**

In the certificate box, enter the contents of the device certificate issued by the certificate authority.

If you are installing an intermediate certificate, enter the contents of the intermediate certificate also.

For details about the displayed items and selectable items, see Web Image Monitor Help.

7. Click [OK].

8. Wait a moment for the device to restart, and then click [OK].

"Installed" appears under "Certificate Status" to show that a device certificate for the machine has been installed.

9. Log out.

---

## Installing an Intermediate Certificate (Issued by a Certificate Authority)

---

This section explains how to use Web Image Monitor to install an intermediate certificate issued by a certificate authority.

If you do not have the intermediate certificate issued by the certificate authority, a warning message will appear during communication. If the certificate authority has issued an intermediate certificate, we recommend installing the intermediate certificate.

1. Log in as the network administrator from Web Image Monitor.

2. Point to [Device Management], and then click [Configuration].

3. Click [Device Certificate] under "Security".

4. Check the radio button next to the number of the certificate you want to install.

5. Click [Install Intermediate Certificate].

6. Enter the contents of the intermediate certificate.

In the certificate box, enter the contents of the intermediate certificate issued by the certificate authority. For details about the items and settings of a certificate, see Web Image Monitor Help.

7. Click [OK].

8. Wait a moment for the device to restart, and then click [OK].

The intermediate certificate will be installed on the device. The "Certificate Details" screen will inform you whether or not the installation of the intermediate certificate was successful. For details about the "Certificate Details" screen, see Web Image Monitor Help.


9. Log out.

## Configuring SSL/TLS

Configuring the machine to use SSL/TLS enables encrypted communication. Doing so makes it possible to prevent data from being intercepted during transmission, and its content from being analyzed or tampered with.


### Flow of SSL/TLS encrypted communications

1. To access the machine from a user's computer, request the SSL/TLS device certificate and public key.

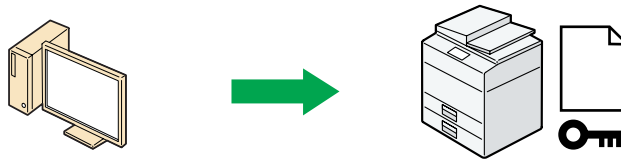


CJC002

2. The device certificate and public key are sent from the machine to the user's computer.

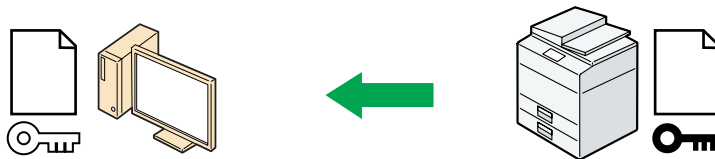


CJC003

3. The shared key created with the computer is encrypted using the public key, sent to the machine, and then decrypted using the private key in the machine.

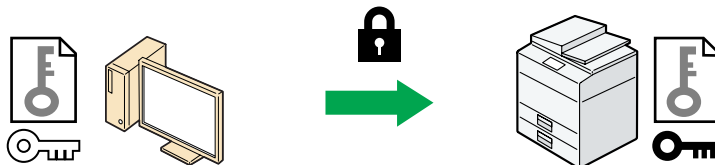

CJC004

4. The shared key is used for data encryption and decryption, thus achieving secure transmission.

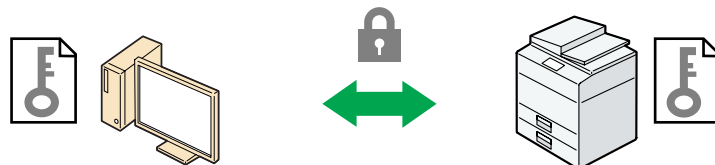

CJC005

### Configuration flow when using a self-signed certificate

1. Creating and installing the device certificate

Create and install a device certificate from the control panel or Web Image Monitor.

## 2. Enabling SSL/TLS

Enable the SSL/TLS setting using Web Image Monitor.

### Configuration flow when using an authority issued certificate

#### 1. Creating a device certificate and applying to the authority

After creating a device certificate on Web Image Monitor, apply to the certificate authority.

The application procedure after creating the certificate depends on the certificate authority.

Follow the procedure specified by the certificate authority.

#### 2. Installing the device certificate

Install the device certificate using Web Image Monitor.

#### 3. Enabling SSL/TLS

Enable the SSL/TLS setting using Web Image Monitor.

#### Note

- To confirm whether SSL/TLS configuration is enabled, enter "https://(the machine's IP address or host name)/" in your Web browser's address bar to access this machine. If the "The page cannot be displayed" message appears, check the configuration because the current SSL/TLS configuration is invalid.
- If you enable SSL/TLS for IPP (printer functions), sent data is encrypted, preventing it from being intercepted, analyzed, or tampered with.

## Enabling SSL/TLS

After installing the device certificate in the machine, enable the SSL/TLS setting.

This procedure is used for a self-signed certificate or a certificate issued by a certificate authority.

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [SSL/TLS] under "Security".
4. Click [Active] for the protocol version used in "SSL/TLS".
5. Select the encryption communication mode for "Permit SSL/TLS Communication".
6. If you want to disable a protocol, click [Inactive] next to "TLS1.2", "TLS1.1", "TLS1.0", or "SSL3.0".

At least one of these protocols must be enabled.

**7. Under "Encryption Strength Setting", specify the strength of encryption to be applied for "AES", "3DES", and/or "RC4". You must select at least one check box.**

Note that the availability of encryption strengths will vary depending on the settings you have specified for "TLS1.2", "TLS1.1", "TLS1.0", or "SSL3.0".

**8. Click [OK].**

**9. "Updating..." appears. Wait for about one or two minutes, and then click [OK].**

If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.

**10. Log out.**

**Note**

- If you set "Permit SSL/TLS Communication" to [Ciphertext Only], enter " https://(the machine's IP address or host name)/" to access the machine.
- If you set "Permit SSL/TLS Communication" to [Ciphertext Only], communication will not be possible if you select a protocol that does not support a Web browser, or specify an encryption strength setting only. If this is the case, enable communication by setting [Permit SSL / TLS Communication] to [Ciphertext / Cleartext] using the machine's control panel, and then specify the correct protocol and encryption strength.
- The SSL/TLS version and encryption strength settings can be changed, even under [Network Security].
- Depending on the states you specify for "TLS1.2", "TLS1.1", "TLS1.0", and "SSL3.0", the machine might not be able to connect to an external LDAP server.
- If only TLS1.2 and TLS1.1 are enabled, Integration Server authentication cannot be performed.
- The following types of communication and data are always encrypted by SSL3.0: communication via @Remote, Integration Server authentication, files sent via a delivery server, and logs transferred to Remote Communication Gate S.

## User Setting for SSL/TLS

We recommend that after installing the self-signed certificate or device certificate from a private certificate authority on the main unit and enabling SSL/TLS (communication encryption), you instruct users to install the certificate on their computers. Installation of the certificate is especially necessary for users who want to print via IPP-SSL from Windows Vista/7, Windows Server 2008/2008 R2. The network administrator must instruct each user to install the certificate.

**Note**

- Take the appropriate steps when you receive a user's inquiry concerning problems such as an expired certificate.



- Select [Trusted Root Certification Authorities] for the certificate store location when accessing the machine by IPP.
- If a certificate issued by a certificate authority is installed in the machine, confirm the certificate store location with the certificate authority.
- When the operating system's standard IPP port is used with Windows Vista/7 or Windows Server 2008/2008 R2, if the host name or IP address of the [Common Name] of the device certificate is changed, delete any previously configured PC printer(s) and re-install the printers after changing the [Common Name]. Also, if a user's authentication information (login user name and password) is to be changed, the printer must be deleted and after the user's information authentication settings are changed, the printer must then be reinstalled.

## Setting the SSL/TLS Encryption Mode

By specifying the SSL/TLS encrypted communication mode, you can change the security level.

### Encrypted communication mode


Using the encrypted communication mode, you can specify encrypted communication.

Encrypted communication mode	Description
Ciphertext Only	Allows encrypted communication only. If encryption is not possible, the machine does not communicate.
Ciphertext Priority	Performs encrypted communication if encryption is possible. If encryption is not possible, the machine communicates without it.
Ciphertext / Cleartext	Communicates with or without encryption, according to the setting.

After installing the device certificate, specify the SSL/TLS encrypted communication mode. By making this setting, you can change the security level.

1. The network administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Interface Settings].
4. Press [▼Next].

**5. Press [Permit SSL / TLS Communication].**

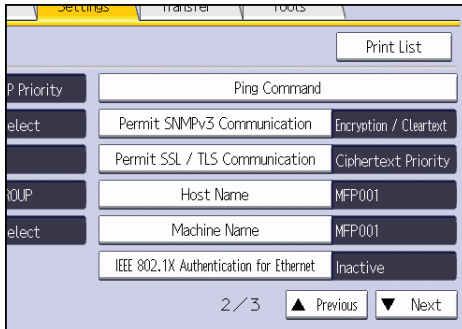

**6. Select the encrypted communication mode.**

Select [Ciphertext Only], [Ciphertext Priority], or [Ciphertext / Cleartext] as the encrypted communication mode.

**7. Press [OK].**

**8. Log out.**


**Note**


- The SSL/TLS encrypted communication mode can also be specified using Web Image Monitor. For details, see Web Image Monitor Help.

## Enabling SSL for SMTP Connections

Use the following procedure to enable SSL encryption for SMTP connections.

1. The network administrator logs in from the control panel.
2. Press [System Settings].
3. Press [File Transfer].
4. Press [SMTP Server].

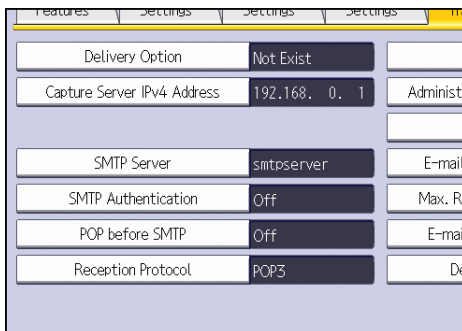

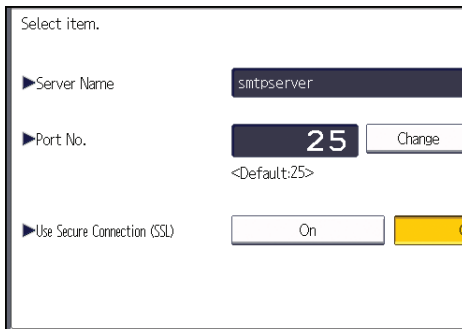**5. In "Use Secure Connection (SSL)", press [On].**

Select item.

▶ Server Name

▶ Port No.    
<Default:25>

▶ Use Secure Connection (SSL)

If you are not using SSL for SMTP connections, press [Off].

When "Use Secure Connection (SSL)" is set to [On], the port number is changed to 465.

**6. Press [OK].****7. Log out.****Note**

- If you set "Use Secure Connection (SSL)" to [On], you cannot bypass the SMTP server to send Internet Fax documents directly.

# Configuring S/MIME

By registering a user certificate in the Address Book, you can send e-mail that is encrypted with a public key which prevents its content from being altered during transmission. You can also prevent sender impersonation (spoofing) by installing a device certificate on the machine, and attaching an electronic signature created with a private key. You can apply these functions separately or, for stronger security, together.

To send encrypted e-mail, both the sender (this machine) and the receiver must support S/MIME.

## Compatible mailer applications

The S/MIME function can be used with the following applications:

- Microsoft Outlook 98 and later
- Microsoft Outlook Express 5.5 and later
- Thunderbird 3.1.7 and later
- Lotus Notes R5 and later
- Windows Live Mail 2009 and later

5

### ★ Important

- To use S/MIME, you must first specify [Administrator's E-mail Address] in [System Settings].

### ↓ Note

- If an electronic signature is specified for an e-mail, the administrator's address appears in the "From" field and the address of the user specified as "sender" appears in the "Reply To" field.
- When sending e-mail to users that support S/MIME and users that do not support S/MIME at the same time, the e-mail is separated into encrypted and unencrypted groups and then sent.
- When using S/MIME, the e-mail size is larger than normal.
- For details about using S/MIME with the scanner function, see "Security Settings to E-mails", Scan.
- For details about using S/MIME with the fax function, see "Encryption and Signature for Internet Fax/E-mail", Fax.

---

## E-mail Encryption

---

To send encrypted e-mail using S/MIME, the user certificate must first be prepared using Web Image Monitor and registered in the Address Book by the user administrator. Registering the certificate in the Address Book specifies each user's public key. After installing the certificate, specify the encryption algorithm using Web Image Monitor. The network administrator can specify the algorithm.

### E-mail encryption

1. Prepare the user certificate.

2. Install the user certificate in the Address Book using Web Image Monitor. (The public key on the certificate is specified in the Address Book.)
3. Specify the encryption algorithm using Web Image Monitor.
4. Using the shared key, encrypt the e-mail message.
5. The shared key is encrypted using the user's public key.
6. The encrypted e-mail is sent.
7. The receiver decrypts the shared key using a secret key that corresponds to the public key.
8. The e-mail is decrypted using the shared key.

#### ↓ Note

- There are three types of user certificates that can be installed on this machine, "DER Encoded binary X.509", "Base 64 Encoded X.509", and "PKCS #7" certificate.
- When installing a user certificate to the Address Book using Web Image Monitor, you might see an error message if the certificate file contains more than one certificate. If this error message appears, install the certificates one at a time.

## Specifying the user certificate

Each user certificate must be prepared in advance.

1. **Log in as the user administrator from Web Image Monitor.**
2. **Point to [Device Management], and then click [Address Book].**
3. **Select the user for whom the certificate will be installed.**
4. **Click [Manual Input], and then click [Change].**  
The Change User Information screen appears.
5. **Enter the user address in the "E-mail Address" field under "E-mail".**
6. **Click [Change] in "User Certificate".**
7. **Click [Browse], select the user certificate file, and then click [Open].**
8. **Click [OK].**

The user certificate is installed.

9. **"Updating..." appears. Wait for about one or two minutes, and then click [OK].**  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
10. **Log out.**

#### ↓ Note

- Once the valid period of the selected user certificate elapses, encrypted messages can no longer be sent. Select a certificate that is within its valid period.

## Specifying the encryption algorithm

---

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [S/MIME] under "Security".
4. Select the encryption algorithm from the drop-down menu next to "Encryption Algorithm" under "Encryption".
5. Click [OK].

The algorithm for S/MIME is set.

6. Click [Logout].

### Note

- Configure the settings taking into consideration the encryption algorithm and digest algorithm supported by the user's e-mail software.

5

---

## Attaching an Electronic Signature

---

To attach an electronic signature to sent e-mail, a device certificate must be installed in advance.

It is possible to use either a self-signed certificate created by the machine, or a certificate issued by a certificate authority. For details on creating and installing a device certificate, see p.131 "Protecting the Communication Path via a Device Certificate".

### Important

- **To install an S/MIME device certificate, you must first register "Administrator's E-mail Address" in [System Settings] as the e-mail address for the device certificate. Note that even if you will not be using S/MIME, you must still specify an e-mail address for the S/MIME device certificate.**

### Electronic signature

1. Install a device certificate on the machine. (The secret key on the certificate is configured on the machine.)
2. Attach the electronic signature to an e-mail using the secret key provided by the device certificate.
3. Send the e-mail with the electronic signature attached to the user.
4. The receiver requests the public key and device certificate from the machine.
5. Using the public key, you can determine the authenticity of the attached electronic signature to see if the message has been altered.

### Configuration flow (self-signed certificate)

1. Create and install the device certificate using Web Image Monitor.
2. Make settings for the certificate to be used for S/MIME using Web Image Monitor.

3. Make settings for the electronic signature using Web Image Monitor.

### Configuration flow (certificate issued by a certificate authority)

1. Create the device certificate using Web Image Monitor.  
The application procedure for a created certificate depends on the certificate authority. Follow the procedure specified by the certificate authority.
2. Install the device certificate using Web Image Monitor.
3. Make settings for the certificate to be used for S/MIME using Web Image Monitor.
4. Make settings for the electronic signature using Web Image Monitor.

### Selecting the device certificate

Select the device certificate to be used for S/MIME using Web Image Monitor.

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Device Certificate] under "Security".
4. Select the certificate to be used for the electronic signature from the drop-down box in "S/MIME" under "Certification".
5. Click [OK].

The certificate to be used for the S/MIME electronic signature is set.

6. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
7. Log out.

#### Note

- If the selected device certificate expires, signatures cannot be attached to e-mail. Select a certificate that is within its valid period.

### Specifying the electronic signature

After installing a device certificate to this machine, configure the conditions for signatures for S/MIME. The configuration procedure is the same regardless of whether you are using a self-signed certificate or a certificate issued by a certificate authority.

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [S/MIME] under "Security".

4. Select the digest algorithm to be used in the electronic signature next to "Digest Algorithm" under "Signature".
5. Select the method for attaching the electronic signature when sending e-mail from the scanner next to "When Sending E-mail by Scanner" under "Signature".
6. Select the method for attaching the electronic signature when forwarding received fax messages next to "When Transferring by Fax" under "Signature".
7. Select the method for attaching the electronic signature when sending e-mail from the fax next to "When Sending E-mail by Fax" under "Signature".
8. Select the method for attaching the electronic signature when e-mail notification is sent using the fax function next to "When E-mailing TX Results by Fax" under "Signature".
9. Select the method for attaching the electronic signature when forwarding stored documents next to "When Transferring Files Stored in Document Server (Utility)" under "Signature".
10. Click [OK].

The settings for the S/MIME electronic signature are enabled.

11. Log out.

#### ↓ Note

- Configure the settings taking into consideration the encryption algorithm and digest algorithm supported by the user's e-mail software.

## Specifying Checking of the Certificate Valid Period

The validity period of the certificate used with S/MIME is verified when you send e-mail.

You can change the timing at which the valid period is checked.

Operation mode	Description
Security Priority	<p>The validity period is verified at the following timings.</p> <p><b>User Certificate</b></p> <p>(a). When the address is selected</p> <p>(b). When the [Start] key is pressed</p> <p><b>Device certificate</b></p> <p>(c). When the first address is selected</p> <p>(d). When the [Start] key is pressed</p>



Operation mode	Description
Performance Priority	<p>Performing (b) and (c) are omitted.</p> <p>If it takes a long time to verify the validity period when the address is selected or when the [Start] key is pressed, operation can be completed quicker by selecting "Performance Priority".</p>

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [S/MIME] under "Security".
4. Select the Operation Mode.
5. Click [OK].
6. Log out.

**Note**

- If the validity period of a certificate is valid, but expires before an e-mail is retrieved from the mail server by a client computer, the e-mail cannot be retrieved from the server.
- If an error occurs outside the validity period of the certificate when S/MIME e-mail is sent automatically, such as when sending e-mail at a specified time, notification is sent in plain text to the sender's or administrator's e-mail address. The error content can be viewed in the job log. When using S/MIME, be sure to enable the job log collection function. For details about how to view the logs, see p.207 "Managing Log Files".

# Configuring PDFs with Electronic Signatures

This machine can create PDFs with electronic signatures. PDFs with electronic signatures certify the creator of the PDF document and the date and time of creation. Tampering is also prevented as documents that have been tampered with can be detected.

In order to create PDFs with electronic signatures, first select the certificate to use for the signature from the device certificates that have been created and installed.

The configuration procedure is the same regardless of whether you are using a self-signed certificate or a certificate issued by a certificate authority.

## ★ Important

- To create digitally signed PDFs, you must first specify [Administrator's E-mail Address] in [File Transfer] in [System Settings].
- To use the device certificate for digitally signed PDFs, you must first specify the administrator's e-mail address so that it is the same as that registered as "Administrator's E-mail Address" in [System Settings].

5

## Selecting the Device Certificate

Select the certificate to use for signatures.

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Device Certificate] under "Security".
4. Select the certificate to be used for the electronic signature from the drop-down box in "PDF Digital Signature" or "PDF/A Digital Signature" under "Certification".

PDF Digital Signature: This can be attached to PDFs in formats other than PDF/A.

PDF/A Digital Signature: This can be attached to PDFs in the PDF/A format.

5. Click [OK].
6. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.

7. Log out.

## ↓ Note

- If the selected device certificate expires, signatures cannot be attached to PDFs. Select a certificate that is within its valid period.
- To provide an electronic signature for a PDF/A file, select "SHA1 withRSA1024" as the device certificate's algorithm signature.

# Configuring IPsec

For communication security, this machine supports IPsec. IPsec transmits secure data packets at the IP protocol level using the shared key encryption method, where both the sender and receiver retain the same key. This machine has two methods that you can use to specify the shared encryption key for both parties: encryption key auto exchange and encryption key manual settings. Using the auto exchange setting, you can renew the shared key exchange settings within a specified validity period, and achieve higher transmission security.

## ★ Important

- When "Inactive" is specified for "Exclude HTTPS Communication", access to Web Image Monitor can be lost if the key settings are improperly configured. In order to prevent this, you can specify IPsec to exclude HTTPS transmission by selecting "Active". When you want to include HTTPS transmission, we recommend that you select "Inactive" for "Exclude HTTPS Communication" after confirming that IPsec is properly configured. When "Active" is selected for "Exclude HTTPS Communication", even though HTTPS transmission is not targeted by IPsec, Web Image Monitor might become unusable when TCP is targeted by IPsec from the computer side. If you cannot access Web Image Monitor due to IPsec configuration problems, disable IPsec in System Settings on the control panel, and then access Web Image Monitor. For details about enabling and disabling IPsec using the control panel, see "System Settings", Connecting the Machine/ System Settings.
- IPsec is not applied to data obtained through DHCP, DNS, or WINS.
- IPsec for IPv4 is supported by Windows XP SP2 and Windows Server 2003/2003 R2. IPsec for both IPv4 and IPv6 is supported by Windows Vista/7, Windows Server 2008/2008 R2, Mac OS X 10.4.8 and later, Red Hat Enterprise Linux WS 4.0 and Solaris 10. However, some setting items are not supported depending on the operating system. Make sure the IPsec settings you specify are consistent with the operating system's IPsec settings.

---

## Encryption and Authentication by IPsec

---

IPsec consists of two main functions: the encryption function, which ensures the confidentiality of data, and the authentication function, which verifies the sender of the data and the data's integrity. This machine's IPsec function supports two security protocols: the ESP protocol, which enables both of the IPsec functions at the same time, and the AH protocol, which enables only the authentication function.

### ESP protocol

The ESP protocol provides secure transmission through both encryption and authentication. This protocol does not provide header authentication.

- For successful encryption, both the sender and receiver must specify the same encryption algorithm and encryption key. If you use the encryption key auto exchange method, the encryption algorithm and encryption key are specified automatically.

- For successful authentication, the sender and receiver must specify the same authentication algorithm and authentication key. If you use the encryption key auto exchange method, the authentication algorithm and authentication key are specified automatically.

### AH protocol

The AH protocol provides secure transmission through authentication of packets only, including headers.

- For successful authentication, the sender and receiver must specify the same authentication algorithm and authentication key. If you use the encryption key auto exchange method, the authentication algorithm and authentication key are specified automatically.

### AH protocol + ESP protocol

When combined, the ESP and AH protocols provide secure transmission through both encryption and authentication. These protocols provide header authentication.

- For successful encryption, both the sender and receiver must specify the same encryption algorithm and encryption key. If you use the encryption key auto exchange method, the encryption algorithm and encryption key are specified automatically.
- For successful authentication, the sender and receiver must specify the same authentication algorithm and authentication key. If you use the encryption key auto exchange method, the authentication algorithm and authentication key are specified automatically.

#### Note

- Some operating systems use the term "Compliance" in place of "Authentication".

---

## Encryption Key Auto Exchange Settings and Encryption Key Manual Settings

---

This machine provides two key setting methods: manual and auto exchange. Using either of these methods, agreements such as the IPsec algorithm and key must be specified for both sender and receiver. Such agreements form what is known as an SA (Security Association). IPsec communication is possible only if the receiver's and sender's SA settings are identical.

If you use the auto exchange method to specify the encryption key, the SA settings are auto configured on both parties' machines. However, before setting the IPsec SA, the ISAKMP SA (Phase 1) settings are auto configured. After this, the IPsec SA (Phase 2) settings, which allow actual IPsec transmission, are auto configured.

Also, for further security, the SA can be periodically auto updated by applying a validity period (time limit) for its settings. This machine only supports IKEv1 for encryption key auto exchange.

If you specify the encryption key manually, the SA settings must be shared and specified identically by both parties. To preserve the security of your SA settings, we recommend that they are not exchanged over a network.

Note that for both the manual and auto method of encryption key specification, multiple settings can be configured in the SA.

### Settings 1-4 and default setting

Using either the manual or auto exchange method, you can configure four separate sets of SA details (such as different shared keys and IPsec algorithms). In the default settings of these sets, you can include settings that the fields of sets 1 to 4 cannot contain.

When IPsec is enabled, set 1 has the highest priority and 4 has the lowest. You can use this priority system to target IP addresses more securely. For example, set the broadest IP range at the lowest priority (4), and then set specific IP addresses at a higher priority level (3 and higher). This way, when IPsec transmission is enabled for a specific IP address, the higher level settings will be applied.

## IPsec Settings

IPsec settings for this machine can be made on Web Image Monitor. The following table explains individual setting items.

### Encryption key auto exchange / manual settings - shared settings

Setting	Description	Setting value
IPsec	Specify whether to enable or disable IPsec.	<ul style="list-style-type: none"> <li>Active</li> <li>Inactive</li> </ul>
Exclude HTTPS Communication	Specify whether to enable IPsec for HTTPS transmission.	<ul style="list-style-type: none"> <li>Active</li> <li>Inactive</li> </ul> Specify "Active" if you do not want to use IPsec for HTTPS transmission.
Encryption Key Manual Settings	Specify whether to enable Encryption Key Manual Settings, or use Encryption Key Auto Exchange Settings only.	<ul style="list-style-type: none"> <li>Active</li> <li>Inactive</li> </ul> Specify "Active" if you want to use "Encryption Key Manual Settings".

The IPsec setting can also be made from the control panel.

### Encryption key auto exchange security level

When you select a security level, certain security settings are automatically configured. The following table explains security level features.

Security level	Security level features
Authentication Only	Select this level if you want to authenticate the transmission partner and prevent unauthorized data tampering, but not perform data packet encryption. Since the data is sent in cleartext, data packets are vulnerable to eavesdropping attacks. Do not select this if you are exchanging sensitive information.
Authentication and Low Level Encryption	Select this level if you want to encrypt the data packets as well as authenticate the transmission partner and prevent unauthorized packet tampering. Packet encryption helps prevent eavesdropping attacks. This level provides less security than "Authentication and High Level Encryption".
Authentication and High Level Encryption	Select this level if you want to encrypt the data packets as well as authenticate the transmission partner and prevent unauthorized packet tampering. Packet encryption helps prevent eavesdropping attacks. This level provides higher security than "Authentication and Low Level Encryption".

5

The following table lists the settings that are automatically configured according to the security level.

Setting	Authentication Only	Authentication and Low Level Encryption	Authentication and High Level Encryption
Security Policy	Apply	Apply	Apply
Encapsulation Mode	Transport	Transport	Transport
IPsec Requirement Level	Use When Possible	Use When Possible	Always Require
Authentication Method	PSK	PSK	PSK
Phase 1 Hash Algorithm	MD5	SHA1	SHA256
Phase 1 Encryption Algorithm	DES	3DES	AES-128-CBC

Setting	Authentication Only	Authentication and Low Level Encryption	Authentication and High Level Encryption
Phase 1 Diffie-Hellman Group	2	2	2
Phase 2 Security Protocol	AH	ESP	ESP
Phase 2 Authentication Algorithm	HMAC-SHA512-256/ HMAC-SHA384-192/ HMAC-SHA256-128/ HMAC-SHA1-96	HMAC-SHA512-256/ HMAC-SHA384-192/ HMAC-SHA256-128/ HMAC-SHA1-96	HMAC-SHA512-256/ HMAC-SHA384-192/ HMAC-SHA256-128
Phase 2 Encryption Algorithm	Cleartext (NULL encryption)	3DES/AES-128/ AES-192/AES-256	AES-128/AES-192/ AES-256
Phase 2 PFS	Inactive	Inactive	2

### Encryption key auto exchange settings items

When you specify a security level, the corresponding security settings are automatically configured, but other settings, such as address type, local address, and remote address must still be configured manually.

After you specify a security level, you can still make changes to the auto configured settings. When you change an auto configured setting, the security level switches automatically to "User Setting".

Setting	Description	Setting value
Address Type	Specify the address type for which IPsec transmission is used.	<ul style="list-style-type: none"> <li>• Inactive</li> <li>• IPv4</li> <li>• IPv6</li> <li>• IPv4/IPv6 (Default Settings only)</li> </ul>
Local Address	Specify the machine's address. If you are using multiple addresses in IPv6, you can also specify an address range.	<p>The machine's IPv4 or IPv6 address.</p> <p>If you are not setting an address range, enter 32 after an IPv4 address, or enter 128 after an IPv6 address.</p>

Setting	Description	Setting value
Remote Address	Specify the address of the IPsec transmission partner. You can also specify an address range.	The IPsec transmission partner's IPv4 or IPv6 address. If you are not setting an address range, enter 32 after an IPv4 address, or enter 128 after an IPv6 address.
Security Policy	Specify how IPsec is handled.	<ul style="list-style-type: none"> <li>• Apply</li> <li>• Bypass</li> <li>• Discard</li> </ul>
Encapsulation Mode	Specify the encapsulation mode. (auto setting)	<ul style="list-style-type: none"> <li>• Transport</li> <li>• Tunnel</li> </ul> (Tunnel beginning address - Tunnel ending address) Select the transport mode (this has no bearing on the security level). If you specify "Tunnel", you must then specify the "Tunnel End Point", which are the beginning and ending IP addresses. Set the same address for the beginning point as you set in "Local Address".
IPsec Requirement Level	Specify whether to only transmit using IPsec, or to allow cleartext transmission when IPsec cannot be established. (auto setting)	<ul style="list-style-type: none"> <li>• Use When Possible</li> <li>• Always Require</li> </ul>



Setting	Description	Setting value
Authentication Method	Specify the method for authenticating transmission partners. (auto setting)	<ul style="list-style-type: none"> <li>• PSK</li> <li>• Certificate</li> </ul> <p>If you specify "PSK", you must then set the PSK text (using ASCII characters).</p> <p>If you are using "PSK", specify a PSK password using up to 32 ASCII characters.</p> <p>If you specify "Certificate", the certificate for IPsec must be installed and specified before it can be used.</p>
PSK Text	Specify the pre-shared key for PSK authentication.	Enter the pre-shared key required for PSK authentication.
Phase 1 Hash Algorithm	Specify the Hash algorithm to be used in phase 1. (auto setting)	<ul style="list-style-type: none"> <li>• MD5</li> <li>• SHA1</li> <li>• SHA256</li> <li>• SHA384</li> <li>• SHA512</li> </ul>
Phase 1 Encryption Algorithm	Specify the encryption algorithm to be used in phase 1. (auto setting)	<ul style="list-style-type: none"> <li>• DES</li> <li>• 3DES</li> <li>• AES-128-CBC</li> <li>• AES-192-CBC</li> <li>• AES-256-CBC</li> </ul>
Phase 1 Diffie-Hellman Group	Select the Diffie-Hellman group number used for IKE encryption key generation. (auto setting)	<ul style="list-style-type: none"> <li>• 1</li> <li>• 2</li> <li>• 14</li> </ul>
Phase 1 Validity Period	Specify the time period for which the SA settings in phase 1 are valid.	Set in seconds from 300 sec. (5 min.) to 172800 sec. (48 hrs.).

Setting	Description	Setting value
Phase 2 Security Protocol	Specify the security protocol to be used in Phase 2.  To apply both encryption and authentication to sent data, specify "ESP" or "ESP+AH".  To apply authentication data only, specify "AH".  (auto setting)	<ul style="list-style-type: none"> <li>• ESP</li> <li>• AH</li> <li>• ESP+AH</li> </ul>
Phase 2 Authentication Algorithm	Specify the authentication algorithm to be used in phase 2.  (auto setting)	<ul style="list-style-type: none"> <li>• HMAC-MD5-96</li> <li>• HMAC-SHA1-96</li> <li>• HMAC-SHA256-128</li> <li>• HMAC-SHA384-192</li> <li>• HMAC-SHA512-256</li> </ul>
Phase 2 Encryption Algorithm Permissions	Specify the encryption algorithm to be used in phase 2.  (auto setting)	<ul style="list-style-type: none"> <li>• Cleartext (NULL encryption)</li> <li>• DES</li> <li>• 3DES</li> <li>• AES-128</li> <li>• AES-192</li> <li>• AES-256</li> </ul>
Phase 2 PFS	Specify whether to activate PFS. Then, if PFS is activated, select the Diffie-Hellman group.  (auto setting)	<ul style="list-style-type: none"> <li>• Inactive</li> <li>• 1</li> <li>• 2</li> <li>• 14</li> </ul>
Phase 2 Validity Period	Specify the time period for which the SA settings in phase 2 are valid.	Specify a period (in seconds) from 300 (5min.) to 172800 (48 hrs.).


## Encryption key manual settings items

Setting	Description	Setting value
Address Type	Specify the address type for which IPsec transmission is used.	<ul style="list-style-type: none"> <li>• Inactive</li> <li>• IPv4</li> <li>• IPv6</li> <li>• IPv4/IPv6 (Default Settings only)</li> </ul>
Local Address	Specify the machine's address. If you are using multiple IPv6 addresses, you can also specify an address range.	The machine's IPv4 or IPv6 address. If you are not setting an address range, enter 32 after an IPv4 address, or enter 128 after an IPv6 address.
Remote Address	Specify the address of the IPsec transmission partner. You can also specify an address range.	The IPsec transmission partner's IPv4 or IPv6 address. If you are not setting an address range, enter 32 after an IPv4 address, or enter 128 after an IPv6 address.
Encapsulation Mode	Select the encapsulation mode.	<ul style="list-style-type: none"> <li>• Transport</li> <li>• Tunnel</li> </ul> (Tunnel beginning address - Tunnel ending address) If you select "Tunnel", set the "Tunnel End Point", the beginning and ending IP addresses. In "Tunnel End Point", set the same address for the beginning point as you set in "Local Address".
SPI (Output)	Specify the same value as your transmission partner's SPI input value.	Any number between 256 and 4095
SPI (Input)	Specify the same value as your transmission partner's SPI output value.	Any number between 256 and 4095

Setting	Description	Setting value
Security Protocol	<p>To apply both encryption and authentication to sent data, specify "ESP" or "ESP+AH".</p> <p>To apply authentication data only, specify "AH".</p>	<ul style="list-style-type: none"> <li>• ESP</li> <li>• AH</li> <li>• ESP+AH</li> </ul>
Authentication Algorithm	Specify the authentication algorithm.	<ul style="list-style-type: none"> <li>• HMAC-MD5-96</li> <li>• HMAC-SHA1-96</li> <li>• HMAC-SHA256-128</li> <li>• HMAC-SHA384-192</li> <li>• HMAC-SHA512-256</li> </ul>
Authentication Key	Specify the key for the authentication algorithm.	<p>Specify a value within the ranges shown below, according to the encryption algorithm.</p> <p>Hexadecimal value 0-9, a-f, A-F</p> <ul style="list-style-type: none"> <li>• If HMAC-MD5-96, set 32 digits</li> <li>• If HMAC-SHA1-96, set 40 digits</li> <li>• If HMAC-SHA256-128, set 64 digits</li> <li>• If HMAC-SHA384-192, set 96 digits</li> <li>• If HMAC-SHA512-256, set 128 digits</li> </ul> <p>ASCII</p> <ul style="list-style-type: none"> <li>• If HMAC-MD5-96, set 16 characters</li> <li>• If HMAC-SHA1-96, set 20 characters</li> <li>• If HMAC-SHA256-128, set 32 characters</li> <li>• If HMAC-SHA384-192, set 48 characters</li> <li>• If HMAC-SHA512-256, set 64 characters</li> </ul>

Setting	Description	Setting value
Encryption Algorithm	Specify the encryption algorithm.	<ul style="list-style-type: none"> <li>• Cleartext (NULL encryption)</li> <li>• DES</li> <li>• 3DES</li> <li>• AES-128</li> <li>• AES-192</li> <li>• AES-256</li> </ul>
Encryption Key	Specify the key for the encryption algorithm.	<p>Specify a value within the ranges shown below, according to the encryption algorithm.</p> <p>hexadecimal value 0-9, a-f, A-F</p> <ul style="list-style-type: none"> <li>• DES, set 16 digits</li> <li>• 3DES, set 48 digits</li> <li>• AES-128, set 32 digits</li> <li>• AES-192, set 48 digits</li> <li>• AES-256, set 64 digits</li> </ul> <p>ASCII</p> <ul style="list-style-type: none"> <li>• DES, set 8 characters</li> <li>• 3DES, set 24 characters</li> <li>• AES-128, set 16 characters</li> <li>• AES-192, set 24 characters</li> <li>• AES-256, set 32 characters</li> </ul>

## Encryption Key Auto Exchange Settings Configuration Flow

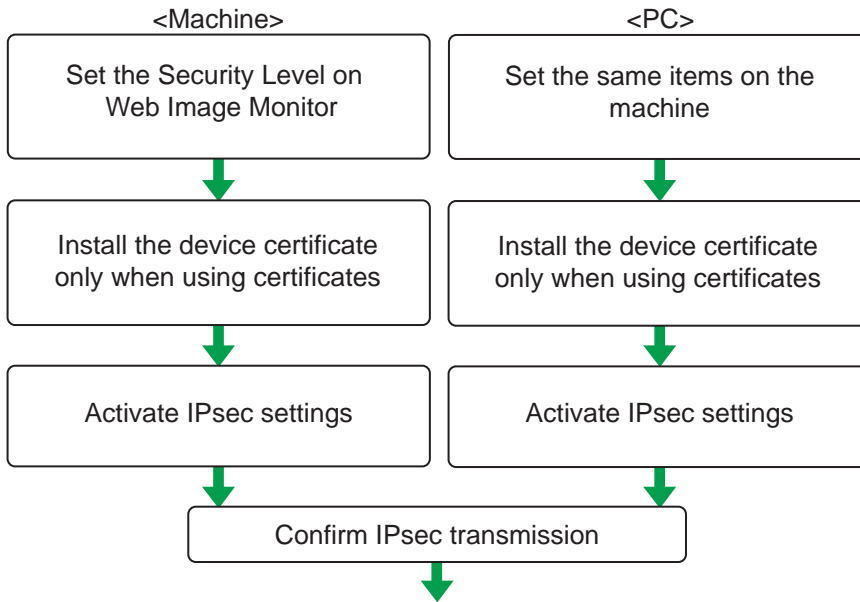

CJD015

### Note

- To use a certificate to authenticate the transmission partner in encryption key auto exchange settings, a device certificate must be installed.
- After configuring IPsec, you can use "Ping" command to check if the connection is established correctly. However, you cannot use "Ping" command when ICMP is excluded from IPsec transmission on the computer side. Also, because the response is slow during initial key exchange, it may take some time to confirm that transmission has been established.

## Specifying Encryption Key Auto Exchange Settings

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [IPsec] under "Security".
4. Click [Edit] under "Encryption Key Auto Exchange Settings".
5. Make encryption key auto exchange settings in [Settings 1].  
If you want to make multiple settings, select the settings number and add settings.
6. Click [OK].
7. Select [Active] for "IPsec" in "IPsec".

8. Set "Exclude HTTPS Communication" to [Active] if you do not want to use IPsec for HTTPS transmission.
9. Click [OK].
10. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
11. Log out.

#### Note

- To change the transmission partner authentication method for encryption key auto exchange settings to "Certificate", you must first install and assign a certificate. For details about creating and installing a device certificate, see p.131 "Protecting the Communication Path via a Device Certificate". For the method of assigning installed certificates to IPsec, see "Selecting the Certificate for IPsec".

## Selecting the certificate for IPsec

Using Web Image Monitor, select the certificate to be used for IPsec. You must install the certificate before it can be used. For details about creating and installing a device certificate, see p.131 "Protecting the Communication Path via a Device Certificate".

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Device Certificate] under "Security".
4. Select the certificate to be used for IPsec from the drop-down box in "IPsec" under "Certification".
5. Click [OK].  
The certificate for IPsec is specified.
6. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
7. Log out.

## Specifying IPsec settings on the computer

Specify exactly the same settings for IPsec SA settings on your computer as are specified by the machine's security level on the machine. Setting methods differ according to the computer's operating system. The example procedure shown here uses Windows 7 when the "Authentication and Low Level Encryption" security level is selected.

1. On the [Start] menu, click [Control Panel], click [System and Security], and then click [Administrative Tools].

If you are using Windows XP, on the [Start] menu, click [Control Panel], click [Performance and Maintenance], and then click [Administrative Tools].

2. Double-click [Local Security Policy].

If the "User Account Control" dialog box appears, click [Yes].

3. Click [IP Security Policies on Local Computer].

4. In the "Action" menu, click [Create IP Security Policy].

The IP Security Policy Wizard appears.

5. Click [Next].

6. Enter a security policy name in "Name", and then click [Next].

7. Clear the "Activate the default response rule" check box, and then click [Next].

**5**

8. Select "Edit properties", and then click [Finish].

9. In the "General" tab, click [Settings].

If you are using Windows XP, in the [General] tab, click [Advanced].

10. In "Authenticate and generate a new key after every", enter the same validity period (in minutes) that is specified on the machine in "Encryption Key Auto Exchange Settings Phase 1", and then click [Methods].

11. Confirm that the hash algorithm ("Integrity"), encryption algorithm ("Encryption") and "Diffie-Hellman Group" settings in "Security method preference order" all match those specified on the machine in "Encryption Key Auto Exchange Settings Phase 1".

If the settings are not displayed, click [Add].

12. Click [OK] twice.

13. Click [Add] in the "Rules" tab.

The Security Rule Wizard appears.

14. Click [Next].

15. Select "This rule does not specify a tunnel", and then click [Next].

16. Select the type of network for IPsec, and then click [Next].

17. Click [Add] in the IP Filter List.

18. In [Name], enter an IP Filter name, and then click [Add].

The IP Filter Wizard appears.

19. Click [Next].

20. If required, enter a description of the IP filter, and then click [Next].

21. Select "My IP Address" in "Source address", and then click [Next].



22. Select "A specific IP Address or Subnet" in "Destination address", enter the machine's IP address, and then click [Next].
23. Select the protocol type for IPsec, and then click [Next].

If you are using IPsec with IPv6, select "58" as the protocol number for the "Other" target protocol type.
24. Click [Finish].
25. Click [OK].
26. Select the IP filter that was just created, and then click [Next].
27. Click [Add].

Filter action wizard appears.
28. Click [Next].
29. In [Name], enter an IP Filter action name, and then click [Next].
30. Select "Negotiate security", and then click [Next].
31. Select "Allow unsecured communication if a secure connection connect be established.", and then [Next].
32. Select "Custom" and click [Settings].
33. In "Integrity algorithm", select the authentication algorithm that was specified on the machine in "Encryption Key Auto Exchange Settings Phase 2".
34. In "Encryption algorithm", select the encryption algorithm that specified on the machine in "Encryption Key Auto Exchange Settings Phase 2".
35. In Session key settings, select "Generate a new key every", and enter the validity period (in seconds) that was specified on the machine in "Encryption Key Auto Exchange Settings Phase 2".
36. Click [OK].
37. Click [Next].
38. Click [Finish].
39. Select the filter action that was just created, and then click [Next].
40. Select the authentication method, and then click [Next].

If you select "Certificate" for authentication method in "Encryption Key Auto Exchange Settings" on the machine, specify the device certificate. If you select "PSK", enter the same PSK text specified on the machine with the pre-shared key.
41. Click [Finish].
42. Click [OK].


The new IP security policy (IPsec settings) is specified.

**43. Select the security policy that was just created, right click, and then click [Assign].**

IPsec settings on the computer are enabled.

**Note**

- To disable the computer's IPsec settings, select the security policy, right click, and then click [Un-assign].
- If you specify the "Authentication and High Level Encryption" security level in "Encryption Key Auto Exchange Settings", also select the "Use session key perfect forward secrecy (PFS)" check box in the filter action properties screen. If using PFS in Windows, the PFS group number used in phase 2 is automatically negotiated in phase 1 from the Diffie-Hellman group number (set in step 11). Consequently, if you change the security level specified automatic settings on the machine and "User Setting" appears, you must set the same the group number for "Phase 1 Diffie-Hellman Group" and "Phase 2 PFS" on the machine to establish IPsec transmission.

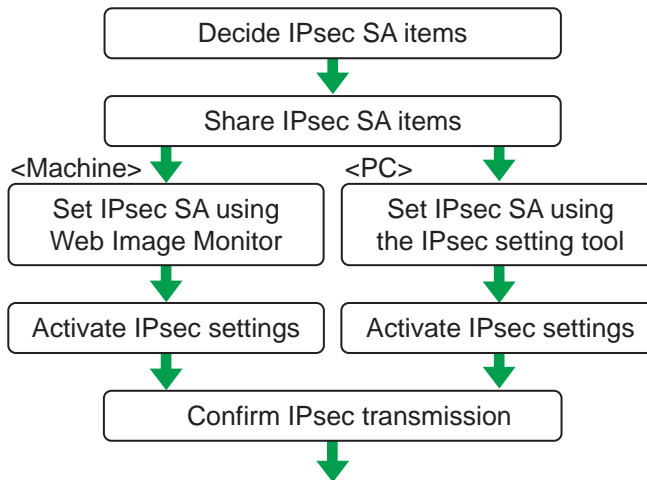**5****Encryption Key Manual Settings Configuration Flow**

CJD016

**Note**

- Before transmission, SA information is shared and specified by the sender and receiver. To prevent SA information leakage, we recommend that this exchange is not performed over the network.
- After configuring IPsec, you can use "Ping" command to check if the connection is established correctly. However, you cannot use "Ping" command when ICMP is excluded from IPsec transmission. Also, because the response is slow during initial key exchange, it may take some time to confirm that transmission has been established.

## Specifying Encryption Key Manual Settings

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [IPsec] under "Security".
4. Select [Active] for "Encryption Key Manual Settings".
5. Click [Edit] under "Encryption Key Manual Settings".
6. Set items for encryption key manual settings in [Settings 1].  
If you want to make multiple settings, select the settings number and add settings.
7. Click [OK].
8. Select [Active] for "IPsec" in "IPsec".
9. Set "Exclude HTTPS Communication" to [Active] if you do not want to use IPsec for HTTPS communication.
10. Click [OK].
11. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
12. Log out.

## telnet Setting Commands

You can use telnet to confirm IPsec settings and make setting changes. This section explains telnet commands for IPsec. The default user name for logging in to telnet is "admin". No password is configured. For details about logging in to telnet and telnet operations, see "Using telnet", Connecting the Machine/ System Settings.

### ★ Important

- If you are using a certificate as the authentication method in encryption key auto exchange settings (IKE), install the certificate using Web Image Monitor. A certificate cannot be installed using telnet.

## ipsec

To display IPsec related settings information, use the "ipsec" command.

### Display current settings

```
msh> ipsec
```

Displays the following IPsec settings information:

- IPsec shared settings values

- Encryption key manual settings, SA setting 1-4 values
- Encryption key manual settings, default setting values
- Encryption key auto exchange settings, IKE setting 1-4 values
- Encryption key auto exchange settings, IKE default setting values

### Display current settings portions

```
msh> ipsec -p
```

- Displays IPsec settings information in portions.

### ipsec manual mode

---

To display or specify encryption key manual settings, use the "ipsec manual\_mode" command.

#### Display current settings

```
msh> ipsec manual_mode
```

- Displays the current encryption key manual settings.

#### Specify encryption key manual settings

```
msh> ipsec manual_mode {on|off}
```

- To enable encryption key manual settings, set to [on]. To disable settings, set to [off].

### ipsec exclude

---

To display or specify protocols excluded by IPsec, use the "ipsec exclude" command.

#### Display current settings

```
msh> ipsec exclude
```

- Displays the protocols currently excluded from IPsec transmission.

#### Specify protocols to exclude

```
msh> ipsec exclude {https|dns|dhcp|wins|all} {on|off}
```

- Specify the protocol, and then enter [on] to exclude it, or [off] to include it for IPsec transmission. Entering [all] specifies all protocols collectively.

### ipsec manual

---

To display or specify the encryption key manual settings, use the "ipsec manual" command.

#### Display current settings

```
msh> ipsec manual {1|2|3|4|default}
```

- To display the settings 1-4, specify the number [1-4].
- To display the default setting, specify [default].

- Not specifying any value displays all of the settings.

### Disable settings

```
msh> ipsec manual {1|2|3|4|default} disable
```

- To disable the settings 1-4, specify the setting number [1-4].
- To disable the default settings, specify [default].

### Specify the local/remote address for settings 1-4

```
msh> ipsec manual {1|2|3|4} {ipv4|ipv6} "local address" "remote address"
```

- Enter the separate setting number [1-4] and specify the local address and remote address.
- To specify the local or remote address value, specify masklen by entering [/] and an integer 0-32 if you are specifying an IPv4 address. If you are specifying an IPv6 address, specify masklen by entering [/] and an integer 0-128.
- Not specifying an address value displays the current setting.

### Specify the address type in default setting

```
msh> ipsec manual default {ipv4|ipv6|any}
```

- Specify the address type for the default setting.
- To specify both IPv4 and IPv6, enter [any].

### Security protocol setting

```
msh> ipsec manual {1|2|3|4|default} proto {ah|esp|dual}
```

- Enter the separate setting number [1-4] or [default] and specify the security protocol.
- To specify AH, enter [ah]. To specify ESP, enter [esp]. To specify AH and ESP, enter [dual].
- Not specifying a protocol displays the current setting.

### SPI value setting

```
msh> ipsec manual {1|2|3|4|default} spi "SPI input value" "SPI output value"
```

- Enter the separate setting number [1-4] or [default] and specify the SPI input and output values.
- Specify a decimal number between 256-4095, for both the SPI input and output values.
- Not specifying a SPI value displays the current setting.

### Encapsulation mode setting

```
msh> ipsec manual {1|2|3|4|default} mode {transport|tunnel}
```

- Enter the separate setting number [1-4] or [default] and specify the encapsulation mode.
- To specify transport mode, enter [transport]. To specify tunnel mode, enter [tunnel].
- If you have set the address type in the default setting to [any], you cannot use [tunnel] in encapsulation mode.
- Not specifying an encapsulation mode displays the current setting.

**Tunnel end point setting**

```
msh> ipsec manual {1|2|3|4|default} tunneladdr "beginning IP address" "ending IP address"
```

- Enter the separate setting number [1-4] or [default] and specify the tunnel end point beginning and ending IP address.
- Not specifying either the beginning or ending address displays the current settings.

**Authentication algorithm and authentication key settings**

```
msh> ipsec manual {1|2|3|4|default} auth {hmac-md5|hmac-sha1|hmac-sha256|hmac-sha384|hmac-sha512} "authentication key"
```

- Enter the separate setting number [1-4] or [default] and specify the authentication algorithm, and then set the authentication key.
- If you are setting a hexadecimal number, attach 0x at the beginning.
- If you are setting an ASCII character string, enter it as is.
- Not specifying either the authentication algorithm or key displays the current setting. (The authentication key is not displayed.)

**Encryption algorithm and encryption key setting**

```
msh> ipsec manual {1|2|3|4|default} encrypt {null|des|3des|aes128|aes192|aes256} "encryption key"
```

- Enter the separate setting number [1-4] or [default], specify the encryption algorithm, and then set the encryption key.
- If you are setting a hexadecimal number, attach 0x at the beginning. If you have set the encryption algorithm to [null], enter an encryption key of arbitrary numbers 2-64 digits long.
- If you are setting an ASCII character string, enter it as is. If you have set the encryption algorithm to [null], enter an encryption key of arbitrary numbers 1-32 digits long.
- Not specifying an encryption algorithm or key displays the current setting. (The encryption key is not displayed.)

**Reset setting values**

```
msh> ipsec manual {1|2|3|4|default|all} clear
```

- Enter the separate setting number [1-4] or [default] and reset the specified setting. Specifying [all] resets all of the settings, including default.

**ipsec ike**

---

To display or specify the encryption key auto exchange settings, use the "ipsec ike" command.

**Display current settings**

```
msh> ipsec ike {1|2|3|4|default}
```

- To display the settings 1-4, specify the number [1-4].
- To display the default setting, specify [default].
- Not specifying any value displays all of the settings.

### Disable settings

```
msh> ipsec manual {1|2|3|4|default} disable
```

- To disable the settings 1-4, specify the number [1-4].
- To disable the default settings, specify [default].

### Specify the local/remote address for settings 1-4

```
msh> ipsec manual {1|2|3|4} {ipv4|ipv6} "local address" "remote address"
```

- Enter the separate setting number [1-4], and the address type to specify local and remote address.
- To set the local or remote address values, specify masklen by entering [/] and an integer 0-32 when settings an IPv4 address. When setting an IPv6 address, specify masklen by entering [/] and an integer 0-128.
- Not specifying an address value displays the current setting.

### Specify the address type in default setting

```
msh> ipsec manual default {ipv4|ipv6|any}
```

- Specify the address type for the default setting.
- To specify both IPv4 and IPv6, enter [any].

### Security policy setting

```
msh> ipsec ike {1|2|3|4|default} proc {apply|bypass|discard}
```

- Enter the separate setting number [1-4] or [default] and specify the security policy for the address specified in the selected setting.
- To apply IPsec to the relevant packets, specify [apply]. To not apply IPsec, specify [bypass].
- If you specify [discard], any packets to which IPsec can be applied are discarded.
- Not specifying a security policy displays the current setting.

### Security protocol setting

```
msh> ipsec ike {1|2|3|4|default} proto {ah|esp|dual}
```

- Enter the separate setting number [1-4] or [default] and specify the security protocol.
- To specify AH, enter [ah]. To specify ESP, enter [esp]. To specify AH and ESP, enter [dual].
- Not specifying a protocol displays the current setting.

### IPsec requirement level setting

```
msh> ipsec ike {1|2|3|4|default} level {require|use}
```

- Enter the separate setting number [1-4] or [default] and specify the IPsec requirement level.

- If you specify [require], data will not be transmitted when IPsec cannot be used. If you specify [use], data will be sent normally when IPsec cannot be used. When IPsec can be used, IPsec transmission is performed.
- Not specifying a requirement level displays the current setting.

### Encapsulation mode setting

```
msh> ipsec ike {1|2|3|4|default} mode {transport|tunnel}
```

- Enter the separate setting number [1-4] or [default] and specify the encapsulation mode.
- To specify transport mode, enter [transport]. To specify tunnel mode, enter [tunnel].
- If you have set the address type in the default setting to [any], you cannot use [tunnel] in encapsulation mode.
- Not specifying an encapsulation mode displays the current setting.

### Tunnel end point setting

```
msh> ipsec ike {1|2|3|4|default} tunneladdr "beginning IP address" "ending IP address"
```

- Enter the separate setting number [1-4] or [default] and specify the tunnel end point beginning and ending IP address.
- Not specifying either the beginning or ending address displays the current setting.

### IKE partner authentication method setting

```
msh> ipsec ike {1|2|3|4|default} auth {psk|rsasig}
```

- Enter the separate setting number [1-4] or [default] and specify the authentication method.
- Specify [psk] to use a shared key as the authentication method. Specify [rsasig] to use a certificate at the authentication method.
- You must also specify the PSK character string when you select [psk].
- Note that if you select "Certificate", the certificate for IPsec must be installed and specified before it can be used. To install and specify the certificate use Web Image Monitor.

### PSK character string setting

```
msh> ipsec ike {1|2|3|4|default} psk "PSK character string"
```

- If you select PSK as the authentication method, enter the separate setting number [1-4] or [default] and specify the PSK character string.
- Specify the character string in ASCII characters. There can be no abbreviations.

### ISAKMP SA (phase 1) hash algorithm setting

```
msh> ipsec ike {1|2|3|4|default} ph1 hash {md5|sha1|sha256|sha384|sha512}
```

- Enter the separate setting number [1-4] or [default] and specify the ISAKMP SA (phase 1) hash algorithm.
- Not specifying the hash algorithm displays the current setting.



**ISAKMP SA (phase 1) encryption algorithm setting**

```
msh> ipsec ike {1|2|3|4|default} ph1 encrypt {des|3des|aes128|aes192|aes256}
```

- Enter the separate setting number [1-4] or [default] and specify the ISAKMP SA (phase 1) encryption algorithm.
- Not specifying an encryption algorithm displays the current setting.

**ISAKMP SA (phase 1) Diffie-Hellman group setting**

```
msh> ipsec ike {1|2|3|4|default} ph1 dhgroup {1|2|14}
```

- Enter the separate setting number [1-4] or [default] and specify the ISAKMP SA (phase 1) Diffie-Hellman group number.
- Specify the group number to be used.
- Not specifying a group number displays the current setting.

**ISAKMP SA (phase 1) validity period setting**

```
msh> ipsec ike {1|2|3|4|default} ph1 lifetime "validity period"
```

- Enter the separate setting number [1-4] or [default] and specify the ISAKMP SA (phase 1) validity period.
- Enter the validity period (in seconds) from 300 to 172800.
- Not specifying a validity period displays the current setting.

**IPsec SA (phase 2) authentication algorithm setting**

```
msh> ipsec ike {1|2|3|4|default} ph2 auth {hmac-md5|hmac-sha1|hmac-sha256|hmac-sha384|hmac-sha512}
```

- Enter the separate setting number [1-4] or [default] and specify the IPsec SA (phase 2) authentication algorithm.
- Separate multiple encryption algorithm entries with a comma (.). The current setting values are displayed in order of highest priority.
- Not specifying an authentication algorithm displays the current setting.

**IPsec SA (phase 2) encryption algorithm setting**

```
msh> ipsec ike {1|2|3|4|default} ph2 encrypt {null|des|3des|aes128|aes192|aes256}
```

- Enter the separate setting number [1-4] or [default] and specify the IPsec SA (phase 2) encryption algorithm.
- Separate multiple encryption algorithm entries with a comma (.). The current setting values are displayed in order of highest priority.
- Not specifying an encryption algorithm displays the current setting.

**IPsec SA (phase 2) PFS setting**

```
msh> ipsec ike {1|2|3|4|default} ph2 pfs {none|1|2|14}
```

- Enter the separate setting number [1-4] or [default] and specify the IPsec SA (phase 2) Diffie-Hellman group number.
- Specify the group number to be used.
- Not specifying a group number displays the current setting.

#### **IPsec SA (phase 2) validity period setting**

```
msh> ipsec ike {1|2|3|4|default} ph2 lifetime "validity period"
```

- Enter the separate setting number [1-4] or [default] and specify the IPsec SA (phase 2) validity period.
- Enter the validity period (in seconds) from 300 to 172800.
- Not specifying a validity period displays the current setting.

#### **Reset setting values**

```
msh> ipsec ike {1|2|3|4|default|all} clear
```

- Enter the separate setting number [1-4] or [default] and reset the specified setting. Specifying [all] resets all of the settings, including default.

# Configuring IEEE 802.1X Authentication

IEEE 802.1X is an authentication function that can be used with both wired and wireless networks. Authentication is performed by the authentication server (RADIUS server).

You can select four types of EAP authentication method: EAP-TLS, LEAP, EAP-TTLS and PEAP. Note that each EAP authentication method has different configuration settings and authentication procedures.

Types and requirements of certificates are as follows:

EAP type	Required certificates
EAP-TLS	Site certificate, Device certificate (IEEE 802.1X Client Certificate)
LEAP	-
EAP-TTLS	Site certificate
PEAP	Site certificate
PEAP (Phase 2 is for TLS only)	Site certificate, Device certificate (IEEE 802.1X Client Certificate)

## Installing a Site Certificate

Install a site certificate (root CA certificate), which checks the reliability of the authentication server. You need to have at least a certificate that is signed by a certificate authority who signed the server certificate or a certificate from an upper level certificate authority.

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Site Certificate] under "Security".
4. Click [Browse] on the "Site Certificate to Import" window, and then select the CA certificate you obtained.
5. Click [Open].
6. Click [Import].
7. Check that the imported certificate's [Status] shows "Trustworthy".

If [Site Certificate Check] shows [Active], and the [Status] of the certificate shows [Untrustworthy], communication might not be possible.

8. Click [OK].
9. Log out.

---

## Selecting the Device Certificate

---

Select the certificate to use under IEEE 802.1X from among the device certificates created and installed in advance on the machine. For details about creating and installing a device certificate, see p.131 "Protecting the Communication Path via a Device Certificate".

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Device Certificate] under "Security".
4. Select the certificate to be used for IEEE 802.1X from the drop-down box in "IEEE 802.1X" under "Certification".
5. Click [OK].
6. "Updating..." appears. Wait for about one or two minutes, and then click [OK].

If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.

7. Log out.

5

---

## Setting Items of IEEE 802.1X for Ethernet

---

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [IEEE 802.1X] under "Security".
4. In "User Name", enter the user name set in the RADIUS server.
5. Enter the domain name in "Domain Name".
6. Select "EAP Type". Configurations differ according to the EAP Type.

### EAP-TLS

- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server on "Server ID".
  - Select [On] or [Off] in "Permit Sub-domain".

### LEAP

- Click [Change] in "Password", and then enter the password set in the RADIUS server.

### EAP-TTLS

- Click [Change] in "Password", and then enter the password set in the RADIUS server.

- Click [Change] in "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [CHAP], [MSCHAP], [MSCHAPv2], [PAP], or [MD5] in "Phase 2 Method".  
Certain methods might not be available, depending on the RADIUS server you want to use.
- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server in "Server ID".
  - Select [On] or [Off] in "Permit Sub-domain".

#### PEAP

- Click [Change] in "Password", and then enter the password set in the RADIUS server.  
If [TLS] is selected for "Phase 2 Method", you do not need to specify a password.
- Click [Change] on "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [MSCHAPv2] or [TLS] in "Phase 2 Method".  
When you select [TLS], you must install "IEEE 802.1X Client Certificate".
- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server on "Server ID".
  - Select [On] or [Off] in "Permit Sub-domain".

#### 7. Click [OK].

#### 8. "Updating..." appears. Wait for about one or two minutes, and then click [OK].

If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.

#### 9. Click [Interface Settings] under "Interface".

#### 10. Select [Active] in "Ethernet Security".

#### 11. Click [OK].

#### 12. "Updating..." appears. Wait for about one or two minutes, and then click [OK].

If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.

#### 13. Log out.

**Note**

- If there is a problem with settings, you might not be able to communicate with the machine. To identify the problem, print a network summary.
- If you cannot identify the problem, reset the machine interface to normal, and then repeat the procedure from the beginning.

---

## Setting Items of IEEE 802.1X for Wireless LAN

---

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [IEEE 802.1X] under "Security".
4. In "User Name", enter the user name set in the RADIUS server.
5. Enter the domain name in "Domain Name".
6. Select "EAP Type". Configurations differ according to the EAP Type.

### EAP-TLS

- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server on "Server ID".
  - Select [On] or [Off] in "Permit Sub-domain".

### LEAP

- Click [Change] in "Password", and then enter the password set in the RADIUS server.

### EAP-TTLS

- Click [Change] in "Password", and then enter the password set in the RADIUS server.
- Click [Change] in "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [CHAP], [MSCHAP], [MSCHAPv2], [PAP], or [MD5] in "Phase 2 Method".

Certain methods might not be available, depending on the RADIUS server you want to use.

- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server in "Server ID".
  - Select [On] or [Off] in "Permit Sub-domain".

### PEAP

- Click [Change] in "Password", and then enter the password set in the RADIUS server.  
If [TLS] is selected for "Phase 2 Method", you do not need to specify a password.
- Click [Change] on "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [MSCHAPv2] or [TLS] in "Phase 2 Method".  
When you select [TLS], you must install "IEEE 802.1X Client Certificate".
- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server on "Server ID".
  - Select [On] or [Off] in "Permit Sub-domain".

7. Click [OK].

8. "Updating..." appears. Wait for about one or two minutes, and then click [OK].

If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.

9. Click [Wireless LAN Settings] under "Interface".

10. Select [Wireless LAN] in "LAN Type".

11. Select [Infrastructure Mode] in "Communication Mode".

12. Enter the alphanumeric characters (a-z, A-Z, or 0-9) in [SSID] according to the access point you want to use.

13. Select [WPA] in "Security Method".

14. Select [WPA] or [WPA2] in "WPA Authentication Method".

15. Click [OK].

16. "Updating..." appears. Wait for about one or two minutes, and then click [OK].

If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.

17. Log out.

#### Note


- If there is a problem with settings, you might not be able to communicate with the machine. To identify the problem, print a network summary.
- If you cannot identify the problem, reset the machine interface to normal, and then repeat the procedure from the beginning.

# SNMPv3 Encryption


When using SmartDeviceMonitor for Admin or another application to make various settings, you can encrypt the data transmitted.

By making this setting, you can protect data from being tampered with.

1. The network administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Interface Settings].
4. Press [▼Next].
5. Press [Permit SNMPv3 Communication].

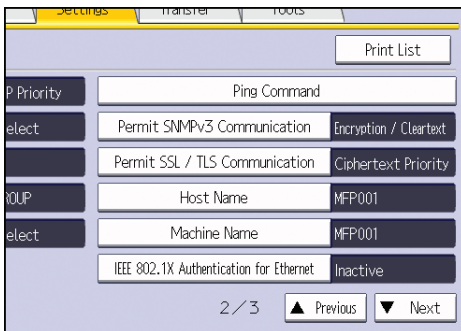

6. Press [Encryption Only].

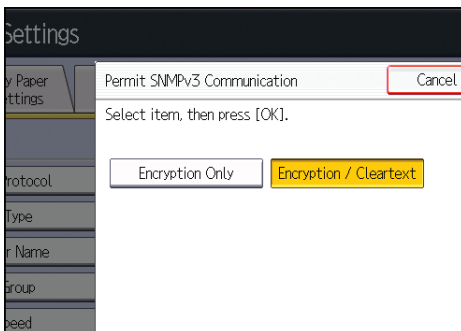

7. Press [OK].
8. Log out.

## Note

- To use SmartDeviceMonitor for Admin for encrypting the data for specifying settings, you need to specify the network administrator's [Encryption Password] setting and [Encryption Password] in [SNMP Authentication Information] in SmartDeviceMonitor for Admin, in addition to specifying [Permit SNMPv3 Communication] on the machine. For details about specifying [Encryption Password] in SmartDeviceMonitor for Admin, see SmartDeviceMonitor for Admin Help.



- If network administrator's [Encryption Password] setting is not specified, the data for transmission may not be encrypted or sent. For details about specifying the network administrator's [Encryption Password] setting, see p.18 "Registering and Changing Administrators".

# Encrypting Transmitted Passwords

Configuring the driver encryption key and password encryption for IPP authentication enables communication with encrypted passwords as well as increasing the security of passwords against analysis. In order to further enhance security, we recommend using IPsec, SNMPv3 and SSL/TLS all together.

Also, encrypt the login password for administrator authentication and user authentication.

## Driver Encryption Key

When user authentication is ON, this key is a character string used for encrypting the login passwords or document passwords that are sent from each kind of driver.

To encrypt the login password, specify the driver encryption key on the machine and on the printer driver installed in the user's computer.

## Password for IPP Authentication

To encrypt the IPP Authentication password on Web Image Monitor, set "Authentication" to [DIGEST], and then specify the IPP Authentication password set on the machine.

You can use telnet or FTP to manage passwords for IPP authentication, although it is not recommended.

### Note

- For details on encrypting the login passwords used for administrator authentication, see p. 18 "Registering and Changing Administrators".

---

## Specifying a Driver Encryption Key


---

Specify the driver encryption key on the machine.


This setting enables encrypted transmission of login passwords and strengthens the security against password analysis.

1. The network administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].

**5. Press [Extended Security].**

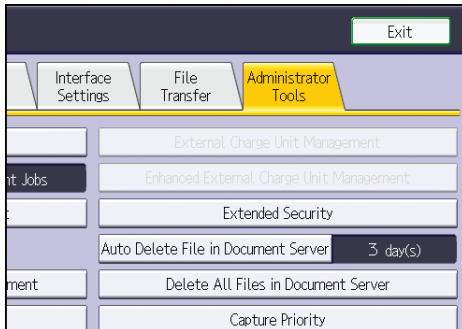

**6. For "Driver Encryption Key", press [Change].**

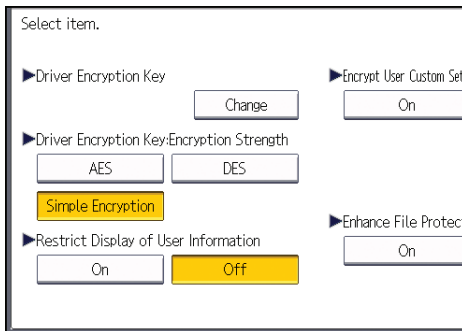

**7. Enter the driver encryption key, and then press [OK].**

Enter the driver encryption key using up to 32 alphanumeric characters.

The network administrator must give users the driver encryption key specified on the machine so they can register it on their computers. Make sure to enter the same driver encryption key as that is specified on the machine.

**8. Press [OK].**

**9. Log out.**

**Note**

- For details about specifying the encryption key on the printer driver, see the printer driver Help.
- For details about specifying the encryption key on the LAN-FAX driver, see the LAN-FAX driver Help.
- For details about specifying the encryption key on the TWAIN driver, see the TWAIN driver Help.

**Specifying an IPP Authentication Password**

Specify an IPP authentication password for this machine. This setting enables encrypted transmission of IPP authentication passwords and strengthens the security against password analysis.

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [IPP Authentication] under "Security".
4. Select [DIGEST] from the "Authentication" list.
5. Enter the user name in the "User Name" box.
6. Enter the password in the "Password" box.
7. Click [OK].

IPP authentication is specified.

8. "Updating..." appears. Wait for about one or two minutes, and then click [OK].

If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.

9. Log out.

 **Note**

- When using the IPP port under Windows XP/Vista/7, Windows Server 2003/2003 R2/2008/2008 R2, you can use the operating system's standard IPP port.

# Kerberos Authentication Encryption Setting

You can specify encrypted transmission between the machine and the key distribution center (KDC) server when Kerberos authentication is enabled.

Using Kerberos authentication with Windows or LDAP authentication, LDAP search, etc., ensures safe communication.

The supported encryption algorithm differs depending on the type of KDC server. Select the algorithm that suits your environment.

KDC server	Supported encryption algorithms
Windows Server 2003 Active Directory	<ul style="list-style-type: none"> <li>• RC4-HMAC (ARCFOUR-HMAC-MD5)</li> </ul>
Windows Server 2008	<ul style="list-style-type: none"> <li>• AES256-CTS-HMAC-SHA1-96</li> <li>• AES128-CTS-HMAC-SHA1-96</li> <li>• RC4-HMAC (ARCFOUR-HMAC-MD5)</li> </ul>
Windows Server 2008 R2	<ul style="list-style-type: none"> <li>• AES256-CTS-HMAC-SHA1-96</li> <li>• AES128-CTS-HMAC-SHA1-96</li> <li>• RC4-HMAC (ARCFOUR-HMAC-MD5) *</li> </ul>
Heimdal	<ul style="list-style-type: none"> <li>• AES256-CTS-HMAC-SHA1-96</li> <li>• AES128-CTS-HMAC-SHA1-96</li> <li>• DES3-CBC-SHA1</li> <li>• RC4-HMAC (ARCFOUR-HMAC-MD5)</li> <li>• DES-CBC-MD5</li> </ul>

\* To use Kerberos authentication, it must be enabled in the operating system settings.

1. Log in as the network administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Kerberos Authentication] under "Device Settings".
4. Select the encryption algorithm you want to enable.  
One or more encryption algorithm must always be selected.
5. Click [OK].
6. Log out.



# 6. Preventing the Leaking of Documents

This chapter explains how to protect document data stored in the machine or printed using the machine.

## Configuring Access Permissions for Stored Files

This section describes how to specify access permissions for stored files.

You can specify who is allowed to access stored scan files and files stored in Document Server.

This can prevent activities such as printing or sending of stored files by unauthorized users.

You can also specify which users can change or delete stored files.

To limit the use of stored files, you can specify four types of access permissions.

### Types of access permission

Access permission	Description
Read-only	In addition to checking the content of and information about stored files, you can also print and send the files.
Edit	You can change the print settings for stored files. This includes permission to view files.
Edit / Delete	You can delete stored files. This includes permission to view and edit files.
Full Control	You can specify the user and access permission. This includes permission to view, edit, and edit / delete files.

### Password for stored files

- Passwords for stored files can be specified by the file administrator or file creator (owner). You can obtain greater protection against the unauthorized use of files. For details about assigning a password to a stored file, see p.192 "Specifying Passwords for Stored Files".
- Even if user authentication is not set, passwords for stored files can be set.

#### ↓ Note

- Files can be stored by any user who is allowed to use Document Server, copy function, scanner function, fax function or printer function.
- Using Web Image Monitor, you can check the content of stored files. For details, see Web Image Monitor Help.

- The default access permission for the file creator (owner) is "Read-only". You can also specify the access permission.
- The document administrator not only configures access permissions, but can also delete stored files. For details on the methods of deleting documents, see "Deleting Stored Documents", Copy/Document Server.

---

## Configuring Access Permission for Each Stored File

---

This can be specified by the file administrator or file creator (owner).

Specify the users and their access permissions for each stored file.

### ★ Important

- If files become inaccessible, reset their access permission as the file creator (owner). This can also be done by the file administrator. If you want to access a file but do not have access permission, ask the file creator (owner).
- The file administrator can change the owner of a document using the document's [Change Access Priv.] setting. This setting also allows the file administrator to change the access privileges of the owner and other users.
- The document owner and users with the [Full Control] privilege for the document can change the access privileges of the owner and other users under the [Change Access Priv.] setting.


1. The file administrator or the file creator (owner) logs in from the control panel.

2. Press the [User Tools/Counter] key to switch to the normal screen.

If the message "You do not have the privileges to use this function." appears, press [Exit].

3. Press the [Home] key on the top left of the control panel, and press the [Document Server] icon on the [Home] screen.

If the message "You do not have the privileges to use this function." appears, press [Exit].

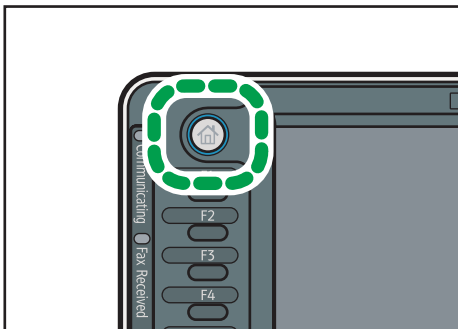

CJS113



4. Select the file.

Type	User Name	File Name	Date	Page	Order
<input type="checkbox"/>		COPY0005	30 Sep.	5	
<input type="checkbox"/>		COPY0004	30 Sep.	5	
<input type="checkbox"/>		COPY0003	30 Sep.	5	
<input type="checkbox"/>		COPY0002	30 Sep.	5	
<input type="checkbox"/>		COPY0001	30 Sep.	5	

5. Press [Change File Info.].

File Name	Date	Page	Order
COPY0005	30 Sep.	5	1
COPY0004	30 Sep.	5	
COPY0003	30 Sep.	5	
COPY0002	30 Sep.	5	
COPY0001	30 Sep.	5	

Memory: 99%

Details

Preview

Change File Info. ...

Delete File

Print Specified Page...

1/1

▲ ▼

To Printing Screen

6. Press [Change Access Priv.].

File Name	Date	Page	Order
COPY0005	30 Sep.	5	1
COPY0004	30 Sep.	5	
COPY0003	30 Sep.	5	
COPY0002	30 Sep.	5	
COPY0001	30 Sep.	5	

Change File Info.


OK

Change Access Priv. ...


Unlock Files

Change Password


**7. Press [Program/Change/Delete].**

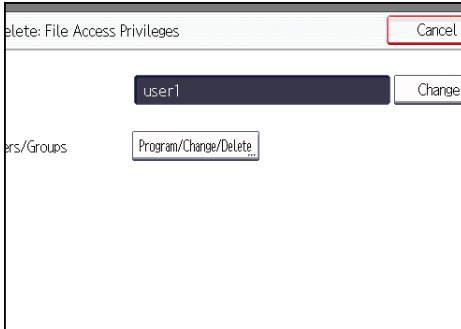

**8. Press [New Program].**

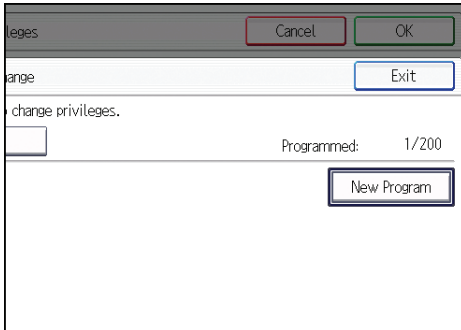

**9. Select the users or groups to whom you want to assign access permission.**

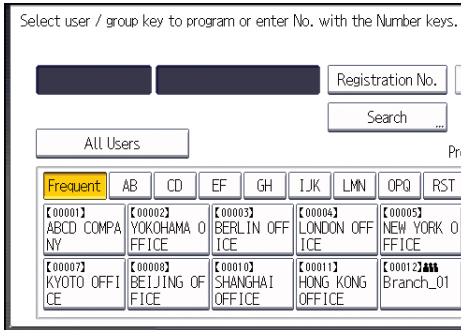


You can select more than one user.

By pressing [All Users], you can select all the users.

**10. Press [Exit].**

**11. Select the user to whom you want to assign access permission, and then select the permission.**

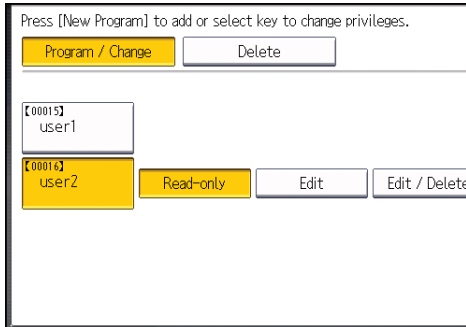

Select the access permission from [Read-only], [Edit], [Edit / Delete], or [Full Control].

**12. Press [Exit].**

**13. Press [OK].**

**14. Log out.**

**Note**

- This can also be specified via Web Image Monitor. For details, see Web Image Monitor Help.
- The "Edit", "Edit / Delete", and "Full Control" access permissions allow a user to perform high level operations that could result in loss of or changes to sensitive information. We recommend you grant only the "Read-only" permission to general users.

## Changing the Owner of a Document

Use this procedure to change the owner of a document.

Only the file administrator can change the owner of a document.

- 1. The file administrator logs in from the control panel.**
- 2. Press the [User Tools/Counter] key to switch to the normal screen.**  
If the message "You do not have the privileges to use this function." appears, press [Exit].
- 3. Press the [Home] key on the top left of the control panel, and press the [Document Server] icon on the [Home] screen.**  
If the message "You do not have the privileges to use this function." appears, press [Exit].
- 4. Select the file.**
- 5. Press [Change File Info.].**
- 6. Press [Change Access Priv.].**
- 7. Under "Owner", press [Change].**

- 8. Select the user you want to register.
- 9. Press [Exit].
- 10. Press [OK] twice.
- 11. Log out.

## Configuring Access Permission for Each User for Stored Files

This can be specified by the user administrator or file creator (owner).

Specify the users and their access permission to files stored by a particular user.


This makes managing access permission easier than specifying and managing access permissions for each stored file.

### ★ Important


- If files become inaccessible, be sure to enable the user administrator, so that the user administrator can reset the access permission for the files in question.

6

- 1. The user administrator or the file creator (owner) logs in from the control panel.
- 2. Press [Address Book Mangmnt].
- 3. Select the user.
- 4. Press [Protection].
- 5. Under "Protect File(s)", press [Program/Change/Delete] for "Permissions for Users / Groups".

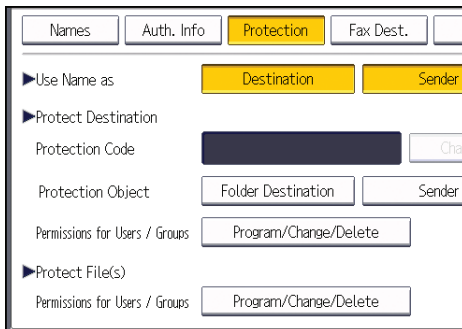

## 6. Press [New Program].

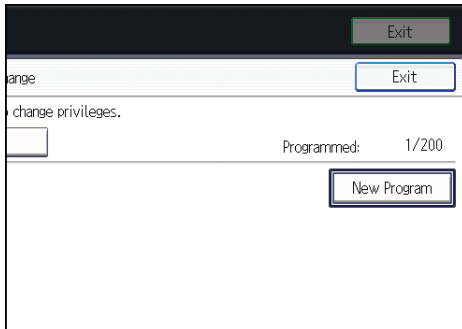

## 7. Select the users or groups to register.

You can select more than one user.

By pressing [All Users], you can select all the users.

## 8. Press [Exit].

## 9. Select the user to whom you want to assign access permission, and then select the permission.

Select the access permission from [Read-only], [Edit], [Edit / Delete], or [Full Control].

## 10. Press [Exit].

## 11. Press [OK].

## 12. Press [Exit].

## 13. Log out.

### ⚠ Note


- The "Edit", "Edit / Delete", and "Full Control" access permissions allow a user to perform high level operations that could result in loss of or changes to sensitive information. We recommend you grant only the "Read-only" permission to general users.

# Specifying Passwords for Stored Files

This can be specified by the file administrator or file creator (owner).

1. The file administrator or the file creator (owner) logs in from the control panel.
2. Press the [User Tools/Counter] key to switch to the normal screen.  
If the message "You do not have the privileges to use this function." appears, press [Exit].
3. Press the [Home] key on the top left of the control panel, and press the [Document Server] icon on the [Home] screen.

If the message "You do not have the privileges to use this function." appears, press [Exit].

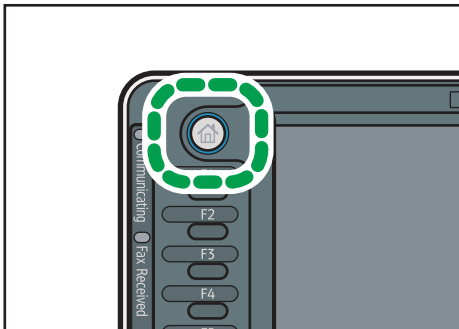


CJS113


## 4. Select the file.


Type	User Name	File Name	Date	Page	Order
☐		COPY0005	30 Sep.	5	
☐		COPY0004	30 Sep.	5	
☐		COPY0003	30 Sep.	5	
☐		COPY0002	30 Sep.	5	
☐		COPY0001	30 Sep.	5	

5. Press [Change File Info.].

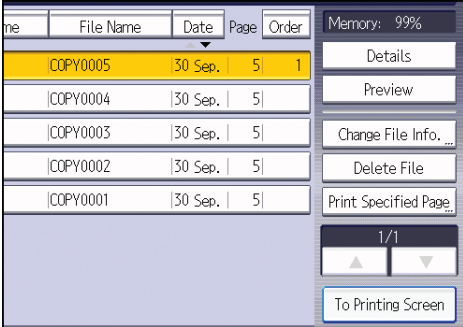

6. Press [Change Password].

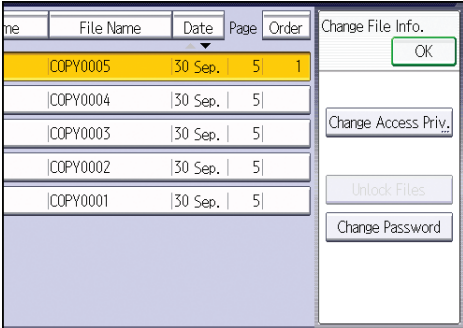

- 7. Enter the password using the number keys.  
You can use 4 to 8 numbers as the password for the stored file.
- 8. Press [OK].
- 9. Confirm the password by re-entering it using the number keys.
- 10. Press [OK].  
The  icon appears next to a stored file protected by password.
- 11. Press [OK].
- 12. Log out.

---

## Unlocking Stored Files

---

Only the file administrator can unlock files.  
If you specify "Enhance File Protection", the file will be locked and become inaccessible if an invalid password is entered ten times. This section explains how to unlock files.  
"Enhance File Protection" is one of the extended security functions. For details about this and other extended security functions, see p.261 "Specifying the Extended Security Functions".

- 1. The file administrator logs in from the control panel.

**2. Press the [User Tools/Counter] key to switch to the normal screen.**

If the message "You do not have the privileges to use this function." appears, press [Exit].


**3. Press the [Home] key on the top left of the control panel, and press the [Document Server] icon on the [Home] screen.**

If the message "You do not have the privileges to use this function." appears, press [Exit].


**4. Select the file.**

The  icon appears next to a file locked by the Enhance File Protection function.

**5. Press [Change File Info.].**

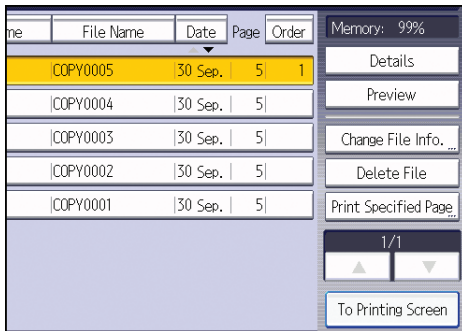

**6. Press [Unlock Files].**

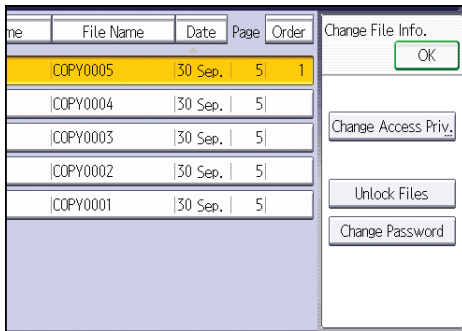

**7. Press [Yes].**

The  icon changes to the  icon.

**8. Press [OK].**

**9. Log out.**



# Unauthorized Copy Prevention / Data Security for Copying

In Printer Features, using the printer driver, you can embed a pattern in the printed copy to discourage or prevent unauthorized copying.

The unauthorized copy prevention function prevents unauthorized copies of documents by embedding a text pattern (for instance, a warning such as "No Copying") that you can set on the print driver (which will appear on printed copies).

Data security for copying prevents document information leaks by graying out copies of documents that were printed with the data security for copying pattern enabled in the printer driver.

However, in order to gray out the security pattern, the Copy Data Security Unit is required for the copier or multi-function printer.

For more information, see the information below.

## Unauthorized Copy Prevention

1. Using the machine, specify the settings to print the pattern. The settings must be specified by the machine administrator.
2. Using the printer driver, specify the printer settings for unauthorized copy prevention. The settings must be specified by the printer user. For details on how to specify settings for unauthorized copy prevention, see "Printing Documents that are not Allowed to Duplicate", Print.

## Data Security for Copying

1. Using the machine, specify the settings to print the pattern. The settings must be specified by the machine administrator.
2. Using the printer driver, specify the printer settings for data security for copying. The settings must be specified by the printer user. For details on how to specify settings on the printer driver, see "Printing Documents that are not Allowed to Duplicate", Print.
3. Set the data security for copying function to appear gray when documents with the function are copied, scanned, or stored on the machine. The settings must be specified by the machine administrator. For details on how to specify settings on the machine, see p.197 "Enabling Data Security for Copying".

---

## Enabling Pattern Printing

---


Enable pattern printing to discourage or prevent unauthorized copying.

1. The machine administrator logs in from the control panel.
2. Press [Printer Features].


**3. Press [Unauthorized Copy Preventn.].**

If it is not displayed, press [▶] at the top right of the display.

**4. Press [Unauthorized Copy Prevention Setting].**

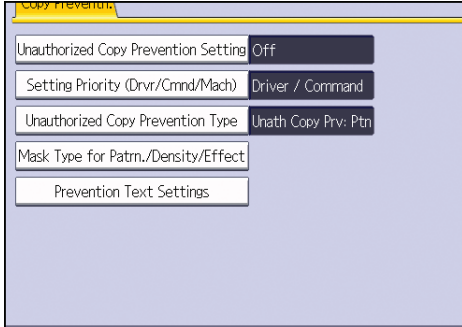


**5. Press [On], and then press [OK].**

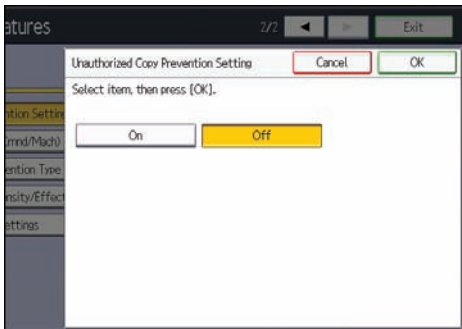

**6. Press [Setting Priority (Dvr/Cmnd/Mach)].**

**7. Select the range within which the user can specify the pattern to be printed using the printer driver.**

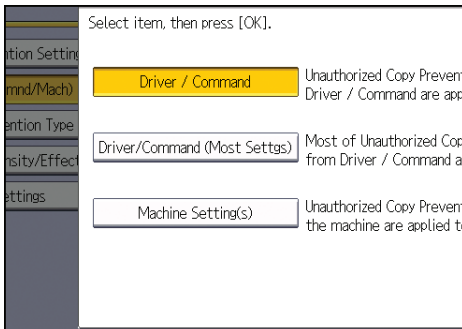

- [Driver / Command]  
Specifies all the content of the pattern to be printed using the printer driver.
- [Driver/Command (Most Settgs)]  
Specifies the settings other than pattern type and density using the printer driver.

- [Machine Setting(s)]

The pattern cannot be specified using the printer driver. The pattern specified using the machine is printed.

8. Press [OK].

9. Log out.

#### ↓ Note

- For details of the settings when specifying the pattern using the machine, see "Printer Features", Print.

## Enabling Data Security for Copying


To use this function, the Copy Data Security Unit must be installed.

If a document printed is copied, faxed, scanned, or stored in the Document Server, the copy is grayed out.

#### ★ Important

- If a document that is not copy-guarded is copied, faxed, scanned, or stored, the copy or stored file is not grayed out.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.
5. Press [Data Security for Copying].

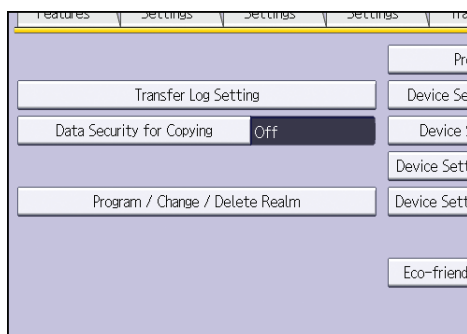

6. Press [On].

If you do not want to specify "Data Security for Copying", select [Off].

7. Press [OK].

8. Log out.


## Printing User Information on Paper

Information such as the start time of a job, information on the person who outputs it (name or login user name), machine number or IP address of the machine can be forced to be printed on paper. This function is called Compulsory Security Stamp.

Always printing out information on the person who outputs a job has the effect of suppressing leaks of information. It can also be used in identifying the source of an information leak.

Compulsory Security Stamp can be used with each function, copying, Document Server, faxing and printing.


1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] four times.
5. Select the function(s) for Compulsory Security Stamp.

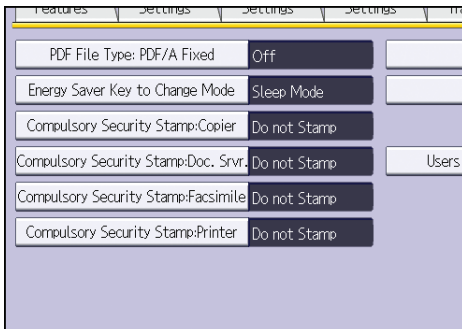

- To set the copy function to be stamped, press [Compulsory Security Stamp: Copier].
- To set the Document Server to be stamped, press [Compulsory Security Stamp: Doc. Srvr.].
- To set the fax function to be stamped, press [Compulsory Security Stamp: Facsimile].
- To set the printer function to be stamped, press [Compulsory Security Stamp: Printer].


6. Press [On], and then select the data to be stamped.

To turn Compulsory Security Stamp off, press [Off].

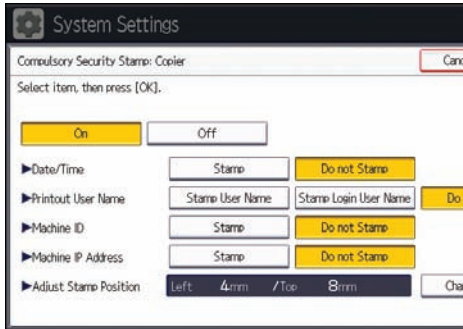


- **Date/Time**  
The time a job starts is printed.
- **Printout User Name**  
If "Stamp User Name" is selected, the "Name" in the "Names" in the Address Book is printed. If "Stamp Login User Name" is selected, the "Login User Name" in the "Auth. Info" in the Address Book is printed. When user authentication is not set up, or when User Code authentication is not set up, the name of the person who outputs a job is not printed.
- **Machine ID**  
The same number as the "Serial No. of Machine" in the [Enquiry] is printed.
- **Machine IP Address**  
The IP address of the machine is printed. If both an IPv4 address and an IPv6 address exist, the IPv4 address is printed. If there is no IP address configured, then it does not stamp anything.

**7. Press [Change] for "Adjust Stamp Position".**

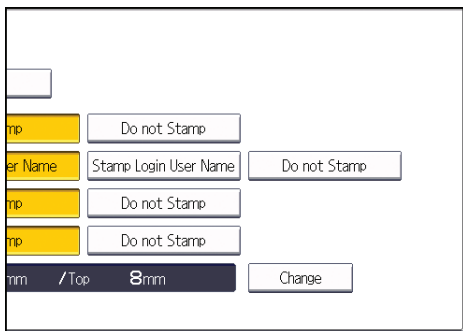

**8. Set the stamp position.**

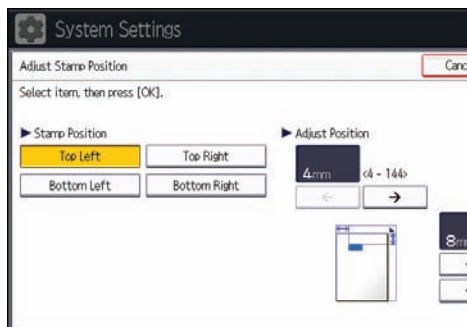

**9. Press [OK] twice.**

**10. Log out.**

# Managing Locked Print Files

Depending on the location of the machine, it is difficult to prevent unauthorized persons from viewing prints lying in the machine's output trays. When printing confidential documents, use the Locked Print function.

## Locked Print

- Using the printer's Locked Print function, store files in the machine as Locked Print files and then print them from the control panel and retrieve them immediately, preventing others from viewing them.

### Note

- Confidential documents can be printed regardless of the user authentication settings.
- To store files temporarily, select [Stored Print] in the printer driver. If you select [Stored Print (Shared)], you can also share these files.
- For details on how to use the Locked Print function, see "Locked Print", Print.


## Deleting Locked Print Files

This can be specified by the file administrator or file creator (owner).

To delete Locked Print files, you must enter the password for the files. If the password has been forgotten, the file administrator changes the password to restore access.

1. **The file administrator or the file creator (owner) logs in from the control panel.**
2. **Press the [User Tools/Counter] key to switch to the normal screen.**  
If the message "You do not have the privileges to use this function." appears, press [Exit].
3. **Press the [Home] key on the top left of the control panel, and press the [Printer] icon on the [Home] screen.**


If the message "You do not have the privileges to use this function." appears, press [Exit].

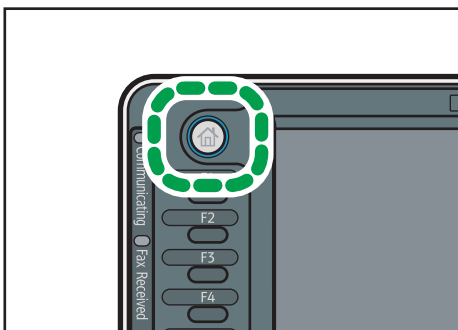


CJS113

4. **Press [Print Jobs].**


5. Press [Locked Print Job].

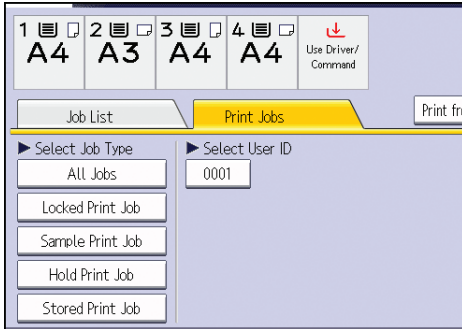

6. Select the file.

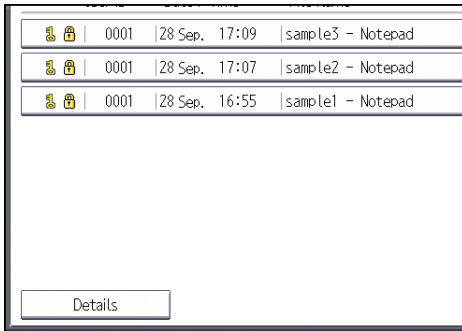

7. Press [Delete].

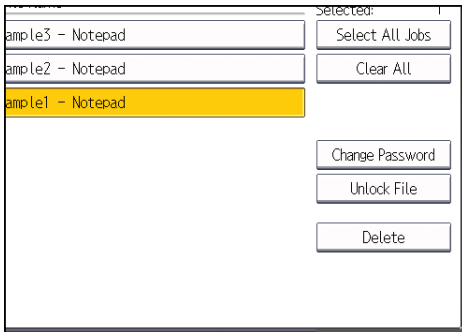

8. If a password entry screen appears, enter the password of the Locked Print file, and then press [OK].

The password entry screen does not appear if the file administrator is logged in.

9. Press [Yes].

10. Log out.



### Note


- You can configure this machine to delete stored files automatically by setting the "Auto Delete Temporary Print Jobs" option to [On]. For details about "Auto Delete Temporary Print Jobs", see "Maintenance", Print.
- This can also be specified via Web Image Monitor. For details, see Web Image Monitor Help.

## Changing the Password of a Locked Print File

This can be specified by the file administrator or file creator (owner).


If the password has been forgotten, the file administrator changes the password to restore access.

- The file administrator or the file creator (owner) logs in from the control panel.
- Press the [User Tools/Counter] key to switch to the normal screen.  
If the message "You do not have the privileges to use this function." appears, press [Exit].
- Press the [Home] key on the top left of the control panel, and press the [Printer] icon on the [Home] screen.  
If the message "You do not have the privileges to use this function." appears, press [Exit].
- Press [Print Jobs].
- Press [Locked Print Job].

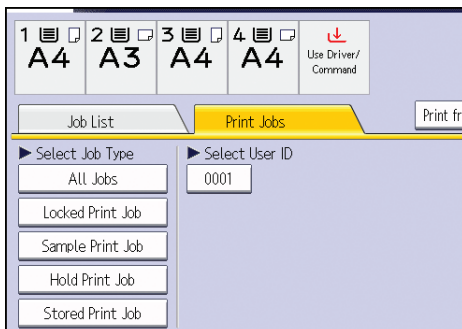


- Select the file.

### 7. Press [Change Password].

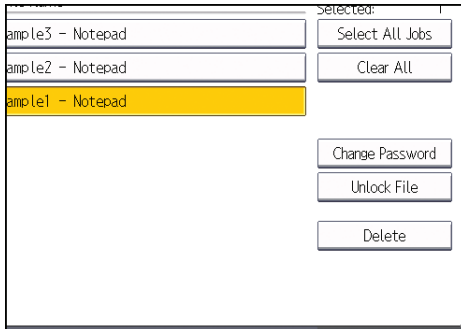

### 8. If a password entry screen appears, enter the password for the stored file, and then press [OK].

The password entry screen will not appear if the file administrator is logged in.

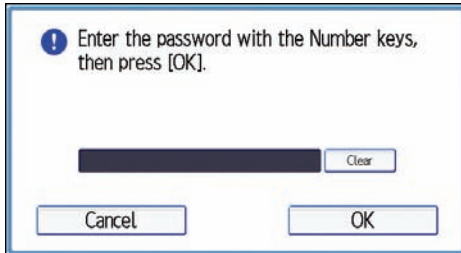

### 9. Enter the new password for the stored file, and then press [OK].

### 10. Re-enter the password for confirmation, and then press [OK].

### 11. Log out.

#### ↓ Note

- This can also be specified via Web Image Monitor. For details, see Web Image Monitor Help.

## Unlocking a Locked Print File

Only the file administrator can unlock files.

If you specify [On] for "Enhance File Protection", the file will be locked and become inaccessible if an invalid password is entered ten times. This section explains how to unlock files.

"Enhance File Protection" is one of the extended security functions. For details about this and other extended security functions, see p.261 "Specifying the Extended Security Functions".

1. The file administrator logs in from the control panel.
2. Press the [User Tools/Counter] key to switch to the normal screen.

If the message "You do not have the privileges to use this function." appears, press [Exit].


3. Press the [Home] key on the top left of the control panel, and press the [Printer] icon on the [Home] screen.

If the message "You do not have the privileges to use this function." appears, press [Exit].

4. Press [Print Jobs].
5. Press [Locked Print Job].
6. Select the file.

The  icon appears next to a file locked by the Enhance File Protection function.

7. Press [Unlock File].

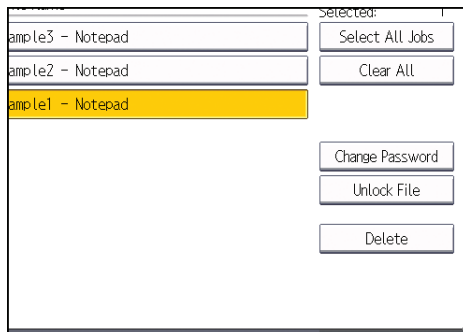

8. Press [Yes].

The  icon disappears.

9. Log out.

#### Note

- This can also be specified via Web Image Monitor. For details, see Web Image Monitor Help.


# Enforced Storage of Documents to be Printed on a Printer

Enforced storage of documents to be printed on a printer prevents information leakage due to users failing to collect prints or leaving prints unattended.

With respect to printer output, the following print jobs are subject to compulsory storage.

- Normal Print
- Sample Print
- Store and Print

1. The machine administrator logs in from the control panel.
2. Press [Printer Features].
3. Press [System].
4. Press [▼Next]
5. Press [Restrict Direct Print Jobs].

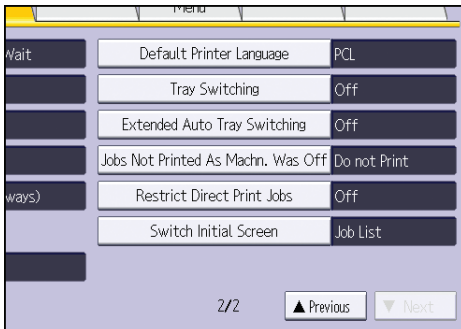

6. Press [Automatclly. Store Jobs].
7. Press [OK].
8. Log out.
  - If you select [Cncl All Direct Prt Jobs], the print jobs associated with printer output are cancelled and no data is stored.
  - For information on how to print stored documents, see "Printing Stored Documents", Print.

# 7. Managing the Machine

This chapter describes the functions for enhancing the security of the machine and operating the machine effectively.

## Managing Log Files

Collecting the logs stored in this machine allows you to track detailed data on access to the machine, user identities, usage of the machine's various functions, and error histories.

The logs can be deleted periodically to make hard disk space available, and they can be encrypted to prevent leaking of information.

The logs can be viewed using Web Image Monitor or using the log collection server. Collected logs can be converted to CSV files and downloaded all at once. They cannot be read directly from the hard disk.

### Log types

Three types of logs are stored on this machine: the job log, access log, and eco-friendly log.

- Job Log  
Stores details of user file-related operations such as copying, printing, and saving in Document Server, and control panel operations such as sending and receiving faxes, sending scan files and printing reports (the configuration list, for example).
- Access Log  
Stores details of login/logout activities, stored file operations such as creating, editing, and deleting, service engineer operations such as hard disk formatting, system operations such as viewing log transfer results, and security operations such as specifying settings for encryption, unprivileged access detection, user lockout, and firmware authentication.
- Eco-friendly Log  
Main power ON, OFF, transitions in power status, job run times or time interval between jobs, paper consumption per hour, power consumption.

### ↓ Note

- For further details, refer to the user's manual of the log collection server.
- When using the log collection server you must configure the log transfer settings on the log collection server.

---

## Managing Logs from the Machine

---

You can specify settings such as whether or not to transfer logs to the log collection server and whether or not to delete all logs.

## Disabling log transfer to the log collection server


---

Use the following procedure to disable log transfer from the machine to the log collection server. Note that you can change the log transfer setting to [Off] only if it is already set to [On].

For details about the log collection server, contact your sales representative.

For details about the transfer log setting, see the log collection server manual.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.
5. Press [Transfer Log Setting].

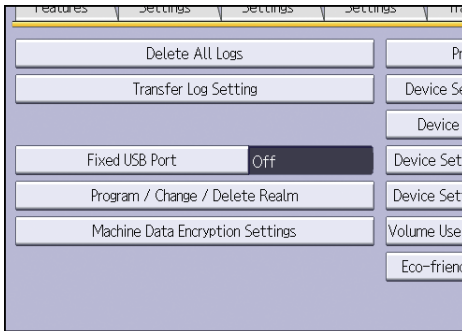


6. Press [Off].
7. Press [OK].
8. Log out.

## Specifying Delete All Logs

---

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.

## 5. Press [Delete All Logs].

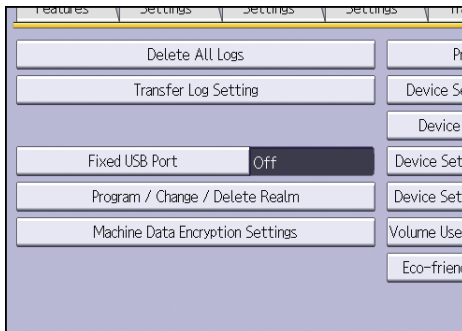

## 6. Press [Yes].

## 7. Press [Exit].

## 8. Log out.

### ↓ Note

- Deleting all logs from the machine as a batch can be achieved by either using the log collection server or via Web Image Monitor if the collection setting of one of the logs — job log, access log or eco-friendly log is enabled.

## Managing Logs from the Log Collection Server

For details about using the log collection server to manage Log Files, see the manual supplied with the log collection server.

## Using Web Image Monitor to Manage Log Files

You can specify the types of log to store in the machine and the log collection level. You can also encrypt, bulk delete, or download log files.

### Specifying log collect settings

Enable the collection settings for each kind of log and configure the collection level.

#### Job Log Collect Level

Level 1

User Settings

#### Access Log Collect Level

Level 1

Level 2

User Settings

### Eco-friendly Log Collect Level

Level 1

Level 2

User Settings

1. Log in as the machine administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Logs] under "Device Settings".
4. Select [Active] for each function: "Collect Job Logs", "Collect Access Logs" and "Collect Eco-friendly Logs".
5. Specify the collection level for each function, "Job Log Collect Level", "Access Log Collect Level", and "Eco-friendly Log Collect Level".

When a level is changed, the selection status of log details changes according to the level.

To change individual items of the log details, configure the setting for each item. If the collection level selected is [Level 1] or [Level 2], once individual items of the log details are changed, the level changes to [User Settings].

6. Click [OK].
7. "Updating..." appears. Wait for about one or two minutes, and then click [OK].  
If the previous screen does not reappear after you click [OK], click the web browser's [Reload] button.
8. Log out.

#### Note

- The greater "Access Log Collect Level" setting value, the more logs are collected.

### Disabling log transfer to the log collection server

---

Use the following procedure to disable log transfer to the log collection server. Note that you can change the log transfer setting to [Inactive] only if it is already set to [Active].

1. Log in as the machine administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Logs] under "Device Settings".
4. Select [Inactive] under "Transfer Logs".
5. Click [OK].
6. Log out.



## Specifying log encryption

---

Use the following procedure to enable/disable log encryption.

1. **Log in as the machine administrator from Web Image Monitor.**
2. **Point to [Device Management], and then click [Configuration].**
3. **Click [Logs] under "Device Settings".**
4. **Select [Active] under "Encrypt Logs".**  
To disable log encryption, select [Inactive].
5. **Click [OK].**  
A confirmation message appears.
6. **Click [OK].**
7. **Log out.**

### Note

- To encrypt the logs, it is necessary to make the collection setting active for each of the job logs, access logs, and/or eco-friendly log.
- If the data stored in the machine has been encrypted, the log files will still be encrypted, regardless of this setting.

## Deleting all logs

---

Use the following procedure to delete all logs stored in the machine.

1. **Log in as the machine administrator from Web Image Monitor.**
2. **Point to [Device Management], and then click [Configuration].**
3. **Click [Logs] under "Device Settings".**
4. **Click [Delete] under "Delete All Logs".**
5. **Click [OK].**
6. **Log out.**

### Note

- When reading the log settings screen, "Delete All Logs" does not appear if the job log, access log, or eco-friendly log is not set to [Active].

## Downloading logs

---

Use the following procedure to convert the logs stored in the machine into a CSV file for simultaneous batch download.

1. Log in as the machine administrator from Web Image Monitor.
2. Point to [Device Management], and then click [Configuration].
3. Click [Download Logs] under "Device Settings".
4. Click [Logs to Download] and select the type of log to download.  
The security log includes the two kinds of logs: job logs and access logs.
5. Click [Download].
6. Specify the folder in which you want to save the file.
7. Click [Back].
8. Log out.

**Note**

- Downloaded logs contain data recorded up till the time you click the [Download] button. Any logs recorded after the [Download] button is clicked will not be downloaded. The "Result" field of the log entry for uncompleted jobs will be blank.
- Download time may vary depending on the number of logs.
- If an error occurs while the CSV file is downloading or being created, the download is canceled and details of the error are included at the end of the file.
- If a log is downloaded successfully, "Download completed." will appear in the last line of the log file.
- For details about saving CSV log files, see your browser's Help.
- Downloaded log files use UTF-8 character encoding. To view a log file, open it using an application that supports UTF-8.
- To collect logs, set the collection setting for the job log, access log and eco-friendly log to [Active]. This setting can be specified in [Logs] under [Configuration] in Web Image Monitor.
- For details about the items contained in the logs, see p.222 "Attributes of logs you can download".

**Number of logs that can be kept on the machine**

---

When the maximum number of job logs, access logs or eco-friendly logs that can be kept on the machine is exceeded and new logs are generated, the old logs are overwritten by the new ones. If the logs are not downloaded periodically, it may not be possible to record the old logs onto files.

When using Web Image Monitor to manage logs, download the logs at an interval appropriate to the conditions in the table.

**Maximum number of logs that can be stored in the machine**

Job logs	Access logs	Eco-friendly logs
2,000	6,000	2,000

### Estimated number of logs created per day

Job logs	Access logs	Eco-friendly logs
100 (per day)	300 This figure is based on 100 operations such as initialization and access operations over the Web and 200 access log entries (two entries per job: one login and one logout).	100 (per day)

According to these conditions, the machine can maintain logs for 20 days without overwriting, but to be cautious, we recommend downloading after half that time, 10 days, to leave room for error.

It is the responsibility of the machine administrator to deal downloaded log files appropriately.

#### Note

- If you change the [Collect] / [Do not Collect] setting for log collection, you must perform a batch deletion of the logs.
- After downloading the logs, perform a batch deletion of the logs.
- During log downloads, do not perform operations that will create log entries, as logs that are in the process of downloading cannot be updated with new entries.
- Batch deletion of logs can be performed from the control panel or through Web Image Monitor.

### Notes on operation when the number of log entries reaches maximum

If the number of logs that can be stored on the machine exceeds the specified maximum value, the oldest logs are deleted and overwritten by newer logs. Whether or not the maximum number of logs that can be stored exceeds the maximum depends on the types of logs, which are job logs, access logs and eco-friendly logs.

The job log and access log are downloaded as one file.

"If logs are downloaded without overwriting" below indicates that the job log and access log are mixed after download.


"If logs are downloaded during overwriting" below indicates that part of the access log is overwritten.

In this example, part of the access log was overwritten by a downloaded log and deleted.

The eco-friendly log is downloaded as an independent file.

When logs are overwritten, it depends on the priority order and the logs with higher priority will not be overwritten or deleted.


If logs are downloaded without overwriting

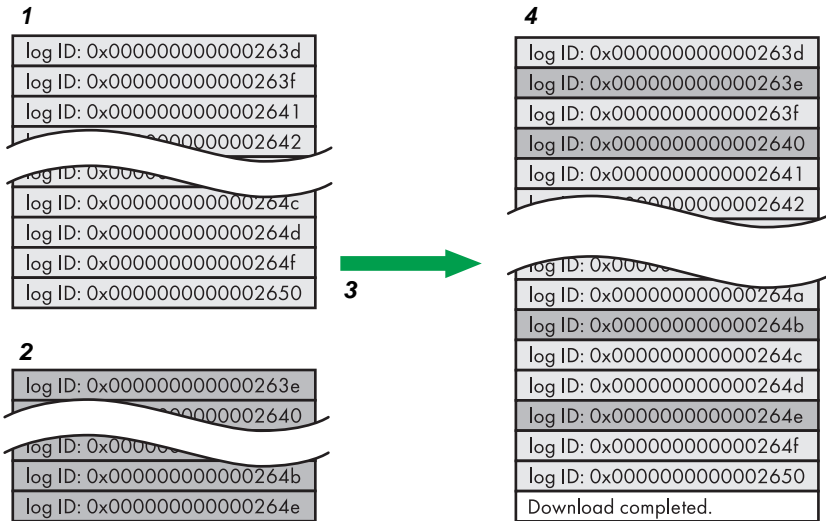

CJD006

1. Access log
2. Job log
3. Download
4. Downloaded logs

If logs are downloaded during overwriting

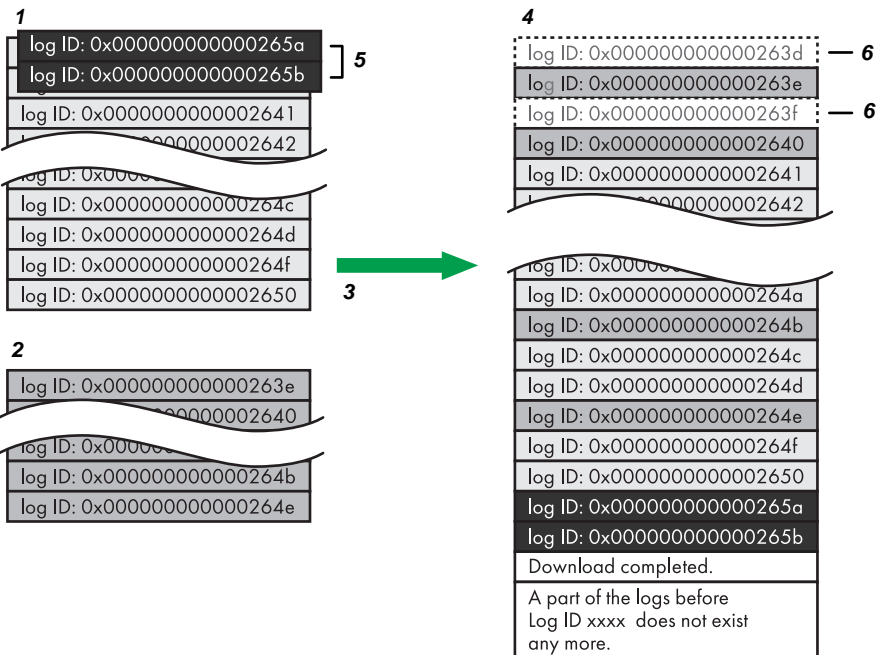

CJD007

1. Access log
2. Job log
3. Download
4. Downloaded logs
5. Overwriting
6. Deleted by overwriting

To determine whether or not overwriting occurred while the logs were downloading, check the message in the last line of the downloaded logs.

- If overwriting did not occur, the last line will contain the following message: Download completed.
- If overwriting did occur, the last line will contain the following message: Download completed. A part of the logs before Log ID xxxx does not exist any more.

#### Note

- Examine logs following "Log ID xxxx".

## Printer Job Logs


Print Log entries are made before the login entry is made in the Access Log.

Details of series of jobs (including reception, processing, and output of the jobs' data) are combined into single entries.

When the machine receives a print job, it creates an ID for the job and records this in the job log. The machine then creates a login ID for the print job and records this in the access log. It then creates a job log entry detailing the job's processing and outputting (under the same login ID). When the machine has finished processing the job, it creates a logout entry and places this in the access log.

Entries detailing the reception, processing, and output of a series of print jobs are created in the job log first, and then the login and logout details of those jobs are recorded in the access log.

### Print job flowchart

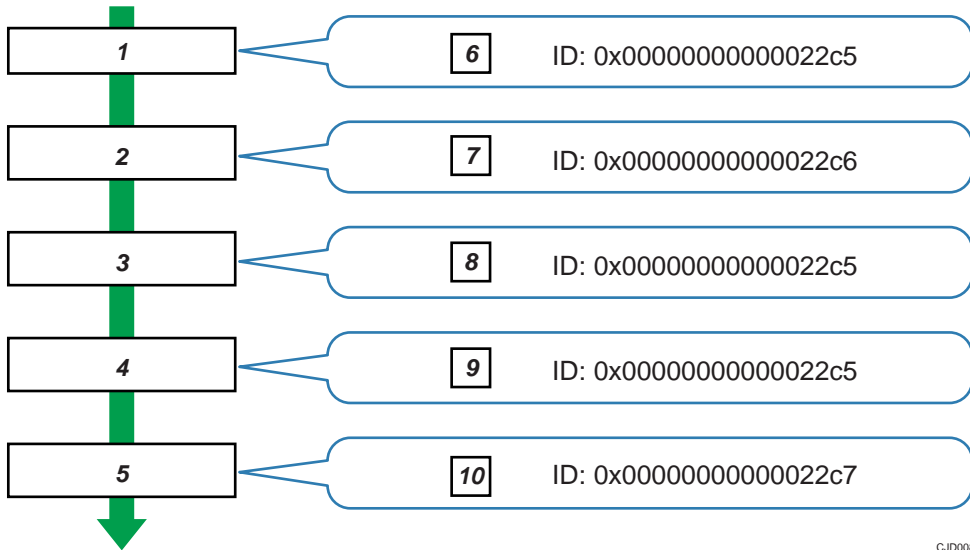

CJD008

1. Print job data is received.
2. Authentication (login) data is received.
3. Print job is processed.
4. Print job is output.
5. Authentication (login) data is received.
6. An ID is assigned to the print job and recorded as an entry in the Job Log.
7. Authentication (login) data is recorded as an entry in the Access Log.
8. Information about the processing of the print job is recorded as an entry in the Job Log (using the same ID).
9. Information about the outputting of the print job is recorded as an entry in the Job Log (using the same ID).
10. Authentication (logout) data is recorded as an entry in the Access Log.

---

## Logs That Can Be Managed Using Web Image Monitor

---

### Logs that can be collected

The following tables explain the items in the job log and access log that the machine creates when you enable log collection using Web Image Monitor. If you require log collection, use Web Image Monitor to configure it. This setting can be specified in [Logs] under [Configuration] in Web Image Monitor.

**Job log information items**

Job Log Item	Log Type Attribute	Content
Copier: Copying	Copier: Copying	Details of normal and Sample Copy jobs.
Copier: Copying and Storing	Copier: Copying and Storing	Details of files stored in Document Server that were also copied at the time of storage.
Document Server: Storing	Document Server: Storing	Details of files stored using the Document Server screen.
Document Server: Stored File Downloading	Document Server: Stored File Downloading	Details of files stored in Document Server and downloaded using Web Image Monitor or DeskTopBinder.
Stored File Printing	Stored File Printing	Details of files printed using the Document Server screen.
Scanner: Sending	Scanner: Sending	Details of sent scan files.
Scanner: URL Link Sending and Storing	Scanner: URL Link Sending and Storing	Details of scan files stored in Document Server and whose URLs were sent by e-mail at the time of storage.
Scanner: Sending and Storing	Scanner: Sending and Storing	Details of scan files stored in Document Server that were also sent at the time of storage.
Scanner: Storing	Scanner: Storing	Details of scan files stored in Document Server.
Scanner: Stored File Downloading	Scanner: Stored File Downloading	Details of scan files stored in Document Server and downloaded using Web Image Monitor, DeskTopBinder or Desk Top Editor For Production.
Scanner: Stored File Sending	Scanner: Stored File Sending	Details of stored scan files that were also sent.
Scanner: Stored File URL Link Sending	Scanner: Stored File URL Link Sending	Details of stored scan files whose URLs were sent by e-mail.
Printer: Printing	Printer: Printing	Details of normal print jobs.
Printer: Locked Print (Incomplete)	Printer: Locked Print (Incomplete)	Log showing Locked Print documents temporarily stored on the machine.

Job Log Item	Log Type Attribute	Content
Printer: Locked Print	Printer: Locked Print	Log showing Locked Print documents temporarily stored on the machine and then printed from the control panel or through Web Image Monitor.
Printer: Sample Print (Incomplete)	Printer: Sample Print (Incomplete)	Log showing Sample Print documents temporarily stored on the machine.
Printer: Sample Print	Printer: Sample Print	Log showing Sample Print documents temporarily stored on the machine and then printed from the control panel or through Web Image Monitor.
Printer: Hold Print (Incomplete)	Printer: Hold Print (Incomplete)	Log showing Hold Print documents temporarily stored on the machine.
Printer: Hold Print	Printer: Hold Print	Log showing Hold Print documents temporarily stored on the machine and then printed from the control panel or through Web Image Monitor.
Printer: Stored Print	Printer: Stored Print	Details of Stored Print files stored on the machine.
Printer: Store and Normal Print	Printer: Store and Normal Print	Details of Stored Print files that were printed at the time of storage (when "Job Type:" was set to "Store and Print" in printer properties).
Printer: Stored File Printing	Printer: Stored File Printing	Details of Stored Print files printed from the control panel or Web Image Monitor.
Printer: Document Server Sending	Printer: Document Server Sending	Details of files stored in Document Server when "Job Type:" was set to "Document Server" in printer properties.
Report Printing	Report Printing	Details of reports printed from the control panel.
Result Report Printing/E-mailing	Result Report Printing/E-mailing	Details of job results printed from the control panel or notified by e-mail.
Scanner: TWAIN Driver Scanning	Scanner: TWAIN Driver Scanning	Details of stored scan files that were sent using Network TWAIN Scanner.



Job Log Item	Log Type Attribute	Content
Printer: Hold Print File Printing	Printer: Hold Print File Printing	When a document is held for printing and stored temporarily on the machine, this logs the time a user specifies it be printed via the control panel or Web Image Monitor.
Fax: Sending	Fax: Sending	Details of faxes sent from the machine.
Fax: LAN-Fax Sending	Fax: LAN-Fax Sending	Details of fax files sent from PCs.
Fax: Storing	Fax: Storing	Details of fax files stored on the machine using the facsimile function.
Fax: Stored File Printing	Fax: Stored File Printing	Details of fax files stored on the machine and printed using the facsimile function.
Fax: Stored File Downloading	Fax: Stored File Downloading	Details of fax files stored in Document Server and downloaded using Web Image Monitor or DeskTopBinder.
Fax: Receiving	Fax: Receiving	Details of storage of received fax files.
Fax: Receiving and Delivering	Fax: Receiving and Delivering	Details of faxes that received and delivered by the machine.
Fax: Receiving and Storing	Fax: Receiving and Storing	Details of fax files that received and stored by the machine.

### Access log information items

Access Log Item	Log Type Attribute	Content
Login	Login	Times of login and identity of logged in users.
Logout	Logout	Times of logout and identity of logged out users.
File Storing	File Storing	Details of files stored in Document Server.
Stored File Deletion	Stored File Deletion	Details of files deleted from Document Server.
All Stored Files Deletion	All Stored Files Deletion	Details of deletions of all Document Server files.
HDD Format	HDD Format	Details of hard disk formatting.

Access Log Item	Log Type Attribute	Content
Unauthorized Copying	Unauthorized Copying	Details of documents scanned with "Data Security for Copying".
All Logs Deletion	All Logs Deletion	Details of deletions of all logs.
Log Setting Change	Log Setting Change	Details of changes made to log settings.
Transfer Log Result	Transfer Log Result	Log of the result of log transfer to Remote Communication Gate S.
Log Collection Item Change	Log Collection Item Change	Details of changes to job log collection levels, access log collection levels, and types of log collected.
Collect Encrypted Communication Logs	Collect Encrypted Communication Logs	Log of encrypted transmissions between the utility, Web Image Monitor or outside devices.
Access Violation	Access Violation	Details of failed access attempts.
Lockout	Lockout	Details of lockout activation.
Firmware: Update	Firmware: Update	Details of firmware updates.
Firmware: Structure Change	Firmware: Structure Change	Details of structure changes that occurred when an SD card was inserted or removed, or when an unsupported SD card was inserted.
Firmware: Structure	Firmware: Structure	Details of checks for changes to firmware module structure made at times such as when the machine was switched on.
Machine Data Encryption Key Change	Machine Data Encryption Key Change	Details of changes made to encryption keys using "Machine Data Encryption Key Change" setting.
Firmware: Invalid	Firmware: Invalid	Details of checks for firmware validity made at times such as when the machine was switched on.
Date/Time Change	Date/Time Change	Details of changes made to date and time settings.
File Access Privilege Change	File Access Privilege Change	Log for changing the access privilege to the stored files.

Access Log Item	Log Type Attribute	Content
Password Change	Password Change	Details of changes made to the login password.
Administrator Change	Administrator Change	Details of changes of administrator.
Address Book Change	Address Book Change	Details of changes made to address book entries.
Capture Error	Capture Error	Details of file capture errors.
Machine Configuration	Machine Configuration	Log of changes to the machine's settings.
Back Up Address Book	Back Up Address Book	Log of when data in the Address Book is backed up.
Restore Address Book	Restore Address Book	Log of when data in the Address Book is restored.
Enhanced Print Volume Use Limitation: Tracking Permission Result	Enhanced Print Volume Use Limitation: Tracking Permission Result	Log of when a tracking error occurs.
Counter Clear Result: Selected User(s)	Counter Clear Result: Selected User(s)	Log of when the counter for an individual user is cleared.
Counter Clear Result: All Users	Counter Clear Result: All Users	Log of when the counters for all users are cleared.
Import Device Setting Information	Import Device Setting Information	Log of when a device setting information file is imported.
Export Device Setting Information	Export Device Setting Information	Log of when a device setting information file is exported.

There is no "Login" log made for SNMPv3.

If the hard disk is formatted, all the log entries up to the format are deleted and a log entry indicating the completion of the format is made.

"Access Violation" indicates the system has experienced frequent remote DoS attacks involving logon attempts through user authentication.

**Eco-friendly log information items**

Eco-friendly Log Item	Log Type Attribute	Content
Main Power On	Main Power On	Log of when the main power switch is turned on.
Main Power Off	Main Power Off	Log of when the main power switch is turned off.
Power Status Transition Result	Power Status Transition Result	Log of the results of transitions in power status.
Job Related Information	Job Related Information	Log of job-related information.
Paper Usage	Paper Usage	Log of the amount of paper used.
Power Consumption	Power Consumption	Log of power consumption.

**Note**

- If "Job Log Collect Level" is set to [Level 1], all job logs are collected.
- If "Access Log Collect Level" is set to [Level 1], the following information items are recorded in the access log:
  - HDD Format
  - All Logs Deletion
  - Log Setting Change
  - Log Collection Item Change
- If "Access Log Collect Level" is set to [Level 2], all access logs are collected.
- The first log made following power on is the "Firmware: Structure" log.
- If "Eco-friendly Log Collect Level" is set to [Level 1], eco-friendly logs are not collected.
- If "Eco-friendly Log Collect Level" is set to [Level 2], all eco-friendly logs are collected.

**Attributes of logs you can download**

If you use Web Image Monitor to download logs, a CSV file containing the information items shown in the following table is produced.

Note that a blank field indicates an item is not featured in a log.

**File output format**

- Character Code Set: UTF-8

- Output Format: CSV (Comma-Separated Values)
- File Names of Job Logs and Access Logs: "machine name +\_log.csv"
- File names for Eco-friendly Logs: "machine name+\_ecolog.csv"

**Order of log entries**

Log entries are printed in ascending order according to Log ID.

**File structure**

The data title is printed in the first line (header line) of the file.

**Differences in log data formatting**

- Job log  
Multiple lines appear in the order of All, Source (job input data), and Target (job output data). The same log ID is assigned to all lines corresponding to a single job log entry.
- Access log  
Items in the list and access log entries appear on separate lines.
- Eco-friendly log  
Items in the list and eco-friendly log entries appear on separate lines.

1				2			3			
Start Date/Time	...	Result	...	Access Result	Source	...	Print File Name	Target	...	Stored File Name
2011-03-03T15:43:03.0	...	Completed	...			...			...	
	...	Completed	...		Report	...			...	
	...	Completed	...			...		Print	...	

CJD001

**1. All**

Each item in the list is displayed on a separate line.

**2. Source**

Displays details of the job log entry and the "Result" and "Status" of each item.

If there are multiple sources, multiple lines are displayed.

**3. Target**

Displays details of the job log entry and the "Result" and "Status" of each item.

If there are multiple targets, multiple lines are displayed.

**Job and access log information items**

Item	Content
Start Date/Time	<p>For a job log entry, indicates the start date and time of the operation. If the job has not been completed, this is blank. For an access log entry, indicates the same date and time as shown by "End Date/Time".</p> <p>This is in Item 1 of the CSV file.</p>
End Date/Time	<p>For a job log entry, indicates the end date and time of the operation. If the operation is still in progress, this will be blank.</p> <p>For an access log entry, indicates the same date and time as shown by "Result".</p> <p>This is Item 2 of the CSV file.</p>
Log Type	<p>Details of the log type. Access logs are classified under "Access Log Type".</p> <p>For details about the information items contained in each type of log, see p.216 "Logs that can be collected".</p> <p>This is Item 3 of the CSV file.</p>
Result * 1	<p>Indicates the result of an operation or event:</p> <ul style="list-style-type: none"> <li>• If "Succeeded" is displayed for a job log entry, the operation completed successfully; "Failed" indicates the operation was unsuccessful. If the operation is still in progress, this will be blank.</li> <li>• If "Succeeded" is displayed for an access log entry, the event completed successfully; "Failed" indicates the event was unsuccessful.</li> </ul>
Operation Method	<p>Operation procedures are recorded.</p>

Item	Content
Status	<p>Indicates the status of an operation or event:</p> <ul style="list-style-type: none"> <li>• If "Completed" is displayed for a job log entry, the operation completed successfully; "Failed" indicates the operation was unsuccessful; "Processing" indicates the operation is still in progress.</li> <li>• If "Completed" is displayed for "Source" or "Target" in a job log entry, the operation completed successfully; "Failed" indicates the operation was unsuccessful; "Processing" indicates the operation is still in progress; "Error" indicates an error occurred; "Suspended" indicates the operation is currently suspended.</li> <li>• If "Succeeded" is displayed for an access log entry, the operation completed successfully; if any of the following are displayed, the operation was unsuccessful:  "Password Mismatch", "User Not Programmed", "Other Failures", "User Locked Out", "File Password Mismatch", "No Privileges", "Failed to Access File", "File Limit Exceeded", "Transfer Cancelled", "Power Failure", "Lost File", "Functional Problem", "Communication Failure", or "Communication Result Unknown".</li> </ul>
Status (For results of clearing user-specific counter, for results of clearing all-user counter)	If clearing user-specific counter or all-user counter fails, "Failure in some or all parts" is recorded.

Item	Content
<p>Status (For importing and exporting device information)</p>	<p>The status of an operation or event is recorded.</p> <p>If importing or exporting is executed by another user, "Importing/Exporting by Other User" is recorded.</p> <p>If a connection to an output destination fails, "Connection Failed with Remote Machine" is recorded.</p> <p>If an error occurs in writing to an output destination, "Write Error to Remote Machine" is recorded.</p> <p>If the specified file is incompatible, "Specified File: Incompatible" is recorded.</p> <p>If a format error occurs with the specified file, "Specified File: Format Error" is recorded.</p> <p>If the specified file cannot be found, "Specified File: Not Exist" is recorded.</p> <p>If there are no privileges for operating the specified file, "Specified File: No Privileges" is recorded.</p> <p>If an error occurs in accessing the specified file, "Specified File: Access Error" is recorded.</p> <p>If the external media is full, "Memory Storage Device Full" is recorded.</p> <p>If an abnormality is found in the external media, "Memory Storage Device Error" is recorded.</p> <p>If encryption fails, "Encryption Failed" is recorded.</p> <p>If decoding fails, "Decoding Failed" is recorded.</p> <p>If there are no common keys, "Common Key Not Exist" is recorded.</p> <p>If a communication error occurs, "Connection Error" is recorded.</p>



Item	Content
Status Supplement	<p>If the status of a log is abnormal termination (Failed), the status is recorded.</p> <p>If it does not terminate abnormally, nothing is recorded.</p> <p>If a user cancels an operation, "Cancelled by User" is recorded.</p> <p>If it terminates abnormally during input, "Input Failure" is recorded. For the reason it failed, refer to the input information (Source) noted below it.</p> <p>If it terminates abnormally during output, "Output Failure" is recorded. For the reason it failed, refer to the output information (Target) noted below it.</p> <p>If an error is detected prior to execution of a job, "Other Error" is recorded.</p> <p>If power is lost, "Power Failure" is recorded.</p>
Status Supplement (If the Source is a Scan File)	<p>If the accounting device is unplugged during operation, "External Charge Unit Disconnected" is recorded.</p> <p>If pages are missing from a manuscript during execution of the overlaid copying, "Insufficient No. of Original for Overlay" is recorded.</p> <p>If the storage capacity of pages on Document Server is exceeded, "Exceed Max. Stored Page (File Storage)" is recorded.</p> <p>If the storage capacity of documents on Document Server is exceeded, "Exceed Max. Stored File (File Storage)" is recorded.</p> <p>If the hard disk capacity on Document Server is exceeded, "Hard Disk Full (File Storage Memory)" is recorded.</p> <p>If the limit to e-mail size is exceeded, "Exceeded Max. Email Size" is recorded.</p> <p>If the size limit for one document is exceeded, "Exceeded Max. File Size" is recorded.</p> <p>If a read error occurs with the automatic document feed, "Scanner Error" is recorded.</p> <p>If a time-out occurs, "Timeout" is recorded.</p> <p>If any other error occurs, "Other Error" is recorded.</p>

Item	Content
<p>Status Supplement (If the Source is a Stored File)</p>	<p>If the number of pages that can be captured is exceeded, "Exceed Max. Stored Page (Image Area)" is recorded.</p> <p>If the hard disk capacity for capture is exceeded, "Hard Disk Full (Image Area)" is recorded.</p> <p>If the memory range for processing data becomes full, "Memory Full" is recorded.</p> <p>If an attempt to use a PDL or port not installed on the machine is made, "Print Data Error" is recorded.</p> <p>If the wrong type of driver is used, a network malfunction occurs, a job is cancelled by the PC fax driver or a fax communication failure occurs, "Data Transfer Interrupted" is recorded.</p> <p>If any other error occurs, "Other Error" is recorded.</p>
<p>Status Supplement (If the Source is a Received File)</p>	<p>If a fax fails to be received, "Reception Error" is recorded.</p>

Item	Content
Status Supplement (If the Source is a Printer)	<p>If the number of jobs that can be received is exceeded, "Over Job Limit" is recorded.</p> <p>If an illegal address or an address with 41 or more digits is specified, "Specifying Destination Error" is recorded.</p> <p>If an error occurs in the line specified, "Specifying Line Error" is recorded.</p> <p>If the memory range for processing data becomes full, "Memory Full" is recorded.</p> <p>If device authentication fails, "Authentication Failed (Access Restricted)" is recorded.</p> <p>If the wrong type of driver is used, a network malfunction occurs, a job is cancelled by the PC fax driver or a fax communication failure occurs, "Data Transfer Interrupted" is recorded.</p> <p>If an attempt to use a PDL or port not installed on the machine is made, "Print Data Error" is recorded.</p> <p>If the storage capacity of pages on Document Server is exceeded, "Exceed Max. Stored Page (File Storage)" is recorded.</p> <p>If the storage capacity of documents on Document Server is exceeded, "Exceed Max. Stored File (File Storage)" is recorded.</p> <p>If any other error occurs, "Other Error" is recorded.</p>
Status Supplement (If the Source is a Report)	<p>If a system error is detected on the machine, "Other Error" is recorded.</p>

Item	Content
<p>Status Supplement (If the Target is Store)</p>	<p>If the accounting device is unplugged during operation, "External Charge Unit Disconnected" is recorded.</p> <p>If the logged in user exceeds their paper usage limit, "Exceeded Print Volume Use Limitation" is recorded.</p> <p>If a time-out occurs, "Timeout" is recorded.</p> <p>If the user does not have permission to use a document or function, "No Privilege" is recorded.</p> <p>If the storage capacity of pages on Document Server is exceeded, "Exceed Max. Stored Page (File Storage)" is recorded.</p> <p>If the storage capacity of documents on Document Server is exceeded, "Exceed Max. Stored File (File Storage)" is recorded.</p> <p>If the hard disk capacity on Document Server is exceeded, "Hard Disk Full (File Storage Memory)" is recorded.</p> <p>If the size of paper specified (including irregular sizes) is of a size that cannot be stored, "Unavailable Size to Store" is recorded.</p> <p>If the number of pages that can be captured is exceeded, "Exceed Max. Stored Page (Image Area)" is recorded.</p> <p>If the hard disk capacity for capture is exceeded, "Hard Disk Full (Image Area)" is recorded.</p> <p>If any other error occurs, "Other Error" is recorded.</p>

Item	Content
Status Supplement (If the Target is Send 1)	<p>If a time-out occurs, "Timeout" is recorded.</p> <p>If a document is deleted or an undelivered document exceeds its wait time and is deleted, "Transmission Failed (Data Deleted)" is recorded.</p> <p>If the user does not have permission to use a document or function, "No Privilege" is recorded.</p> <p>If the password for a document is not input, "Not Entered Document Password" is recorded.</p> <p>If the specified server or folder is not found, "Connection Failed with Destination" is recorded.</p> <p>If authentication with the destination fails, "Authentication Failed with Destination" is recorded.</p> <p>If the destination memory is full, "Transmission Failed with Memory Full" is recorded.</p> <p>If the memory range for processing data becomes full, "Memory Full" is recorded.</p>
Status Supplement (If the Target is Send 2)	<p>If the wrong type of driver is used, a network malfunction occurs, a job is cancelled by the PC fax driver or a fax communication failure occurs, "Data Transfer Interrupted" is recorded.</p> <p>If the destination is busy, "Line Busy" is recorded.</p> <p>If there is not response from the destination, "No Response" is recorded.</p> <p>If the destination is not a fax machine, "Not Facsimile Destination" is recorded.</p> <p>If the limit to e-mail size is exceeded, "Exceeded Max. Email Size" is recorded.</p> <p>If any other error occurs, "Other Error" is recorded.</p> <p>If there is no device certificate, its valid period is elapsed, or if the e-mail address of the administrator and that of the certificate do not match, "Invalid Device Certificate" is recorded.</p> <p>If the valid period of the destination certificate is expired, "Invalid Expiration Date: Destination's Certificate" is recorded.</p> <p>If both the destination certificate and the device certificate are invalid, "Invalid Device/Destination's Certificate" is recorded.</p>

Item	Content
User Entry ID	<p>Indicates the user's entry ID.</p> <p>This is a hexadecimal ID that identifies users who performed job or access log-related operations:</p> <p>For supervisors, only 0xfffff86 is available; for administrators, 0xfffff87, 0xfffff88, 0xfffff89, and 0xfffff8a are available. For general users, any value between 0x00000001 and 0xfffffeff is available.</p> <p>"0x00000000", "0xfffff80", and "0xfffff81" indicate system operations related to user authentication.</p> <p>IDs "0xfffff80" and "0xfffff81" indicate system operations related to stored files and the address book; "0x00000000" indicates other operations.</p> <p>"0xfffff80" indicates operations related to deleting Hold Print, Locked Print, and Stored Print jobs (such as when the [Auto Delete Temporary Print Jobs] setting is enabled), and operations related to changing the access permissions of such jobs. Displays Address Book updates when Auto registration of users is enabled through Windows, LDAP, or another authentication system.</p> <p>ID "0xfffff81" indicates only operations related to the creation of stored files when it is assumed such files will be deleted through system operations.</p> <p>"0x00000000" and "0xfffff81" indicate operations that do not require user authentication (such as copying and scanning) and that were performed by non-authenticated users.</p> <p>ID "0xfffff81" indicates operations related to stored files, the address book and job logs; "0x00000000" indicates other operations.</p>
User Code/User Name	<p>Identifies the user code or user name of the user who performed the operation.</p> <p>If an administrator performed the operation, this ID will contain the login name of that administrator.</p>
Log ID	<p>Identifies the ID that is assigned to the log.</p> <p>This is a hexadecimal ID that identifies the log.</p>

\* 1 The following log items are recorded only when the logged operations are executed successfully:  
 "Document Server: Stored File Downloading", "Stored File Printing", "Scanner: Storing", "Scanner:

Stored File Sending", "Printer: Stored File Printing", and "Fax: Stored File Downloading" (Job logs) and "File Storing" and "Stored File Deletion" (Access logs).

### Access log information items

Item	Content
Access Log Type	<p>Indicates the type of access:</p> <p>"Authentication" indicates a user authentication access.</p> <p>"System" indicates a system access.</p> <p>"Stored File" indicates a stored file access.</p> <p>"Network Attack Detection/Encrypted Communication" indicates a network attack or encrypted communication access.</p> <p>"Firmware" indicates a firmware verification access.</p> <p>"Address Book" indicates an address book access.</p>
Authentication Server Name	<p>Indicates the name of the server where authentication was last attempted.</p>
No. of Authentication Server Switches	<p>Indicates the number of times server switching occurred when the authentication server was unavailable.</p> <p>You can determine whether or not authentication server availability is detected.</p> <p>The number of server switches is indicated as 0 to 4.</p> <p>A value of 0 indicates the authentication server is available.</p>
Logout Mode	<p>Mode of logout. The remark "by User's Operation" indicates manual logout by the user; "by Auto Logout Timer" indicates automatic logout following a timeout.</p>
Login Method	<p>The route by which the authentication request is received is recorded.</p> <p>"Control Panel" indicates the login was performed through the control panel; "via Network" indicates the login was performed remotely through a network computer; and "Others" indicates the login was performed through another method.</p>

Item	Content
Login User Type	<p>Indicates the type of login user:</p> <p>"User" indicates the logged in user was a registered general user.</p> <p>"Guest" indicates the logged in user was a guest user.</p> <p>"File Administrator" indicates the logged in user was a registered file administrator.</p> <p>"Machine Administrator" indicates the logged in user was a registered machine administrator.</p> <p>"Network Administrator" indicates the logged in user was a registered network administrator.</p> <p>"Supervisor" indicates the logged in user was a registered supervisor.</p> <p>"Custom Engineer (Service Mode)" indicates the logged in user was a customer engineer.</p> <p>"Others" indicates the logged in user did not belong to any of the above types of user.</p>
Target User Entry ID	<p>Indicates the entry ID of the target user is.</p> <p>This is a hexadecimal ID that indicates users to whom the following settings are applied:</p> <ul style="list-style-type: none"> <li>• Lockout</li> <li>• Password Change</li> </ul>
Target User Code/User Name	<p>User code or user name of the user whose data was accessed. If the administrator's data was accessed, the administrator's user name is logged.</p>
Address Book Registration No.	<p>The registration number of the user who performs the operation is recorded.</p>
Address Book Operation Mode	<p>The method of how the Address Book is changed is recorded.</p>
Address Book Change Item	<p>Which content of the Address Book is changed is recorded.</p>
Address Book Change Request IP Address	<p>The IP address information (IPv4/IPv6) of the user who operated the Address Book is recorded.</p>



Item	Content
Lockout/Release	The mode of operation access. "Lockout" indicates activation of password lockout; "Release" indicates deactivation of password lockout.
Lockout Release Method	"Manual" is recorded if the machine is unlocked manually. "Auto" is recorded if the machine is unlocked by the lockout release timer.
Lockout Release Target Administrator	If a lockout is deactivated, the target administrator is recorded.
Counter to Clear	Which counter is reset for each user is recorded.
Export Target	<p>The setting information that is the target of device information exporting is recorded.</p> <p>The recorded information is specified below:</p> <ul style="list-style-type: none"> <li>• System Settings, Copier Features, Facsimile Features, Printer Features, Scanner Features, Program (Copier), Program (Scanner), Program (Document Server), Browser Features, Web Image Monitor Setting, Web Service Settings, System/Copier SP, Scanner SP, Printer SP, Facsimile SP</li> </ul>
Target File Name	The file name that is the target of device information importing or exporting is recorded.
Stored File ID	<p>Identifies a created or deleted file.</p> <p>This is a hexadecimal ID that indicates created or deleted stored files.</p>
Stored File Name	Name of a created or deleted file.
File Location	Region of all file deletion. "Document Server" indicates a deletion of all files from the machine's hard disk.
Collect Job Logs	<p>Indicates the status of the job log collection setting:</p> <p>"Active" indicates job log collection is enabled.</p> <p>"Inactive" indicates job log collection is disabled.</p> <p>"Not Changed" indicates no changes have been made to the job log collection setting.</p>

Item	Content
Collect Access Logs	<p>Indicates the status of the access log collection setting:</p> <p>"Active" indicates access log collection is enabled.</p> <p>"Inactive" indicates access log collection is disabled.</p> <p>"Not Changed" indicates no changes have been made to the access log collection setting.</p>
Collect Eco-friendly Logs	<p>Indicates the status of the eco-friendly log collection setting:</p> <p>"Active" indicates eco-friendly log collection is enabled.</p> <p>"Inactive" indicates eco-friendly log collection is disabled.</p> <p>"Not Changed" indicates no changes have been made to the eco-friendly log collection setting.</p>
Transfer Logs	<p>Indicates the status of the log transfer setting:</p> <p>"Active" indicates log transfer is enabled.</p> <p>"Inactive" indicates log transfer is disabled.</p> <p>"Not Changed" indicates no changes have been made to the log transfer setting.</p>
Encrypt Logs	<p>Indicates the status of the log encryption setting:</p> <p>"Active" indicates log encryption is enabled.</p> <p>"Inactive" indicates log encryption is disabled.</p> <p>"Not Changed" indicates no changes have been made to the log encryption setting.</p>
Log Type	<p>If a log's collection level setting has been changed, this function indicates details of the change:</p> <p>"Job Log" indicates the job log's collection level has been changed.</p> <p>"Access Log" indicates the access log's collection level has been changed.</p> <p>"Eco-friendly Log" indicates the eco-friendly log's collection level has been changed.</p> <p>"Level 1" indicates a level 1 collection setting.</p> <p>"Level 2" indicates a level 2 collection setting.</p> <p>"User Settings" indicates a user-specified collection level setting.</p>

Item	Content
Log Collect Level	Indicates the level of log collection: "Level 1", "Level 2", or "User Settings".
Encryption/Cleartext	Indicates whether communication encryption is enabled or disabled:  "Encryption Communication" indicates encryption is enabled; "Cleartext Communication" indicates encryption is not disabled.
Machine Port No.	Indicates the machine's port number.
Protocol	Destination protocol. "TCP" indicates the destination's protocol is TCP; "UDP" indicates the destination's protocol is UDP; "Unknown" indicates the destination's protocol could not be identified.
IP Address	Destination IP address.
Port No.	Destination port number.  This is in decimal.
MAC Address	Destination MAC (physical) address.
Primary Communication Protocol	Indicates the primary communication protocol.
Secondary Communication Protocol	Indicates the secondary communication protocol.
Encryption Protocol	Indicates the protocol used to encrypt the communication:
Communication Direction	Indicates the direction of communication:  "Communication Start Request Receiver (In)" indicates the machine received a request to start communication; "Communication Start Request Sender (Out)" indicates the machine sent a request to start communication.
Communication Start Log ID	Indicates the log ID for the communication start time.  This is a hexadecimal ID that indicates the time at which the communication started.
Communication Start/End	Indicates the times at which the communication started and ended.

Item	Content
Network Attack Status	<p>Indicates the attack status of the network:</p> <p>"Violation Detected" indicates an attack on the network was detected.</p> <p>"Recovered from Violation" indicates the network recovered from an attack.</p> <p>"Max. Host Capacity Reached" indicates the machine became inoperable due to the volume of incoming data reaching the maximum host capacity.</p> <p>"Recovered from Max. Host Capacity" indicates that the machine became operable again following reduction of the volume of incoming data.</p>
Network Attack Type	<p>Identifies the type of network attack as either "Password Entry Violation" or "Device Access Violation".</p>
Network Attack Type Details	<p>Indicates details about the type of network attack: "Authentication Error" or "Encryption Error".</p>
Network Attack Route	<p>Identifies the route of the network attack as either "Attack from Control Panel" or "Attack from Other than Control Panel".</p>
Login User Name used for Network Attack	<p>Identifies the login user name that the network attack was performed under.</p>
Add/Update/Delete Firmware	<p>Indicates the method used to add, update, or delete the machine's firmware:</p> <p>"Updated with SD Card" indicates an SD card was used to perform the firmware update.</p> <p>"Added with SD Card" indicates an SD card was used to add the firmware update.</p> <p>"Deleted with SD Card" indicates an SD card was used to delete the firmware update.</p> <p>"Moved to Another SD Card" indicates the firmware update was moved to another SD card.</p> <p>"Updated via Remote" indicates the firmware update was updated remotely from a computer.</p> <p>"Updated for Other Reasons" indicates the firmware updated was performed using a method other than any of the above.</p>
Module Name	<p>Firmware module name.</p>

Item	Content
Parts Number	Firmware module part number.
Version	Firmware version.
Machine Data Encryption Key Operation	<p>Indicates the type of encryption key operation performed:</p> <p>"Back Up Machine Data Encryption Key" indicates an encryption key backup was performed.</p> <p>"Restore Machine Data Encryption Key" indicates an encryption key was restored.</p> <p>"Clear NVRAM" indicates the NVRAM was cleared.</p> <p>"Start Updating Machine Data Encryption Key" indicates an encryption key update was started.</p> <p>"Finish Updating Machine Data Encryption Key" indicates an encryption key update was finished.</p>
Machine Data Encryption Key Type	Identifies the type of the encryption key as "Encryption Key for Hard Disk", "Encryption Key for NVRAM", or "Device Certificate".
Validity Error File Name	Indicates the name of the file in which a validity error was detected.
Configuration Category	<p>The category whose settings were changed is recorded.</p> <p>For details, see "Category/Attribute List".</p>
Configuration name	<p>The attributes of the categories are recorded.</p> <p>For details, see "Category/Attribute List".</p>
Configuration value	<p>The values of the attributes are recorded.</p> <p>For details, see "Category/Attribute List".</p>
Destination Server Name	<p>If the log type is "SDK Tracking", the name of the destination server that tracking information failed to be sent is recorded.</p> <p>If the log type is import or export of preference information, the name of the server that a data export or import request is issued from is recorded.</p>
Hdd Init Partition No.	The initial status of each hard disk partition is recorded.

Item	Content
Access Result	Indicates the results of logged operations: "Completed" indicates an operation completed successfully; "Failed" indicates an operation completed unsuccessfully.

**Job log information items**

**Input information**

Item	Content
Source	Indicates the source of the job file: "Scan File" indicates the job file was scanned in; "Stored File" indicates the job file was stored on the hard disk; "Printer" indicates the job file was sent from the printer driver; "Received File" indicates the job file was received over the network; "Report" indicates the job file was a printed report.
Start Date/Time	Dates and times "Scan File", "Received File" and "Printer" operations started.
End Date/Time	Dates and times "Scan File", "Received File" and "Printer" operations ended.
Stored File ID	Indicates the ID of data that is output as a stored file. This is a decimal ID that identifies the stored file.
Stored File Name	Names of "Stored File" files.
Print File Name	Name of "Printer" files.

**Output information**

Item	Content
Target	Type of the job target. "Print" indicates a print file; "Store" indicates a stored file; "Send" indicates a sent file.
Start Date/Time	Dates and times "Print", "Store", and "Send" operations started.
End Date/Time	Dates and times "Print", "Store", and "Send" operations ended.
Destination Name	Names of "Send" destinations.
Destination Address	IP address, path, or e-mail address of "Send" destinations.

Item	Content
Stored File ID <sup>*1</sup>	Indicates the ID of data that is output as a store file. This is a decimal ID that identifies the stored file.
Stored File Name <sup>*2</sup>	If the Target Type is "Store", the file name of the stored file is recorded.

Printing stored faxes from the Fax screen before transmission will not be recorded in the job log.

\*1 Stored File ID logs are not logged for documents processed using fax functions.

\*2 Stored File Name logs are not logged for documents processed using fax functions.

### Eco-friendly log information items

Item	Content
Start Date/Time	The event start date and time is recorded.
End Date/Time	The event end date and time is recorded.
Log Type	The type of eco-friendly log is recorded. Power ON, Power OFF, Status of Power, Job Information or Consumption of Paper is recorded.
Log Result	Whether the event has ended or not is displayed. When the event ends normally, "Completed" is recorded. When the event does not end normally, "Failed" is recorded.
Result	The result of the event is recorded. When the event is successful, "Succeeded" is recorded. When the event fails, "Failed" is recorded.
Log ID	Identifies the ID that is assigned to the log. This is a hexadecimal ID that identifies the log.

Item	Content
Power Mode (After)	<p>The power status of the machine (after state transition) is logged.</p> <p>When in standby, "Standby" is recorded.</p> <p>When in a low power state, "Low Power" is recorded.</p> <p>When in a silent state, "Silent" is recorded.</p> <p>When the hard disk is running, "HDD On" is recorded.</p> <p>When the engine is stopped, "Engine Off" is recorded.</p> <p>When the controller is stopped, "Controller Off" is recorded.</p> <p>When in the STR state (Suspend to RAM), "STR" is recorded.</p> <p>When in a silent print state, "Silent Print" is recorded.</p> <p>When in a low-noise print state, "Low Power Print" is recorded.</p>
Job Interval (seconds)	<p>The elapsed time from the start of the previous job until the start of the job is recorded.</p>
Job Duration (seconds)	<p>The elapsed time from the start of a job until its end is recorded.</p>
Paper Usage (Large Size)	<p>The amount of large, one-sided paper used each hour is recorded.</p> <p>Large size means A3 (11 × 17 inches) or larger.</p>
Paper Usage (Small Size)	<p>The amount of small, one-sided paper used each hour is recorded.</p> <p>Small size means A3 (11 × 17 inches) or smaller.</p>
Paper Usage (2 Sided: Large Size)	<p>The amount of large, two-sided paper used each hour is recorded.</p> <p>Large size means A3 (11 × 17 inches) or larger.</p>
Paper Usage (2 Sided: Small Size)	<p>The amount of small, two-sided paper used each hour is recorded.</p> <p>Small size means A3 (11 × 17 inches) or smaller.</p>



Item	Content
Detected Power	<p>The power consumption status of the machine is measured and registered in the log while the machine is being used.</p> <p>"Controller Standby" indicates controller standby mode.</p> <p>"STR" indicates Suspend to RAM (STR) mode.</p> <p>"Main Power Off" indicates the main power is turned off.</p> <p>"Scanning/Printing" indicates simultaneous scanning and printing.</p> <p>"Printing" indicates the machine's printing status.</p> <p>"Scanning" indicates the machine's scanning status.</p> <p>"Engine Standby" indicates the engine's standby status.</p> <p>"Engine Low" indicates the engine's low-power status.</p> <p>"Engine Night" indicates the engine's silent status.</p> <p>"Engine Total" indicates the machine's total electricity consumption.</p>
Power Consumption(Wh)	The power consumption in each power state is recorded.

### Category/Attribute List

Category	Attribute	Description
User Lockout Policy	<ol style="list-style-type: none"> <li>1. Lockout</li> <li>2. Number of Attempts before Lockout</li> <li>3. Lockout Release Timer</li> <li>4. Lock Out User for</li> </ol>	<ol style="list-style-type: none"> <li>1. Whether the lockout is active (Active) or inactive (Inactive) is recorded.</li> <li>2. The number of times a user may enter a login password is recorded.</li> <li>3. Whether the lockout release timer is active (Active) or inactive (Inactive) is recorded.</li> <li>4. The time until lockout release is recorded.</li> </ol>
Auto Logout Timer	<ol style="list-style-type: none"> <li>1. Auto Logout Timer</li> <li>2. Auto Logout Timer(seconds)</li> </ol>	<ol style="list-style-type: none"> <li>1. Whether an auto logout time is set to (On) or (Off) is recorded.</li> <li>2. The time until the auto logout operates is recorded.</li> </ol>

Category	Attribute	Description
Device Certificate	<ol style="list-style-type: none"> <li>1. Operation Mode</li> <li>2. Certificate No.</li> <li>3. Certificate No. (XXX) (XXX) is replaced by one of the following:                             <ul style="list-style-type: none"> <li>• SSL/TLS</li> <li>• IEEE 802.1X</li> <li>• S/MIME</li> <li>• IPsec</li> <li>• PDF Digital Signature</li> <li>• PDF/A Digital Signature</li> </ul> </li> </ol>	<ol style="list-style-type: none"> <li>1. The type of operation is recorded.                              "Create" is recorded when a certificate is created.                              "Delete" is recorded when a certificate is deleted.                              "Install" is recorded when a certificate is installed.                              When the certificate to be used is changed, "Change Application to Use Certificate" is recorded.                              When an intermediate certificate is installed, "Install Intermediate Certificate" is recorded.                              When an intermediate certificate is deleted, "Delete Intermediate Certificate" is recorded.                         </li> <li>2. The number of the certificate to be used is recorded.</li> <li>3. The number of the certificate for applications is recorded. When a certificate is not used, "Do not Use" is recorded.</li> </ol>

Category	Attribute	Description
IPsec	<ol style="list-style-type: none"> <li>1. IPsec</li> <li>2. Encryption Key Auto Exchange / Encryption Key Manual Exchange: Setting 1-4: Remote Address</li> <li>3. Encryption Key Auto Exchange: Setting 1-4, Default: Security Level</li> <li>4. Encryption Key Auto Exchange: Setting 1-4, Default: Authentication Method</li> </ol>	<ol style="list-style-type: none"> <li>1. Whether IPsec is active (Active) or inactive (Inactive) is recorded.</li> <li>2. The remote address is recorded.</li> <li>3. The security level is recorded. When [Authentication Only] is selected, "Authentication Only" is recorded. When [Authentication and Low Level Encryption] is selected, "Authentication and Low Level Encryption" is recorded. When [Authentication and High Level Encryption] is selected, "Authentication and High Level Encryption" is recorded. When [User Settings] is selected, "User Settings" is recorded.</li> <li>4. The authentication method used for the auto key exchange format is recorded. Either "PSK" or "Certificate" is recorded.</li> </ol>
Compulsory Security Stamp	Compulsory Security Stamp	Whether [Compulsory Security Stamp] is set to (On) or (Off) is recorded.

Category	Attribute	Description
S/MIME	<ol style="list-style-type: none"> <li>1. Operation Mode</li> <li>2. When Sending E-mail by Scanner</li> <li>3. When Transferring by Fax</li> <li>4. When Sending E-mail by Fax</li> <li>5. When E-mailing TX Results by Fax</li> <li>6. When Transferring Files Stored in Document Server (Utility)</li> </ol>	<ol style="list-style-type: none"> <li>1. The mode of operation is recorded.</li> <li>2. The signature is recorded when the scanner is used for sending e-mail.</li> <li>3. The signature is recorded when transferring by fax.</li> <li>4. The signature is recorded when the fax is used for sending e-mail.</li> <li>5. The signature is recorded when the fax is used for sending e-mail notification.</li> <li>6. The signature is recorded when Document Server (utility) is used for transferring documents stored on it.</li> </ol>

# Customizing the Control Panel


Configurations of settings such as arrangement of icons on the home screen or allocation of function keys to functions can be made to suit the user.

## Configuring the Home Screen for Individual Users

This allows each user to use their own home screen.

When a user logs in, their personalized home screen is displayed.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] four times.
5. Press [Users Own Home Screen].
6. Press [Allow].

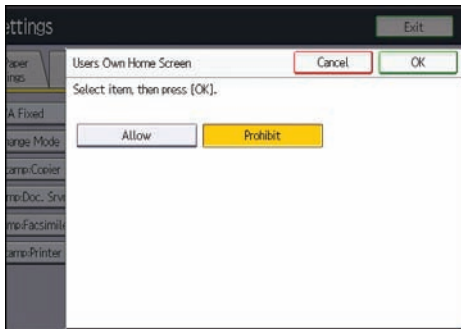

7. Press [OK].
8. Log out.

### ⬇ Note

- This can also be configured from Web Image Monitor. For details, see Web Image Monitor Help.
- The home information for each user is maintained even when Users Own Home Screen is set to [Prohibit]. When the setting is changed back to [Allow], the information can be used again.

## Warnings about using user's own home screens

Consider these warnings before using this function.

- When a user is registered in the Address Book, a home screen is created for that user. At that time, their user's own home screen is configured with the default settings (arrangement of icons).

- If Menu Protect is set to either [Level 1] or [Level 2], the user cannot use that function's program registration, editing or delete. However, there is no restriction on adding icons to the user's own home screen.
- When Menu Protect has been set to [Level 1] or [Level 2], have the administrator create any necessary programs.
- The icons of functions that an administrator has restricted are not displayed on the home screen of users whose use of the function(s) has been restricted.
- When a user is deleted from the Address Book, that user's home screen information is also deleted.
- When a user has edited a program, the changes are reflected to all the users who have the program's icon distributed to their own home screen.
- When a user deletes a program, the icon of the program is deleted from all the user's home screens to which it is distributed.
- Because each user manages and uses their own home screen, the administrator cannot check each user's own home information (customized state of users' own home screens).

# Configuring the Browser Functions

## Precautions for Using the Browser Function

The communication between the MFP and the server via a Web browser is exposed to the risk of unauthorized viewing and modification. Because of this, it is recommended to install the site certificates issued for the Web sites the MFP is allowed to browse and enable the machine's Site Certificate Check function in advance. By allowing the machine to access only the Web sites whose certificates are installed in the machine, you can prevent access to unauthorized Web sites.

It is recommended to enable [Site Certificate Check] especially when sending data using Extended JavaScript.

To enable [Site Certificate Check], it is necessary to enable the machine's SSL function and install site certificates.

For details about configuring SSL, see p. 136 "Configuring SSL/TLS".

For details about installing site certificates, see p. 173 "Configuring IEEE 802.1X Authentication".

The machine's Site Certificate Check settings can be specified only via Web Image Monitor.

See the related articles in the Web Image Monitor Help.

If [Site Certificate Check] is disabled and the user accesses an untrusted Web site, a warning message may appear.

If this is the case, the connected Web site may have a security problem. In such a case, the machine administrator must refer to p. 252 "Troubleshooting", and then instruct the users to take appropriate measures accordingly.

Further, even if such a message does not appear, to minimize the risk of information leakages and unauthorized modification, the administrator should instruct the users to check the certificates and URLs of the connected Web sites so that access to unauthorized Web sites can be prevented.

### Untrusted Web site

An "untrusted Web site" meets any of the following criteria:

- Its certificate has not been issued.
- Its certificate has been issued by an unknown source.
- Its certificate has expired.

## Changing the Browser Settings

You can change the default settings for the browser functions.

1. The machine administrator logs in from the control panel.
2. Press [Browser Features].

3. Press **[Browser Default Setting]**.
4. Press the setting you want to change, and change the setting.
5. Press **[OK]**.
6. Log out.

## Browser default settings

---

### Home Screen by User

Specify the URL of your home screen.

### Cache File

Specify whether or not to enable cache files.

When using cache files, specify a size within a range between 1024 and 10240 KB.

To clear cache files, press **[Clear Caches]**.

Default: **[Do not use]**

### Keep the History by User

Specify whether or not to keep the history.

When keeping the history, specify a duration between 1 and 30 days.

Default: **[Off]**

### JavaScript

Specify whether or not to activate JavaScript and its extended function.

When JavaScript is inactive, the JavaScript extensions are also inactive.

- JavaScript  
Default: **[Active]**
- Extended JavaScript  
Default: **[Inactive]**

### Use Cookies

Up to 20 cookies are stored for access by any user.

The cookie created when the machine administrator uses the browser is automatically deleted when the machine administrator logs out.

Default: **[On]**

### Use Proxy Server

Specify whether or not to use a proxy server.

When using a proxy server, specify "Proxy Server Name", "Proxy Port", "Proxy User Name", "Proxy Password", and "Exception Addresses".



Default: [Off]

### User Agent

Specify the user agent.

Enter the user agent's name using the keyboard.

### Default HTTP Request Method

Specify the type of HTTP request method.

Default: [GET]

### Screen Settings

Specify whether or not to display the URL bar and the horizontal scroll bar.

- URL Bar

Default: [Display]

- Horizontal Scroll Bar

Default: [Display]

### Bookmark

You can register and manage bookmarks, including changing, deleting, importing and exporting.

---

## Restricting User Browser Functions

---

7

You can restrict the user functions when using the browser.

1. The machine administrator logs in from the control panel.
2. Press [Browser Features].
3. Press [Settings per Users].
4. Press the setting you want to change, and change the setting.
5. Press [OK].
6. Log out.

### Screen settings by user settings

---

#### Home Screen by User

Specify whether or not to enable the home screen to be displayed.

Default: [Allow]

#### Bookmarks by User

Specify whether or not to enable the use of bookmarks.

Default: [Allow]

### Use Proxy Server

Specify whether or not to enable a proxy server.

Default: [Allow]

### Keep the History by User

Specify whether or not to enable the history to be kept.

Default: [Allow]

### Screen Settings by User

Specify whether or not to enable the size of the window displayed on the control panel.

Default: [Allow]

---

## Checking the Usage Status of the Browser Functions

---

The following logs can be used to check how the browser functions has been used.

- View Send Log
- View Download Log
- View Print Log

7

1. The machine administrator logs in from the control panel.
2. Press [Browser Features].
3. Press [View Logs].
4. Press [View Send Log], [View Download Log], or [View Print Log].
5. Press [Exit].
6. Log out.

---

## Troubleshooting

---

If the connected Web site has a security problem, a message may appear.

If this is the case, the machine administrator must check the message and instruct the users to take appropriate measures accordingly.

### Messages

- "This site has a security problem. The certificate has expired."
- "This site has a security problem. The root certificate for verification does not exist."
- "This site has a security problem. Verification of the server to connect to cannot be performed."
- "This site has a security problem. The http subcontents are included in the https site."\*<sup>1</sup>

\*<sup>1</sup> The connected Web site contains non-encrypted data.

# Managing Device Information

## CAUTION

- Keep SD cards out of reach of children. If a child accidentally swallows an SD card, consult a doctor immediately.

This can be set by an administrator with privileges to manage everything — devices, users, networks and files.

The device information of a machine can be exported to an outside device as a device setting information file. If an exported device setting information file is imported to the machine, the file can be used for backups since any changed settings will return to their default settings.

Also, managing device setting information file with the device management server, allows device setting information file to be imported periodically at a specified time or at device startup.

### Data that can be imported and exported

- Copier / Document Server Features
- Printer Features
- Scanner Features
- Facsimile Features
- Extended Feature Settings
- Program (Document Server)
- Program (Copier)
- Program (Scanner)
- Web Image Monitor Setting
- Web Service Settings
- System Settings

### Data that cannot be imported or exported

- Address book
- Programs (fax function)
- Programs (printer function)
- Scanner function programs that include password settings
- User stamp in the copy default settings
- Settings for configuring from telnet

### Note


- The file format for exports is CSV.

- The device configurations of the device setting information file to be imported from the control panel must be the same as those of the device setting information file that is exported. If not, the device setting information file cannot be imported.
- If the device configurations of the device setting information file are changed, update the file.
- If multiple devices have the same device configuration, import the device setting file so that the device settings are the same.
- When images are inserted into a home screen, JPG image files are also exported.
- While a user is operating the machine, nothing can be imported or exported until the user completes the operation.
- During export and import, the machine cannot be otherwise operated.


## Exporting Device Information

When exporting device information from the control panel, the data is saved on an SD card.

1. Insert an SD card into the media slot on the side of the control panel.
2. Log in from the control panel as an administrator with all privileges.
3. Press [System Settings].
4. Press [Administrator Tools].
5. Press [▼Next] three times.
6. Press [Device Setting Information: Export (Memry Strge Devc)].

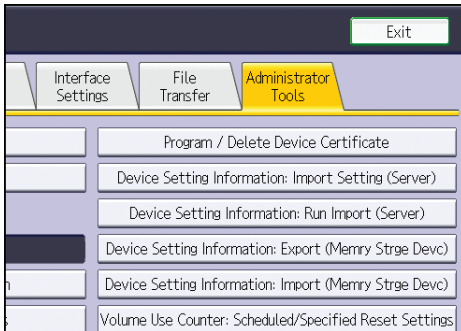

## 7. Set the export conditions.

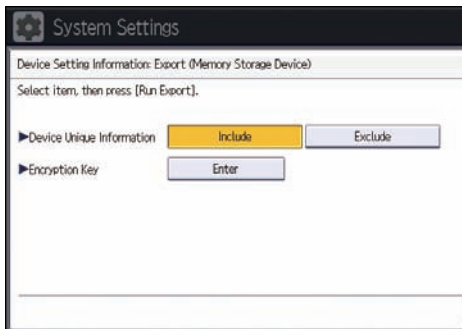

- Specify whether to [Include] or [Exclude] the "Device Unique Information". "Device Unique Information" includes the IP address, host name, fax number, etc.
- Specify an encryption key.

8. Press [Run Export].

9. Press [OK].

10. Press [Exit].

11. Log out.

### ⬇ Note


- If data export fails, the details of the error can be viewed in the log.

## Importing Device Information


Import device information saved on an SD card.

1. Insert an SD card into the media slot on the side of the control panel.
2. Log in from the control panel as an administrator with all privileges.
3. Press [System Settings].
4. Press [Administrator Tools].
5. Press [▼Next] three times.

**6. Press [Device Setting Information: Import (Memry Strge Devc)].**

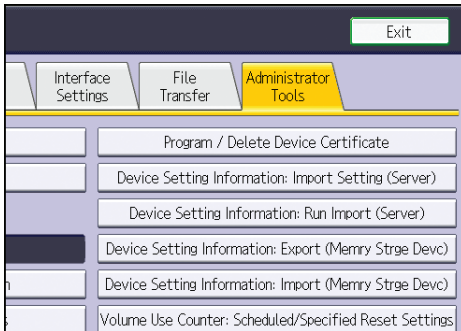

**7. Configure the import conditions.**

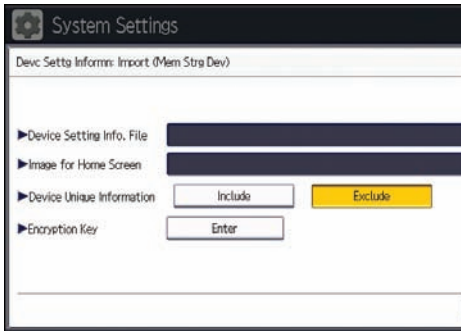

7

- Press [Select] of the "Device Setting Info. File" to select the file(s) to import.
- When inserting a file into a home screen, press [Select] for the Image for Home screen and select the file.
- Specify whether to [Include] or [Exclude] the "Device Unique Information". "Device Unique Information" includes the IP address, host name, fax number, etc.
- Specify the encryption key that was created when the file was exported.

**8. Press [Run Import].**

**9. Press [OK].**

**10. Press [Exit].**

The machine restarts.

**Note**

- If data import fails, the details of the error can be viewed in the log.


---

## Periodically Importing Device Information


---

This setting enables automatic importing of device information stored on a server.

1. Log in from the control panel as an administrator with all privileges.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.
5. Press [Device Setting Information: Import Setting (Server)].

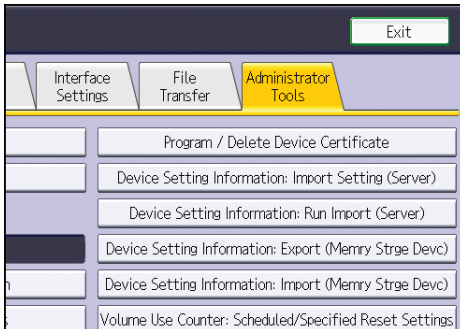

#### 6. Configure the import conditions.

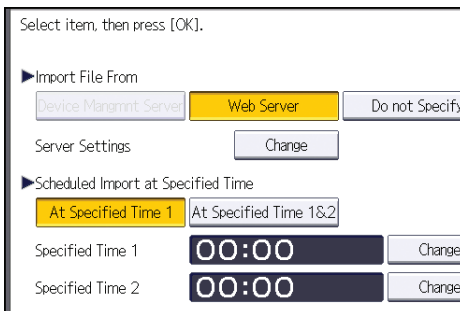

- Select the source for importing files. Configure settings such as the URL, user name, password, etc., using the detail settings of the server.
- Select the frequency for importing device setting information files and set the time used for a periodic import at the specified time.
- Specify whether or not to import a device setting information file if it is identical as compared to the last imported file.
- Specify an encryption key.
- Select whether or not to send e-mail notification to the machine administrator when importing fails.

#### 7. Press [OK].

#### 8. Log out.


#### ↓ Note

- If data import fails, the details of the error can be viewed in the log.


## Manually Importing the Device Setting Information File of a Server

Manually import the device setting information file specified with [Device Setting Information: Import Setting (Server)].

1. Log in from the control panel as an administrator with all privileges.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.
5. Press [Device Setting Information: Run Import (Server)].

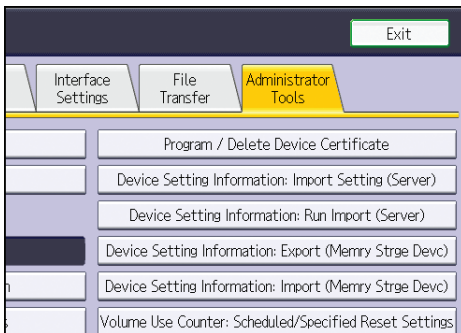

6. Press [OK].

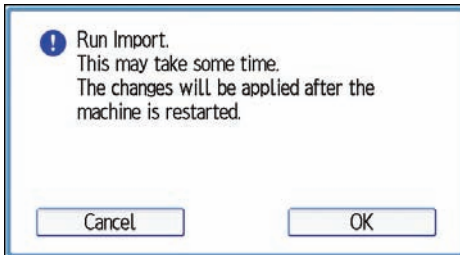

7. Press [Exit].

The machine restarts.

### Note

- If data import fails, the details of the error can be viewed in the log.



# Managing Eco-friendly Counter

When user authentication is being used, information on the eco-friendly counter is displayed at login. The eco-friendly counter is the ratio of use of two-sided and multi-page printing to the total number of output pages.

How much toner and paper are being saved is indicated by the eco-friendly index.

## ↓ Note

- When Basic, Windows, LDAP or Integration Server authentication is used for user authentication, it collects and displays an eco-friendly counter for each user.
- When user code authentication is used for user authentication, or when user authentication is not in use, it collects and displays an overall eco-friendly counter for the machine.

---

## Configuring the Display of Eco-friendly Counters

---

Set up the period for collecting data for the eco-friendly counter and an administrator's message.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] three times.
5. Press [Eco-friendly Counter Period / Administrator Message].
6. Change the settings.
7. Press [OK].
8. Press [Exit].
9. Log out.

### Eco-friendly counter settings

---

#### Count Period

Set up the period for collecting data for the eco-friendly counter.

When [Specify Days] is selected, data for the eco-friendly counter is collected for the number of days specified.

Default: [Do not Count]

#### Administrator Message

Select a message type.

If you select "Fixed Message", a preset message is displayed.

If you select "User Message", the machine administrator can enter a free message to be displayed.

Default: [Fixed Message]

### Display Information Screen

Set up whether or not to display the eco-friendly index with information at login.

Default: [Off]

### Display Time

Set up the timing for displaying information.

Default: [Every Time Login]

---

## Clearing a Machine's Eco-friendly Counter

---

A machine's eco-friendly counter can be cleared.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [Display / Clear Eco-friendly Counter].
5. Press [Clear Current Value] or [Clear Crnt. & Prev. Val.].
6. Press [OK].
7. Log out.

7

---

## Clearing the Eco-friendly Counter by User

---

The eco-friendly counter can be cleared according to the user.

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [Display / Clear Eco-friendly Counter per User].
5. Press [Clear Current Value] or [Clear Crnt. & Prev. Val.].
6. Press [OK].
7. Log out.


### ↓ Note

- The eco-friendly counter for all users is cleared. The eco-friendly counter for individual users cannot be cleared.

# Specifying the Extended Security Functions

In addition to providing basic security through user authentication and administrator specified access limits on the machine, security can also be increased by encrypting transmitted data and data in the Address Book.

1. Log in from the control panel as an administrator with privileges.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next].
5. Press [Extended Security].
6. Press the setting you want to change, and change the settings.

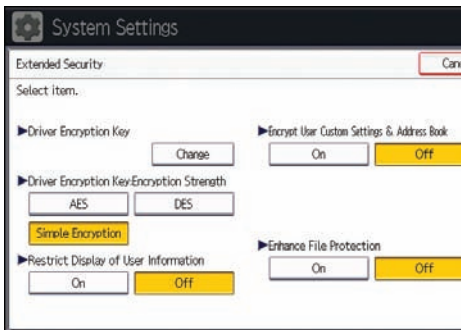

7. Press [OK].
8. Log out.

## Note

- The operation privileges of an administrator differs depending on the setting.

## Extended Security Function Settings

### Driver Encryption Key

This can be specified by the network administrator.

When user authentication is ON, specify the string of text for the key used for encrypting the login passwords or document passwords that are sent from each kind of driver.

To specify the driver encryption key, register the encryption key specified using the machine in the driver.

For details, see p.180 "Specifying a Driver Encryption Key".

### Driver Encryption Key:Encryption Strength

This can be specified by the network administrator.

Specify the encryption strength for sending jobs from the driver to the machine.

The machine confirms the encryption strength of the password appended to a job and processes it.

If [Simple Encryption] is specified, all jobs that support user authentication are accepted.

If [DES] is specified, jobs encrypted with DES or AES are accepted.

If [AES] is specified, jobs encrypted with AES are accepted.

If you select [AES] or [DES], specify the encryption settings using the printer driver. For details about specifying the printer driver, see the printer driver Help.

Default: [Simple Encryption]

### Restrict Display of User Information

This can be specified by the machine administrator.

This can be specified if user authentication is specified. When the job history is checked using a network connection for which authentication is not available, all personal information can be displayed as "\*\*\*\*\*". For example, when someone not authenticated as an administrator checks the job history using SNMP in SmartDeviceMonitor for Admin, personal information can be displayed as "\*\*\*\*\*" so that users cannot be identified. Because information identifying registered users cannot be viewed, unauthorized users are prevented from obtaining information about the registered files.

Default: [Off]

### Encrypt User Custom Settings & Address Book

This can be specified by the user administrator.

Encrypt the individual settings of the machine's users and the data in the Address Book.

Even if information on an internal part has been leaked, encryption prevents the individual user settings or the Address Book data from being read.

For details, see p.97 "Protecting the Address Book".

Default: [Off]

### Enhance File Protection

This can be specified by the file administrator.

By specifying a password, you can limit operations such as printing, deleting, and sending files, and can prevent unauthorized people from accessing the files. However, it is still possible for the password to be cracked.

By specifying "Enhance File Protection", files are locked and so become inaccessible if an invalid password is entered ten times. This can protect the files from unauthorized access attempts in which a password is repeatedly guessed.

When "Enhance File Protection" is specified,  appears in the lower right corner of the screen.

The locked files can only be unlocked by the file administrator.

When files are locked, you cannot select them even if the correct password is entered.

Default: **[Off]**

### **Restrict Use of Destinations (Fax), Restrict Use of Destinations (Scanner)**

This can be specified by the user administrator.

The available fax and scanner destinations are limited to the destinations registered in the Address Book.

A user cannot directly enter the destinations for transmission.

If "Restrict Use of Destinations (Scanner)" is set to **[On]**, you can register fax numbers only.

If you specify the setting to receive e-mails via SMTP, you cannot use "Restrict Use of Destinations (Fax)" and "Restrict Use of Destinations (Scanner)".

The destinations searched by "LDAP Search" can be used.

For details, see p.75 "Restricting Usage of the Destination List".

Default: **[Off]**

### **Restrict Adding of User Destinations (Fax), Restrict Adding of User Destinations (Scanner)**

This can be specified by the user administrator.

If you set "Restrict Adding of User Destinations (Fax)" and/or "Restrict Adding of User Destinations (Scanner)" to **[Off]**, users will be able to register a fax or scanner destination in the Address Book simply by entering the destination and then pressing **[Prg. Dest.]**. If you set these functions to **[On]**, the **[Prg. Dest.]** key will not appear. Users will still be able to enter a destination directly using the fax or scanner screen, but cannot then register that destination in the Address Book by pressing **[Prg. Dest.]**.

Also note that even if you set these functions to **[On]**, the user registered as destination can change their password. Only the user administrator can change items other than the password.

Default: **[Off]**

### **Transfer to Fax Receiver**

This can be specified by the machine administrator.

If you use **[Forwarding]** or **[Transfer Box]** under the fax function, files stored in the machine can be transferred or delivered.

To prevent stored files being transferred by mistake, select **[Prohibit]** for this setting.

Default: **[Do not Prohibit]**

If you select **[Prohibit]** for this setting, the following functions are disabled:

- Forwarding
- Transfer Box
- Delivery from Personal Box
- Information Box
- Delivery of Mail Received via SMTP

- Routing Received Documents

For details, see "Reception Functions", Fax.

### **Authenticate Current Job**

This can be specified by the machine administrator.

This setting lets you specify whether or not authentication is required for operations such as canceling jobs under the copier and printer functions.

If you select [Login Privilege], authorized users and the machine administrator can operate the machine. When this is selected, authentication is not required for users who logged in to the machine before [Login Privilege] was selected.

If [Access Privilege] is specified, any user who performed a copy or print job can cancel the job. Also, the machine administrator can cancel the user's copy or print job.

Even if you select [Login Privilege] and log on to the machine, you cannot cancel a copy or print job that is being processed if you are not privileged to use the copy and printer functions.

You can specify "Authenticate Current Job" only if "User Authentication Management" was specified.

Default: [Off]

### **@Remote Service**

This can be specified by the machine administrator.

Communication via HTTPS for @Remote Service is disabled if you select [Prohibit].

When setting it to [Prohibit], consult with your service representative.

If it is set to [Proh. Some Services], it becomes impossible to change settings via a remote connection, providing optimally secure operation.

Default: [Do not Prohibit]

### **Update Firmware**

This can be specified by the machine administrator.

Specify whether to allow firmware updates on the machine. Firmware update means having the service representative update the firmware or updating the firmware via the network.

If you select [Prohibit], firmware on the machine cannot be updated.

If you select [Do not Prohibit], there are no restrictions on firmware updates.

Default: [Do not Prohibit]

### **Change Firmware Structure**

This can be specified by the machine administrator.

Specify whether to prevent changes in the machine's firmware structure. The Change Firmware Structure function detects when the SD card is inserted, removed or replaced.

If you select [Prohibit], the machine stops during startup when a firmware structure change is detected and a message requesting administrator login is displayed. After the machine administrator logs in, the machine finishes startup with the updated firmware.

The administrator can confirm if the updated structure change is permissible or not by checking the firmware version displayed on the control panel screen. If the firmware structure change is not permissible, contact your service representative before logging in.

When "Change Firmware Structure" is set to [Prohibit], administrator authentication must be enabled.

After [Prohibit] is specified, disable administrator authentication. When administrator authentication is enabled again, you can return the setting to [Do not Prohibit].

If you select [Do not Prohibit], firmware structure change detection is disabled.

Default: **[Do not Prohibit]**

### Password Policy

This can be specified by the user administrator.

This setting lets you specify [Complexity Setting] and [Minimum Character No.] for the password. By making this setting, you can limit the available passwords to only those that meet the conditions specified in "Complexity Setting" and "Minimum Character No."

If you select [Level 1], specify the password using a combination of two types of characters selected from upper-case letters, lower-case letters, decimal numbers, and symbols such as #.

If you select [Level 2], specify the password using a combination of three types of characters selected from upper-case letters, lower-case letters, decimal numbers, and symbols such as #.

Default: **[Off]**, Minimum required number of characters not specified

### Settings by SNMPv1, v2

This can be specified by the network administrator.

When the machine is accessed using the SNMPv1, v2 protocol, authentication cannot be performed, allowing machine administrator settings such as the paper setting to be changed. If you select [Prohibit], the setting can be viewed but not specified with SNMPv1, v2.

Default: **[Do not Prohibit]**

### Device Access Violation

This can be specified by the machine administrator.

If the number of log in requests exceeds the setting, the system classifies the access session as an access violation. The access session is recorded in the Access Log and the log data is sent to the machine administrator by e-mail. Also, a message is displayed on the control panel and on Web Image Monitor.

If the "Max. Allowed No. of Access" is set to [0], over access is not detected.

In "Authentication Delay Time", you can specify response delay time for log-in requests to prevent the system from becoming unavailable when an access violation is detected.

In "Simultns. Access Host Limit", you can specify the limit number of hosts accessing the machine at one time. If the number of access exceeds the setting, monitoring becomes unavailable and the detected unavailability is recorded in the Log.

- Max. Allowed No. of Access

Specify the maximum number of allowable access attempts.

Use the number keys to enter the number between "0" and "500", and then press [#].

Default: [100]

- Measurement Time

Specify the interval to count the number of excessive access. When the measurement time is over, the logged counts of access are cleared.

Use the number keys to enter the number between "10" and "30", and then press [#].

Default: [10]

- Authentication Delay Time

Specify the authentication delay time when an access violation is detected.

Use the number keys to enter the number between "0" and "9", and then press [#].

Default: [3]

- Simultns. Access Host Limit

Specify the number of acceptable authentication attempts when authentications are delayed due to an access violation.

Use the number keys to enter the number between "50" and "200", and then press [#].

Default: [200]

#### Note

- Depending on the values of the settings for [Max. Allowed No. of Access] and [Measurement Time], you may frequently receive violation detection e-mail.
- If violation detection e-mail is received frequently, check the content and review the setting values.

#### Password Entry Violation

This can be specified by the machine administrator.

If the number of authentication requests exceeds the setting, the system classifies the access session as a password attack. The access session is recorded in the Access Log and the log data is sent to the machine administrator by e-mail.

If the "Max. Allowed No. of Access" is set to [0], password attacks are not detected.

- Max. Allowed No. of Access

Specify the maximum number of allowable authentication attempts.

Use the number keys to enter the number between "0" and "100", and then press [#].

Default: [30]



- Measurement Time

Specify the interval to count the number of repeated failed authentication attempts. When the measurement time is over, the logged counts of failed authentication attempts are cleared.

Use the number keys to enter the time between "1" and "10", and then press [#].

Default: [5]

### ↓ Note

- Depending on the values of the settings for [Max. Allowed No. of Access] and [Measurement Time], you may frequently receive violation detection e-mail.
- If violation detection e-mail is received frequently, check the content and review the setting values.

### Security Setting for Access Violation

This can be specified by the machine administrator.

When logging in to the machine via a network application, a user may be locked out erroneously because the number of authentication attempts of the user does not match the number of attempts logged internally.

For example, access may be denied when a print job for multiple sets of pages is sent from an application.

If you select [On] under "Security Setting for Access Violation", you can prevent such authentication errors.

- On

- Denial Durtn. for Accs. Viol.

Specify the time to limit repeated access by a user.

Use the number keys to enter the time between "0" and "60", and then press [#].

Default: [15]

- Managed User Host Limit

Specify the number of user accounts to manage under Security "Security Setting for Access Violation".

Use the number keys to enter the number between "50" and "200", and then press [#].

Default: [200]

- Password Entry Host Limit

Specify the number of passwords to manage under Security "Security Setting for Access Violation".

Use the number keys to enter the number between "50" and "200", and then press [#].

Default: [200]

- Status Monitor Interval

Specify the monitoring interval of "Managed User Host Limit" and "Password Entry Host Limit".

Use the number keys to enter the time between "1" and "10", and then press [#].

Default: [3]

- Off

Default: [Off]

# Other Security Functions

This is an explanation of the settings for preventing leakage of information.

It also explains the functions that are restricted when user authentication is used.

---

## Fax Function

---

### Not displaying destinations and senders in reports and lists

This can be specified by the machine administrator.

In [Facsimile Features], you can specify whether to display destinations and sender names by setting "Switch 04, Bit No. 4" and "Switch 04, Bit No. 5" in [Parameter Setting], under [Initial Settings]. Making this setting helps prevent information leaks, because unintended users cannot read destinations and sender names on both the sending and receiving side.

For details, see "Facsimile Features", Fax.

### Stored Reception File User Setting

This can be specified by the file administrator.

In [Facsimile Features], you can specify which users can manage fax files stored on the hard disk by setting [Stored Reception File User Setting] to [On], under [Reception Settings]. To access the machine over the network, specified users must enter their user codes or login user names and passwords. Only authorized users can manage fax files stored on the hard disk.

For details, see "Facsimile Features", Fax.

### Printing the Journal

When user authentication is specified, the Journal is automatically set not to be printed in order to prevent automatic printing of personal information in transmission history. Also, if more than 200 transmissions are made, transmissions shown in the Journal are overwritten each time a further transmission is made.

To prevent the transmission history from being overwritten, perform the following procedures:

- In [Facsimile Features], set "Switch 03, Bit 7" in [Parameter Setting] under [Initial Settings] to change the setting for automatically printing the Journal.
- In [Facsimile Features], set "Switch 21, Bit 4" in [Parameter Setting] under [Initial Settings] to send the Journal by e-mail.

For details, see "Facsimile Features", Fax.

---

## Scanner Function

---

### Print & Delete Scanner Journal

When user authentication is enabled, "Print & Delete Scanner Journal" is automatically set to [Do not Print: Disable Send] in order to prevent personal information in transmission/delivery history from being automatically printed. In this case, the scanner is automatically disabled when the journal history exceeds 250 transmissions/deliveries. When this happens, click [Print Scanner Journal] or [Delete Scanner Journal]. To print the scanner journal automatically, set [On] for "Print & Delete Scanner Journal".

For details, see "Scanner Features", Scan.

### WSD scanner function

WSD scanner function is automatically disabled when user authentication is specified. Even if automatically disabled, it can be enabled from "Initial Settings" available in Web Image Monitor.

For details, see "Preparing to Use WSD Scanner (Push Type)" and "Preparing to Use WSD Scanner (Pull Type)", Scan.

---

## System Status

---

7

Pressing the [Check Status] key on the control panel allows you to check the machine's current status and settings. If administrator authentication has been specified, [Machine Address Info] is displayed in [Maintnc./Enquiry/Mach. Info] only if you have logged in to the machine as an administrator.

---

## Confirming Firmware Validity

---

When the machine starts up, this function verifies the validity of its firmware.

If an error occurs during the verification, a verification error is displayed on the control panel.

Note that this can also be checked on Web Image Monitor after startup of the machine. If an error occurs in the verification of Web Image Monitor itself, Web Image Monitor cannot be used, so check the display on the control panel.

# Limiting Machine Operations to Customers Only

The machine can be set so that operation is impossible without administrator authentication.

The machine can be set to prohibit operation without administrator authentication and also prohibit remote registration in the Address Book by a service representative.

We maintain strict security when handling customers' data. Administrator authentication prevents us from operating the machine without administrator permission.


## Settings

### Service Mode Lock

This can be specified by the machine administrator. Service mode is used by a service representative for inspection or repair. If you set "Service Mode Lock" to [On], service mode cannot be used unless the machine administrator logs on to the machine and cancels the service mode lock to allow the service representative to operate the machine for inspection and repair. This ensures that the inspection and repair are done under the supervision of the machine administrator.


### Specifying Service Mode Lock

1. The machine administrator logs in from the control panel.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [▼Next] twice.
5. Press [Service Mode Lock].

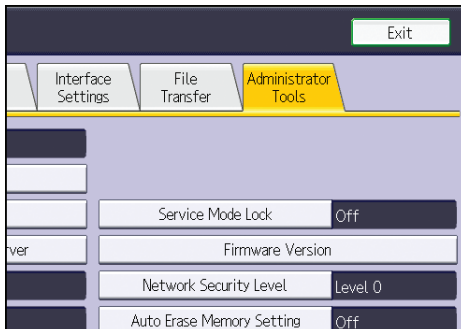

6. Press [On], and then press [OK].

**7. Press [Yes].**

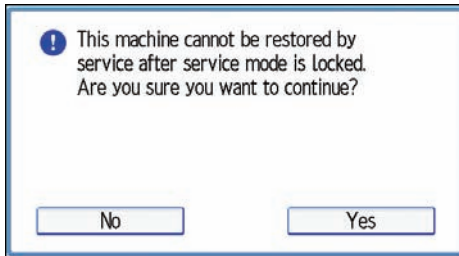

**8. Log out.**

# Additional Information for Enhanced Security

This section explains the settings that you can configure to enhance the machine's security.

## Settings You Can Configure Using the Control Panel

Use the control panel to configure the security settings shown in the following table.

### System Settings

Tab	Item	Setting
Timer Settings	Auto Logout Timer	On: 180 seconds or less. You cannot change Web Image Monitor auto logout time. See p.71 "Auto Logout".
Administrator Tools	User Authentication Management	Select [Basic Auth.], and then set "Printer Job Authentication" to [Entire]. See p.36 "Basic Authentication".
Administrator Tools	Administrator Authentication Management → User Management	Select [On], and then select [Administrator Tools] for "Available Settings". See p.15 "Configuring Administrator Authentication".
Administrator Tools	Administrator Authentication Management → Machine Management	Select [On], and then select each of "Available Settings". See p.15 "Configuring Administrator Authentication".
Administrator Tools	Administrator Authentication Management → Network Management	Select [On], and then select [Interface Settings], [File Transfer], and [Administrator Tools] for "Available Settings". See p.15 "Configuring Administrator Authentication".
Administrator Tools	Administrator Authentication Management → File Management	Select [On], and then select [Administrator Tools] for "Available Settings". See p.15 "Configuring Administrator Authentication".

Tab	Item	Setting
Administrator Tools	Extended Security → Settings by SNMPv1, v2	Prohibit See p.261 "Specifying the Extended Security Functions".
Administrator Tools	Extended Security → Driver Encryption Key:Encryption Strength	AES See p.261 "Specifying the Extended Security Functions".
Administrator Tools	Extended Security → Authenticate Current Job	Access Privilege See p.261 "Specifying the Extended Security Functions".
Administrator Tools	Extended Security → Password Policy	"Complexity Setting": Level 1 or higher, "Minimum Character No.": 8 or higher See p.261 "Specifying the Extended Security Functions".
Administrator Tools	Network Security Level	Level 2 To acquire the machine status through printer driver or Web Image Monitor, set "SNMP" to Active on Web Image Monitor. See p.126 "Specifying Network Security Level".
Administrator Tools	Service Mode Lock	On See p.271 "Limiting Machine Operations to Customers Only".
Administrator Tools	Machine Data Encryption Settings	Select [Encrypt], and then select [All Data] for "Carry over all data or file system data only (without formatting), or format all data". If [Encrypt] is already selected, further encryption settings are not necessary. See p.101 "Encrypting Data on the Hard Disk".



## Scanner Features

Tab	Item	Setting
Initial Settings	Menu Protect	Level 2 See p.78 "Menu Protect".

## Facsimile Features

Tab	Item	Setting
Reception Settings	Stored Reception File User Setting	Select [On], and then specify the users or groups who can perform operations on the received documents. See p.269 "Other Security Functions".
Initial Settings	Menu Protect	Level 2 See p.78 "Menu Protect".

### Note

- The SNMP setting can be specified in [SNMP] under [Configuration] in Web Image Monitor.
- For details about the stored reception file user setting, see p.269 "Other Security Functions" or "Stored Reception File User Setting", Fax.

## Settings You Can Configure Using Web Image Monitor

Use Web Image Monitor to configure the security settings shown in the following table.

Category	Item	Setting
Device Settings → Logs	Collect Job Logs	Active
Device Settings → Logs	Collect Access Logs	Active
Security → User Lockout Policy	Lockout	Active For details, see p.69 "User Lockout Function".
Security → User Lockout Policy	Number of Attempts before Lockout	5 times or less. For details, see p.69 "User Lockout Function".

Category	Item	Setting
Security → User Lockout Policy	Lockout Release Timer	Set to [Active] or [Inactive]. When setting to [Active], set the Lockout release timer to 60 minutes or more. For details, see p.69 "User Lockout Function".
Security → User Lockout Policy	Lock Out User for	When setting "Lockout Release Timer" to [Active], set the Lockout release timer to 60 minutes or more. For details, see p.69 "User Lockout Function".
Network → SNMPv3	SNMPv3 Function	Inactive To use SNMPv3 functions, set "SNMPv3 Function" to [Active], and set "Permit SNMPv3 Communication" to [Encryption Only]. Because SNMPv3 enforces authentication for each packet, Login log will be disabled as long as SNMPv3 is active.
Security → Network Security	FTP	Inactive Before specifying this setting, set "Network Security Level" to [Level 2] on the control panel.
Security	S/MIME	"Encryption Algorithm": AES-128 bit, AES-256 bit, or 3DES-168 bit You must register the user certificate in order to use S/MIME.
Address Book → E-mail	User Certificate	You must register the user certificate in order to use S/MIME.

**Note**

- The administrator must indicate which strength level is to be specified for the encryption algorithm.
- For details about specifying an encryption algorithm and registering a user certificate, see p.142 "Configuring S/MIME".

**Settings You Can Configure When IPsec Is Available/Unavailable**

All communication to and from machines on which IPsec is enabled is encrypted.  
If your network supports IPsec, we recommend you enable it.

## Settings you can configure when IPsec is available

If IPsec is available, configure the settings shown in the following table to enhance the security of the data traveling on your network.

### Control panel settings

#### System Settings

Tab	Item	Setting
Interface Settings	IPsec	Active
Interface Settings	Permit SSL / TLS Communication	Ciphertext Only

### Web Image Monitor settings

Category	Item	Setting
Security → IPsec	Encryption Key Manual Settings	Inactive
Security → IPsec	Encryption Key Auto Exchange Settings → Security Level	Authentication and High Level Encryption

7

## Settings you can configure when IPsec is unavailable

If IPsec is not available, configure the settings shown in the following table to enhance the security of the data traveling on your network.

### Control panel settings

#### System Settings

Tab	Item	Setting
Interface Settings	IPsec	Inactive
Interface Settings	Permit SSL / TLS Communication	Ciphertext Only

#### ↓ Note

- You can set "IPsec" and "Permit SSL/TLS Communication" using Web Image Monitor.

## Securing data when IPsec is unavailable

---

The following procedures make user data more secure when IPsec is unavailable.

Administrators must inform users to carry out these procedures.

### Fax

- Sending and receiving faxes without using IP-Fax

When sending faxes, specify destinations by fax number, Internet Fax destination, e-mail address, or folder destination. Do not specify destinations by IP-Fax destination. For details about specifying the destination for a facsimile, see "Specifying a Destination", Fax.

### Printer

- Printing with protocols that support encryption

To use the printer functions, specify sftp as the protocol, or specify IPP and enable SSL/TLS. For details about sftp, see "Printing Files Directly from Windows", Connecting the Machine/System Settings.

For details about IPP settings, see "Installing the Printer Driver for the Selected Port", Driver Installation Guide.

For details about SSL/TLS settings, see p. 136 "Configuring SSL/TLS".

### Scanner

- Sending the URL address of stored files

Send the URL of scanned files to destinations by configuring [Send Settings] in [Scanner Features], instead of sending the actual scanned files. For details, see "Sending the URL by E-mail", Scan.

- Managing scanned files using Web Image Monitor

Use Web Image Monitor through your network to view, delete, send, and download scanned files.

- S/MIME authentication function

When sending scanned files attached to e-mail, protect them by applying an S/MIME certificate. To do this, configure the "Security" settings prior to sending. For details about sending e-mail from the scanner, see "Basic Procedure for Sending Scan Files by E-mail", Scan.

### Note

- For details about enabling and disabling IPsec using the control panel, see "System Settings", Connecting the Machine/System Settings.
- For details about specifying the IPsec setting via Web Image Monitor, see p. 149 "Configuring IPsec".

# 8. Troubleshooting

This chapter describes what to do if the machine does not function properly.

## If Authentication Fails

This section explains what to do if a user cannot operate the machine because of a problem related to user authentication. Refer to this section if a user comes to you with such a problem.

### If a Message is Displayed

This section explains how to deal with problems if a message appears on the screen during user authentication.

If a message not shown below is displayed, follow the message to resolve the problem.

Messages	Cause	Solutions
"You do not have the privileges to use this function."	The privileges to use the function is not specified.	<p>If this appears when trying to use a function:</p> <ul style="list-style-type: none"><li>• The function is not specified in the Address Book management setting as being available.</li><li>• The user administrator must decide whether to additionally assign the privileges to use the function.</li></ul> <p>If this appears when trying to specify a default setting:</p> <ul style="list-style-type: none"><li>• The administrator differs depending on the default settings you wish to specify.</li><li>• Using the list of settings, the administrator responsible must decide whether to additionally assign the privileges to use the function.</li></ul>


Messages	Cause	Solutions
"Authentication has failed."	The entered login user name or login password is incorrect.	Ask the user administrator for the correct login user name and login password.  See the error codes below for possible solutions: B, W, L, I 0104-000 B, W, L, I 0206-003 W, L, I 0406-003
"Authentication has failed."	Authentication failed because no more users can be registered. (The number of users registered in the Address Book has reached capacity.)	Delete unnecessary user addresses.  See the error codes below for possible solutions: W, L, I 0612-005
"Authentication has failed."	Cannot access the authentication server when using Windows authentication, LDAP authentication, or Integration Server authentication.	A network or server error may have occurred. Confirm the network in use with the LAN administrator.  If an error code appears, follow the instructions next to the error code in the table below.
"Administrator Authentication for User Management must be set to on before this selection can be made."	User administrator privileges have not been enabled in [Administrator Authentication Management].	To specify Basic authentication, Windows authentication, LDAP authentication, or Integration Server authentication, you must first enable user administrator privileges in [Administrator Authentication Management].  For details, see p. 15 "Configuring Administrator Authentication".
"Failed to obtain URL."	The machine cannot connect to the server or cannot establish communication.	Make sure the server's settings, such as the IP address and host name, are specified correctly on the machine. Make sure the host name of the UA Server is specified correctly.

Messages	Cause	Solutions
"Failed to obtain URL."	The machine is connected to the server, but the UA service is not responding properly.	Make sure the UA service is specified correctly.
"Failed to obtain URL."	SSL is not specified correctly on the server.	Specify SSL using Authentication Manager.
"Failed to obtain URL."	Server authentication failed.	Make sure server authentication is specified correctly on the machine.
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the privileges to do so.	Files can be deleted by the file creator (owner) or file administrator. To delete a file which you are not privileged to delete, contact the file creator (owner).

## If an Error Code is Displayed

When authentication fails, the message "Authentication has failed." appears with an error code. The following lists explain the different methods for resolving each error code. If the error code that appears is not on this table, write down the error code and contact your service representative.

### Error code display position

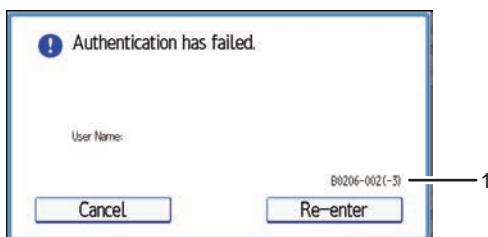

CJD014

#### 1. Error code

An error code appears.

**Basic authentication**

Error Code	Cause	Solution
B0103-000	A TWAIN operation occurred during authentication.	Make sure no other user is logged on to the machine, and then try again.
B0104-000	Failed to decrypt password.	<p>1. A password error occurred. Make sure the password is entered correctly.</p> <p>2. Either [DES] or [AES] is selected for "Driver Encryption Key: Encryption Strength". The administrator has restricted use of simple encryption. You can use the encryption key if it has been specified in the driver.</p> <p>3. A driver encryption key error occurred. Make sure that the encryption key is correctly specified on the driver.</p>
B0105-000	A login user name was not specified but a DeskTopBinder operation was performed.	Specify the DeskTopBinder login user name correctly.
B0206-002	1. A login user name or password error occurred.	Make sure the login user name and password are entered correctly and then log in.
B0206-002	2. The user attempted authentication from an application on the "System Settings" screen, where only the administrator has authentication ability.	<p>Only the administrator has login privileges on this screen.</p> <p>Log in as a general user from the application's login screen.</p>
B0206-003	An authentication error occurred because the user name contains a space, colon (:), or quotation mark (").	<p>Recreate the account if the account name contains any of these prohibited characters.</p> <p>If the account name was entered incorrectly, enter it correctly and log in again.</p>



Error Code	Cause	Solution
B0207-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.
B0208-000	The account is locked because you have reached the maximum number of failed authentication attempts allowed.	Ask the user administrator to unlock the account.

### Windows authentication

Error Code	Cause	Solution
W0103-000	A TWAIN operation occurred during authentication.	Make sure no other user is logged in to the machine, and then try again.
W0107-000	Failed to encrypt password.	<ol style="list-style-type: none"> <li>1. A password error occurred. Make sure the password is entered correctly.</li> <li>2. Either [DES] or [AES] is selected for "Driver Encryption Key: Encryption Strength". The administrator has restricted use of simple encryption. You can use the encryption key if it has been specified in the driver.</li> <li>3. A driver encryption key error occurred. Make sure that the encryption key is correctly specified on the driver.</li> </ol>
W0107-000	A login user name was not specified but a DeskTopBinder operation was performed.	Set the DeskTopBinder login user name correctly.
W0206-002	The user attempted authentication from an application on the "System Settings" screen, where only the administrator has authentication ability.	<p>Only the administrator has login privileges on this screen.</p> <p>Log in as a general user from the application's login screen.</p>

Error Code	Cause	Solution
W0206-003	An authentication error occurred because the user name contains a space, colon (:), or quotation mark (").	Recreate the account if the account name contains any of these prohibited characters.  If the account name was entered incorrectly, enter it correctly and log in again.
W0207-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.
W0400-102	Kerberos authentication failed because the server or security module is not functioning correctly.	<ol style="list-style-type: none"> <li>1. Make sure that the server is functioning properly.</li> <li>2. Make sure that the security module is installed.</li> </ol>
W0400-107	1. The UserPrincipalName (user@domainname.xxx.com) form is being used for the login user name.	<p>The user group cannot be obtained if the UserPrincipalName (user@domainname.xxx.com) form is used.</p> <p>Use "sAMAccountName(user)" to log in, because this account allows you to obtain the user group.</p>

Error Code	Cause	Solution
W0400-107	2. Current settings do not allow group retrieval.	<p>Make sure the user group's group scope is set to "Global Group" and the group type is set to "Security" in group properties.</p> <p>Make sure the account has been added to user group.</p> <p>Make sure the user group name registered on the machine and the group name on the DC (domain controller) are exactly the same. The DC is case sensitive.</p> <p>Make sure that "Use Auth. Info at Login" has been specified in "Auth. Info" in the user account registered on the machine.</p> <p>If there is more than one DC, make sure that a confidential relationship has been configured between each DC.</p>
W0400-107	3. The domain name cannot be resolved.	Make sure that DNS/WINS is specified in the domain name in "Interface Settings".
W0400-200	Due to the high number of authentication attempts, all resources are busy.	Wait a few minutes and then try again.
W0400-202	1. The SSL settings on the authentication server and the machine do not match.	Make sure the SSL settings on the authentication server and the machine match.
W0400-202	2. The user entered sAMAccountName in the user name to log in.	If a user enters sAMAccountName as the login user name, ldap_bind fails in a parent/subdomain environment. Use UserPrincipalName for the login name instead.

Error Code	Cause	Solution
W0406-003	An authentication error occurred because the user name contains a space, colon (:), or quotation mark (").	Recreate the account if the account name contains any of these prohibited characters.  If the account name was entered incorrectly, enter it correctly and log on again.
W0406-101	Authentication cannot be completed because of the high number of authentication attempts.	Wait a few minutes and then try again.  If the situation does not return to normal, make sure that an authentication attack is not occurring.  Notify the administrator of the screen message by e-mail, and check the system log for signs of an authentication attack.
W0406-107	1. Cannot connect to the authentication server.	Make sure that connection to the authentication server is possible.  Use the "Ping Command" to check the connection.
W0406-107	2. A login name or password error occurred.	Make sure that the user is registered on the server.  Use a registered login user name and password.
W0406-107	3. A domain name error occurred.	Make sure that the Windows authentication domain name is specified correctly.

Error Code	Cause	Solution
W0406-107	4. Cannot resolve the domain name.	<p>Specify the IP address in the domain name and confirm that authentication is successful.</p> <p>If authentication was successful:</p> <ol style="list-style-type: none"> <li>1. If the top-level domain name is specified in the domain name (such as domainname.xxx.com), make sure that DNS is specified in "Interface Settings".</li> <li>2. If a NetBIOS domain name is specified in domain name (such as DOMAINNAME), make sure that WINS is specified in "Interface Settings".</li> </ol>
W0406-107	4. Cannot resolve the domain name.	<p>Specify the IP address in the domain name and confirm that authentication is successful.</p> <p>If authentication was unsuccessful:</p> <ol style="list-style-type: none"> <li>1. Make sure that Restrict LM/NTLM is not set in either "Domain Controller Security Policy" or "Domain Security Policy".</li> <li>2. Make sure that the ports for the domain control firewall and the firewall on the machine to the domain control connection path are open.</li> </ol>

Error Code	Cause	Solution
W0406-107	4. Cannot resolve the domain name.	<p>Under Windows 7, if the Windows firewall is activated, create a firewall rule in the "Advanced settings" on the "System and security" control panel, and then authorize ports 137 and 139.</p> <p>Under Windows XP, if the Windows firewall is activated, open the properties for "Network Connections", and then click "Settings" on the "Advanced" tab. On the "Exceptions" tab, specify ports 137 and 139 as exceptions.</p> <p>In the Properties window for "Network Connections", open TCP/IP properties. Then click detail settings, WINS, and then check the "Enable NetBIOS over TCP/IP" box and set number 137 to "Open".</p>

Error Code	Cause	Solution
W0406-107	5. Kerberos authentication failed.	<p>1. Kerberos authentication settings are not correctly configured.</p> <p>Make sure the realm name, KDC (Key Distribution Center) name and corresponding domain name are specified correctly.</p> <p>2. The KDC and machine timing do not match.</p> <p>Authentication will fail if the difference between the KDC and machine timing is more than 5 minutes. Make sure the timing matches.</p> <p>3. Kerberos authentication will fail if the realm name is specified in lower-case letters. Make sure the realm name is specified in capital letters.</p> <p>4. Kerberos authentication will fail if automatic retrieval for KDC fails.</p> <p>Ask your service representative to make sure the KDC retrieval settings are set to "automatic retrieval".</p> <p>If automatic retrieval is not functioning properly, switch to manual retrieval.</p>
W0409-000	Authentication timed out because the server did not respond.	Check the network configuration, or settings on the authenticating server.
W0511-000	The authentication server login name is the same as a user name already registered on the machine. (Names are distinguished by the unique attribute specified in LDAP authentication settings.)	<p>1. Delete the old, duplicated name or change the login name.</p> <p>2. If the authentication server has just been changed, delete the old name on the server.</p>
W0607-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.

Error Code	Cause	Solution
W0606-004	Authentication failed because the user name contains language that cannot be used by general users.	Do not use "other", "admin", "supervisor" or "HIDE*" in general user accounts.
W0612-005	Authentication failed because no more users can be registered. (The number of users registered in the Address Book has reached capacity.)	Ask the user administrator to delete unused user accounts in the Address Book.
W0707-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.

### LDAP authentication

Error Code	Cause	Solution
L0103-000	A TWAIN operation occurred during authentication.	Make sure no other user is logged in to the machine, and then try again.
L0104-000	Failed to encrypt password.	<ol style="list-style-type: none"> <li>1. A password error occurred. Make sure the password is entered correctly.</li> <li>2. Either [DES] or [AES] is selected for "Driver Encryption Key: Encryption Strength". The administrator has restricted use of simple encryption. You can use the encryption key if it has been specified in the driver.</li> <li>3. A driver encryption key error occurred. Make sure that the encryption key is correctly specified on the driver.</li> </ol>
L0105-000	A login user name was not specified but a DeskTopBinder operation was performed.	Set the DeskTopBinder login user name correctly.



Error Code	Cause	Solution
L0206-002	A user attempted authentication from an application on the "System Settings" screen, where only the administrator has authentication ability.	Only the administrator has login privileges on this screen.  Log in as a general user from the application's login screen.
L0206-003	An authentication error occurred because the user name contains a space, colon (:), or quotation mark (").	Recreate the account if the account name contains any of these prohibited characters.  If the account name was entered incorrectly, enter it correctly and log in again.
L0207-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.
L0306-018	The LDAP server is not correctly configured.	Make sure that a connection test is successful with the current LDAP server configuration.
L0307-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.
L0400-210	Failed to obtain user information in LDAP search.	The login attribute's search criteria might not be specified or the specified search information is unobtainable.  Make sure the login name attribute is specified correctly.
L0406-003	An authentication error occurred because the user name contains a space, colon (:), or quotation mark (").	Recreate the account if the account name contains any of these prohibited characters.  If the account name was entered incorrectly, enter it correctly and log in again.

Error Code	Cause	Solution
L0406-200	Authentication cannot be completed because of the high number of authentication attempts.	<p>Wait a few minutes and then try again.</p> <p>If the situation does not return to normal, make sure that an authentication attack is not occurring.</p> <p>Notify the administrator of the screen message by e-mail, and check the system log for signs of an authentication attack.</p>
L0406-201	Authentication is disabled in the LDAP server settings.	Change the LDAP server settings in administrator tools, in "System Settings".
L0406-202 L0406-203	1. There is an error in the LDAP authentication settings, LDAP server, or network configuration.	<p>1. Make sure that a connection test is successful with the current LDAP server configuration.</p> <p>If connection is not successful, there might be an error in the network settings.</p> <p>Check the domain name or DNS settings in "Interface Settings".</p> <p>2. Make sure the LDAP server is specified correctly in the LDAP authentication settings.</p> <p>3. Make sure the login name attribute is entered correctly in the LDAP authentication settings.</p> <p>4. Make sure the SSL settings are supported by the LDAP server.</p>

Error Code	Cause	Solution
L0406-202 L0406-203	2. A login user name or password error occurred.	<p>1. Make sure the login user name and password are entered correctly.</p> <p>2. Make sure a usable login name is registered on the machine.</p> <p>Authentication will fail in the following cases:</p> <p>If the login user name contains a space, colon (:), or quotation mark (").</p> <p>If the login user name exceeds 128 bytes.</p>
L0406-202 L0406-203	3. There is an error in the simple encryption method.	<p>1. Authentication will fail if the password is left blank in simple authentication mode.</p> <p>To allow blank passwords, contact your service representative.</p> <p>2. In simple authentication mode, the DN of the login user name is obtained in the user account.</p> <p>Authentication fails if the DN cannot be obtained.</p> <p>Make sure there are no errors in the server name, login user name/ password, or information entered for the search filter.</p>

Error Code	Cause	Solution
L0406-204	Kerberos authentication failed.	<p>1. Kerberos authentication settings are not correctly configured.</p> <p>Make sure the realm name, KDC (Key Distribution Center) name, and supporting domain name are specified correctly.</p> <p>2. The KDC and machine timing do not match.</p> <p>Authentication will fail if the difference between the KDC and machine timing is more than 5 minutes. Make sure the timing matches.</p> <p>3. Kerberos authentication will fail if the realm name is specified in lower-case letters. Make sure the realm name is specified in capital letters.</p>
L0409-000	Authentication timed out because the server did not respond.	<p>Contact the server or network administrator.</p> <p>If the situation does not return to normal, contact your service representative.</p>
L0511-000	The authentication server login name is the same as a user name already registered on the machine. (Names are distinguished by the unique attribute specified in the LDAP authentication settings.)	<p>1. Delete the old, duplicated name or change the login name.</p> <p>2. If the authentication server has just been changed, delete the old name on the server.</p>
L0607-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.
L606-004	Authentication failed because the user name contains language that cannot be used by general users.	Do not use "other", "admin", "supervisor" or "HIDE*" in general user accounts.

Error Code	Cause	Solution
L0612-005	Authentication failed because no more users can be registered. (The number of users registered in the Address Book has reached capacity.)	Ask the user administrator to delete unused user accounts in the Address Book.
L0707-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.

### Integration Server authentication

Error Code	Cause	Solution
I0103-000	A TWAIN operation occurred during authentication.	Make sure no other user is logged in to the machine, and then try again.
I0104-000	Failed to decrypt password.	<ol style="list-style-type: none"> <li>1. A password error occurred. Make sure the password is entered correctly.</li> <li>2. Either [DES] or [AES] is selected for "Driver Encryption Key: Encryption Strength". The administrator has restricted use of simple encryption. You can use the encryption key if it has been specified in the driver.</li> <li>3. A driver encryption key error occurred. Make sure that the encryption key is correctly specified on the driver.</li> </ol>
I0105-000	A login user name was not specified but a DeskTopBinder operation was performed.	Set the DeskTopBinder login user name correctly.
I0206-002	A user attempted authentication from an application on the "System Settings" screen, where only the administrator has authentication ability.	<p>Only the administrator has login privileges on this screen.</p> <p>Log in as a general user from the application's login screen.</p>

Error Code	Cause	Solution
I0206-003	An authentication error occurred because the user name contains a space, colon (:), or quotation mark (").	Recreate the account if the account name contains any of these prohibited characters.  If the account name was entered incorrectly, enter it correctly and log in again.
I0207-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.
I0406-003	An authentication error occurred because the user name contains a space, colon (:), or quotation mark (").	Recreate the account if the account name contains any of these prohibited characters.  If account name was entered incorrectly, enter it correctly and log in again.
I0406-301	1. The URL could not be obtained.	Obtain the URL using Obtain URL in Integration Server authentication.
I0406-301	2. A login user name or password error occurred.	1. Make sure the login user name and password are entered correctly. 2. Make sure that a usable login name is registered on the machine.  Authentication will fail in the following cases.  If the login user name contains a space, colon (:), or quotation mark (").  If the login user name exceeds 128 bytes.
I0409-000	Authentication timed out because the server did not respond.	Contact the server or network administrator.  If the situation does not return to normal, contact your service representative.

Error Code	Cause	Solution
I0511-000	The authentication server login name is the same as a user name already registered on the machine. (Names are distinguished by the unique attribute specified in the LDAP authentication settings.)	<ol style="list-style-type: none"> <li>1. Delete the old, duplicated name or change the login name.</li> <li>2. If the authentication server has just been changed, delete the old name on the server.</li> </ol>
I0607-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.
I0606-004	Authentication failed because the user name contains language that cannot be used by general users.	Do not use "other", "admin", "supervisor" or "HIDE*" in general user accounts.
I0612-005	Authentication failed because no more users can be registered. (The number of users registered in the Address Book has reached capacity.)	Ask the user administrator to delete unused user accounts in the Address Book.
I0707-001	An authentication error occurred because the Address Book is being used at another location.	Wait a few minutes and then try again.

## If the Machine Cannot Be Operated

If the following conditions arise while users are operating the machine, provide the instructions on how to deal with them.

Condition	Cause	Solution
Cannot perform the following: <ul style="list-style-type: none"> <li>• Print with the printer driver</li> <li>• Connect with the TWAIN driver</li> <li>• Send or print with the LAN-Fax driver</li> </ul>	User authentication has been rejected.	Confirm the user name and login name with the administrator of the network in use if using Windows authentication, LDAP authentication, or Integration Server authentication.  Confirm with the user administrator if using Basic authentication.
Cannot perform the following: <ul style="list-style-type: none"> <li>• Print with the printer driver</li> <li>• Connect with the TWAIN driver</li> <li>• Send or print with the LAN-Fax driver</li> </ul>	The encryption key specified in the driver does not match the machine's driver encryption key.	Specify the driver encryption key registered in the machine.  For details, see p. 180 "Specifying a Driver Encryption Key".
Cannot connect with the TWAIN driver.	The SNMPv3 account, password, and encryption algorithm do not match settings specified on this machine.	Specify the account, password and the encryption algorithm of SNMPv3 registered in the machine using network connection tools.
Cannot authenticate using the TWAIN driver.	Another user is logging in to the machine.	Wait for the user to log out.
Cannot authenticate using the TWAIN driver.	Authentication is taking time because of operating conditions.	Make sure the LDAP server setting is correct.  Make sure the network settings are correct.
Cannot authenticate using the TWAIN driver.	Authentication is not possible while the machine is editing the Address Book data.	Wait until editing of the Address Book data is complete.



Condition	Cause	Solution
After starting "User Management Tool" or "Address Management Tool" in SmartDeviceMonitor for Admin and entering the correct login user name and password, a message that an incorrect password has been entered appears.	"Driver Encryption Key:Encryption Strength" is not set correctly. Alternatively, "SSL/TLS" has been enabled although the required certificate is not installed in the computer.	Set "Driver Encryption Key:Encryption Strength" to [Simple Encryption]. Alternatively, enable "SSL/TLS", install the server certificate in the machine, and then install the certificate in the computer.  For details, see p.261 "Specifying the Extended Security Functions" and p.136 "Configuring SSL/TLS".
Cannot log in to the machine using [Document Server (MFP): Authentication/Encryption] in DeskTopBinder.	"Driver Encryption Key:Encryption Strength" is not set correctly. Alternatively, "SSL/TLS" has been enabled although the required certificate is not installed in the computer.	Set "Driver Encryption Key:Encryption Strength" to [Simple Encryption]. Alternatively, enable "SSL/TLS", install the server certificate in the machine, and then install the certificate in the computer.  For details, see p.261 "Specifying the Extended Security Functions" and p.136 "Configuring SSL/TLS".
Cannot access the machine using ScanRouter EX Professional V3 / ScanRouter EX Enterprise V2.	"Driver Encryption Key:Encryption Strength" is not set correctly. Alternatively, "SSL/TLS" has been enabled although the required certificate is not installed in the computer.	Set "Driver Encryption Key:Encryption Strength" to [Simple Encryption]. Alternatively, enable "SSL/TLS", install the server certificate in the machine, and then install the certificate in the computer.  For details, see p.261 "Specifying the Extended Security Functions" and p.136 "Configuring SSL/TLS".
Cannot connect to the ScanRouter delivery software.	The ScanRouter delivery software may not be supported by the machine.	Update to the latest version of the ScanRouter delivery software.

Condition	Cause	Solution
Cannot access the machine using ScanRouter EX Professional V2.	ScanRouter EX Professional V2 does not support user authentication.	ScanRouter EX Professional V2 does not support user authentication.
Cannot log out when using the copying or scanner functions.	The original has not been scanned completely.	When the original has been scanned completely, press [#], remove the original, and then log out.
"Prg. Dest." does not appear on the fax or scanner screen for specifying destinations.	"Restrict Adding of User Destinations (Fax)" and/or "Restrict Adding of User Destinations (Scanner)" is set to [On] in "Restrict Use of Destinations (Fax)" and/or "Restrict Use of Destinations (Scanner)" under "Extended Security", so only the user administrator can register destinations in the Address Book on the fax or scanner screen.	Registration must be done by the user administrator.

Condition	Cause	Solution
<p>Cannot send e-mail from the scanner.</p> <p>Similarly:</p> <ul style="list-style-type: none"> <li>• Cannot select an address.</li> <li>• Cannot specify a signature.</li> <li>• Cannot store data in a media.</li> </ul>	<p>The following are possible causes:</p> <ul style="list-style-type: none"> <li>• The validity period of the user certificate (destination certificate) has expired.</li> <li>• The validity period of the device certificate (S/MIME) has expired.</li> <li>• The device certificate (S/MIME) does not exist or is invalid.</li> <li>• The validity period of the device certificate (PDF with digital signature or PDF/A with digital signature) has expired.</li> <li>• The device certificate (PDF with digital signature or PDF/A with digital signature) does not exist or is invalid.</li> <li>• The administrator's e-mail address is incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>• Install a user certificate (destination certificate). You can install a user certificate (destination certificate) from the Web Image Monitor address book. The user certificate (destination certificate) itself must be prepared in advance.</li> <li>• Install a device certificate for S/MIME.</li> <li>• Install a device certificate for PDF with digital signature or PDF/A with digital signature. For details, see p.131 "Protecting the Communication Path via a Device Certificate".</li> <li>• Specify the administrator's e-mail address. For details, see "File Transfer", Connecting the Machine/ System Settings.</li> </ul>

Condition	Cause	Solution
<p>Cannot transfer faxed documents.</p> <p>Similarly:</p> <ul style="list-style-type: none"> <li>• Cannot select an address.</li> <li>• Cannot specify a signature.</li> </ul>	<p>The following are possible causes:</p> <ul style="list-style-type: none"> <li>• The validity period of the user certificate (destination certificate) has expired.</li> <li>• The validity period of the device certificate (S/MIME) has expired.</li> <li>• The device certificate (S/MIME) does not exist or is invalid.</li> <li>• The validity period of the device certificate (PDF with digital signature or PDF/A with digital signature) has expired.</li> <li>• The device certificate (PDF with digital signature or PDF/A with digital signature) does not exist or is invalid.</li> <li>• The administrator's e-mail address is incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>• Install a user certificate (destination certificate). You can install a user certificate (destination certificate) from the Web Image Monitor address book. The user certificate (destination certificate) itself must be prepared in advance.</li> <li>• Install a device certificate for S/MIME.</li> <li>• Install a device certificate for PDF with digital signature or PDF/A with digital signature. For details, see p.131 "Protecting the Communication Path via a Device Certificate".</li> <li>• Specify the administrator's e-mail address. For details, see "File Transfer", Connecting the Machine/ System Settings.</li> </ul>
<p>User authentication is disabled, yet stored files do not appear.</p>	<p>User authentication might have been disabled without "All Users" being selected for user access to stored files.</p>	<p>Re-enable user authentication, and select [All Users] as the access permission setting of the files you want to display. For details, see p.185 "Configuring Access Permissions for Stored Files".</p>

Condition	Cause	Solution
User authentication is disabled, yet destinations specified using the machine do not appear.	User authentication might have been disabled without "All Users" being selected for "Protect Destination".	Re-enable user authentication, and select [All Users] as the access permission setting of the destinations you want to display.  For details, see p.97 "Protecting the Address Book".
Cannot print when user authentication has been enabled.	User authentication may not be specified in the printer driver.	Specify user authentication in the printer driver. For details, see the printer driver Help.
[Finish Job and Limit] is selected in "Machine action when limit is reached", but the current job is canceled before it is finished.	Depending on the application you are using, the machine might recognize a job as multiple jobs, causing cancelation of the job before it is finished.	Reset the print volume use setting for the user by, for example, clearing the print volume use counter, and then perform printing again. For details about clearing print volume counters, ask the user administrator.
If you try to interrupt a job while copying or scanning, an authentication screen appears.	With this machine, you can log out while copying or scanning. If you try to interrupt copying or scanning after logging out, an authentication screen appears.	Only the user who executed a copying or scanning job can interrupt it. Wait until the job has completed or consult an administrator or the user who executed the job.
After you execute "Encrypt Address Book", the "Exit" message does not appear.	The hard disk may be faulty.  The file may be corrupt.	Contact your service representative.



# 9. Checking Operation Privileges

This chapter specifies a list of the administrator and user operation privileges for the machine settings when administrator authentication or user authentication is enabled.

## List of Operation Privileges for Settings

### Understanding headers

- User  
The user administrator has privileges for this operation.
- Mach  
The machine administrator has privileges for this operation.
- N/W  
The network administrator has privileges for this operation.
- File  
The file administrator has privileges for this operation.
- Unset  
The logged in user has privileges for this operation.  
In cases where no settings are selected in "Available Settings" of [Administrator Authentication Management].
- Set  
The logged in user has privileges for this operation.  
Status when settings are selected in "Available Settings" of [Administrator Authentication Management].
- Lv.1  
In cases where the [Menu Protect] setting is set to [Level 1].
- Lv.2  
In cases where the [Menu Protect] setting is set to [Level 2].

### Understanding the symbols

R/W: Execute, change and reading possible.

R: Reading is possible.

-: Execute, change and reading are not possible.

#### Note

- When user authentication is active, users who have not been authenticated or do not have login data cannot operate the machine.

- When [Menu Protect] is set to [Off], users can execute, change and read all of the settings of each function.



# System Settings

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

## General Features

Settings	User	Mach	N/W	File	Unset	Set
Program / Change / Delete User Text	R	R/W	R	R	R/W	R
Panel Key Sound	R	R/W	R	R	R/W	R
Warm-up Beeper	R	R/W	R	R	R/W	R
Copy Count Display	R	R/W	R	R	R/W	R
Function Priority	R	R/W	R	R	R/W	R
Function Key Allocation	R	R/W	R	R	R/W	R
Screen Colour Setting	R	R/W	R	R	R/W	R
Print Priority	R	R/W	R	R	R/W	R
Function Reset Timer	R	R/W	R	R	R/W	R
Interleave Print	R	R/W	R	R	R/W	R
Output: Copier	R	R/W	R	R	R/W	R
Output: Document Server	R	R/W	R	R	R/W	R
Output: Facsimile	R	R/W	R	R	R/W	R
Output: Printer	R	R/W	R	R	R/W	R
ADF Original Table Elevation	R	R/W	R	R	R/W	R
System Status/Job List Display Time	R	R/W	R	R	R/W	R
Time Interval between Printing Jobs	R	R/W	R	R	R/W	R
Key Repeat	R	R/W	R	R	R/W	R
External Keyboard	R	R/W	R	R	R/W	R
Z-fold Position	R	R/W	R	R	R/W	R
Half Fold Position	R	R/W	R	R	R/W	R

Settings	User	Mach	N/W	File	Unset	Set
Letter Fold-out Position	R	R/W	R	R	R/W	R
Letter Fold-in Position	R	R/W	R	R	R/W	R
Double Parallel Fold Position	R	R/W	R	R	R/W	R
Gate Fold Position	R	R/W	R	R	R/W	R

**Tray Paper Settings**

Settings	User	Mach	N/W	File	Unset	Set
Paper Tray Priority: Copier	R	R/W	R	R	R/W	R
Paper Tray Priority: Facsimile	R	R/W	R	R	R/W	R
Paper Tray Priority: Printer	R	R/W	R	R	R/W	R
Tray Paper Size: Tray 2-4	R	R/W	R	R	R/W	R
Printer Bypass Paper Size	R	R/W	R	R	R/W	R
Paper Type: Bypass Tray	R	R/W	R	R	R/W	R
Paper Type: Tray 1-4	R	R/W	R	R	R/W	R
Paper Type: LCT	R	R/W	R	R	R/W	R
Tray Paper Size: LCT	R	R/W	R	R	R/W	R
Custom Size	R	R/W	R	R	R/W	R
Front Cover Sheet Tray	R	R/W	R	R	R/W	R
Back Cover Sheet Tray	R	R/W	R	R	R/W	R
Slip Sheet Tray	R	R/W	R	R	R/W	R
Designation Sheet 1-2 Tray	R	R/W	R	R	R/W	R

**Timer Settings**

Settings	User	Mach	N/W	File	Unset	Set
Sleep Mode Timer	R	R/W	R	R	R/W	R
Low Power Mode Timer	R	R/W	R	R	R/W	R

Settings	User	Mach	N/W	File	Unset	Set
System Auto Reset Timer	R	R/W	R	R	R/W	R
Copier / Document Server Auto Reset Timer	R	R/W	R	R	R/W	R
Facsimile Auto Reset Timer	R	R/W	R	R	R/W	R
Printer Auto Reset Timer	R	R/W	R	R	R/W	R
Scanner Auto Reset Timer	R	R/W	R	R	R/W	R
Set Date	R	R/W	R	R	R/W	R
Set Time	R	R/W	R	R	R/W	R
Auto Logout Timer	R	R/W	R	R	R/W	R
Weekly Timer Code	R	R/W	R	R	R/W	R
Weekly Timer: Monday-Sunday	R	R/W	R	R	R/W	R

## Interface Settings

### Network

Settings	User	Mach	N/W	File	Unset	Set
Machine IPv4 Address <sup>*1</sup>	R	R	R/W	R	R/W	R
IPv4 Gateway Address	R	R	R/W	R	R/W	R
Machine IPv6 Address	R	R	R	R	R	R
IPv6 Gateway Address	R	R	R	R	R	R
IPv6 Stateless Address Autoconfiguration	R	R	R/W	R	R/W	R
DHCPv6 Configuration	R	R	R/W	R	R/W	R
DNS Configuration <sup>*2</sup>	R	R	R/W	R	R/W	R
DDNS Configuration	R	R	R/W	R	R/W	R
IPsec	R	R	R/W	R	R/W	R
Domain Name <sup>*1</sup>	R	R	R/W	R	R/W	R
WINS Configuration	R	R	R/W	R	R/W	R

Settings	User	Mach	N/W	File	Unset	Set
Effective Protocol	R	R	R/W	R	R/W	R
NCP Delivery Protocol	R	R	R/W	R	R/W	R
NW Frame Type	R	R	R/W	R	R/W	R
SMB Computer Name	R	R	R/W	R	R/W	R
SMB Work Group	R	R	R/W	R	R/W	R
Ethernet Speed	R	R	R/W	R	R/W	R
LAN Type	R	R	R/W	R	R/W	R
Ping Command	-	-	R/W	-	R/W	R
Permit SNMPv3 Communication	R	R	R/W	R	R/W	R
Permit SSL / TLS Communication	R	R	R/W	R	R/W	R
Host Name	R	R	R/W	R	R/W	R
Machine Name	R	R	R/W	R	R/W	R
IEEE 802.1X Authentication for Ethernet	R	R	R/W	R	R/W	R
Restore IEEE 802.1X Authentication to Defaults	-	-	R/W	-	R/W	-

\*1 When auto-obtain is set, the data is read-only.

\*2 All administrators and users can run a test of connections.

**Parallel Interface**

Settings	User	Mach	N/W	File	Unset	Set
Parallel Timing	R	R/W	R	R	R/W	R
Parallel Communication Speed	R	R/W	R	R	R/W	R
Selection Signal Status	R	R/W	R	R	R/W	R
Input Prime	R	R/W	R	R	R/W	R
Bidirectional Communication	R	R/W	R	R	R/W	R
Signal Control	R	R/W	R	R	R/W	R

**Wireless LAN**

Settings	User	Mach	N/W	File	Unset	Set
Communication Mode	R	R	R/W	R	R/W	R
SSID Setting	R	R	R/W	R	R/W	R
Ad-hoc Channel	R	R	R/W	R	R/W	R
Security Method	R	R	R/W	R	R/W	R
Wireless LAN Signal	R	R	R/W	R	R/W	R
Restore Factory Defaults	–	–	R/W	–	R/W	–

**File Transfer**

Settings	User	Mach	N/W	File	Unset	Set
Delivery Option *3	R	R/W	R	R	R/W	R
Capture Server IPv4 Address	R	R/W	R	R	R/W	R
Fax RX File Transmission	R	R/W	R	R	R/W	R
SMTP Server	R	R	R/W	R	R/W	R
SMTP Authentication *4	R	R/W	R	R	R/W	R
POP before SMTP	R	R/W	R	R	R/W	R
Reception Protocol	R	R/W	R	R	R/W	R
POP3 / IMAP4 Settings	R	R/W	R	R	R/W	R
Administrator's E-mail Address	R	R/W	R	R	R/W	R
E-mail Communication Port	R	R	R/W	R	R/W	R
E-mail Reception Interval	R	R	R/W	R	R/W	R
Max. Reception E-mail Size	R	R	R/W	R	R/W	R
E-mail Storage in Server	R	R	R/W	R	R/W	R
Default User Name / Password (Send) *4	R	R/W	R	R	R/W	R
Program / Change / Delete E-mail Message	R	R/W	R	R	R/W	R/W

Settings	User	Mach	N/W	File	Unset	Set
Auto Specify Sender Name	R	R	R/W	R	R/W	R
Fax E-mail Account	R	R/W	R	R	R/W	R
Scanner Resend Interval Time	R	R	R/W	R	R/W	R
Number of Scanner Resends	R	R	R/W	R	R/W	R

\*3 The primary and secondary distribution server addresses are read-only.

\*4 Passwords cannot be read.

**Administrator Tools**

Settings	User	Mach	N/W	File	Unset	Set
Address Book Management	R/W	R/W *5	R/W *5	R/W *5	R/W *6	R*6
Address Book: Program / Change / Delete Group	R/W	R/W *5	R/W *5	R/W *5	R/W *6	R*6
Address Book: Change Order	R/W	-	-	-	R/W	-
Print Address Book: Destination List	R/W	-	-	-	R/W	R/W
Address Book: Edit Title	R/W	-	-	-	R/W	-
Address Book: Switch Title	R/W	-	-	-	R/W	R
Backup/Restore: User Custom Settings & Address Book	R/W	-	-	-	R/W	-
Data Carry-over Setting for Address Book Auto-program	R/W	R	R	R	R/W	R
Print Volume Use Limitation: Unit Count Setting	R	R/W	R	R	R	R
Display / Print Counter	R	R/W	R	R	R/W	R/W
Display / Clear / Print Counter per User	R/W *7	R/W *8	R	R	R/W	-
Display / Clear Eco-friendly Counter	-	R/W	-	-	-	-

Settings	User	Mach	N/W	File	Unset	Set
Display / Clear Eco-friendly Counter per User	-	R/W	-	-	-	-
Machine action when limit is reached	R	R/W	R	R	R	R
Media Slot Use	R	R/W	R	R	R	R
Stop Key to Suspend Print Job	R	R/W	R	R	R	R
User Authentication Management	R	R/W	R	R	R/W	R
Enhanced Authentication Management	R	R/W	R	R	R/W	R
Administrator Authentication Management	R/W *9*10	R/W *10	R/W *10	R/W *10	R/W	-
Program / Change Administrator	R/W *11	R/W *11	R/W *11	R/W *11	-	-
Key Counter Management	R	R/W	R	R	R/W	R
External Charge Unit Management	R	R/W	R	R	R/W	R
Enhanced External Charge Unit Management	R	R/W	R	R	R/W	R
Extended Security						
• Driver Encryption Key	-	-	R/W	-	R/W	-
• Driver Encryption Key:Encryption Strength	R	R	R/W	R	R/W	R
• Restrict Display of User Information	R	R/W	R	R	R/W	R
• Encrypt User Custom Settings & Address Book	R/W	R	R	R	R	R
• Enhance File Protection	R	R	R	R/W	R	R
• Restrict Use of Destinations (Fax)	R/W	R	R	R	R	R
• Restrict Adding of User Destinations (Fax)	R/W	R	R	R	R	R
• Restrict Use of Destinations (Scanner)	R/W	R	R	R	R	R

Settings	User	Mach	N/W	File	Unset	Set
• Restrict Adding of User Destinations (Scanner)	R/W	R	R	R	R	R
• Transfer to Fax Receiver	R	R/W	R	R	R	R
• Remote Diagnostics (Facsimile)	-	-	-	-	R/W	-
• Authenticate Current Job	R	R/W	R	R	R/W	R
• @Remote Service	R	R/W	R	R	R/W	R
• Update Firmware	R	R/W	R	R	-	-
• Change Firmware Structure	R	R/W	R	R	-	-
• Password Policy	R/W	-	-	-	-	-
• Settings by SNMPv1, v2	R	R	R/W	R	R/W	R
• Device Access Violation	-	R/W	-	-	-	-
• Password Entry Violation	-	R/W	-	-	-	-
• Security Setting for Access Violation	R	R/W	R	R	-	-
Auto Delete File in Document Server	R	R	R	R/W	R/W	R
Delete All Files in Document Server	-	-	-	R/W	R/W	-
Capture Priority	-	R/W	-	-	R/W	R
Capture: Delete All Unsent Files	-	R/W	-	-	R/W	-
Capture: Ownership	-	R/W	-	-	R/W	R
Capture: Public Priority	-	R/W	-	-	R/W	R
Capture: Owner Defaults	-	R/W	-	-	R/W	R
Program / Change / Delete LDAP Server *4	-	R/W	-	-	R/W	R
LDAP Search	R	R/W	R	R	R/W	R
Sleep Mode	R	R/W	R	R	R/W	R
Print Volum. Use Limit.: Default Limit Value	R/W	R	R	R	R	R
Service Test Call	-	R/W	-	-	R/W	-



Settings	User	Mach	N/W	File	Unset	Set
Notify Machine Status	–	R/W	–	–	R/W	–
Service Mode Lock	R	R/W	R	R	R/W	R
Firmware Version	R	R	R	R	R	R
Network Security Level	R	R	R/W	R	R	R
Auto Erase Memory Setting	R	R/W	R	R	R	R
Erase All Memory	–	R/W	–	–	–	–
Delete All Logs	–	R/W	–	–	R/W	–
Transfer Log Setting <sup>*12</sup>	R	R/W	R	R	R/W	R
Data Security for Copying	R	R/W	R	R	R/W	R
Fixed USB Port	R	R/W	R	R	R/W	R
Program / Change / Delete Realm	–	R/W	–	–	–	–
Machine Data Encryption Settings	–	R/W	–	–	–	–
Program / Change / Delete Remote Machine	–	R/W	–	–	R/W	–
Program / Delete Device Certificate	R	R	R/W	R	–	–
Device Setting Information: Import Setting (Server) <sup>*13</sup>	–	–	–	–	–	–
Device Setting Information: Run Import (Server) <sup>*13</sup>	–	–	–	–	–	–
Device Setting Information: Export (Memory Storage Device) <sup>*13</sup>	–	–	–	–	–	–
Device Setting Information: Import (Memory Storage Device) <sup>*13</sup>	–	–	–	–	–	–
Volume Use Counter: Scheduled/Specified Reset Settings	R	R/W	R	R	R	R
Eco-friendly Counter Period / Administrator Message	R	R/W	R	R	R	R

Settings	User	Mach	N/W	File	Unset	Set
PDF File Type: PDF/A Fixed	R	R/W	R	R	R	R
Energy Saver Key to Change Mode	R	R/W	R	R	R/W	R
Compulsory Security Stamp:Copier	R	R/W	R	R	R/W	R
Compulsory Security Stamp:Doc. Srvr.	R	R/W	R	R	R/W	R
Compulsory Security Stamp:Facsimile	R	R/W	R	R	R/W	R
Compulsory Security Stamp:Printer	R	R/W	R	R	R/W	R
Users Own Home Screen	R	R/W	R	R	R/W	R

- \*4 Passwords cannot be read.
- \*5 Only changing headings and user searches are possible.
- \*6 The items that can be executed, changed and read differ according is set to access privilege.
- \*7 Can only be cleared.
- \*8 Can only be printed.
- \*9 Cannot be changed when using the individual authentication function.
- \*10 Only the administrator privilege settings can be changed.
- \*11 Administrators can only change their own accounts.
- \*12 Can only be changed to [Off].
- \*13 R/W is the administrator with all privileges that include user administrator, machine administrator, network administrator, and file administrator privileges.

**Print List**

Settings	User	Mach	N/W	File	Unset	Set
Print List	-	-	R/W	-	R/W	-

# Edit Home

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

## Edit Home

Settings	User	Mach	N/W	File	Unset	Set
Edit Icons: Move Icon	-	R/W	-	-	R/W	-
Edit Icons: Delete Icon	-	R/W	-	-	R/W	-
Edit Icons: Add Icon	-	R/W	-	-	R/W	-
Edit Icons: Restore Default Icon Display	-	R/W	-	-	R/W	-
Insert Image: Insert Image on Home Screen	-	R/W	-	-	R/W	-

# Maintenance

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

## Maintenance

Settings	User	Mach	N/W	File	Unset	Set
Plain Paper Setting	-	R/W	-	-	R/W	-

# Copier / Document Server Features

When administrator authentication is set, the restrictions to user operations differ depending on the "Menu Protect" setting.

## General Features

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Auto Image Density Priority	R	R/W	R	R	R	R
Original Photo Type Priority	R	R/W	R	R	R	R
Original Type Display	R	R/W	R	R	R	R
Paper Display	R	R/W	R	R	R	R
Original Orientation in Duplex Mode	R	R/W	R	R	R	R
Copy Orientation in Duplex Mode	R	R/W	R	R	R	R
Max. Copy Quantity	R	R/W	R	R	R	R
Auto Tray Switching	R	R/W	R	R	R	R
Alert Sound: Original left on Exposure Glass	R	R/W	R	R	R	R
Job End Call	R	R/W	R	R	R	R
Switch Original Counter Display	R	R/W	R	R	R	R
Customize Function: Copier	R	R/W	R	R	R/W	R
Customize Function: Document Server Storage	R	R/W	R	R	R/W	R
Customize Function: Document Server Print	R	R/W	R	R	R	R

## Reproduction Ratio

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Shortcut Reduce/Enlarge	R	R/W	R	R	R	R
Reproduction Ratio	R	R/W	R	R	R	R
Reduce/Enlarge Ratio Priority	R	R/W	R	R	R	R
Ratio for Create Margin	R	R/W	R	R	R	R

**Edit**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Front Margin: Left / Right	R	R/W	R	R	R	R
Back Margin: Left / Right	R	R/W	R	R	R	R
Front Margin: Top / Bottom	R	R/W	R	R	R	R
Back Margin: Top / Bottom	R	R/W	R	R	R	R
1 Sided → 2 Sided Auto Margin:TtoT	R	R/W	R	R	R	R
1 Sided → 2 Sided Auto Margin:TtoB	R	R/W	R	R	R	R
Erase Border Width	R	R/W	R	R	R	R
Erase Original Shadow in Combine	R	R/W	R	R	R/W	R
Erase Centre Width	R	R/W	R	R	R	R
Front Cover Copy in Combine	R	R/W	R	R	R/W	R
Copy Order in Combine	R	R/W	R	R	R/W	R
Orientation: Booklet, Magazine	R	R/W	R	R	R/W	R
Copy on Designating Page in Combine	R	R/W	R	R	R/W	R
Image Repeat Separation Line	R	R/W	R	R	R/W	R
Double Copies Separation Line	R	R/W	R	R	R/W	R
Separation Line in Combine	R	R/W	R	R	R/W	R
Copy Back Cover	R	R/W	R	R	R	R

**Stamp**

**Background Numbering**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Size	R	R/W	R	R	R/W	R
Density	R	R/W	R	R	R/W	R

**Preset Stamp**

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Stamp Language	R	R/W	R	R	R/W	R
Stamp Priority	R	R/W	R	R	R	R
Stamp Format: COPY	R	R/W	R	R	R/W *1	R
Stamp Format: URGENT	R	R/W	R	R	R/W *1	R
Stamp Format: PRIORITY	R	R/W	R	R	R/W *1	R
Stamp Format: For Your Info.	R	R/W	R	R	R/W *1	R
Stamp Format: PRELIMINARY	R	R/W	R	R	R/W *1	R
Stamp Format: For Internal Use Only	R	R/W	R	R	R/W *1	R
Stamp Format: CONFIDENTIAL	R	R/W	R	R	R/W *1	R
Stamp Format: DRAFT	R	R/W	R	R	R/W *1	R

\*1 Only adjustments to print position can be set. The print position itself cannot be configured.

**User Stamp**

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Program / Delete Stamp	R	R/W	R	R	R/W	R
Stamp Format: 1-4	R	R/W	R	R	R/W	R

**Date Stamp**

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Format	R	R/W	R	R	R	R
Font	R	R/W	R	R	R/W	R

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Size	R	R/W	R	R	R/W	R
Superimpose	R	R/W	R	R	R/W	R
Stamp Setting	R	R/W	R	R	R/W *2	R

\*2 Only adjustments to print position can be set. The print position itself cannot be configured.

**Page Numbering**

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Stamp Format	R	R/W	R	R	R	R
Font	R	R/W	R	R	R/W	R
Size	R	R/W	R	R	R/W	R
Duplex Back Page Stamping Position	R	R/W	R	R	R/W	R
Page Numbering in Combine	R	R/W	R	R	R/W	R
Stamp on Designating Slip Sheet	R	R/W	R	R	R/W	R
Stamp Position:P1,P2...	R	R/W	R	R	R/W *3	R
Stamp Position:1/5,2/5...	R	R/W	R	R	R/W *3	R
Stamp Position:-1,-2...	R	R/W	R	R	R/W *3	R
Stamp Position:P.1,P.2...	R	R/W	R	R	R/W *3	R
Stamp Position:1,2...	R	R/W	R	R	R/W *3	R
Stamp Position:1-1,1-2...	R	R/W	R	R	R/W *3	R
Superimpose	R	R/W	R	R	R/W	R
Page Numbering Initial Letter	R	R/W	R	R	R	R



\*3 Only adjustments to print position can be set. The print position itself cannot be configured.

### Stamp Text

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Font	R	R/W	R	R	R/W	R
Size	R	R/W	R	R	R/W	R
Superimpose	R	R/W	R	R	R/W	R
Stamp Setting	R	R/W	R	R	R/W	R
Change Job Serial No. for First Job	R	R/W	R	R	R	R

### Input / Output

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Switch to Batch	R	R/W	R	R	R/W	R
SADF Auto Reset	R	R/W	R	R	R	R
Rotate Sort: Auto Paper Continue	R	R/W	R	R	R	R
Copy Eject Face Method in Glass Mode	R	R/W	R	R	R	R
Copy Eject Face Method in Bypass Mode	R	R/W	R	R	R	R
Memory Full Auto Scan Restart	R	R/W	R	R	R	R
Letterhead Setting	R	R/W	R	R	R	R
Staple Position	R	R/W	R	R	R/W	R
Punch Type	R	R/W	R	R	R/W	R
Simplified Screen: Finishing Types	R	R/W	R	R	R/W	R
Z-fold Output Tray	R	R/W	R	R	R	R
Half Fold Settings	R	R/W	R	R	R	R
Letter Fold-out Settings	R	R/W	R	R	R	R
Letter Fold-in Settings	R	R/W	R	R	R	R
Double Parallel Fold Settings	R	R/W	R	R	R	R

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Gate Fold Settings	R	R/W	R	R	R	R

**Administrator Tools**

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Menu Protect	R	R/W	R	R	R	R

# Facsimile Features

When administrator authentication is set, the restrictions to user operations differ depending on the "Menu Protect" setting.

## General Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Quick Operation Key 1-3	R	R/W	R	R	R/W	R
Switch Title	R	R/W	R	R	R/W	R
Search Destination	R	R/W	R	R	R/W	R
Communication Page Count	R	R	R	R	R	R
Adjust Sound Volume	R	R/W	R	R	R/W	R
Box Setting	–	R/W	–	–	R	–
Box Setting: Print List	–	R/W	–	–	R/W	–
On Hook Mode Release Time	R	R/W	R	R	R/W	R
Delete Recent Destinations	–	R/W	–	–	–	–
Auto Print Fax Journal	R	R/W	R	R	R	R

## Scan Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Program / Change / Delete Scan Size	R	R/W	R	R	R/W	R

## Send Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Max. E-mail Size	R	R	R/W	R	R	R
Program / Change / Delete Standard Message	R	R/W	R	R	R	R
Memory File Transfer	–	R/W	–	–	–	–
Backup File TX Setting	R	R/W	R	R	R	R

**Reception Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Reception File Settings	R	R/W	R	R	R	R
Switch Reception Mode	R	R/W	R	R	R	R
Program Special Sender	-	R/W	-	-	-	-
Program Special Sender: Print List	-	R/W	-	-	-	-
Stored Reception File User Setting	R	R	R	R/W	R	R
SMTP RX File Delivery Settings	R	R/W	R	R	R	R
2 Sided Print	R	R/W	R	R	R/W	R
Checked Mark	R	R/W	R	R	R/W	R
Centre Mark	R	R/W	R	R	R/W	R
Print Reception Time	R	R/W	R	R	R/W	R
Reception File Print Quantity	R	R/W	R	R	R/W	R
Paper Tray	R	R/W	R	R	R/W	R
Specify Tray for Lines	R	R/W	R	R	R/W	R
Folder Transfer Result Report	R	R/W	R	R	R	R
Remote Reception Setting per Line	R	R/W	R	R	R	R

**Initial Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Parameter Setting	R	R/W	R	R	R	R
Parameter Setting: Print List	-	R/W	-	-	R/W	-
Program Closed Network Code	-	R/W	-	-	R	-
Program Memory Lock ID	-	R/W	-	-	R	-
Internet Fax Settings	R	R/W	R	R	R	R
Select Dial / Push Phone	R	R/W	R	R	R	R

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Program Fax Information	R	R/W	R	R	R	R
Enable H.323	R	R	R/W	R	R	R
Enable SIP	R	R	R/W	R	R	R
H.323 Settings	R	R	R/W	R	R	R
SIP Settings	R	R	R/W	R	R	R
Program / Change / Delete Gateway	R	R	R/W	R	R	R
Menu Protect	R	R/W	R	R	R	R
E-mail Setting	R	R/W	R	R	R	R
Folder Setting	R	R/W	R	R	R	R
File Type to Transfer	R	R/W	R	R	R	R
Security for E-mail TX Results	R	R/W	R	R	R	R

## Printer Functions

This section lists the printer function items that appear if [Printer] on the Home screen is pressed.

When administrator authentication is set, the restrictions to user operations differ depending on the "Menu Protect" setting.

### Printer Functions

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Job List	_ *1	R	_ *1	_ *1	R	R
Print Jobs	-	-	-	R/W	R/W	R/W
Print from Memory Storage Device	-	-	-	-	R/W	R/W
Job Reset	-	R/W	-	-	R/W	R/W
Job Operation	R	R/W	R	R	R/W	R/W
Form Feed	-	R/W	-	-	R/W	R/W
Spooling Job List	-	R/W	-	-	R/W	R/W
Error Log	-	R/W	-	-	R/W	R/W

\* 1 Can be viewed if [Authenticate Current Job] is set to [Off] in [Extended Security].

# Printer Features

When administrator authentication is set, the restrictions to user operations differ depending on the "Menu Protect" setting.

## List / Test Print

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Multiple Lists	-	R/W	-	-	R/W	R/W
Configuration Page	-	R/W	-	-	R/W	R/W
Error Log	-	R/W	-	-	R/W	R/W
PCL Configuration / Font Page	-	R/W	-	-	R/W	R/W
PS Configuration / Font Page	-	R/W	-	-	R/W	R/W
PDF Configuration / Font Page	-	R/W	-	-	R/W	R/W
Hex Dump	-	R/W	-	-	R/W	R/W

## Maintenance

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Menu Protect	R	R/W	R	R	R	R
List / Test Print Lock	R	R/W	R	R	R	-
Delete All Temporary Print Jobs	-	-	-	R/W	-	-
Delete All Stored Print Jobs	-	-	-	R/W	-	-
Auto Delete Temporary Print Jobs	R	R	R	R/W	R	R
Auto Delete Stored Print Jobs	R	R	R	R/W	R	R

## System

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Print Error Report	R	R/W	R	R	R	R
Auto Continue	R	R/W	R	R	R	R
Store and Skip Errored Job	R	R/W	R	R	R	R

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Memory Overflow	R	R/W	R	R	R	R
Job Separation	R	R/W	R	R	R	R
Rotate by 180 Degrees	R	R/W	R	R	R	R
Print Compressed Data	R	R/W	R/W	R	R	R
Memory Usage	R	R/W	R	R	R	R
Duplex	R	R/W	R	R	R	R
Copies	R	R/W	R	R	R	R
Blank Page Print	R	R/W	R	R	R	R
Edge Smoothing	R	R/W	R	R	R	R
Toner Saving	R	R/W	R	R	R	R
Spool Image	R	R/W	R	R	R	R
Reserved Job Waiting Time	R	R/W	R	R	R	R
Printer Language	R	R/W	R	R	R	R
Sub Paper Size	R	R/W	R	R	R	R
Page Size	R	R/W	R	R	R	R
Letterhead Setting	R	R/W	R	R	R	R
Tray Setting Priority	R	R/W	R	R	R	R
Edge to Edge Print	R	R/W	R	R	R	R
Default Printer Language	R	R/W	R	R	R	R
Tray Switching	R	R/W	R	R	R	R
Extended Auto Tray Switching	R	R/W	R	R	R	R
Jobs Not Printed As Machn. Was Off	R	R/W	R	R	R	R
Restrict Direct Print Jobs	R	R/W	R	R	R	R
Switch Initial Screen	R	R/W	R	R	R	R



**Host Interface**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
I/O Buffer	R	R/W	R	R	R	R
I/O Timeout	R	R/W	R	R	R	R

**PCL Menu**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Orientation	R	R/W	R	R	R	R
Form Lines	R	R/W	R	R	R	R
Font Source	R	R/W	R	R	R	R
Font Number	R	R/W	R	R	R	R
Point Size	R	R/W	R	R	R	R
Font Pitch	R	R/W	R	R	R	R
Symbol Set	R	R/W	R	R	R	R
Courier Font	R	R/W	R	R	R	R
Extend A4 Width	R	R/W	R	R	R	R
Append CR to LF	R	R/W	R	R	R	R
Resolution	R	R/W	R	R	R	R

**PS Menu**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Job Timeout	R	R/W	R	R	R	R
Wait Timeout	R	R/W	R	R	R	R
Swchng. btwn. 1&2 Sided Prt. Func.	R	R/W	R	R	R	R
Data Format	R	R/W	R	R	R	R
Resolution	R	R/W	R	R	R	R
Orientation Auto Detect	R	R/W	R	R	R	R

**PDF Menu**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Change PDF Password	R	R/W	R	R	R	R
PDF Group Password	R	R/W	R	R	R	R
Reverse Order Printing	R	R/W	R	R	R	R
Resolution	R	R/W	R	R	R	R
Orientation Auto Detect	R	R/W	R	R	R	R

**Unauthorized Copy Preventn.**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Unauthorized Copy Prevention Setting	R	R/W	R	R	R	R
Setting Priority (Drvr/Cmnd/Mach)	R	R/W	R	R	R	R
Unauthorized Copy Prevention Type	R	R/W	R	R	R	R
Mask Type for Patr./Density/Effect	R	R/W	R	R	R	R
Prevention Text Settings	R	R/W	R	R	R	R

# Scanner Features

When administrator authentication is set, the restrictions to user operations differ depending on the "Menu Protect" setting.

## General Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Switch Title	R	R/W	R	R	R	R
Update Delivery Server Destination List	–	R/W	–	–	–	–
Search Destination	R	R/W	R	R	R	R
Ext. Auth.: Folder Path Overwrite Setting	R	R/W	R	R	R	R
PC Scan Command Standby Time	R	R/W	R	R	R	R
Destination List Display Priority 1	R	R/W	R	R	R	R
Destination List Display Priority 2	R	R/W	R	R	R	R
Print & Delete Scanner Journal	R	R/W	R	R	R	R
Print Scanner Journal	–	R/W	–	–	–	–
Delete Scanner Journal	–	R/W	–	–	–	–
Delete Recent Destinations	–	R/W	–	–	–	–

## Scan Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
A.C.S. Sensitivity Level	R	R/W	R	R	R	R
Wait Time for Next Orig.: Exposure Glass	R	R/W	R	R	R	R
Wait Time for Next Original(s): SADF	R	R/W	R	R	R	R
Background Density of ADS (Full Colour)	R	R/W	R	R	R	R
Blank Page Detect	R	R/W	R	R	R	R
Reproduction Ratio	R	R/W	R	R	R	R

**Send Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Compression (Black & White)	R	R/W	R	R	R/W	R
Compression Method (Black & White)	R	R/W	R	R	R/W	R
Compression (Grey Scale / Full Colour)	R	R/W	R	R	R/W	R
Compression Method for High Compression PDF	R	R/W	R	R	R/W	R
High Compression PDF Level	R	R/W	R	R	R/W	R
Max. E-mail Size	R	R	R/W	R	R*1	R*1
Divide & Send E-mail	R	R	R/W	R	R*1	R*1
Insert Additional E-mail Info	R	R/W	R	R	R/W	R
No. of Digits for Single Page Files	R	R/W	R	R	R/W	R
Stored File E-mail Method	R	R/W	R	R	R/W	R
Default E-mail Subject	R	R/W	R	R	R	R

\*1 When [Network Management] in [Administrator Authentication Management] is set to [Off], user privilege becomes R/W.

**Initial Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Menu Protect	R	R/W	R	R	R	R

## Browser Features

Settings	User	Mach	N/W	File	Unset	Set
Browser Default Settings	-	R/W	-	-	R	R
Settings per Users	-	R/W	-	-	R	R
View Logs	-	R	-	-	R	R

# Extended Feature Settings

## Extended Feature Settings

Settings	User	Mach	N/W	File	Unset	Set
Startup Setting	R	R/W	R	R	R	R
Install	R	R/W	R	R	R	R
Uninstall	R	R/W	R	R	R	R
Extended Feature Info	R	R/W	R	R	R	R
Administrator Tools	-	R/W	-	-	-	-
Add. Program Startup Setting	R	R/W	R	R	R	R
Install Add. Program	R	R/W	R	R	R	R
Uninstall Add. Program	R	R/W	R	R	R	R
Add. Program Info	R	R	R	R	R	R

# Web Image Monitor: Display Eco-friendly Counter

These settings are in [Status/Information].

Each user can only view his or her own counter.

Settings	User	Mach	N/W	File	Unset	Set
Device Total Counter	-	R	-	-	-	-
Counter per User	-	R	-	-	R	R
Download	-	R/W	-	-	-	-

# Web Image Monitor: Job

These settings are in [Status/Information].

Users can only change jobs they themselves executed.

### Job List

Settings	User	Mach	N/W	File	Unset	Set
Current/Waiting Jobs: Change Order	-	R/W	-	-	-	-
Current/Waiting Jobs: Suspend Printing/ Resume Printing	-	R/W	-	-	-	-
Current/Waiting Jobs: Delete Reservation	-	R/W	-	-	-	R/W
Job History	-	R	-	-	R	R* <sup>1</sup>

\* 1 Can be viewed if user code authentication is used for the user authentication method.

### Printer

Settings	User	Mach	N/W	File	Unset	Set
Spool Printing: Delete	-	R/W	-	-	-	R/W
Job History	R	R/W	R	R	R	R
Error Log	-	R	-	-	R	R

9

### Fax History

Settings	User	Mach	N/W	File	Unset	Set
Transmission	-	R	-	-	R	R* <sup>1</sup>
Reception	-	R	-	-	R	R* <sup>1</sup>
LAN-Fax	-	R	-	-	R	R* <sup>1</sup>

\* 1 Can be viewed when using user code authentication for the user authentication method.

### Document Server

Settings	User	Mach	N/W	File	Unset	Set
Print Job History	-	R	-	-	R	R* <sup>1</sup>



Settings	User	Mach	N/W	File	Unset	Set
Fax Remote Send History	-	R	-	-	R	R <sup>*1</sup>
Scanner Remote Send History	-	R	-	-	R	R <sup>*1</sup>

\*1 Can be viewed when using user code authentication for the user authentication method.

# Web Image Monitor: Device Settings

These settings are in [Configuration] in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

## System

Settings	User	Mach	N/W	File	Unset	Set
Device Name	R	R	R/W	R	R/W	R
Comment	R	R	R/W	R	R/W	R
Location	R	R	R/W	R	R/W	R
Spool Printing	R	R/W	R	R	R/W	R
Protect Printer Display Panel	R	R/W	R	R	–	–
Print Priority	R	R/W	R	R	–	–
Function Reset Timer	R	R/W	R	R	–	–
Energy Saver Key to Change Mode	R	R/W	R	R	R/W	R
Stop Key to Suspend Print Job	R	R/W	R	R	R/W	R
Permit Firmware Update	R	R/W	R	R	–	–
Permit Firmware Structure Change	R	R/W	R	R	–	–
Display IP Address on Device Display Panel	R	R/W	R	R	–	–
Media Slot Use	R	R/W	R	R	R	R
PDF File Type: PDF/A Fixed	R	R/W	R	R	R/W	R
Output Tray	R	R/W	R	R	R/W	R
Paper Tray Priority	R	R/W	R	R	R/W	R
Front Cover Sheet Tray	R	R/W	R	R	R/W	R
Back Cover Sheet Tray	R	R/W	R	R	R/W	R
Slip Sheet Tray	R	R/W	R	R	R/W	R
Designation Sheet 1 Tray	R	R/W	R	R	R/W	R

Settings	User	Mach	N/W	File	Unset	Set
Designation Sheet 2 Tray	R	R/W	R	R	R/W	R

### Function Key Allocation/Function Priority

Settings	User	Mach	N/W	File	Unset	Set
Function Key Allocation	R	R/W	R	R	R/W	R
Function Priority	R	R/W	R	R	R/W	R

### Paper

Settings	User	Mach	N/W	File	Unset	Set
Tray 1-4	R	R/W	R	R	R/W	R
Large Capacity Tray	R	R/W	R	R	R/W	R
Bypass Tray	R	R/W	R	R	R/W	R

### Date/Time

Settings	User	Mach	N/W	File	Unset	Set
Set Date	R	R/W	R	R	R/W	R
Set Time	R	R/W	R	R	R/W	R
SNTP Server Name	R	R/W	R	R	R/W	R
SNTP Polling Interval	R	R/W	R	R	R/W	R
Time Zone	R	R/W	R	R	R/W	R

### Timer

Settings	User	Mach	N/W	File	Unset	Set
Sleep Mode Timer	R	R/W	R	R	R/W	R
Low Power Mode Timer	R	R/W	R	R	R/W	R
System Auto Reset Timer	R	R/W	R	R	R/W	R
Copier/Document Server Auto Reset Timer	R	R/W	R	R	R/W	R

Settings	User	Mach	N/W	File	Unset	Set
Facsimile Auto Reset Timer	R	R/W	R	R	R/W	R
Scanner Auto Reset Timer	R	R/W	R	R	R/W	R
Printer Auto Reset Timer	R	R/W	R	R	R/W	R
Auto Logout Timer	R	R/W	R	R	R/W	R
Weekly Timer Code	R	R/W	R	R	R/W	R
Weekly Timer: Monday-Sunday	R	R/W	R	R	R/W	R

**Logs**

Settings	User	Mach	N/W	File	Unset	Set
Job Log	R	R/W	R	R	R/W	R
Access Log	R	R/W	R	R	R/W	R
Eco-friendly Logs	R	R/W	R	R	R/W	R
Transfer Logs *1	R	R/W	R	R	R/W	R
Encrypt Logs	R	R/W	R	R	R/W	R
Classification Code	R	R/W	R	R	R/W	R
Delete All Logs	-	R/W	-	-	R/W	-

\*1 Can only be changed to [Inactive].

**Download Logs**

Settings	User	Mach	N/W	File	Unset	Set
Logs to Download	-	R/W	-	-	-	-
Download	-	R/W	-	-	-	-

**E-mail**

Settings	User	Mach	N/W	File	Unset	Set
Administrator E-mail Address	-	R/W	-	-	R/W	R

Settings	User	Mach	N/W	File	Unset	Set
Signature	-	R/W	-	-	R/W	R
Reception Protocol	-	R/W	-	-	R/W	R
E-mail Reception Interval	-	-	R/W	-	R/W	R
Max. Reception E-mail Size	-	-	R/W	-	R/W	R
E-mail Storage in Server	-	-	R/W	-	R/W	R
SMTP Server Name	-	-	R/W	-	R/W	R
SMTP Port No.	-	-	R/W	-	R/W	R
SMTP Authentication	-	R/W	-	-	R/W	R
SMTP Auth. E-mail Address	-	R/W	-	-	R/W	R
SMTP Auth. User Name	-	R/W	-	-	R/W	-
SMTP Auth. Password* <sup>2</sup>	-	R/W	-	-	R/W	-
SMTP Auth. Encryption	-	R/W	-	-	R/W	R
POP before SMTP	-	R/W	-	-	R/W	R
POP E-mail Address	-	R/W	-	-	R/W	R
POP User Name	-	R/W	-	-	R/W	-
POP Password* <sup>2</sup>	-	R/W	-	-	R/W	-
Timeout setting after POP Auth.	-	R/W	-	-	R/W	R
POP3/IMAP4 Server Name	-	R/W	-	-	R/W	R
POP3/IMAP4 Encryption	-	R/W	-	-	R/W	R
POP3 Reception Port No.	-	-	R/W	-	R/W	R
IMAP4 Reception Port No.	-	-	R/W	-	R/W	R
Fax E-mail Address	-	R/W	-	-	R/W	R
Receive Fax E-mail	-	R/W	-	-	R/W	-
Fax E-mail User Name	-	R/W	-	-	R/W	-
Fax E-mail Password	-	R/W	-	-	R/W	-

Settings	User	Mach	N/W	File	Unset	Set
E-mail Notification E-mail Address	-	R/W	-	-	R/W	R
Receive E-mail Notification	-	R/W	-	-	R/W	-
E-mail Notification User Name	-	R/W	-	-	R/W	-
E-mail Notification Password* <sup>2</sup>	-	R/W	-	-	R/W	-

\*2 Passwords cannot be read.

**Auto E-mail Notification**

Settings	User	Mach	N/W	File	Unset	Set
Notification Message	R	R/W	R	R	R	R
Groups to Notify	R	R/W	R	R	R	R
Select Groups/Items to Notify	R	R/W	R	R	R	R
Detailed Settings of Each Item	R	R/W	R	R	R	R

**On-demand E-mail Notification**

Settings	User	Mach	N/W	File	Unset	Set
Notification Subject	R	R/W	R	R	R	R
Notification Message	R	R/W	R	R	R	R
Access Restriction to Information	R	R/W	R	R	R	R
Receivable E-mail Address/Domain Name Settings	R	R/W	R	R	R	R

**File Transfer**

Settings	User	Mach	N/W	File	Unset	Set
SMB User Name	-	R/W	-	-	R/W	-
SMB Password* <sup>2</sup>	-	R/W	-	-	R/W	-
FTP User Name	-	R/W	-	-	R/W	-
FTP Password* <sup>2</sup>	-	R/W	-	-	R/W	-

Settings	User	Mach	N/W	File	Unset	Set
NCP User Name	-	R/W	-	-	R/W	-
NCP Password <sup>*2</sup>	-	R/W	-	-	R/W	-

\*2 Passwords cannot be read.

### User Authentication Management

Settings	User	Mach	N/W	File	Unset	Set
User Authentication Management	R	R/W	R	R	R/W	R
Printer Job Authentication Settings	R	R/W	R	R	R/W	R
User Code Authentication Settings	R	R/W	R	R	R/W	R
Basic Authentication Settings	R	R/W	R	R	R/W	R
Windows Authentication Settings	R	R/W	R	R	R/W	R
Group Settings for Windows Authentication	R	R/W	R	R	R/W	R
LDAP Authentication Settings	R	R/W	R	R	R/W	R
Integration Server Authentication Settings	R	R/W	R	R	R/W	R
Group Settings for Integration Server Authentication	R	R/W	R	R	R/W	R

### Administrator Authentication Management

Settings	User	Mach	N/W	File	Unset	Set
User Administrator Authentication	R/W	R	R	R	R	R
Available Settings for User Administrator	R/W	R	R	R	R	R
Machine Administrator Authentication	R	R/W	R	R	R	R
Available Settings for Machine Administrator	R	R/W	R	R	R	R
Network Administrator Authentication	R	R	R/W	R	R	R
Available Settings for Network Administrator	R	R	R/W	R	R	R
File Administrator Authentication	R	R	R	R/W	R	R

Settings	User	Mach	N/W	File	Unset	Set
Available Settings for File Administrator	R	R	R	R/W	R	R

**Program/Change Administrator**

Settings	User	Mach	N/W	File	Unset	Set
User Administrator	R/W	R	R	R	-	-
Machine Administrator	R	R/W	R	R	-	-
Network Administrator	R	R	R/W	R	-	-
File Administrator	R	R	R	R/W	-	-
Login User Name *1	R/W	R/W	R/W	R/W	-	-
Login Password *1	R/W	R/W	R/W	R/W	-	-
Encryption Password *1	R/W	R/W	R/W	R/W	-	-

\*1 Administrators can only change their own accounts.

**Print Volume Use Limitation**

Settings	User	Mach	N/W	File	Unset	Set
Machine Action When Limit is Reached	R	R/W	R	R	R	R
Print Volume Use Limitation: Unit Count Setting	R	R/W	R	R	R	R
Volume Use Counter: Scheduled/Specified Reset Settings	R	R/W	R	R	R	R

**LDAP Server**

Settings	User	Mach	N/W	File	Unset	Set
LDAP Search	-	R/W	-	-	R/W	-
Program	-	R/W	-	-	R/W	-
Change	-	R/W	-	-	R/W	-
Delete	-	R/W	-	-	R/W	-



**Firmware Update**

Settings	User	Mach	N/W	File	Unset	Set
Update	-	R/W	-	-	-	-
Firmware Version	-	R	-	-	-	-

**Kerberos Authentication**

Settings	User	Mach	N/W	File	Unset	Set
Encryption Algorithm	-	R/W	-	-	-	-
Realm 1-5	-	R/W	-	-	-	-

**Program/Change/Delete Remote Machine**

Settings	User	Mach	N/W	File	Unset	Set
Program	-	R/W	-	-	R/W	-
Change	-	R/W	-	-	R/W	-
Delete	-	R/W	-	-	R/W	-

**Device Setting Information: Import Setting (Server)**

Settings	User	Mach	N/W	File	Unset	Set
Import File From <sup>*1</sup>	-	-	-	-	-	-
Scheduled Import at Specified Time <sup>*1</sup>	-	-	-	-	-	-
Comparing New File to Last Import File <sup>*1</sup>	-	-	-	-	-	-
E-mail Failure Notification <sup>*1</sup>	-	-	-	-	-	-
Number of Retries <sup>*1</sup>	-	-	-	-	-	-
Retry Interval <sup>*1</sup>	-	-	-	-	-	-
Encryption Key <sup>*1</sup>	-	-	-	-	-	-

\*1 R/W is the administrator with all privileges that include user administrator, machine administrator, network administrator, and file administrator privileges.

**Import Test**

Settings	User	Mach	N/W	File	Unset	Set
Start* <sup>1</sup>	-	-	-	-	-	-

\*1 R/W is the administrator with all privileges that include user administrator, machine administrator, network administrator, and file administrator privileges.

**Import/Export Device Setting Information**

Settings	User	Mach	N/W	File	Unset	Set
Export Device Setting Information* <sup>1</sup>	-	-	-	-	-	-
Import Device Setting Information* <sup>1</sup>	-	-	-	-	-	-
Export Image File for Home Screen* <sup>1</sup>	-	-	-	-	-	-

\*1 R/W is the administrator with all privileges that include user administrator, machine administrator, network administrator, and file administrator privileges.

**Eco-friendly Counter Period/Administrator Message**

Settings	User	Mach	N/W	File	Unset	Set
Display Information Screen	R	R/W	R	R	R/W	R
Display Time	R	R/W	R	R	R/W	R
Count Period	R	R/W	R	R	R/W	R
Administrator Message	R	R/W	R	R	R/W	R

**Compulsory Security Stamp**

Settings	User	Mach	N/W	File	Unset	Set
Compulsory Security Stamp	R	R/W	R	R	R	R
Adjust Stamp Position	R	R/W	R	R	R	R

# Web Image Monitor: Printer

These settings are in [Configuration] in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the "Menu Protect" setting.

## Basic Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Print Error Report	R	R/W	R	R	R	R
Auto Continue	R	R/W	R	R	R	R
Memory Overflow	R	R/W	R	R	R	R
Job Separation	R	R/W	R	R	R	R
Auto Delete Temporary Print Jobs	R	R	R	R/W	R	R
Auto Delete Stored Print Jobs	R	R	R	R/W	R	R
Jobs Not Printed As Machine Was Off	R	R/W	R	R	R	R
Rotate by 180 Degrees	R	R/W	R	R	R	R
Print Compressed Data	R	R/W	R/W	R	R	R
Memory Usage	R	R/W	R	R	R	R
Duplex	R	R/W	R	R	R	R
Copies	R	R/W	R	R	R	R
Blank Page Print	R	R/W	R	R	R	R
Edge Smoothing	R	R/W	R	R	R	R
Toner Saving	R	R/W	R	R	R	R
Spool Image	R	R/W	R	R	R	R
Reserved Job Waiting Time	R	R/W	R	R	R	R
Printer Language	R	R/W	R	R	R	R
Sub Paper Size	R	R/W	R	R	R	R
Page Size	R	R/W	R	R	R/W	R

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Letterhead Setting	R	R/W	R	R	R	R
Tray Setting Priority	R	R/W	R	R	R	R
Paper Confirmation for Bypass Tray	R	R/W	R	R	R	R
Store and Skip Errored Job	R	R/W	R	R	R	R
Edge to Edge Print	R	R/W	R	R	R	R
Default Printer Language	R	R/W	R	R	R	R
Tray Switching	R	R/W	R	R	R	R
List/Test Print Lock	R	R/W	R	R	R	R
Extended Auto Tray Switching	R	R/W	R	R	R	R
Virtual Printer	R	R/W	R	R	R	R
Restrict Direct Print Jobs	R	R/W	R	R	R	R
Initial screen switch setting	R	R/W	R	R	R	R
Host Interface	R	R/W	R	R	R	R
PCL Menu	R	R/W	R	R	R	R
PS Menu	R	R/W	R	R	R	R
PDF Menu	R	R/W	R	R	R	R

**Unauthorized Copy Prevention**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Unauthorized Copy Prevention Setting	R	R/W	R	R	R	R
Setting Priority (Driver/Command/Machine)	R	R/W	R	R	R	R
Unauthorized Copy Prevention Type	R	R/W	R	R	R	R
Mask Type for Pattern/Density/Effect	R	R/W	R	R	R	R
Prevention Text Settings	R	R/W	R	R	R	R

**Tray Parameters (PCL)**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Tray Parameters (PCL)	-	R/W	-	-	-	-

**Tray Parameters (PS)**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Tray Parameters (PS)	-	R/W	-	-	-	-

**Virtual Printer Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Virtual Printer Name	R	R/W	R	R	R	R
Protocol	R	R/W	R	R	R	R
Print Error Report	R	R/W	R	R	R	R
Job Separation	R	R/W	R	R	R	R
Rotate by 180 Degrees	R	R/W	R	R	R	R
Memory Usage	R	R/W	R	R	R	R
Duplex	R	R/W	R	R	R	R
Copies	R	R/W	R	R	R	R
Blank Page Print	R	R/W	R	R	R	R
Edge Smoothing	R	R/W	R	R	R	R
Toner Saving	R	R/W	R	R	R	R
Sub Paper Size	R	R/W	R	R	R	R
Input Tray	R	R/W	R	R	R/W	R/W
Page Size	R	R/W	R	R	R/W	R
Paper Type	R	R/W	R	R	R/W	R/W
Output Tray	R	R/W	R	R	R/W	R/W
Letterhead Setting	R	R/W	R	R	R	R

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Edge to Edge Print	R	R/W	R	R	R	R
PCL Menu	R	R/W	R	R	R	R
PS Menu	R	R/W	R	R	R	R
PDF Menu	R	R/W	R	R	R	R
RHPP Settings	R	R/W	R	R	R/W	R/W

**PDF Temporary Password**

Settings	User	Mach	N/W	File	Lv.1	Lv.2
PDF Temporary Password	-	-	-	-	R/W	R/W

**PDF Group Password**

Settings	User	Mach	N/W	File	Lv.1	Lv.2
PDF Group Password	-	R/W	-	-	-	-

**PDF Fixed Password**

Settings	User	Mach	N/W	File	Lv.1	Lv.2
PDF Fixed Password	-	R/W	-	-	-	-

# Web Image Monitor: Fax

These settings are in [Configuration] in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the "Menu Protect" setting.

## Initial Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Closed Network Code	-	R/W	-	-	-	-
Internet Fax	-	R/W	-	-	-	-
Menu Protect	-	R/W	-	-	-	-
Program Memory Lock ID	-	R/W	-	-	-	-
Security for E-mail Transmission Results	-	R/W	-	-	-	-
Fax Information	-	R/W	-	-	-	-
Select Dial/Push Phone	-	R/W	-	-	-	-

## Send / Reception Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Maximum E-mail Size	-	-	R/W	-	-	-
Switch Reception Mode	-	R/W	-	-	-	-
SMTP RX File Delivery Settings	-	R/W	-	-	-	-
2 Sided Print	-	R/W	-	-	R/W	-
Checkered Mark	-	R/W	-	-	R/W	-
Center Mark	-	R/W	-	-	R/W	-
Print Reception Time	-	R/W	-	-	R/W	-
Reception File Print Quantity	-	R/W	-	-	R/W	-
Paper Tray	-	R/W	-	-	R/W	-
Memory Lock Reception	-	R/W	-	-	-	-

**Reception File Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Output Mode Switch Timer	-	R/W	-	-	-	-
Prohibit Auto Print	-	R/W	-	-	-	-
Print Standby to Print Files	-	R/W	-	-	-	-

**IP-Fax Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
H.323	-	-	R/W	-	-	-
SIP	-	-	R/W	-	-	-

**IP-Fax Gateway Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Prefix 1-50	-	-	R/W	-	-	-
Protocol 1-50	-	-	R/W	-	-	-
Gateway Address 1-50	-	-	R/W	-	-	-

**Parameter Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Just Size Printing	-	R/W	-	-	-	-
Combine 2 Originals	-	R/W	-	-	-	-
Convert to PDF When Transferring to Folder	-	R/W	-	-	-	-
Automatic Printing Report	-	R/W	-	-	-	-
E-mail	-	R/W	-	-	-	-



# Web Image Monitor: Scanner

These settings are in [Configuration] in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the "Menu Protect" setting.

## General Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Switch Title	R	R/W	R	R	R	R
Search Destination	R	R/W	R	R	R	R
PC Scan Command Standby Time	R	R/W	R	R	R	R
Destination List Display Priority 1	R	R/W	R	R	R	R
Destination List Display Priority 2	R	R/W	R	R	R	R
Print & Delete Scanner Journal	R	R/W	R	R	R	R
External Authentication: Folder Path Overwrite Setting	R	R/W	R	R	R	R

## Scan Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
A.C.S. Sensitivity Level	R	R/W	R	R	R	R
Wait Time for Next Original(s)	R	R/W	R	R	R	R
Background Density of ADS (Full Color)	R	R/W	R	R	R	R
Blank Page Detect	R	R/W	R	R	R	R

## Send Settings

Settings	User	Mach	N/W	File	Lv. 1	Lv. 2
Compression (Black & White)	R	R/W	R	R	R/W	R
Compression (Gray Scale/Full Color)	R	R/W	R	R	R/W	R
High Compression PDF Level	R	R/W	R	R	R/W	R

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Compression Method for High Compression PDF	R	R/W	R	R	R/W	R
Max. E-mail Size	R	R	R/W	R	R*1	R*1
Divide & Send E-mail	R	R	R/W	R	R*1	R*1
Insert Additional E-mail Info	R	R/W	R	R	R/W	R
No. of Digits for Single Page Files	R	R/W	R	R	R/W	R
Stored File E-mail Method	R	R/W	R	R	R/W	R
Default E-mail Subject	R	R/W	R	R	R	R

\* 1 When [Network Management] in [Administrator Authentication Management] is set to [Off], user privilege becomes R/W.

**Initial Settings**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Menu Protect	R	R/W	R	R	R	–
Display WSD Destination List	R	R/W	R	R	R	R
Prohibit WSD Scan Command	R	R/W	R	R	R	R

**9**

**Default Settings for Normal Screens on Device**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Store File	–	R/W	–	–	R	R
Preview	–	R/W	–	–	R	R
Scan Settings	–	R/W	–	–	R	R
Send File Type	–	R/W	–	–	R	R

**Default Settings for Simplified Screens on Device**

Settings	User	Mach	N/W	File	Lv. 1	Lv.2
Scan Settings	–	R/W	–	–	R	R

Settings	User	Mach	N/W	File	Lv.1	Lv.2
Send File Type	-	R/W	-	-	R	R

# Web Image Monitor: Interface

These settings are in [Configuration] in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

## Interface Settings

Settings	User	Mach	N/W	File	Unset	Set
LAN Type	-	-	R/W	-	R	-
Network	R	R	R	R	R	R
MAC Address	R	R	R	R	R	R
Ethernet Security	R	R	R/W	R	R/W	R
Ethernet Speed	R	R	R/W	R	R/W	R
Bluetooth	R	R	R/W	R	R/W	R
Operation Mode	R	R	R/W	R	R/W	R
USB	R	R/W	R	R	R/W	R
USB Host	R	R	R	R	R	R

## Wireless LAN Settings

9

Settings	User	Mach	N/W	File	Unset	Set
LAN Type	-	-	R/W	-	R	-
Network	R	R	R	R	R	R
MAC Address	R	R	R	R	R	R
Available Wireless LAN	R	R	R	R	R	R
Communication Mode	R	R	R/W	R	R/W	R
SSID	R	R	R/W	R	R/W	R
Channel	R	R	R/W	R	R/W	-
Security Method	R	R	R/W	R	R/W	R

Settings	User	Mach	N/W	File	Unset	Set
WEP Authentication	-	-	R/W	-	R/W	-
WEP Key Number	R	R	R/W	R	R/W	R
WEP Key	R	R	R/W	R	R/W	R
WPA Authentication Method	R	R	R/W	R	R/W	R
WPA-PSK/WPA2-PSK	R	R	R/W	R	R/W	R

# Web Image Monitor: Network

These settings are in [Configuration] in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

## IPv4

Settings	User	Mach	N/W	File	Unset	Set
IPv4	R	R	R	R	R	R
Host Name	R	R	R/W	R	R/W	R
DHCP	R	R	R/W	R	R/W	R
Domain Name	R	R	R/W	R	R/W	R
IPv4 Address	R	R	R/W	R	R/W	R
Subnet Mask	R	R	R/W	R	R/W	R
DDNS	R	R	R/W	R	R/W	R
WINS	R	R	R/W	R	R/W	R
Primary WINS Server	R	R	R/W	R	R/W	R
Secondary WINS Server	R	R	R/W	R	R/W	R
LLMNR	R	R	R/W	R	R/W	R
Scope ID	R	R	R/W	R	R/W	R
Details	R	R	R/W	R	R/W	R

## IPv6

Settings	User	Mach	N/W	File	Unset	Set
IPv6	R	R	R/W	R	R/W	R
Host Name	R	R	R/W	R	R/W	R
Domain Name	R	R	R/W	R	R/W	R
Link-local Address	R	R	R	R	R	R

Settings	User	Mach	N/W	File	Unset	Set
Stateless Address	R	R	R/W	R	R/W	R
Manual Configuration Address	R	R	R/W	R	R/W	R
DHCPv6	R	R	R/W	R	R/W	R
DHCPv6 Address	R	R	R	R	R	R
DDNS	R	R	R/W	R	R/W	R
LLMNR	R	R	R/W	R	R/W	R
Details	R	R	R/W	R	R/W	R

### NetWare

Settings	User	Mach	N/W	File	Unset	Set
NetWare	R	R	R/W	R	R/W	R
Netware Print Settings	R	R	R/W	R	R/W	R
NCP Delivery	R	R	R/W	R	R/W	R

### SMB

Settings	User	Mach	N/W	File	Unset	Set
SMB	R	R	R/W	R	R/W	R
Protocol	R	R	R	R	R	R
Workgroup Name	R	R	R/W	R	R/W	R
Computer Name	R	R	R/W	R	R/W	R
Comment	R	R	R/W	R	R/W	R
Share Name	R	R	R	R	R	R
Notify Print Completion	R	R	R/W	R	R/W	R

**SNMP**

Settings	User	Mach	N/W	File	Unset	Set
SNMP	-	-	R/W	-	-	-
Protocol	-	-	R/W	-	-	-
SNMPv1 ,v2 Setting	-	-	R/W	-	-	-
Community	-	-	R/W	-	-	-

**SNMPv3**

Settings	User	Mach	N/W	File	Unset	Set
SNMP	-	-	R/W	-	-	-
Protocol	-	-	R/W	-	-	-
SNMPv3 Setting	-	-	R/W	-	-	-
SNMPv3 Trap Communication Setting	-	-	R/W	-	-	-
Account (User)	-	-	R/W	-	-	-
Account (Network Administrator)	-	-	R/W	-	-	-
Account (Machine Administrator)	-	R/W	-	-	-	-

**9**

**SSDP**

Settings	User	Mach	N/W	File	Unset	Set
SSDP	-	-	R/W	-	-	-
UUID	-	-	R	-	-	-
Profile Expires	-	-	R/W	-	-	-
TTL	-	-	R/W	-	-	-

**Bonjour**

Settings	User	Mach	N/W	File	Unset	Set
Bonjour	R	R	R/W	R	R/W	R



Settings	User	Mach	N/W	File	Unset	Set
Local Hostname	R	R	R	R	R	R
Details	R	R	R/W	R	R/W	R
Print Order Priority	R	R	R/W	R	R/W	R

### System Log

Settings	User	Mach	N/W	File	Unset	Set
System Log	R	R	R	R	R	-

# Web Image Monitor: Security

These settings are in [Configuration] in [Device Management].

Settings	User	Mach	N/W	File	Unset	Set
Network Security	-	-	R/W	-	-	-
Access Control	-	-	R/W	-	-	-
IPP Authentication	-	-	R/W	-	-	-
SSL/TLS	-	-	R/W	-	-	-
ssh	-	-	R/W	-	R	R
Site Certificate	-	-	R/W	-	-	-
Device Certificate	-	-	R/W	-	-	-
S/MIME	-	-	R/W	-	-	-
IPsec	-	-	R/W	-	-	-
User Lockout Policy	-	R/W	-	-	-	-
IEEE 802.1X	-	-	R/W	-	-	-

# Web Image Monitor: @Remote

These settings are in [Configuration] in [Device Management].

Settings	User	Mach	N/W	File	Unset	Set
Setup RC Gate	-	R/W	-	-	-	-
Update RC Gate Firmware	-	R/W	-	-	-	-
RC Gate Proxy Server	-	R/W	-	-	-	-
Notify Functional Problems of Device	-	R/W	-	-	-	-

# Web Image Monitor: Webpage

These settings are in [Configuration] in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

Settings	User	Mach	N/W	File	Unset	Set
Webpage Language	R	R	R/W	R	R/W	R
Set URL Target of Link Page	R	R	R/W	R	R/W	R
Set Help URL Target	R	R	R/W	R	R/W	R
WSD/UPnP Setting	R	R	R/W	R	R/W	R
Download Help File	R/W	R/W	R/W	R/W	R/W	R/W

# Web Image Monitor: Extended Feature Settings

These settings are in [Configuration] in [Device Management].

Settings	User	Mach	N/W	File	Unset	Set
Startup Setting	-	R/W	-	-	-	-
Extended Feature Info	R	R	R	R	R	R
Install	-	R/W	-	-	-	-
Uninstall	-	R/W	-	-	-	-
Administrator Tools	-	R/W	-	-	-	-
Additional Program Startup Setting	-	R/W	-	-	-	-
Install Additional Program	-	R/W	-	-	-	-
Uninstall Additional Program	-	R/W	-	-	-	-
Copy Extended Features	-	R/W	-	-	-	-
Copy Card Save Data	-	R/W	-	-	-	-

# Web Image Monitor: Address Book

These settings are in [Device Management].

Settings	User	Mach	N/W	File	Unset	Set
Add User	R/W	-	-	-	R/W *1	R/W *1
Change	R/W	-	-	-	R/W *1	R/W *1
Delete	R/W	-	-	-	R/W *1	R/W *1
Add Group	R/W	-	-	-	R/W *1	R/W *1
Data Carry-over Setting for Address Book Auto-program	R/W	-	-	-	R/W *1	R/W *1
Maintenance	R/W	-	-	-	R/W *1	R/W *1

\* 1 If either or both of [Restrict Adding of User Destinations (Fax)] or [Restrict Adding of User Destinations (Scanner)] of [Extended Security] are set to [On], when the machine is configured for basic authentication, users can only change the password of their own account.

# Web Image Monitor: Reset Printer Job

These settings are in [Device Management].

Settings	User	Mach	N/W	File	Unset	Set
Reset Current Job	-	R/W	-	-	-	-
Reset All Jobs	-	R/W	-	-	-	-

# Web Image Monitor: Reset the Machine

These settings are in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

Settings	User	Mach	N/W	File	Unset	Set
Reset the Machine	-	R/W	-	-	R/W	-



# Web Image Monitor: Device Home Management

These settings are in [Device Management].

When administrator authentication is set, the restrictions to user operations differ depending on the configurations in "Available Settings".

Settings	User	Mach	N/W	File	Unset	Set
Edit Icons	R	R/W	R	R	R/W	R
Restore Default Icon Display	-	R/W	-	-	R/W	-
Home Screen Settings	R	R/W	R	R	R/W	R

# Web Image Monitor: Customize Screen per User

Users can change only their own settings.

Settings	User	Mach	N/W	File	Unset	Set
Edit Icons	-	-	-	-	-	R/W
Restore Default Icon Display	-	-	-	-	-	R/W
Function Priority per User	-	-	-	-	-	R/W

# Web Image Monitor: Document Server

These settings are in [Print Job/Stored File].

What users can do with stored files depends on their access privileges. For details, see p.376 "List of Operation Privileges for Stored Files".

Settings	User	Mach	N/W	File	Unset	Set
Print	-	-	-	-	R/W	R/W
Send	-	-	-	-	R/W	R/W
Delete	-	-	-	R/W	R/W	R/W
Edit detailed information (Detailed information icon)	-	-	-	R/W	R/W	R/W
Download	-	-	-	-	R/W	R/W
Unlock File	-	-	-	R/W	-	-

## Web Image Monitor: Fax Received File

These settings are in [Print Job/Stored File].

Settings	User	Mach	N/W	File	Unset	Set
Print	-	-	-	-	R/W *1	R/W *1
Delete	-	-	-	-	R/W *1	R/W *1
Download	-	-	-	-	R/W *1	R/W *1
Edit detailed information (Detailed information icon)	-	-	-	-	R/W *1	R/W *1

\* 1 Only the specified user can change a document when the machine is configured with [Facsimile Features] → [Reception Settings] → [Stored Reception File User Setting] set to [On].

## Web Image Monitor: Printer: Print Jobs

These settings are in [Print Job/Stored File].

Users can use the printer documents stored themselves or stored when user authentication is off.

The printer documents stored by other users are not displayed.

Settings	User	Mach	N/W	File	Unset	Set
Print	-	-	-	-	R/W *1	R/W *1
Delete	-	-	-	R/W	R/W *1	R/W *1
Edit detailed information (Detailed information icon)	-	-	-	R/W	R/W *1	R/W *1
Unlock Job	-	-	-	R/W	-	-

\*1 Access to saved documents may be restricted, depending on the user's access privileges.

# List of Operation Privileges for Stored Files

## Understanding headers

- Read  
Users configured for read privileges.
- Edit  
Users configured for editing privileges.
- E/D  
Users configured for edit/delete privileges.
- Full  
Users configured for full control privileges.
- Owner  
Either the user who registered a document or a user set up as the owner.
- File  
The file administrator.

## Understanding the symbols

R/W: Can execute.

–: Cannot execute.

Settings	Read	Edit	E/D	Full	Owner	File
Printing	R/W	R/W	R/W	R/W	R/W	–
Details	R/W	R/W	R/W	R/W	R/W	R/W
Preview	R/W	R/W	R/W	R/W	R/W	–
Change Access Priv.: Owner	–	–	–	–	–	R/W
Change Access Priv.: Permissions for Users/Groups	–	–	–	R/W	R/W* <sup>1</sup>	R/W
Change User Name	–	–	–	–	–	R/W
Change File Name	–	R/W	R/W	R/W	R/W* <sup>1</sup>	–
Change Password	–	–	–	–	R/W	R/W
Unlock Files	–	–	–	–	–	R/W
Combine Files	–	–	R/W	R/W	R/W* <sup>1</sup>	–

Settings	Read	Edit	E/D	Full	Owner	File
Insert File	–	–	R/W	R/W	R/W* <sup>1</sup>	–
Delete Pages	–	–	R/W	R/W	R/W* <sup>1</sup>	–
Print Specified Page	R/W	R/W	R/W	R/W	R/W	–
Duplicate File	R/W	R/W	R/W	R/W	R/W	–
Delete File	–	–	R/W	R/W	R/W* <sup>1</sup>	R/W

\* 1 The owner can change operation privileges.

# List of Operation Privileges for Address Books

## Understanding headers

- Read  
Users configured for read privileges.
- Edit  
Users configured for editing privileges.
- E/D  
Users configured for edit/delete privileges.
- Full  
Users configured for full control privileges.
- Entry  
User whose personal information is registered in the Address Book. The person who knows the user login name and password.
- User  
The user administrator.

## Understanding the symbols

- R/W: Execute, change and reading possible.
- R: Reading is possible.
- : Execute, change and reading are not possible.

## Names

Settings	Read	Edit	E/D	Full	Entry	User
Name	R	R/W	R/W	R/W	R/W	R/W
Key Display	R	R/W	R/W	R/W	R/W	R/W
Registration No.	R	R/W	R/W	R/W	R/W	R/W
Select Title	R	R/W	R/W	R/W	R/W	R/W

## Auth. Info

Settings	Read	Edit	E/D	Full	Entry	User
User Code	-	-	-	-	-	R/W
Login User Name	-	-	-	-	R	R/W



Settings	Read	Edit	E/D	Full	Entry	User
Login Password	-	-	-	-	R/W *1	R/W *1
SMTP Authentication	-	-	-	-	R/W *1	R/W *1
Folder Authentication	-	R/W *1	R/W *1	R/W *1	R/W *1	R/W *1
LDAP Authentication	-	-	-	-	R/W *1	R/W *1
Available Functions	-	-	-	-	R	R/W
Print Volum. Use Limit.	-	-	-	-	R	R/W

\*1 Passwords cannot be read.

### Protection

Settings	Read	Edit	E/D	Full	Entry	User
Use Name as	R	R/W	R/W	R/W	R/W	R/W
Protection Code	-	-	-	R/W *2	R/W *2	R/W *2
Protection Object	-	R/W	R/W	R/W	R/W	R/W
Protect Destination: Permissions for Users / Groups	-	-	-	R/W	R/W	R/W
Protect File(s): Permissions for Users / Groups	-	-	-	R/W	R/W	R/W

\*2 The code for "Protection Code" cannot be read.

### Fax Dest.

Settings	Read	Edit	E/D	Full	Entry	User
Fax Destination	R	R/W	R/W	R/W	R/W	R/W
Select Line	R	R/W	R/W	R/W	R/W	R/W
International TX Mode	R	R/W	R/W	R/W	R/W	R/W

Settings	Read	Edit	E/D	Full	Entry	User
Adv. Features	R	R/W	R/W	R/W	R/W	R/W
Fax Header	R	R/W	R/W	R/W	R/W	R/W
Label Insertion	R	R/W	R/W	R/W	R/W	R/W

**E-mail**

Settings	Read	Edit	E/D	Full	Entry	User
E-mail Address	R	R/W	R/W	R/W	R/W	R/W
Use E-mail Address for	R	R/W	R/W	R/W	R/W	R/W
Send via SMTP Server	R	R/W	R/W	R/W	R/W	R/W

**Folder**

Settings	Read	Edit	E/D	Full	Entry	User
SMB/FTP/NCP	R	R/W	R/W	R/W	R/W	R/W
SMB: Path	R	R/W	R/W	R/W	R/W	R/W
FTP: Server Name	R	R/W	R/W	R/W	R/W	R/W
FTP: Path	R	R/W	R/W	R/W	R/W	R/W
FTP: Port Number	R	R/W	R/W	R/W	R/W	R/W
NCP: Path	R	R/W	R/W	R/W	R/W	R/W
NCP: Connection Type	R	R/W	R/W	R/W	R/W	R/W
Connection Test	–	R/W	R/W	R/W	R/W	R/W

**Add to Group**

Settings	Read	Edit	E/D	Full	Entry	User
Registration No.	R	R/W	R/W	R/W	R/W	R/W
Search	–	R/W	R/W	R/W	R/W	R/W
Switch Title	R/W	R/W	R/W	R/W	R/W	R/W

**Note**

- When either or both of [Restrict Adding of User Destinations (Fax)] or [Restrict Adding of User Destinations (Scanner)] of [Extended Security] are set to [On], regardless of the user's operation privileges, access to the Address Book is rescinded from any user other than the user administrator.

# Trademarks

Adobe, Acrobat, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Mac OS and Bonjour are trademarks of Apple Inc., registered in the U.S. and other countries.

LINUX is a registered trademark of Linus Torvalds.

Lotus Notes is a trademark of International Business Machines Corporation, registered in many jurisdictions worldwide.

Microsoft, Windows, Windows Server, Windows Vista, Internet Explorer, and Outlook are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

NetWare is a registered trademark of Novell, Inc. in the USA.

PCL® is a registered trademark of Hewlett-Packard Company.

Red Hat is a registered trademark of Red Hat, Inc.

Solaris is a trademark or registered trademark of Oracle Corporation and/or its affiliates.

Thunderbird is a registered trademark of the Mozilla Foundation.

UPnP is a trademark of UPnP Implementers Corporation.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of Internet Explorer 6 is Microsoft® Internet Explorer® 6.

The proper names of the Windows operating systems are as follows:

- The product names of Windows XP are as follows:
  - Microsoft® Windows® XP Professional
  - Microsoft® Windows® XP Home Edition
  - Microsoft® Windows® XP Media Center Edition
  - Microsoft® Windows® XP Tablet PC Edition
- The product names of Windows Vista are as follows:
  - Microsoft® Windows Vista® Ultimate
  - Microsoft® Windows Vista® Business
  - Microsoft® Windows Vista® Home Premium
  - Microsoft® Windows Vista® Home Basic
  - Microsoft® Windows Vista® Enterprise
- The product names of Windows 7 are as follows:
  - Microsoft® Windows® 7 Home Premium

Microsoft® Windows® 7 Professional

Microsoft® Windows® 7 Ultimate

Microsoft® Windows® 7 Enterprise

- The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

- The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

- The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Standard

Microsoft® Windows Server® 2008 Enterprise

- The product names of Windows 2008 R2 are as follows:

Microsoft® Windows Server® 2008 R2 Standard

Microsoft® Windows Server® 2008 R2 Enterprise



# INDEX

## A

Access Control.....	117
Access permission for stored files.....	185
Address Book access permission.....	97
Administrator.....	14
Administrator privileges.....	16
Administrator registration.....	18
AH Protocol.....	149, 150
AH Protocol + ESP Protocol.....	149, 150
Authenticate Current Job.....	264
Authentication information to log in.....	40
Authentication using an external device.....	73
authfree.....	66
Auto Erase Memory.....	109
Auto logout.....	71
Available functions.....	80

## B

Basic authentication.....	36
Browser functions.....	249

## C

Change Firmware Structure.....	264
--------------------------------	-----

## D

Data encryption (Address Book).....	99
Data encryption (hard disk).....	101
Data overwrite.....	109
Device certificate creation.....	133
Device certificate installation.....	134
Driver Encryption Key.....	180, 261
Encryption Strength.....	261

## E

E-mail encryption.....	142
Eco-friendly counter.....	259
Electronic signature.....	144
Enabling/disabling protocols.....	118
Encrypt User Custom Settings & Address Book	262
Encryption key.....	105
Encryption Key Auto Exchange Settings... 151, 160	
Encryption Key Manual Settings..... 151, 164	
Enforced storage of documents.....	206
Enhance File Protection.....	262

Erase All Memory.....	113
Error code.....	281
Error message.....	279
ESP Protocol.....	149
Extended security functions.....	261

## F

Firmware validity.....	269
------------------------	-----

## I

IEEE 802.1X.....	173
device certificate.....	174
Ethernet.....	174
site certificate.....	173
wireless LAN.....	176
Information for enhanced security.....	273
Integration Server authentication.....	57
Intermediate certificate.....	135
IPP authentication password.....	181
IPsec.....	149
IPsec settings.....	151
IPsec telnet setting commands.....	165

## K

Kerberos authentication.....	42, 183
------------------------------	---------

## L

LDAP authentication.....	51
Limitation on print volume per user.....	84
Locked Print.....	201
Log file management-Control panel.....	207
Log file management-Web Image Monitor.....	209
Log in (administrator).....	22
Log information.....	216
Log out (administrator).....	24

## M

Media Slot Use.....	82
Menu Protect.....	78

## N

Network Security Level.....	126
NTLM authentication.....	42

## O

Operation privileges.....	305
---------------------------	-----

---

Operational issues.....297

## P

---

Password for stored files.....185

Password lockout function.....69

Password Policy.....265

PDFs with electronic signatures.....148

Print from Media.....82

Print volume use.....84

Printer job authentication.....63

## R

---

Remote Service.....264

Restrict Adding of User Destinations (Fax)..75, 263

Restrict Adding of User Destinations (Scanner). 75,  
263

Restrict Display of User Information.....262

Restrict Use of Destinations (Fax).....75, 263

Restrict Use of Destinations (Scanner).....75, 263

## S

---

S/MIME.....142

Scan to Media.....82

Security for the fax function.....269

Security for the scanner function.....269

Self-signed certificate.....132

Service Mode Lock.....271

Settings by SNMPv1, v2.....265

SNMPv3.....178

SSL for SMTP connections.....140

SSL/TLS.....136

SSL/TLS encryption mode.....139

Supervisor.....25

System status check.....269

## T

---

Trademarks.....382

Transfer to Fax Receiver.....263

Transmitted passwords.....180

## U

---

Update Firmware.....264

User.....29

User authentication.....30, 31

User Code authentication.....33

## W

---

Windows authentication.....42



---

MEMO

---

MEMO







# Operating Instructions **UNIX Supplement**



# TABLE OF CONTENTS

---

Notice.....	3
Important.....	3
How to Read This Manual.....	4
Symbols.....	4
Notes.....	4
Laws and Regulations.....	5
Legal Prohibition.....	5
<b>1. UNIX Configuration</b>	
Before Setup.....	7
Using the lp/lpr Commands.....	7
Using the rsh/rcp/ftp Commands.....	7
Using the Installation Shell Script.....	8
Assigning the IP Address.....	8
Executing the Installation Shell Script.....	9
After Executing the Installation Shell Script.....	12
Printing Method.....	17
Printing with lpr, lp.....	17
Printing with rsh, rcp, ftp.....	17
Printer Status.....	20
Viewing the Print Job Status with lpq and lpstat.....	20
Viewing the Printer Status with rsh and ftp.....	20
Copying Information to a File.....	21
Specifying the Device Option.....	22
Configuring the Device Option.....	22
Printer Language.....	26
Text Printing.....	27
Input Tray.....	27
Paper Size.....	28
Paper Type.....	30
Output Tray.....	31
Copies.....	32
Collating.....	33
Duplex Printing.....	33

---

Binding.....	34
Orientation.....	34
Image Direction.....	35
Resolution.....	35
Gradation Quality.....	36
Billing Code.....	37
Fold.....	37
Staple.....	38
Punch, Punchhole.....	39
Usercode.....	41
Symbol Set.....	41
Trademarks.....	45
<b>INDEX</b> .....	47



---

# Notice

---

## Important

---

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

For good output quality, the manufacturer recommends that you use genuine toner from the manufacturer.

The manufacturer shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the manufacturer with your office products.

---

# How to Read This Manual

---

## Symbols

---

This manual uses the following symbols:

### **Important**

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

### **Note**

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

### **Reference**

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[ ]

Indicates the names of keys on the machine's display or control panels.

---

## Notes

---

Contents of this manual are subject to change without prior notice.

---

# Laws and Regulations

---

## Legal Prohibition

---

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.



# 1. UNIX Configuration

---

This section explains how to set up a network printer and check print status using UNIX

## Before Setup

### ★ Important

- To print from a UNIX workstation, use a file that the printer supports.
- Setup varies depending on the print command. Make sure to configure settings accordingly.

---

### Using the lp/lpr Commands

---

1. Use the installation shell script to register the device option, as well as the printer host name and the IP address.

For details, see p.8 "Using the Installation Shell Script".

2. Start printing.

For details, see p.17 "Printing Method".

---

### Using the rsh/rcp/ftp Commands

---

1. Edit the host file to register the printer host name and the IP address.

For details, see p.12 "After Executing the Installation Shell Script".

2. Start printing.

For details, see p.17 "Printing Method".

### ↓ Note

- If you cannot edit the host file, use the install shell script to register the host name.

## Using the Installation Shell Script

The installation shell script helps with the setup process. The installation shell script automates some of the tasks in configuring `/etc/hosts`, `/etc/printcap`; creating the spool directory for BSD UNIX; and running the `lpadmin` command for System V UNIX.

### ★ Important

- Download the installation shell script from our Web site. Keep the installation shell script as local folders.
- The installation shell script can be used on the following workstations: (it cannot be used with other types of workstations.)
  - SunOS 4.1.4
  - Solaris 2.6, 7, 8, 9
  - HP-UX 11.x
  - Red Hat Linux 6.2, 7.0, 7.1, 7.2, 8
  - UnixWare 7.1.1
  - OpenServer 5.06

### ↓ Note

- Depending on security settings when installed, `rsh/rcp/telnet` may not be usable with Red Hat 7.1 or later. Change the security level to allow use of `rsh/rcp/telnet`. For details about how to change the setting, see the operating instructions for Red Hat.
- When you use NIS (Network Information Service) or DNS, you should configure the server before running the installation shell script.
- Installation shell script does not support CUPS.
- When you use Solaris and HP-UX, you can set UNIX configuration with `admintool` that came with Solaris and HP-UX. For details about configuring using `admintool`, see the `admintool`'s manual.
- For details about the configuration utility of your operating system, see the manual that came with the utility.

---

## Assigning the IP Address

---

### ★ Important

- Configure the machine to use TCP/IP.
  - Make sure that TCP/IP on the machine is set to active. (Default setting is active.)
  - Assign an IP address to the machine and configure the other settings required for TCP/IP.

**Note**

- For details about how to make the above settings, see the manual that comes with this machine.

## Checking the IP address configuration

Follow the procedure below to make sure that the IP address has been configured correctly.

- The following procedure uses the sample IP address: 192.168.15.16.

**1. Enter the following:**

```
# ping 192.168.15.16
```

If the address has been configured correctly, the following message appears:

```
192.168.15.16 is alive
```

If the address has been configured incorrectly, the following message appears:

```
no answer from 192.168.15.16
```

**Note**

- When you use NIS, the IP address and host name are written to `/etc/hosts` on the master server. When you use DNS, the information is written to a data file on the name server. After writing the host name and IP address to the file, make sure that the configuration is correct by pinging the host.  

```
# ping host_name
```
- If the host name is registered with an IP address, the server can access the printer using its host name instead of its IP address.

## Executing the Installation Shell Script

Having configured the printer IP address, follow the procedure below to execute the installation shell script and set up the workstation printing environment.

**★ Important**

- **Before executing the installation shell script, the IP address, host name, and printer name are required.**
- **Download the installation shell script from our Web site. Keep the installation shell script as local folders.**

The following procedures use the sample IP address: 192.168.15.16; sample host name: `nphost`; and sample printer name: `np`.

**1. Move to the directory that has the installation shell script.****2. Run the installation shell script.**

```
# sh ./install
```

Insert a period and slash before the current directory.

### 3. Enter a number to select the workstation operating system that you are using.

Network printer install shell

Select your workstation OS type

1. SunOS 4.x.x
2. Solaris 2.x, Solaris 7-9 (SunOS5.x)
3. HP-UX
4. UnixWare
5. Linux
6. OpenServer
7. Quit

Enter <1-7>:

2

If you select "7", the installation shell script ends.

### 4. Enter the printer's IP address.

Enter Printer host IP address <xxx.xxx.xxx.xxx> [return=skip]:

192.168.15.16

If the host name of the printer has already been configured, press the [RETURN] ([ENTER]) key. Nothing will be added to the /etc/hosts file.

### 5. Enter the printer's host name.

Enter Printer host name : nphost

If no IP address was entered in step 4, nothing is added to the /etc/hosts file.

### 6. Configure the printer name.

Enter logical printer name [default nphost\_prn]

If you want to use the default name, press the [RETURN] ([ENTER]) key. Enter a new name, if you want to use a different one.

The host name entered in step 5 followed by "\_prn" appears in "default".

### 7. Set the print option.

Enter remote printer name [default lp]:

- Press the [RETURN] ([ENTER]) key, and printing with PostScript® is enabled.
- If you want to set the device option, enter the option parameter.  
Enter remote printer name [default lp]:tray=tray1
- If you enter "text", text printing is enabled.
- If you enter "text", printing with PostScript is disabled.



Enter remote printer name [default lp]:text

You can enter up to 14 characters for HP-UX 11.0, 256 for Solaris 8 and Red Hat Linux 7.0, and 51 for Red Hat Linux 6.2.

After setup with the installation shell script is complete, and if you entered the IP address in step 4, the following message appears:

```
hosts file is modified
```

### 8. Perform a test print to make sure that the settings are correct.

```
# lpr -Pnp file_name
```

```
# lp -d np file_name
```

#### Note

- SunOS, UnixWare, and OpenServer appear on the screen, but they are not supported. Use Solaris, HP-UX, or Linux.
- The IP address will be added to the `/etc/hosts` file.
- The host name will be added to the `/etc/hosts` file.
- When printing with the `lp` command, use ( `_` ) instead of ( `=` ) and ( `;` ) instead of ( `,` ) for operating systems that cannot use ( `=` ) and ( `,` ) such as Solaris 2.5 or later.
- For details about how to download the installation shell script, contact your sales or service representative.
- For details about `lpr` and `lp`, see p.17 "Printing Method".
- For details about the device option, see p.22 "Specifying the Device Option".

## Deleting the printer

To print using the `lp` or `lpr` command, the option specified when the installation shell script is executed is used. Change the option in accordance with the workstation you are using.

### BSD UNIX workstation, Linux

Delete the printer entry from `/etc/printcap`, and then execute the installation shell script again. Select options during the setup process.

Alternatively, search the printer entry from `/etc/printcap`, and change its `rp` capability to option setting.

### Solaris, HP-UX

Delete the printer entry, and then execute the installation shell script again.

Select options during the setup process. To delete the printer entry, follow the procedure below:

1. Stop the scheduler.
 

```
# /usr/sbin/lpshut
```
2. Delete the printer.

```
# /usr/sbin/lpadmin -x printer_name
```

3. Restart the scheduler.

```
# /usr/lib/lpsched
```

1

## After Executing the Installation Shell Script

The printing environment is set up automatically when the installation shell script is executed.

This section describes setup contents when the installation shell script is executed under Red Hat Linux, Solaris, and HP-UX.

### Linux

#### Adding the IP address and host name to the `/etc/hosts` file

The following line is added to the `/etc/hosts` file. The IP address and printer host name which you previously entered in the installation script will be used:

```
192.168.15.16 nphost # Network Printer
```

- "192.168.15.16" is the IP address, "nphost" is the host name, from # to the end of the line is the comment.

#### ↓ Note

- The `/etc/hosts` file contains a list of the IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the `/etc/hosts` file.

#### Adding an entry to the `/etc/printcap` file

The following entry is added to the `/etc/printcap` file, which is the configuration for printing with the `lpr` command. In order to use the `lpr` command to print, you need to edit the `/etc/hosts` file, add an entry for the network printer to the `/etc/printcap` file and create a spool directory:

```
##PRINTTOOL3## REMOTE
np|Network Printer:\
:rm=nphost:\
:rp=option:\
:sd=/var/spool/lpd/npd:\
:lf=/var/log/lpd-errs:\
:sh:\
:mx#0:
```

### ↓ Note

- The `/etc/printcap` file is used to register the name and attributes of a printer. You must make an entry for the network printer in the `/etc/printcap` file of all workstations using the network printer.
- You must make an entry for each printer option when using the same printer.
- Each entry is separated with colons into several fields. The syntax is to begin each entry with a colon, followed by the entry, and then end with a colon, a back slash, and then a return.
- The first line of the field is the name of the printer. You use this name when logging on to a network printer from a workstation. You can define several different names by separating each name with the "|" character.
- The second and following lines contain the printer's attributes. Attributes are represented by two-character names referred to as capabilities. For details about capabilities, see the following table:

Capability	Explanation	Value required for the network printer
rm	Host name of the printer.	The host name that was registered with the <code>/etc/hosts</code> file.
rp	Optional specification. "lp" will be assigned, if the option is not used.	Select options for printing. For details about available options, see p.22 "Specifying the Device Option".
sd	Path name of the spool directory.	Path name of the spool directory that is to be created.
lf	Path name of the log file.	Path name of the log file. For example <code>/var/log/lpd-errs</code> .
mx	Maximum file size which the directory can copy. When set to 0, the size is unlimited. If nothing is entered, the size is set to 1024 k.	None, or something suitable.

### Making the spool directory

Create a spool directory under `/var/spool/lpd`. The name of the spool directory should be the name of the printer followed by a "d".

**Note**

- The spool directory is used to control data used for print jobs. For example, when a print job is created, a temporary copy of the data used is created in the spool directory. All workstations accessing the network printer need to have a spool directory for the network printer.
- A spool directory should be made for every network printer entry listed in the `/etc/printcap` file.
- The spool directory should normally be made under `/var/spool/lpd` and the name should match that listed under the `sd` capability in `/etc/printcap`.
- Change the owner and group of the directory to `root` and `lp`. The following examples show how to make a `/var/spool/lpd/npd` spool directory:

```
# cd /var/spool/lpd
# mkdir npd
# chown root npd
# chgrp lp npd
```

**Making the log file**

Error messages are logged to a file created in the `/var/log` directory. The log file name is the printer name followed by "d-errs".

**Note**

- The log file is used for logging errors or warning messages by the UNIX workstation.
- The log file should be made for every network printer entry listed in the `/etc/printcap` file.
- The log file should normally be made under `/var/log` directory and the name should match that listed under the `lf` capability in `/etc/printcap`. Change the owner and group of the log file to `root` and `lp`. The following examples show how to make a `/var/log/npd-errs` file:

```
# cd /var/log
# touch npd-errs
# chown root npd-errs
# chgrp lp npd-errs
```

**Solaris**

---

**Adding the IP address and host name to the `/etc/hosts` file**

The following line is added to the `/etc/hosts` file. The IP address and printer host name previously entered in the installation script will be used.

```
192.168.15.16 nphost # Network Printer
```

- "192.168.15.16" is the IP address, "nphost" is the host name, from `#` to the end of the line is the comment.

### ↓ Note

- The `/etc/hosts` file contains a list of IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the `/etc/hosts` file.

### Registering the printer

The installation shell script registers the printer as a remote printer following the procedure below:

1. If your workstation is Solaris 2.5.1, register the print server and print client to the print service.

```
# lpssystem -t bsd -R 0 -y Network Printer nphost
```

2. Register the printer as a remote printer.

```
# lpadmin -p np -s nphost!option -T dump -I any
```

- "np" is the printer name, "nphost" is the host name. For details about "option", see p.22 "Specifying the Device Option".

"lp" will be assigned, if the option is not used.

When printing with the `lp` command, use ( \_ ) instead of ( = ) and ( ; ) instead of ( , ) for operating systems that cannot use ( = ) and ( , ) such as Solaris 2.5 or later.

3. If your workstation is Solaris 2.5.1, set the print job to active so it can be accepted by the print queue.

```
/usr/lib/accept np
```

4. If your workstation is Solaris 2.5.1, set the print job to active to print.

```
/usr/lib/enable np
```

## HP-UX

### Adding the IP address and host name to the `/etc/hosts` file

The following line is added to the `/etc/hosts` file. The IP address and printer host name previously entered in the installation script will be used:

```
192.168.15.16 np # Network Printer
```

- "192.168.15.16" is the IP address, "np" is the host name, from # to the end of the line is the comment.

### ↓ Note

- The `/etc/hosts` file contains a list of IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the `/etc/hosts` file.

## Registering the printer

The installation shell script registers the printer as a remote printer following the procedure below:

1. Stop the scheduler.

```
/usr/lib/lpshut
```

2. Register the printer.

```
/usr/lib/lpadmin -Pnp -v/dev/null -mrmode1
```

```
-ormnphost -oroption -ob3
```

- "np" is the printer name, "nphost" is the host name.

For details about "option", see p.22 "Specifying the Device Option".

"lp" will be assigned, if the option is not used.

3. Set the printer so the print job is listed in the print queue.

```
/usr/lib/accept np
```

4. Set the printer to perform the print job.

```
/usr/lib/enable np
```

5. Restart the scheduler.

```
/usr/lib/lpsched
```

# Printing Method

This section explains how to print documents using commands.

1

---

## Printing with lpr, lp

---

Execute one of the following commands according to the type of workstation used:

### BSD UNIX workstation, Linux

```
% lpr -Pprinter_name file_name [file_name...]
```

For example:

The printer name is np, file names are file1 and file2

```
% lpr -Pnp file1 file2
```

### Solaris, HP-UX

```
% lp -d printer_name file_name [file_name...]
```

For example:

The printer name is np, file names are file1 and file2

```
% lp -d np file1 file2
```

#### ↓ Note

- "printer\_name" is the printer name entered when executing the installation shell script.
- You can use wild cards ( \* or ? ) for the file name.
- The message "print session full" appears when the maximum number of print requests has been reached (max. 5 sessions - Job Spool setting available).
- You should try to print again when the number of requests is less than five. You can check the number of print requests using telnet. For details about using telnet, see the manual that comes with this machine.
- The number of print sessions does not change, whether you increase or reduce the machine's total memory size.

---

## Printing with rsh, rcp, ftp

---

You can also print using the rsh, rcp, and ftp commands.

#### ↓ Note

- Print using a format the printer supports.
- You should try to print again when the number of requests is zero.

- The message "print session full" appears when the maximum number of print requests is reached.
- The maximum number of print sessions varies depending on the command.
- When using the rsh or rcp command, the maximum number of print sessions is 5; when using the ftp command, the number is 3.

## rsh

---

```
% rsh host_name print < file_name
```

For example:

host name is nphost, file name is file1

```
% rsh nphost print < file1
```

### ↓ Note

- "host\_name" is the name entered when executing the installation shell script.
- If you are using HP-UX, use the remsh command instead of rsh.

## rcp

---

### To specify and print the file

```
% rcp file_name [file_name...] host_name:
```

For example:

host name is nphost, file names are file1 and file2

```
% rcp file1 file2 nphost:
```

### To print all of the files in a directory

```
% rcp -r directory_name host_name:
```

For example:

host name is nphost, directory name is directory

```
% rcp -r directory1 nphost:
```

### ↓ Note

- "host\_name" is the name entered when executing the installation shell script.
- You can use wild cards ( \* or ? ) for the file name.

## ftp

---

Use the put or mput command depending on the number of files to be printed.



**★ Important**

- File names cannot contain "=", ",", or ";".
- You can use wild cards ( \* or ? ) for the file name with the mput command.

**To print one file**

```
ftp> put file_name [Option]
```

**To print several files**

```
ftp> mput file_name [file_name...] [Option]
```

The following procedure shows an example of how to print a file using ftp.

It is not possible to set options with the mput command:

**1. Start ftp using the IP address or host name of the printer.**

```
% ftp IP_address
```

**2. Enter the user name and password, and then press the [RETURN] ([ENTER]) key.**

For details about the user name and password, consult your administrator.

Name:

Password:

**3. Set the file transfer mode to binary.**

```
ftp> bin
```

If the file transfer mode is not set to binary, the image may not be printed correctly.

**4. Print the file.**

For example, to print the file named file1:

```
ftp> put \path\file1
```

For example, to print the two files named file1 and file2:

```
ftp> mput \path\file1 \path\file2
```

**5. Exit ftp.**

```
ftp> bye
```

# Printer Status

You can use the following commands to have information and printer status displayed or copied to a file.

Use the `lpq` or `lpstat` command to display the status of the printer or information about print jobs.

Use the `rsh`, `rcp` or `ftp` commands to get more detailed information from the printer.

---

## Viewing the Print Job Status with `lpq` and `lpstat`

---

### BSD UNIX workstation, Linux

```
% lpq -Pprinter_name
```

For example: Printer name is np

```
% lpq -Pnp
```

### System V UNIX, Solaris, HP-UX

```
% lpstat -o printer_name
```

For example: Printer name is np

```
% lpstat -o np
```

#### Note

- If you are using HP-UX, do not put a space between "-o" and "printer name".

---

## Viewing the Printer Status with `rsh` and `ftp`

---

Use the `rsh` or `ftp` command to display printer status or information about print jobs using specified parameters.

You can use these commands for BSD and System V UNIX.

If your workstation is HP-UX, use the `remsh` command instead of `rsh`.

- `rsh`  

```
% rsh host_name parameter
```
- `ftp`  

```
% ftp host_name  
User user_name  
password:  
ftp> get parameter -
```

Parameters that can be used with `rsh`, `rcp` and `ftp` :

Parameter	Information returned
stat	Status of the printer. Information about print jobs.
info	Information about the paper tray, output tray and printer language.
prnlog	Record of the last 10 jobs printed.
syslog	Record of messages about the network interface board.

#### ↓ Note

- For details about the user name and password, consult your administrator.
- "-" indicates standard output. Display will be displayed on screen if standard output has not been specified.

## Copying Information to a File

Use the rcp or ftp command to copy information about specified parameters to a file.

You can use these commands for BSD and System V UNIX.

#### ★ Important

- The same parameters are used as those above.
  - rcp
 

```
% rcp host_name:parameter file_name
```
  - ftp
 

```
% ftp host_name
User:user_name
password:
ftp> get parameter file_name
```

#### ↓ Note

- For details about the user name and password, consult your administrator.

# Specifying the Device Option

With the following options, you can print with specific printer functions.

This manual covers all models, and therefore contains functions and settings that may not be available for your model.

## Configuring the Device Option

### ★ Important

- The optional character strings the printer can recognize contain a maximum of 512 bytes.
- The number of available characters used as options is limited, depending on operating systems.

The configuration of the print option varies, depending on printing commands.

- rsh  
% rsh host\_name print option1=value1,... < file\_name
- rcp  
% rcp file\_name host\_name:option1=value1,...
- ftp  
ftp> put file\_name option1=value1,...

"host\_name" is the printer host name. "file\_name" is the file name you want to print.

The device option is specified in the form of "option=value". For details about types of device options and values, see the following explanations.

For example, the following settings are for printing with rsh, rcp, and ftp : switch to PostScript, feed paper from paper feed tray 1, set the printing amount to 3 sets, and print with the resolution set to 600 dpi (host\_name :nphost, file\_name :file1).

- rsh  
% rsh nphost print filetype=postscript,tray=tray1,copies=3,resolution=600 < file1
- rcp  
% rcp file1 nphost:filetype=postscript,tray=tray1,copies=3,resolution=600
- ftp  
ftp> put file1 filetype=postscript,tray=tray1,copies=3,resolution=600

### ↓ Note

- Multiple options must be separated by commas (,). Do not use spaces.
- When the printing file contains the PostScript commands that control the options, the command takes priority.

- Enter the option using the lp or lpr command, when the shell script is implemented.
- The option settings made here are configured as default. You must create another printer if you want to change printer option settings. For details about changing the configured option, see p. 11 "Deleting the printer".
- When printing with the lp command, use ( \_ ) instead of ( = ) and ( ; ) instead of ( , ) for operating systems that cannot use ( = ) and ( , ) such as Solaris 2.5 or later.

## Using the cd command with ftp

For printing with ftp, if the option is specified using the cd command, it becomes available whenever the put or mput command is used.

```
ftp> cd option
```

### ↓ Note

- The pwd command shows the current option settings.

```
ftp> pwd
```

## List of the device options

Device option	Value	Function summary
filetype	pcl, postscript (rps), pdf, pictbridge	Specifies the printer language for printing.
filter	text	Specifies the text printing.
tray	tray1 - tray4, lct, bypass, all	Specifies the input tray.
paper	a3, a3wide, a4, a5, a6, jisb4, jisb5, jisb6, ledger, letter, halfletter, governmentlg, engquatro, legal, executive, glt, fgl, foolscap, folio, com10, c5, c6, dl, monarch, k8, k16, inch11x15, inch11x14, inch10x15, inch10x14, custom	Specifies the paper size.

Device option	Value	Function summary
mediatype	plain, recycled, special, special2, special3, thick, thick2, thick3, thick4, thin, tabstock, transparency, letterhead, preprinted, labels, bond, cardstock, translucent, usercolor1, usercolor2, color, middlethick, prepunched, plainorrecycled, envelope, coated, glossy, auto	Specifies the paper type.
outbin	upper, inner, lower, finishershift, finisherproof, finisherbooklet, optionaloutputbin1, optionaloutputbin2, optionaloutputbin3, optionaloutputbin4, optionaloutputbin5, optionaloutputbin6, optionaloutputbin7, optionaloutputbin8, optionaloutputbin9, optionaloutputbin10	Specifies the output tray.
copies	Number of copies (1-999)	Specifies the number of copies to print.
qty	Number of collated sets (1-999)	Specifies the number to collate.
duplex	on, off	Specifies whether duplex printing is on or off.
binding	longedge, shortedge, left, right, top	Specifies the binding direction for duplex printing.
orientation	portrait, landscape	Specifies the feed direction of the paper.
image direction	normal, reverse	Specifies the print image rotation.

Device option	Value	Function summary
resolution	value of resolution (200, 300, 400, 600, 1200)	Specifies the resolution for printing.
bitsperdot	1, 2, 4	Specifies the print quality.
billing code	Value of billing code (0x09 (<HT>), 0x20-0xFF (except 0x22))	Specifies the billing code.
fold	gatefold4, inside3, outside3, simple4, two, zbottom, zleft, zright, off	Specifies the folding position
staple	off, lefttopslantport, lefttopslantland, lefttopvertport, lefttopvertland, lefttophorizport, lefttophorizland, left2port, left2land, righttopslantport, righttopslantland, righttopvertport, righttopvertland, righttophorizport, righttophorizland, right2port, right2land, top2port, top2land, booklet, lefttop, righttop	Specifies the staple position.
punch	off, leftport, leftland, rightport, rightland, topport, topland	Specifies the punch position.
punchhole	multi, us2, eu4, neu4, us3	Specifies the number of punch holes.
usercode	Value of user code (0x21 to 0x7e, except 0x22)	Specifies the usercode.

Device option	Value	Function summary
symbol set	arabic8, desktop, greek8, hebrew7, hebrew8, iso4, iso6, iso11, iso15, iso17, iso21, iso60, iso69, isocyr, isogr, isoheb, isol1, isol2, isol5, isol6, isol9, legal, math8, mctext, mspubl, pc8, pc775, pc850, pc851, pc852, pc858, pc862, pc864, pc866, pc866u, pc8dn, pc8grk, pc8tk, pc1004, pifont, psmath, pstext, roman8, roman9, ucs2, winbaltic, win30, winarb, wincyr, wingrk, winl1, winl2, winl5	Specifies the set of print characters.

## Printer Language

Select a printer language to be used.

```
filetype=printer language
```

```
fil=printer language
```

Printer language	Value
PCL 5c or PCL 5e	pcl
PostScript 3	postscript or rps
PDF	pdf
PictBridge	pictbridge

The following sample shows how to print with PostScript 3 (host name: nphost, file name: file1):

- rsh  
% rsh nphost print filetype=postscript < file1
- rcp  
% rcp file1 nphost:filetype=postscript
- ftp  
ftp> put file1 filetype=postscript



**Note**

- The value or actions that can be selected differ depending on the model you are using. For details about available printer languages, see the manual that comes with this machine.

## Text Printing

Set this function when printing text files directly.

`filter=text`

The following sample shows how to print text files directly.

- `rsh`  
`% rsh nphost print filter=text < file1`
- `rcp`  
`% rcp file1 nphost:filter=text`
- `ftp`  
`ftp> put file1 filter=text`

## Input Tray

Select a default input tray.

**Important**

- **Only installed input trays are available.**

`tray=value of input tray`

Input tray	Value
Tray 1	tray1
Tray 2	tray2
Tray 3	tray3
Tray 4	tray4
Large Capacity Tray (LCT)	lct
Bypass tray	bypass
Auto Tray Select	all

The following sample shows how to print from tray 2 (host name: nphost, file name: file1):

- rsh  
% rsh nphost print tray=tray2 < file1
- rcp  
% rcp file1 nphost:tray=tray2
- ftp  
ftp> put file1 tray=tray2

### ↓ Note

- The value or actions that can be selected differ depending on the model you are using. For details about available tray, see the manual that comes with this machine.

## Paper Size

Select the paper size.

### ★ Important

- Only the loaded paper sizes are available.
- When PostScript 3 is selected in Printer Language, and a custom paper size that exceeds "297x418.4 mm" is specified, a printout is counted as an A3 size output. Be careful if you are using the charge option, etc.

paper=value of paper size

Paper size	Value
A3	a3
12 × 18	a3wide
A4	a4
A5	a5
A6	a6
B4JIS (Japanese Industrial Standard)	jisb4
B5JIS	jisb5
B6JIS	jisb6
11 × 17	ledger
11 × 15	inch11x15

Paper size	Value
11 × 14	inch11x14
10 × 15	nch10x15
10 × 14	inch10x14
8 <sup>1</sup> / <sub>2</sub> × 14	legal
8 <sup>1</sup> / <sub>2</sub> × 11	letter
8 <sup>1</sup> / <sub>4</sub> × 14	governmentlg
8 × 10	engquatro
5 <sup>1</sup> / <sub>2</sub> × 8 <sup>1</sup> / <sub>2</sub>	halfletter
7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub>	executive
8 × 13	fgl
8 × 10 <sup>1</sup> / <sub>2</sub>	glt
8 <sup>1</sup> / <sub>2</sub> × 13	foolscap
8 <sup>1</sup> / <sub>4</sub> × 13	folio
4 <sup>1</sup> / <sub>8</sub> × 9 <sup>1</sup> / <sub>2</sub>	com10
6.38 × 9.02 (162 × 229 mm)	c5
4.49 × 6.38 (114 × 162 mm)	c6
4.33 × 8.66 (110 × 220 mm)	dl
3 <sup>7</sup> / <sub>8</sub> × 7 <sup>1</sup> / <sub>2</sub>	monarch
10.5 × 15.35 (267 × 390 mm)	k8
7.68 × 10.5 (195 × 267 mm)	k16
Custom size	custom

The following sample shows how to print using A4 size paper (host name: nphost, file name: file1):

- rsh  
  % rsh nphost print paper=a4 < file1
- rcp

```
% rcp file1 nphost:paper=a4
```

- ftp  
ftp> put file1 paper=a4

### ↓ Note

- The value or actions that can be selected differ depending on the model you are using. For details about available paper size, see the manual that comes with this machine.

## Paper Type

Select the paper type.

### ★ Important

- **Only the loaded paper types are available.**

mediatype=value of paper type

Paper type	Value
Plain paper/recycled paper	plainorrecycled
Plain paper	plain
Recycled paper	recycled
Special paper	special
	special2
	special3
Thick paper	thick
	thick2
	thick3
	thick4
Thin Paper	thin
Tabstock	tabstock
OHP transparency	transparency
Letterhead	letterhead

Paper type	Value
Preprinted paper	preprinted
Labels	labels
Bond paper	bond
Cardstock	cardstock
Translucent	translucent
Usercolor1	usercolor1
Usercolor2	usercolor2
Middle thick	middlethick
Envelope	envelope
Color Paper	color
Prepunched paper	prepunched
Coated Paper	coated
Glossy Paper	glossy
Auto Paper Select	auto

The following sample shows how to print using recycled paper (host name: nphost, file name: file1):

- rsh  
% rsh nphost print mediatype=recycled < file1
- rcp  
% rcp file1 nphost:mediatype=recycled
- ftp  
% ftp> put file1 mediatype=recycled

#### Note

- The value or actions that can be selected differ depending on the model you are using. For details about available paper type, see the manual that comes with this machine.

## Output Tray

Select the output tray.

**★ Important**

- Only installed output trays are available.

outbin=value of output tray

Value
upper, inner, lower, finishershift, finisherproof, finisherbooklet, optionaloutputbin1, optionaloutputbin2, optionaloutputbin3, optionaloutputbin4, optionaloutputbin5, optionaloutputbin6, optionaloutputbin7, optionaloutputbin8, optionaloutputbin9, optionaloutputbin10

The following sample shows how to print to the standard tray (standard tray: upper, host name: nphost, file name: file1):

- rsh  
% rsh nphost print outbin=upper < file1
- rcp  
% rcp file1 nphost:outbin=upper
- ftp  
ftp> put file1 outbin=upper

**↓ Note**

- The value or actions that can be selected differ depending on the model you are using. For details about available output tray, see the manual that comes with this machine.

**Copies**

Specify the number of copies.

copies=number of copies (1 to 999)

**★ Important**

- Do not specify "copies" and "qty" \*1 commands at the same time.

\*1 "qty" specifies the number of collated sets.

The following sample shows how to print 10 copies (host name: nphost, file name: file1):

- rsh  
% rsh nphost print copies=10 < file1
- rcp  
% rcp file1 nphost:copies=10
- ftp  
ftp> put file1 copies=10

## Collating

Specify the number of collated sets.

qty=number of collated sets (1 to 999)

The following sample shows how to print 10 copies using the collate function (host name: nphost, file name: file1):

- rsh  
% rsh nphost print qty=10 < file1
- rcp  
% rcp file1 nphost:qty=10
- ftp  
ftp> put file1 qty=10

## Duplex Printing

This option enables duplex printing.

duplex=value of duplex printing

Duplex printing	Value
enable	on
disable	off

The following sample shows how to set duplex printing (host name: nphost, file name: file1):

- rsh  
% rsh nphost print duplex=on,binding=longedge < file1
- rcp  
% rcp file1 nphost:duplex=on,binding=longedge
- ftp  
ftp> put file1 duplex=on,binding=longedge

### ↓ Note

- Before selecting duplex, the binding option must be set to on.
- Data and paper volume affect the completion of the print job.
- For details about available paper size for duplex printing, see the manual that comes with this machine.

## Binding

Select the binding direction for duplex printing.

binding=value of binding

Binding direction	Value
Longedge	longedge
Shortedge	shortedge
Left	left
Right	right
Top	top

The following sample shows how to set duplex printing and long-edge binding (host name: nphost, file name: file1):

- rsh  
% rsh nphost print duplex=on,binding=longedge < file1
- rcp  
% rcp file1 nphost:duplex=on,binding=longedge
- ftp  
ftp> put file1 duplex=on,binding=longedge

### Note

- Before selecting the binding option, the duplex option must be set to on.
- Data and paper volume affect completion of the print job.

## Orientation

Select the paper feed orientation.

orientation=feed direction (portrait or landscape)

Orientation	value
Portrait	portrait
Landscape	landscape



The following sample shows how to print the paper vertically using the orientation function (host name : nphost, file name : file1):

- rsh  
% rsh nphost print orientation=portrait < file1
- rcp  
% rcp file1 nphost:orientation=portrait
- ftp  
ftp> put file1 orientation=portrait

## Image Direction

Select the print image rotation.

imagedirection=value of print image rotation

Rotation	Value
0 degree	normal
180 degrees	reverse

The following sample shows how to print the 180 degrees rotation using the imagedirection function (host name : nphost, file name : file1):

- rsh  
% rsh nphost print imagedirection = reverse < file1
- rcp  
% rcp file1 nphost: imagedirection = reverse
- ftp  
ftp> put file1 imagedirection = reverse

## Resolution

Select the printing resolution.

resolution=value of resolution

Resolution	Value
1200 dpi	1200

Resolution	Value
600 dpi	600
400 dpi	400
300 dpi	300
200 dpi	200

The following sample shows how to print with 600 dpi and better quality. (host name: nphost, file name: file1):

- rsh  
% rsh nphost print resolution=600 < file1
- rcp  
% rcp file1 nphost:resolution=600
- ftp  
ftp> put file1 resolution=600

#### ↓ Note

- The value or actions that can be selected differ depending on the model you are using. For details about available resolution, see the manual that comes with this machine.

## Gradation Quality

Select this option to improve print quality.

#### ★ Important

- Before you can select the `bitsperdot` option, the printer language must be set to PostScript 3 and the resolution must be set to 600 dpi.

`bitsperdot=value of gradation quality`

Gradation quality	Value
Super Fine	4
Fine	2
Standard	1

The following sample shows how to print with 600 dpi and fine quality. (host name: nphost, file name: file1):

- rsh  
% rsh nphost print filetype=postscript,resolution=600,bitsperdot=2 < file1
- rcp  
% rcp file1 nphost:filetype=postscript,resolution=600,bitsperdot=2
- ftp  
ftp> put file1 filetype=postscript,resolution=600,bitsperdot=2

#### ↓ Note

- The value or actions that can be selected differ depending on the model you are using. For details about available gradation quality, see the manual that comes with this machine.

## Billing Code

Specify the billing code.

billingcode=Value of billingcode (0x09(<HT>), 0x20-0xFF (except 0x22)) \*1

\*1 MAX 228 bytes = 255byte (Max number of characters allowed for each PJI command line on GW-PJI source) - 27 bytes (number of characters for @PJI SET BILLINGCODE = ""<CR><LF>)

- rsh  
% rsh nphost print billingcode=0x09 < file1
- rcp  
% rcp file1 nphost: billingcode=0x09
- ftp  
ftp> put file1 billingcode=0x09

#### ↓ Note

- Note that PJI syntax allows unlimited spaces (for example, more than one space can be placed between "@PJI" and "SET," or before/after the "=" sign).
- Therefore, a password can be less than the maximum value (228 bytes).
- This also implies the maximum value (228 bytes) is secured as long as the normal syntax is used.

## Fold

Select the folding position for the output.

#### ★ Important

- **When using this option, the optional finisher unit is required.**

fold=value of folding position

Position	Value
Gate fold	gatefold4
Three fold In	inside3
Three fold Out	outside3
Double Parallel fold	simple4
Two fold	two
Bottom fold	zbottom
Left fold	zleft
Right fold	zright
Off	off

The following sample shows how to print with the fold on the upper left using finisher shift tray (host name : nphost, file name : file1, finisher shift tray: finisherproof):

- rsh  
% rsh nphost print fold=zright,outbin=finisherproof < file1
- rcp  
% rcp file1 nphost:fold=zright,outbin=finisherproof
- ftp  
ftp> put file1 fold=zright,outbin=finisherproof

#### ↓ Note

- Available fold positions vary depending on type of installed output tray.
- The value or actions that can be selected differ depending on the model you are using. For details about available folding position, see the manual that comes with this machine.

## Staple

Select the staple position for the output.

#### ★ Important

- **When using this option, the optional finisher unit is required.**

staple=value of staple position

Position	Value
Off	off
Left top	lefttop
Right top	righttop
Left top horiz	lefttophorizland, lefttophorizport
Left top slant	lefttopslantland, lefttopslantport
Left top vert	lefttopvertland, lefttopvertport
Right top horiz	righttophorizland, righttophorizport
Right top slant	righttopslantland, righttopslantport
Right top vert	righttopvertland, righttopvertport
Left 2	left2land, left2port
Right 2	right2land, right2port
Top 2	top2land, top2port
Booklet	booklet

The following sample shows how to print with the staple on the upper left using finisher shift tray (host name : nphost, file name : file1, finisher shift tray):

- rsh  
% rsh nphost print staple=lefttop,outbin=finishershift <file1
- rcp  
% rcp file1 nphost:staple=lefttop,outbin=finishershift
- ftp  
ftp> put file1 staple=lefttop,outbin=finishershift

## Punch, Punchhole

Select the punch position for the output and the number of punch holes.

### ★ Important

- **When using this option, the optional finisher unit is required.**

punch=value of punch position

Position	Value
Off	off
Left	leftport leftland
Right	rightport rightland
Top	topport topland

punchhole=value of punchhole

The available number of punch holes may vary depending on the type of Punch Kit installed. Specify an appropriate value referring to the table below.

Number of punch holes	Value
2	us2
3	us3
4	eu4, neu4
Multi	multi

The following sample shows how to print with four punch holes on the left using finisher shift tray (host name : nphost, file name : file1, finisher shift tray : finishershift).

- rsh  
% rsh nphost print punch=leftport,punchhole=eu4,outbin=finishershift < file1
- rcp  
% rcp file1 nphost:punch=leftport,punchhole=eu4,outbin=finishershift
- ftp  
ftp > put file1 punch=leftport,punchhole=eu4,outbin=finishershift

#### ↓ Note

- When "punchhole" is not specified, the machine executes the punch function using the default number of punch holes.

- The value or actions that can be selected differ depending on the model you are using. For details about available punch holes, see the manual that comes with this machine.

## Usercode

Specify the usercode.

Usercode="value of usercode"

The usercode must be specified using up to eight digits.

The usercode must be inside double quotation marks (" ").

Some operating systems cannot forward the user code if it is inside double quotation marks. If this is the case, include escape characters such as back slashes (\) (0x5c) in place of double quotation marks.

- rsh  
% rsh nphost print usercode="12345" < file1
- rcp  
% rcp file1 nphost: usercode="12345"
- ftp  
ftp> put file1 USERCODE="12345"

### Note

- If you are printing with the ftp command, enter the usercode in uppercase letters.

## Symbol Set

Select the set of print characters for the chosen font.

### Important

- **This function is only for PCL.**

symset=value of font

Symbol Set	Value
Arabic-8	arabic8
Desktop	desktop
Greek-8	greek8
Hebrew-7	hebrew7
Hebrew-8	hebrew8

Symbol Set	Value
ISO 4	iso4
ISO 6	iso6
ISO 11	iso11
ISO 15	iso15
ISO 17	iso17
ISO 21	iso21
ISO 60	iso60
ISO 69	iso69
ISO Cyrillic	isocyr
ISO Greek	isogrck
ISO Hebrew	isoheb
ISO L1	isol1
ISO L2	isol2
ISO L5	isol5
ISO L6	isol6
ISO L9	isol9
Legal	legal
Math-8	math8
MC Text	mctext
MS Publ	mspubl
PC-8	pc8
PC-775	pc775
PC-850	pc850
PC-851	pc851
PC-852	pc852



Symbol Set	Value
PC-858	pc858
PC-862	pc862
PC-864	pc864
PC-866	pc866
PC-866U	pc866u
PC-1004	pc1004
PC-8 D/N	pc8dn
PC-8 Greek	pc8grk
PC8-TK	pc8tk
Pifont	pifont
PS Math	psmath
PS Text	psfext
Roman-8	roman8
Roman-9	roman9
UCS-2	ucs2
Win 3.0	win30
Win Arabic	winarb
Win Baltic	winbaltic
Win Cyrillic	wincyr
Win Greek	wingrk
Win L1	winl1
Win L2	winl2
Win L5	winl5

The following sample shows how to print the ISO 4 character set (host name : nphost, file name : file 1):

- rsh

```
% rsh nphost print symset=iso4 < file1
```

- rcp

```
% rcp file1 nphost:symset=iso4
```

- ftp

```
ftp> put file1 symset=iso4
```

# Trademarks

Linux<sup>®</sup> is the registered trademark of Linus Torvalds in the U.S. and other countries.

Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows Server<sup>®</sup>, and Windows Vista<sup>®</sup> are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Monotype is a registered trademark of Monotype Imaging, Inc.

NetWare, IPX, IPX/SPX are either registered trademarks or trademarks of Novell, Inc.

PictBridge is a trademark.

PostScript is either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and /or other countries.

RED HAT is a registered trademark of Red Hat, Inc.

Sun, SunOS and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. or other countries.

UNIX<sup>®</sup> is a registered trademark of The Open Group.

UPnP<sup>™</sup> is a trademark of the UPnP Implementers Corporation.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product names of Windows XP are as follows:

Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional Edition

Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition

Microsoft<sup>®</sup> Windows<sup>®</sup> XP Media Center Edition

Microsoft<sup>®</sup> Windows<sup>®</sup> XP Tablet PC Edition

- The product names of Windows Vista are as follows:

Microsoft<sup>®</sup> Windows Vista<sup>®</sup> Ultimate

Microsoft<sup>®</sup> Windows Vista<sup>®</sup> Business

Microsoft<sup>®</sup> Windows Vista<sup>®</sup> Home Premium

Microsoft<sup>®</sup> Windows Vista<sup>®</sup> Home Basic

Microsoft<sup>®</sup> Windows Vista<sup>®</sup> Enterprise

- The product names of Windows 7 are as follows:

Microsoft<sup>®</sup> Windows<sup>®</sup> 7 Home Premium

Microsoft<sup>®</sup> Windows<sup>®</sup> 7 Professional

Microsoft<sup>®</sup> Windows<sup>®</sup> 7 Ultimate

Microsoft<sup>®</sup> Windows<sup>®</sup> 7 Enterprise

- The product names of Windows Server 2003 are as follows:  
Microsoft® Windows Server® 2003 Standard Edition  
Microsoft® Windows Server® 2003 Enterprise Edition
- The product names of Windows Server 2003 R2 are as follows:  
Microsoft® Windows Server® 2003 R2 Standard Edition  
Microsoft® Windows Server® 2003 R2 Enterprise Edition
- The product names of Windows Server 2008 are as follows:  
Microsoft® Windows Server® 2008 Standard  
Microsoft® Windows Server® 2008 Enterprise
- The product names of Windows Server 2008 R2 are as follows:  
Microsoft® Windows Server® 2008 R2 Standard  
Microsoft® Windows Server® 2008 R2 Enterprise

# INDEX

## B

Before setup.....	7
Billing code.....	37
Binding.....	34
BSD UNIX workstation.....	17, 20

## C

Collating.....	33
Configuring the device option.....	22
Copies.....	32
Copying information.....	21

## D

Deleting the printer.....	11
Device option.....	22
Duplex printing.....	33

## F

Fold.....	37
ftp.....	17, 20
ftp commands.....	7

## G

Gradation quality.....	36
------------------------	----

## H

How to read this manual.....	4
HP-UX.....	15, 17, 20

## I

Image direction.....	35
Input tray.....	27
Installation shell script.....	8, 9, 12
IP address.....	8

## L

Laws and regulations.....	5
Legal prohibition.....	5
Linux.....	17, 20
lp.....	17
lp commands.....	7
lpq.....	20
lpr.....	17
lpr commands.....	7
lpstat.....	20

## N

Note.....	4
Notice.....	3

## O

Orientation.....	34
Output tray.....	31

## P

Paper size.....	28
Paper type.....	30
Print job status.....	20
Printer language.....	26
Printer status.....	20
Printing method.....	17
Punch.....	39
Punchhole.....	39

## R

rcp.....	17
rcp commands.....	7
Resolution.....	35
rsh.....	17, 20
rsh commands.....	7

## S

Solaris.....	14, 17, 20
Staple.....	38
Symbol set.....	41
System V UNIX.....	20

## T

Text printing.....	27
Trademarks.....	45

## U

Usercode.....	41
---------------	----

---

MEMO



